


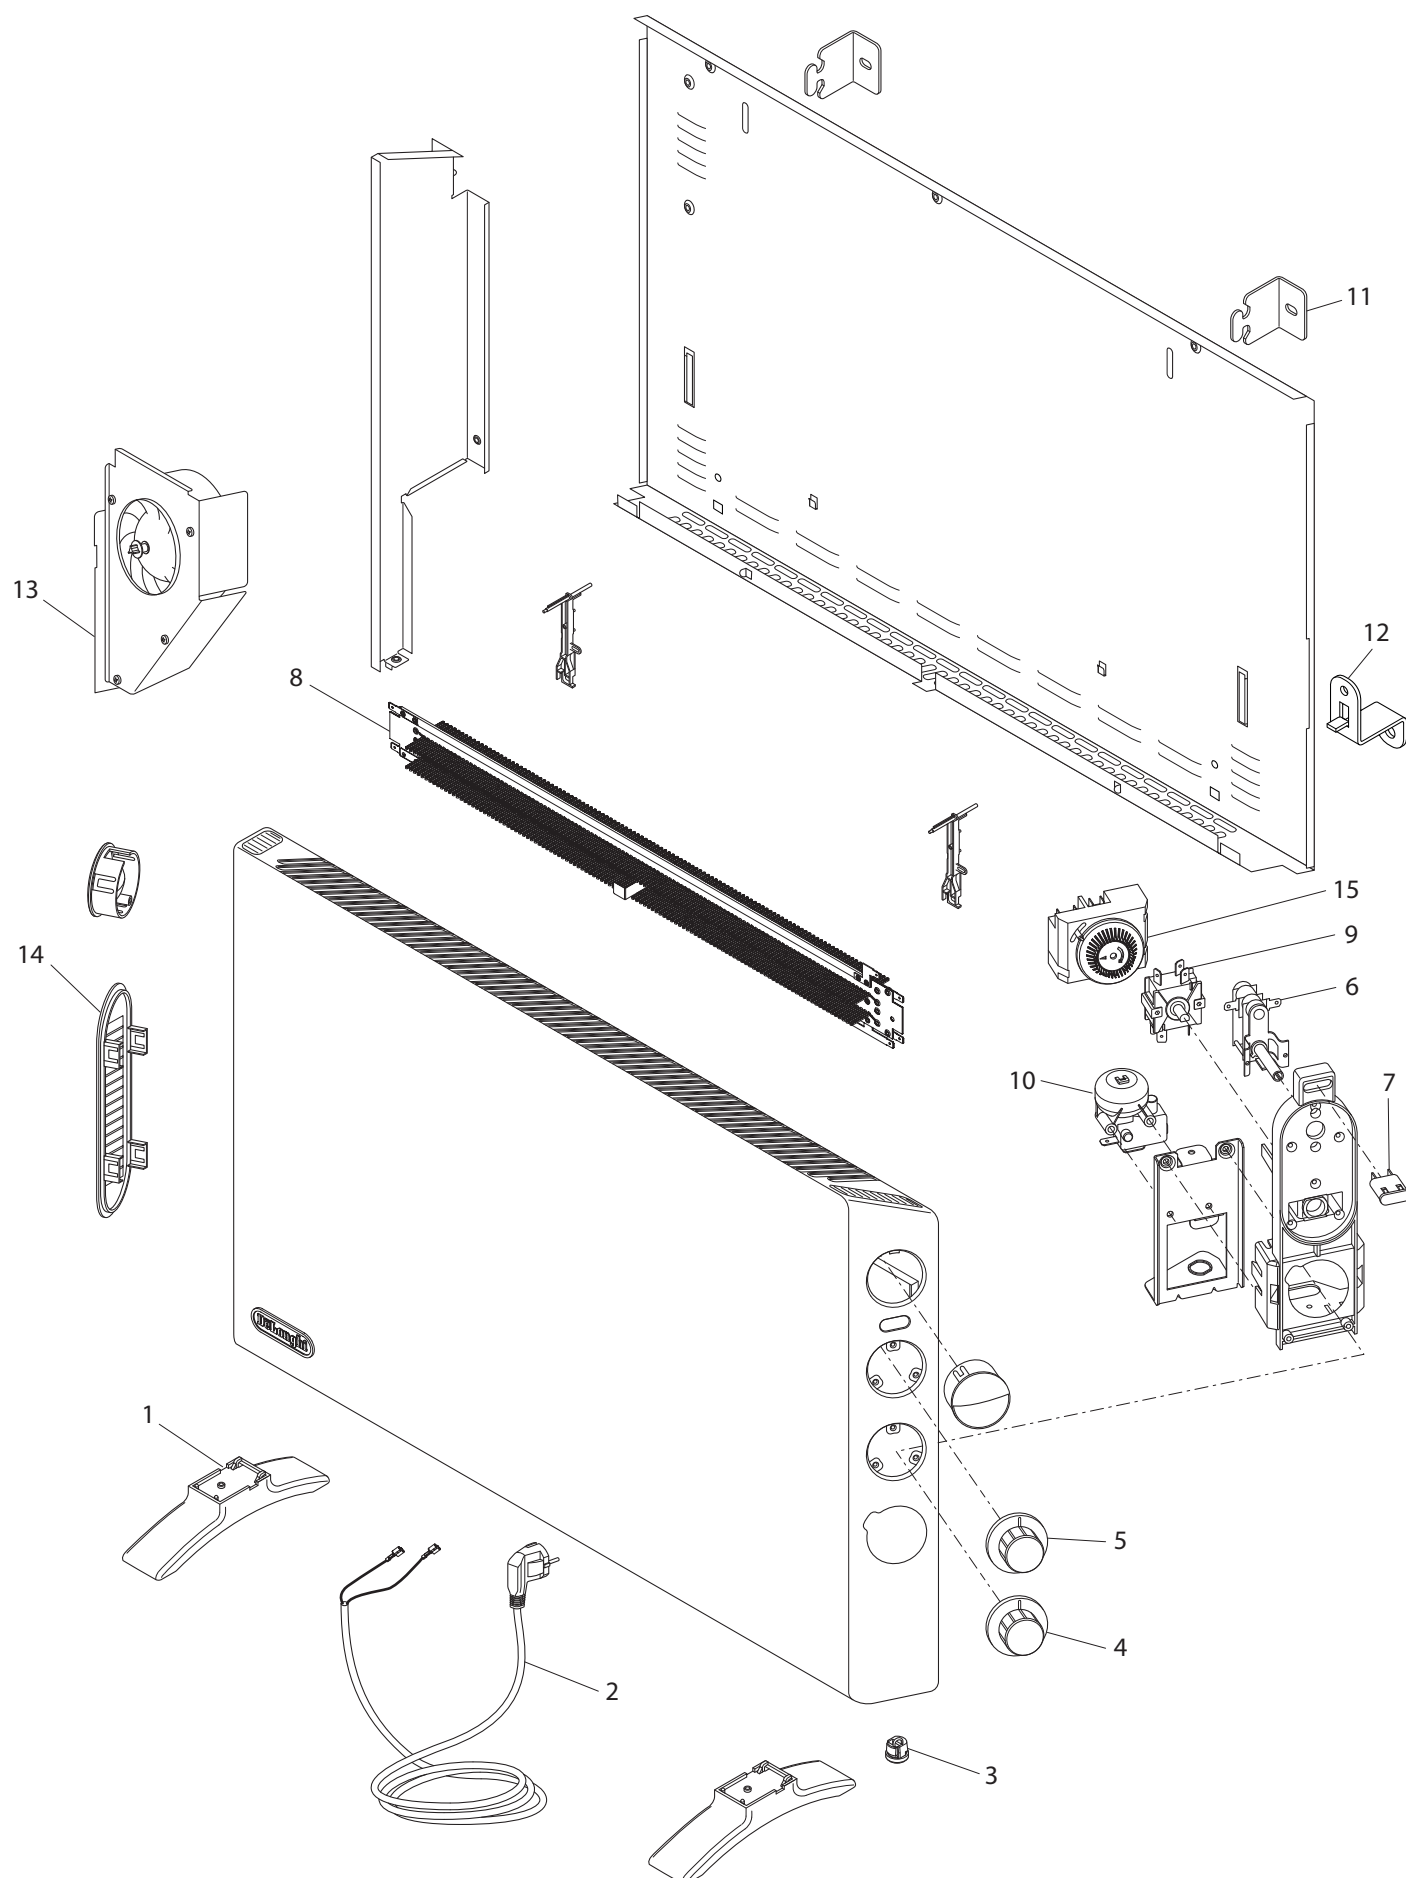

| Position | Code       | description                                 |
|----------|------------|---------------------------------------------|
| 01       | 5311310721 | FOOT                                        |
| 02       | 5011310311 | POWER SUPPLY CORD WITH PLUG (SCHUKO)        |
| 03       | 5312000900 | STOP                                        |
| 04       | 5311310751 | THERMOSTAT KNOB                             |
| 05       | 5311310761 | CHANGE OVER SWITCH KNOB                     |
| 06       | 5210810031 | THERMOSTAT (75°/250°)                       |
| 07       | 5111810871 | RED WARNING LIGHT LAMP                      |
| 08       | 5111310271 | HEATING ELEMENT (2100W/240V) WITH THS(115°) |
| 09       | 5211310111 | 4-POSITION CHANGE OVER SWITCH               |
| 10       | 5111310181 | TILT SWITCH                                 |
| 11       | 7011310461 | SUPPORT                                     |
| 12       | 7011310471 | SUPPORT                                     |
| 13       | 7311310788 | FAN MOTOR (220/240V)                        |
| 14       | 5311310711 | GRID                                        |
| 15       | 5211310071 | TIMER                                       |