


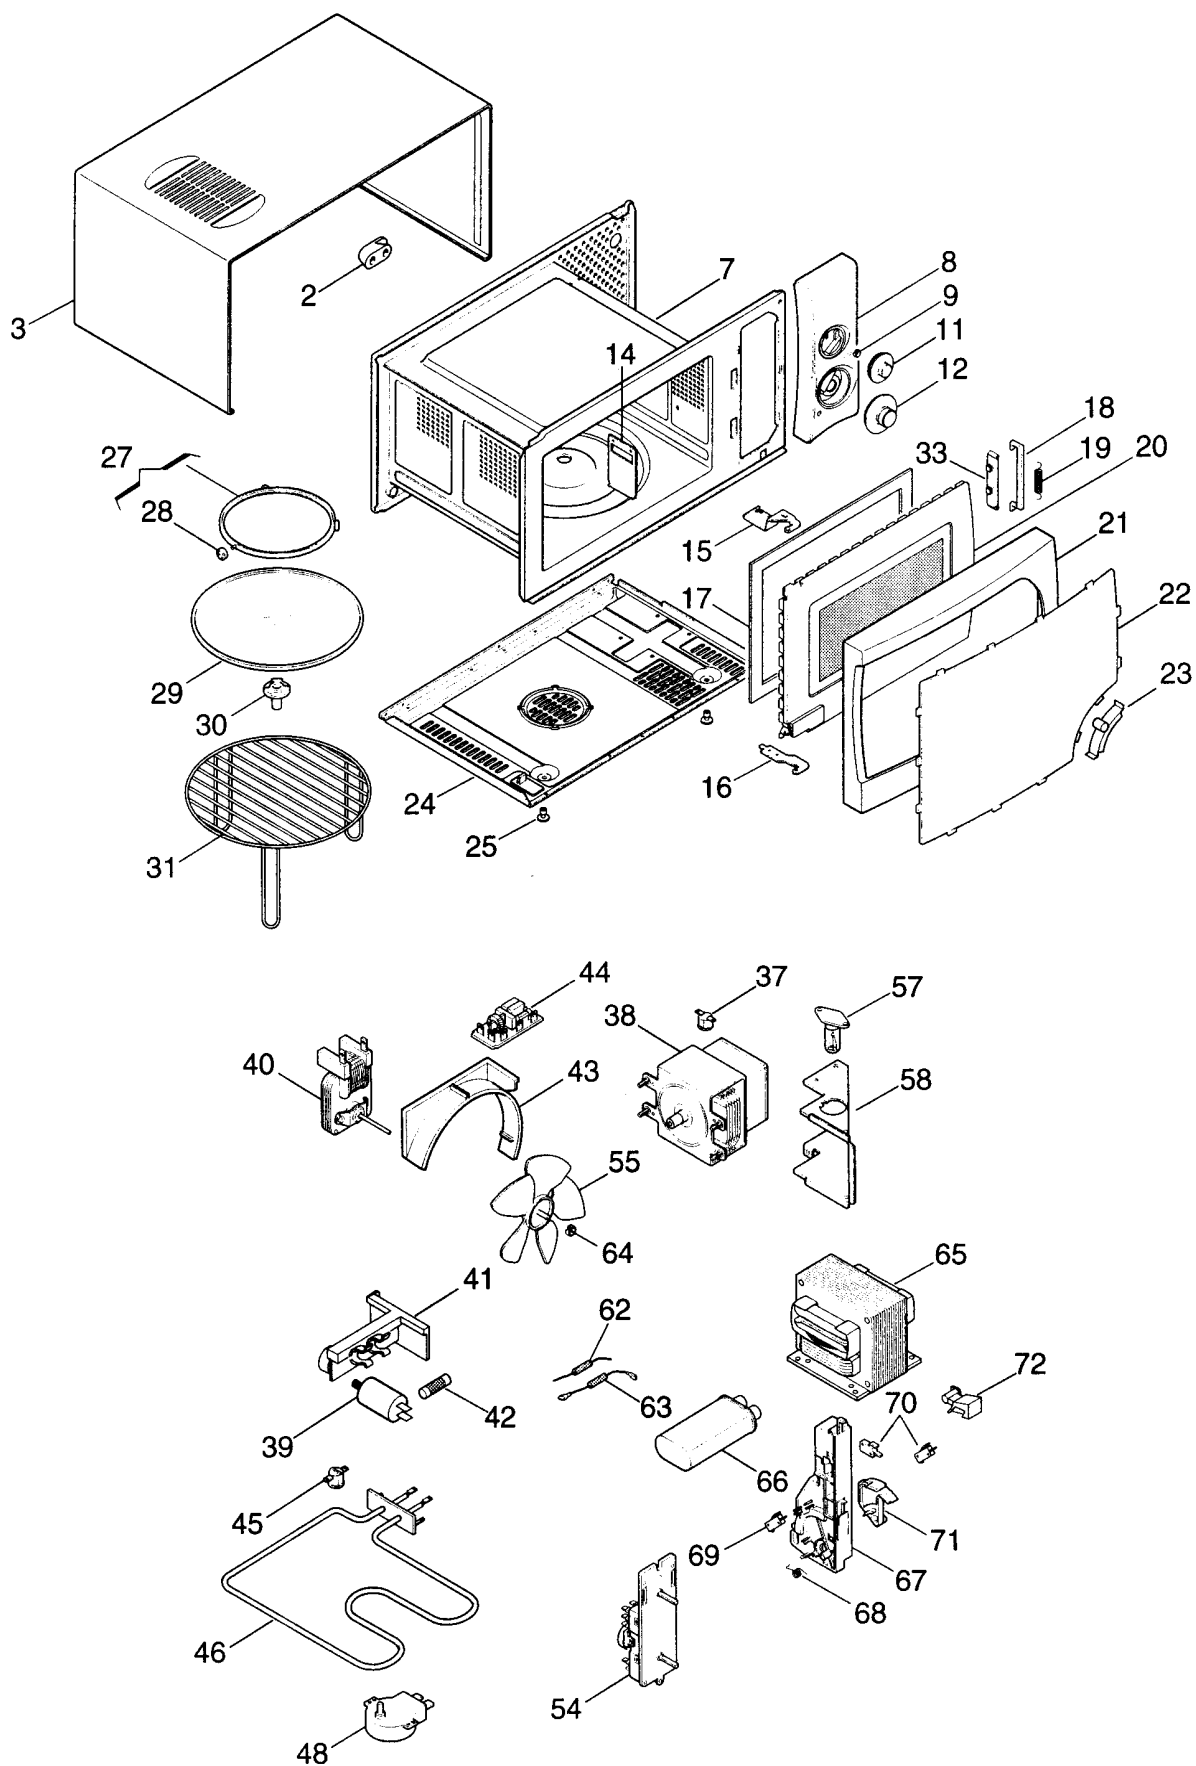

Position	Code	description
000A	573784	INSTRUCTION BOOK
000B	573798	INSTRUCTION BOOK
02	534075	SPACER
07	709194	CAVITY
08	593089	CONTROL PANEL
09	611900	SPRING
11	592978	KNOB
12	592976	KNOB
14	536796	CLOSURE
15	709183	UPPER HINGE
16	709162	HINGE LOWER
18	536384	HOOK
19	612003	SPRING
20	738228	DOOR
21	5319127000	FRAME
22	593092	FRONT PANEL
23	5319119100	HANDLE
24	690512	BASE
25	532710	RUBBER PAD
27	552584	SUPPORT
28	536792	CASTOR
29	NOCODE04	SEE TECHNICAL BULLETIN
30	537301	PULLER
31	NOCODE01	NOT AVAILABLE
33	536347	RUNNER
37	521466	THERMOSTAT
38	5119108100	MAGNETRON (900W)
39	5119108500	FILTER
40	5119108300	MOTOR
41	536687	SUPPORT
42	5119109300	FUSE (8A)
44	5219109900	CURRENT LIMITER
45	521650	THERMOSTAT 75
46	512999	HEATING ELEMENT (W1000 230V)
48	5119108600	GEARMOTOR (220/240V)
54	521664	TIMER
55	536579	FAN JOHNSON

57	NOCODE04	SEE TECHNICAL BULLETIN
58	5319126100	DUCT
62	5119100000	DIODE (-40+130°)
63	5119107500	DIODE (12A)
64	611916	SPRING
65	5119101600	TRANSFORMER
66	5119101800	CAPACITOR (0.95uF)
67	536365	SUPPORT
68	6119102300	SPRING
69	511854	MICROSWITCH MONITOR
70	511855	SECONDARY MICROSWITCH
71	5319143100	CAM
72	536367	CAM