


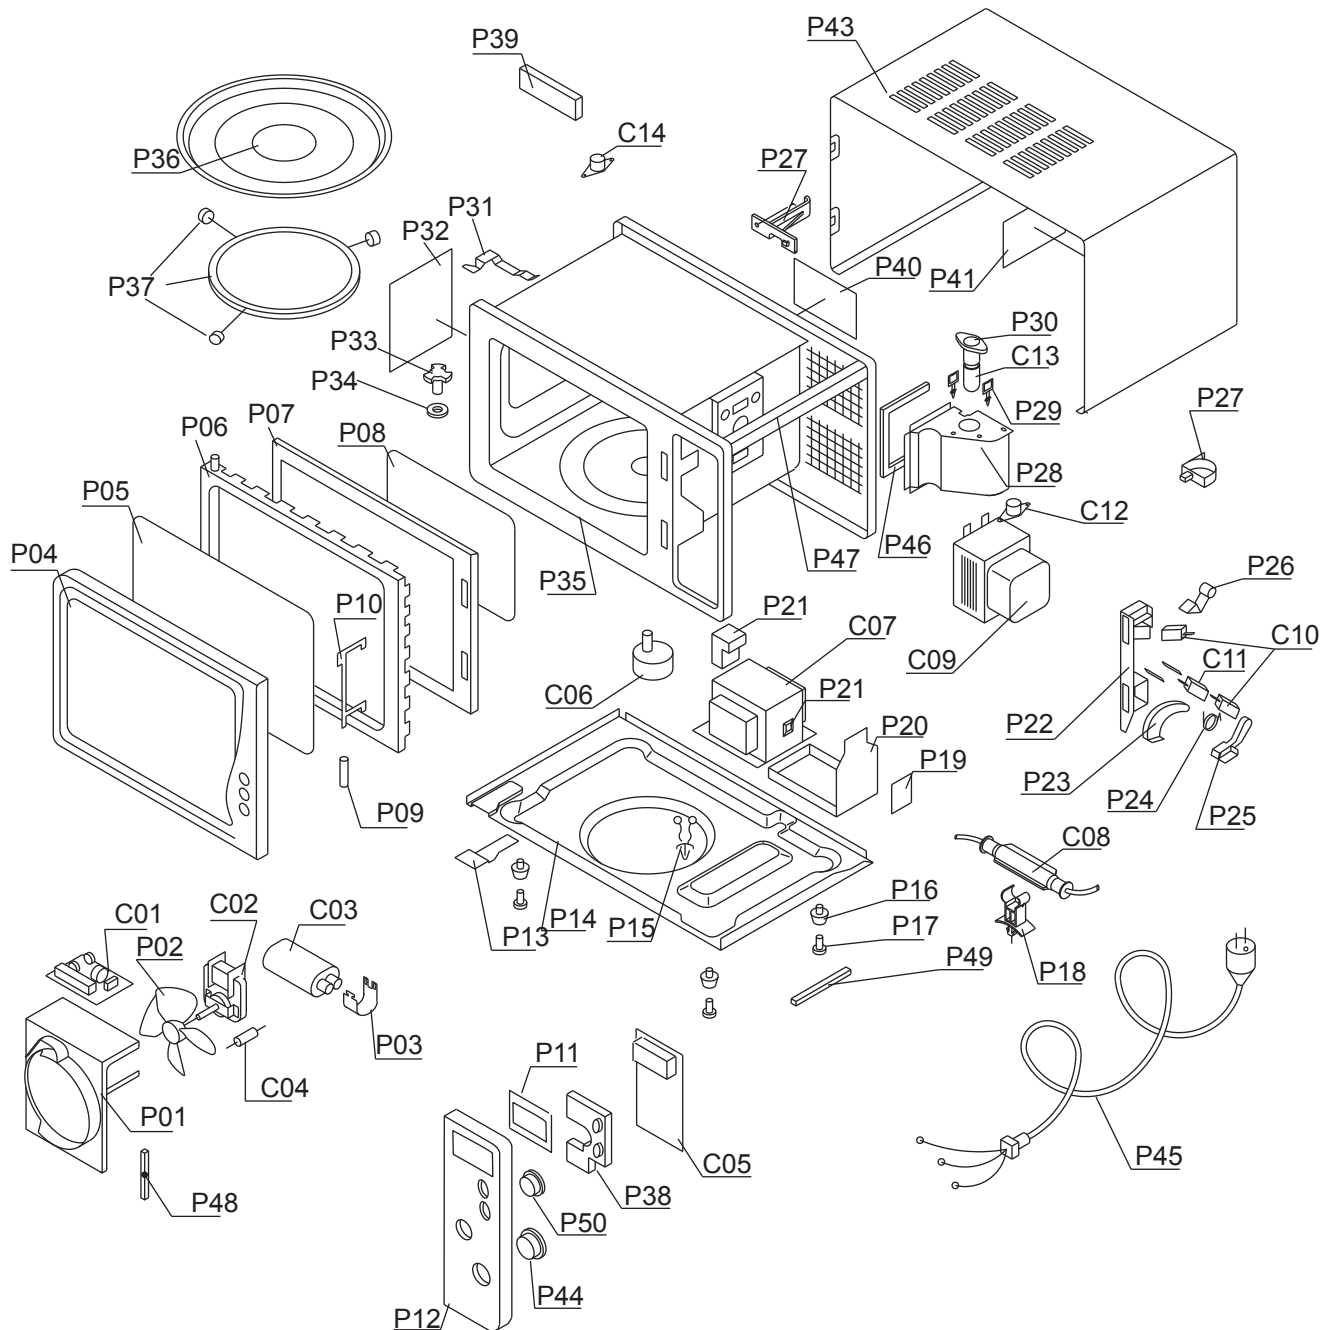

Position	Code	description
C01	GA1048	FILTER
C02	GA1049	MOTOR
C03	GA1050	CONDENSER
C04	GA1051	DIODE
C05	GA1069	BOARD
C06	GA1148	MOTOR
C07	GA1054	TRANSFORMER
C08	GA1055	FUSE
C10	GA1057	MICROSWITCH PRIM SEC
C11	GA1058	MICROSWITCH MONITOR
C12	GA1059	THERMOSTAT
C13	GA1060	LAMP
C14	GA1061	THERMOSTAT
P01	GA1000	ARCHIMEDES SCREW
P02	GA1001	FAN
P03	GA1002	SUPPORT
P04	GA1003	FRAME
P05	GA1004	GLASS
P06	GA1005	DOOR
P07	GA1006	COVER
P08	GA1007	INSULATOR
P09	GA1008	SPRING
P10	GA1009	HOOK
P11	GA1064	PANEL
P12	GA1065	CONTROL PANEL
P13	GA1012	HINGE LOWER
P14	GA1013	PLATE
P15	GA1014	WIRE CLAMP
P16	GA1015	FOOT
P17	GA1016	RUBBER PAD
P18	GA1017	SUPPORT
P19	GA1018	INSULATOR
P20	GA1019	SUPPORT
P21	GA1020	RUBBER PAD
P22	GA1021	SUPPORT
P23	GA1022	CAM
P24	NOCODE01	NOT AVAILABLE

P25	GA1024	LEVER
P26	GA1025	LEVER
P27	GA1026	SUPPORT
P28	GA1027	DUCT
P29	GA1028	WIRE CLAMP
P30	GA1029	SOCKET
P31	GA1030	HINGE UPPER
P32	GA1031	CLOSURE
P33	535127	PULLER
P34	GA1033	WASHER
P35	GA1034	CAVITY
P36	NOCODE04	SEE TECHNICAL BULLETIN
P37	GA1036	SUPPORT
P38	GA1066	KEYBOARD
P39	GA1037	SPONGE
P40	GA1038	INSULATOR
P41	GA1039	INSULATOR
P43	GA1041	COVER
P44	GA1067	PUSH BUTTON
P45	GA1042	POWER SUPPLY CORD
P46	GA1043	SPONGE
P47	GA1044	BRACKET
P48	GA1045	SPONGE
P49	GA1046	SPONGE
P50	GA1068	PUSH BUTTON