


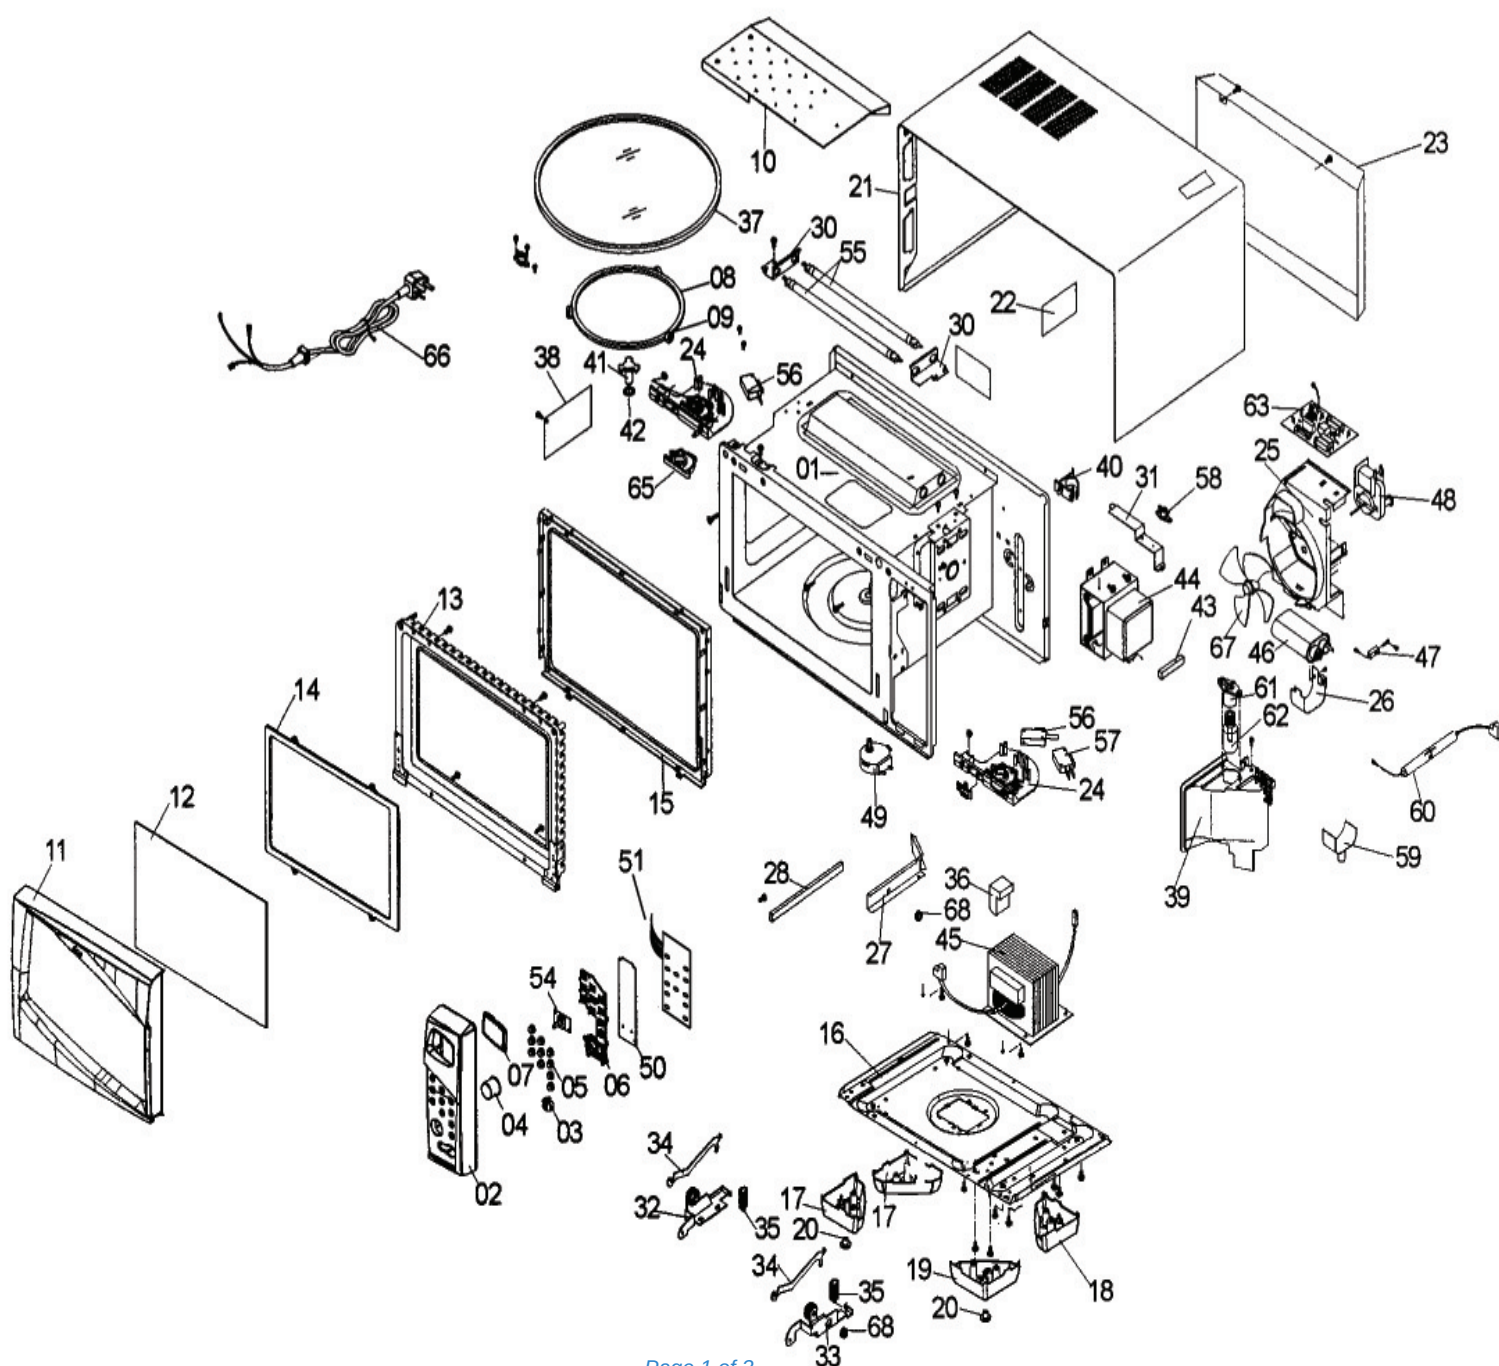

Position	Code	description
01	MJ1189	CAVITY
02	MJ1190	CONTROL PANEL
03	MJ1191	PUSH BUTTON
04	MJ1192	PUSH BUTTON
05	MJ1193	KEYBOARD
06	MJ1194	SUPPORT
07	MJ1195	GLASS
08	MJ1134	SUPPORT
09	MJ1135	CASTOR
10	MJ1136	INSULATOR
11	MJ1321	DOOR
12	MJ1138	GLASS
13	MJ1196	DOOR
14	MJ1197	GASKET
15	MJ1141	INNER DOOR
16	MJ1142	SUPPORT BASE
17	MJ1143	FOOT
18	MJ1144	FOOT
19	MJ1145	FOOT
20	MJ1146	RUBBER PAD
21	MJ1320	HOUSING
22	MJ1148	INSULATOR
23	NOCODE01	NOT AVAILABLE
24	MJ1150	SUPPORT
25	MJ1151	SUPPORT
26	MJ1152	SUPPORT
27	MJ1153	BRACKET
28	MJ1154	GASKET
29	MJ1157	SPRING
30	MJ1155	SUPPORT
31	MJ1156	SUPPORT
32	MJ1200	SUPPORT LEFT
33	MJ1201	SUPPORT RIGHT
34	MJ1159	HOOK
35	MJ1160	SPRING
36	MJ1161	PROTECTION
37	NOCODE04	SEE TECHNICAL BULLETIN

38	MJ1095	INSULATOR
39	MJ1164	COVER
40	MJ1180	SUPPORT
41	MJ1166	PULLER
42	MJ1167	RING
43	MJ1168	GASKET
44	MJ1274	MAGNETRON
45	MJ1170	TRANSFORMER
46	MJ1171	CONDENSER
47	MJ1172	DIODE
48	MJ1173	MOTOR PIVOT L. 28 mm D.3
49	MJ1416	GEARMOTOR
50	NOCODE04	SEE TECHNICAL BULLETIN
51	MJ1437	MEMBRANE
54	MJ1202	BOARD
055A	NOCODE01	NOT AVAILABLE
055B	MJ1356	RES GRILL 500W115V Cm30.7
56	MJ1177	MICROSWITCH
57	MJ1178	MICROSWITCH
58	MJ1179	THERMOSTAT
59	MJ1180	SUPPORT
60	MJ1109	FUSE 0.8A
61	MJ1182	SUPPORT
62	MJ1183	LAMP
63	MJ1203	BOARD
65	MJ1324	LEVER
66	MJ1187	POWER SUPPLY CORD
67	MJ1206	FAN
68	MJ1232	RUBBER PAD