


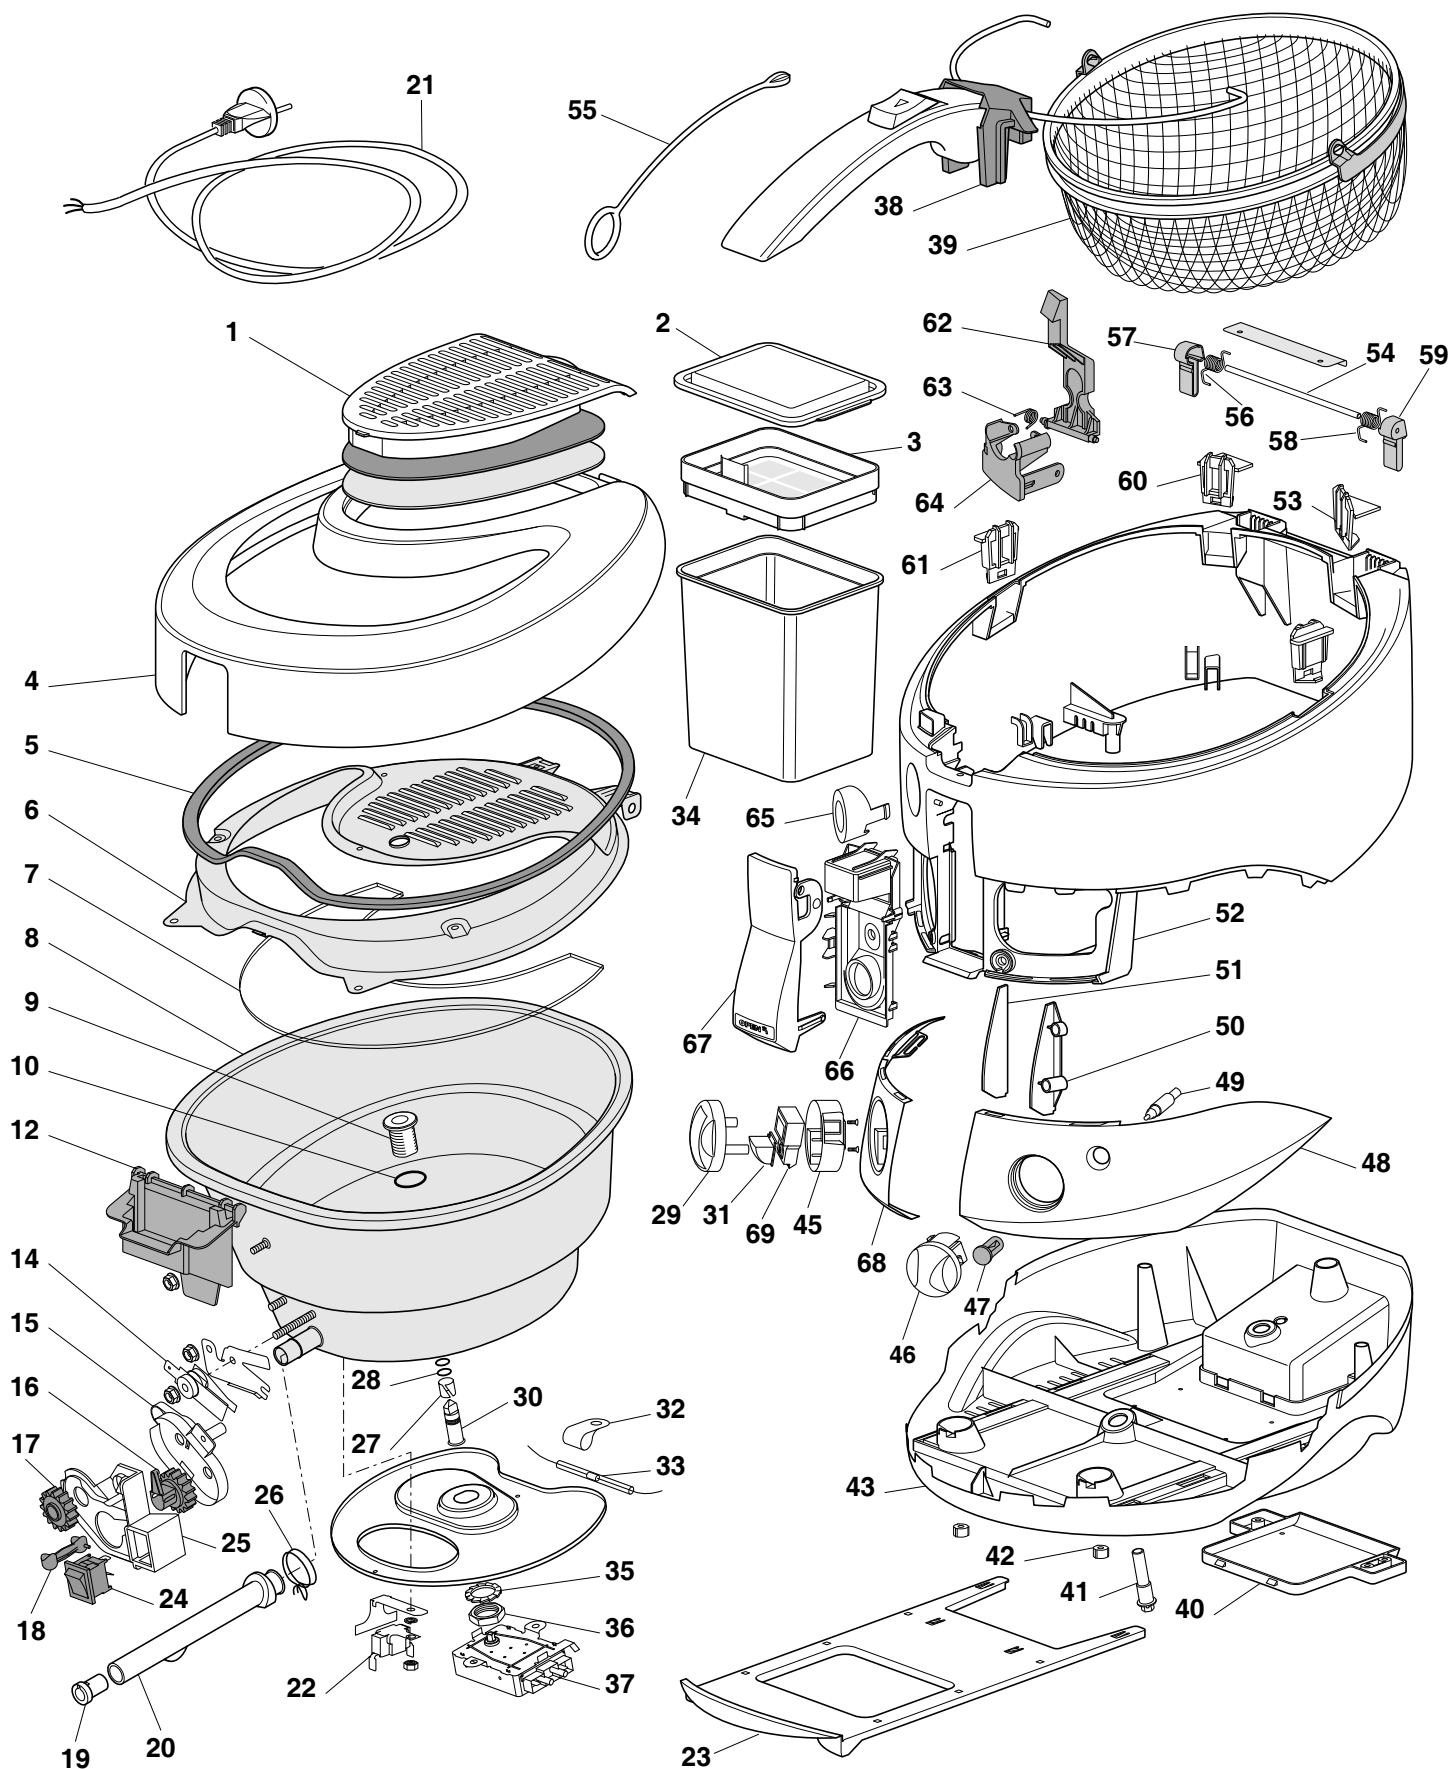

Position	Code	description
01	5325164900	FILTER GRID
02	5325167300	COVER
03	7312573599	FILTRO
04	NOCODE04	SEE TECHNICAL BULLETIN
05	5325165100	GASKET
06	6025106300	INNER COVER
07	5325165000	GLASS
08	7325139200	PAN
09	6225101300	FLANGE
10	5325111100	GASKET
12	5325164200	SEAT
14	5225102700	THERMOSTAT 250°
15	5325165500	SUPPORT
16	5325165300	GEAR
17	5325165200	GEAR
18	5325165400	EXTENSION
19	5325120600	STOPPER
20	5512500089	OIL DRAIN TUBE
21	7312574349	POWER SUPPLY CORD
22	5225102800	THERMOSTAT (230V 10A 250°C)
23	5325164100	DRAWER
24	5125105200	SWITCH
25	5325165600	SUPPORT
26	9824800025	CLIP CLAMP (18.70-18.20-17.70)
27	532509	CLIP CLAMP
28	532524	GASKET
29	5325164300	FRONT PIECE
30	622063	PIN
31	5325164500	PUSH BUTTON
32	6225101200	STOP
33	5213219131	TCO (15A 216°)
34	5325167200	CONTAINER
35	9821002346	WASHER (D1-21)
36	9815002086	NUT (M20X1.5)
37	5512500149	GEARMOTOR
38	7312576149	HANDLE
39	7312572969	BASKET

40	5325163500	BOTTOM
41	5325106400	BUSH
42	532233	RUBBER PAD
43	5325163400	PEDESTAL
45	5325164400	SUPPORT
46	5325165700	KNOB
47	5311811071	LENS
48	5925122700	CONTROL PANEL
49	7312573549	LAMP
50	5325163900	CLOSURE RIGHT
51	5325164000	CLOSURE
52	5925122800	CASING
53	5325162700	SPACER RIGHT
54	6125106000	PIN
55	536330	BRUSH
56	6125106100	SPRING
57	5325161900	LEFT HINGE
58	6125106200	SPRING
59	5325161800	RIGHT HINGE
60	5325162600	SPACER LEFT
61	5325162500	SPACER
63	611779	SPRING
64	5325162900	SUPPORT
65	5325162000	PUSH BUTTON
66	5325162100	CLOSURE
67	5325162200	DOOR
68	5325163800	CONTROL PANEL
69	5225100200	TIMER WITH BATTERY (99')