


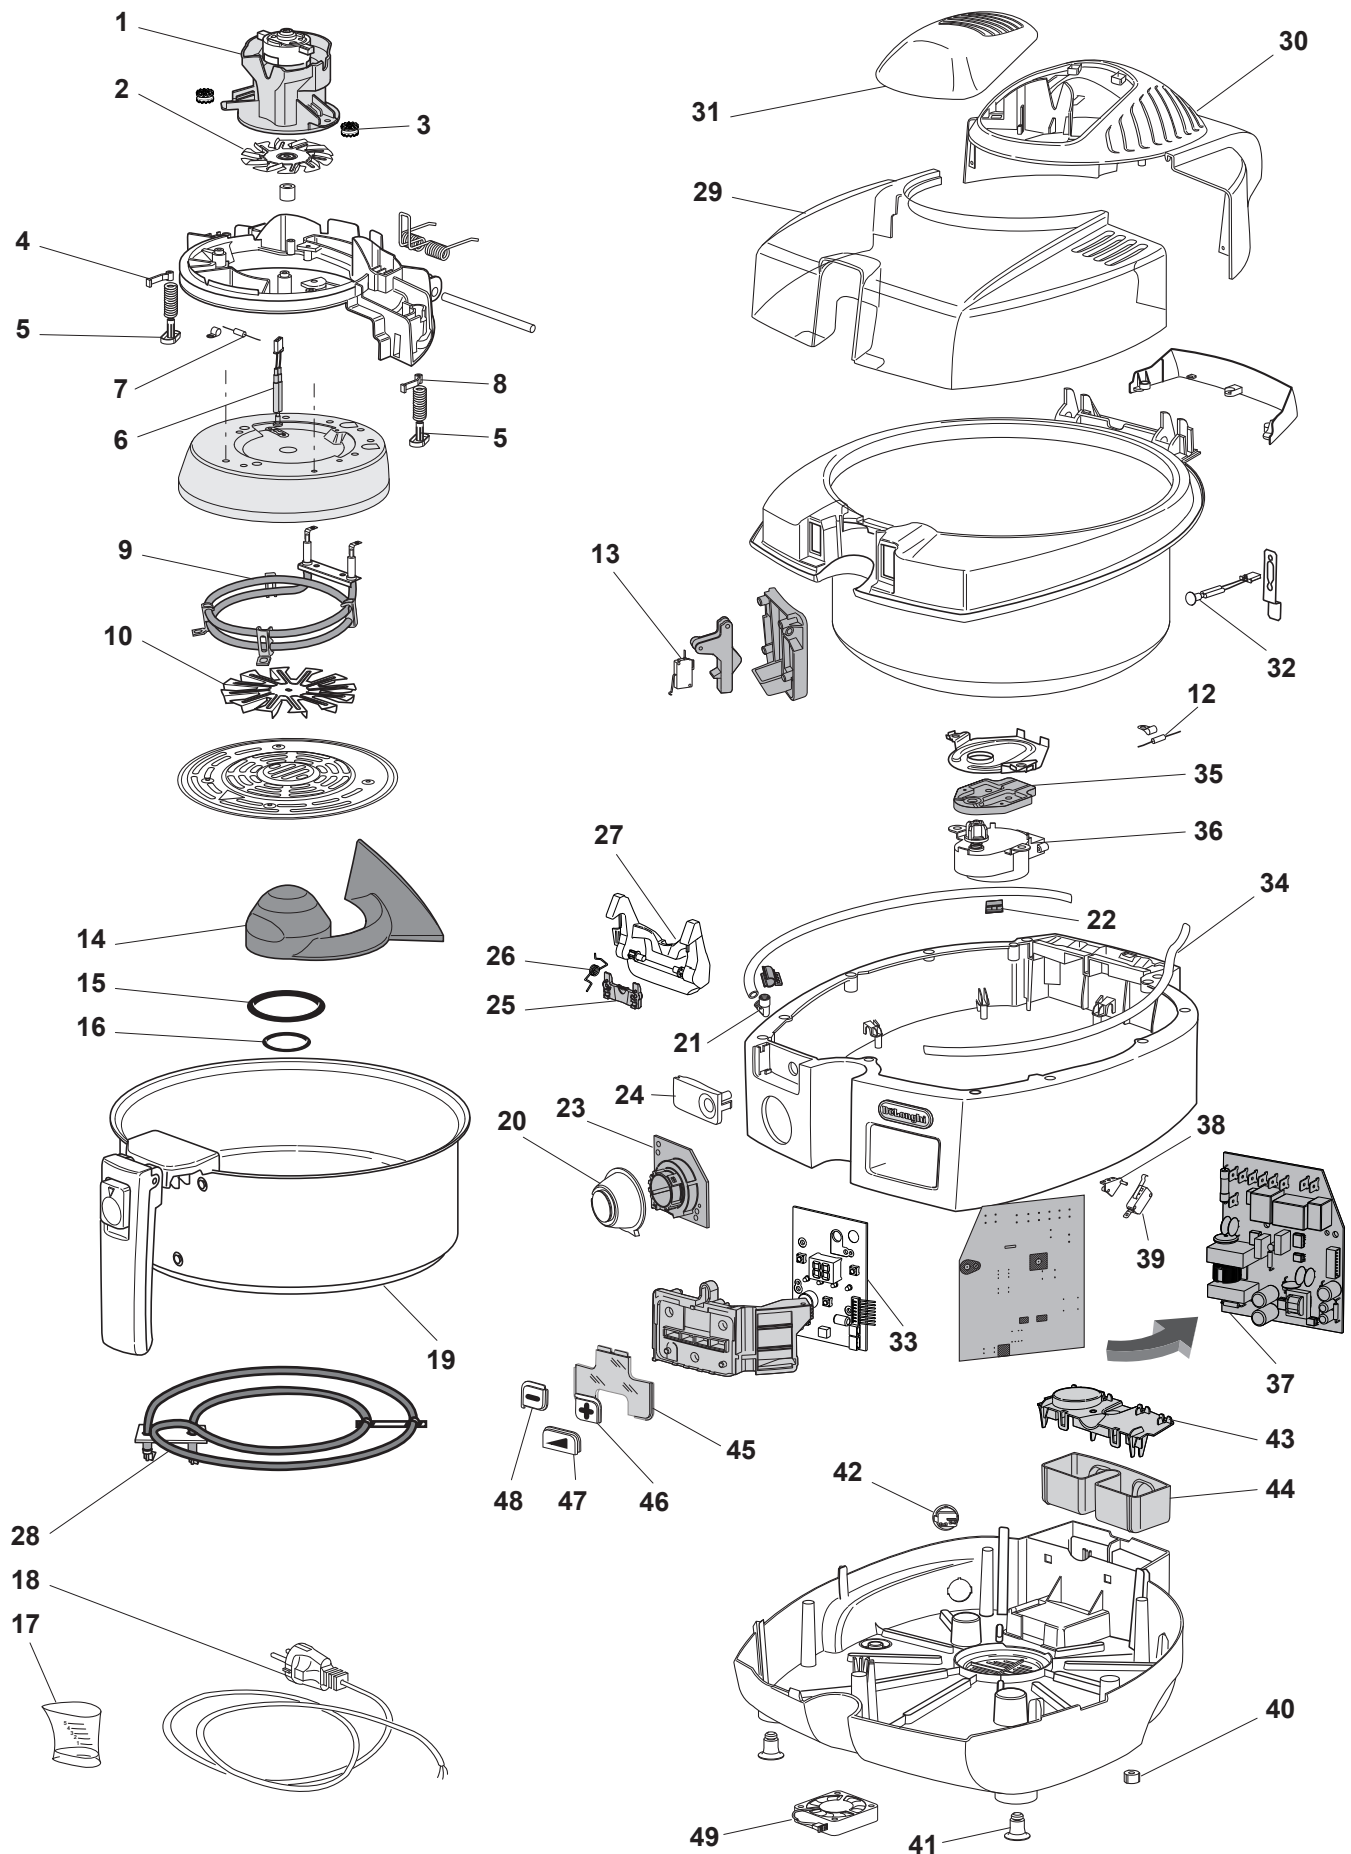

GCC FH1396/1 EX:1

MULTIFRY FH1396/1 EX:1
EXTRACHEF PLUS

Position	Code	description
0	6912570999	GRID
01	7312579919	MOTOR ASSEMBLY
02	6012510271	FAN
03	5312514201	RUBBER PAD
04	5312512941	HOOK
05	5312512931	KEY
06	5212510281	SENSOR (NTC)
07	5291101000	TCO
08	5312512951	HOOK
09	5112510851	HEATING Element 1400W
10	6012510281	FAN
12	511876	TCO (192°)
13	5112510301	MICROSWITCH WITH LEVER
14	7312578779	MIXER
15	5312513551	O-RING
16	5312513561	O-RING
17	5312513741	MEASURING SPOON
18	5012574899	POWER SUPPLY CORD WITH PLUG (UK)
19	7312578789	PAN ASSY. H=100
20	7312579369	KNOB AND BUTTON ASSEMBLY
21	5312513491	JOINT
22	5312513501	STOP
23	5212510411	ELECTRONIC CONTROL BOARD
24	5312513131	KEY
25	5312513151	SUPPORT
26	6112510451	SPRING
27	5312513141	HOOK
28	5112510431	LOWER HEATING ELEMENT (1000W/240V)
29	5912510461	COVER
30	5312515171	PROTECTION
31	5912510511	CONTROL PANEL
32	5212510271	SENSOR (NTC)
33	5212510561	ELECTRONIC DISPLAY BOARD (220V)
34	5312513881	TUBE (DI=7 DE=10 L=380)
35	5312513931	PROTECTION
36	7312578489	MOTOR (220/240V)
37	5212510551	ELECTRONIC POWER BOARD (220V)

GCC FH1396/1 EX:1

MULTIFRY FH1396/1 EX:1
EXTRACHEF PLUS

38	5312513041	MICROSWITCH SUPPORT
39	5112510341	MICROSWITCH WITH LEVER
40	532233	RUBBER PAD
41	5322074149	RUBBER PAD
42	5112510461	SWITCH
43	5312513081	TANK COVER
44	5312513101	TANK
45	5912510491	GLASS
46	5312513631	PUSH BUTTON
47	5312513641	PUSH BUTTON
48	5312513621	PUSH BUTTON
49	5112510641	AXIAL FAN