


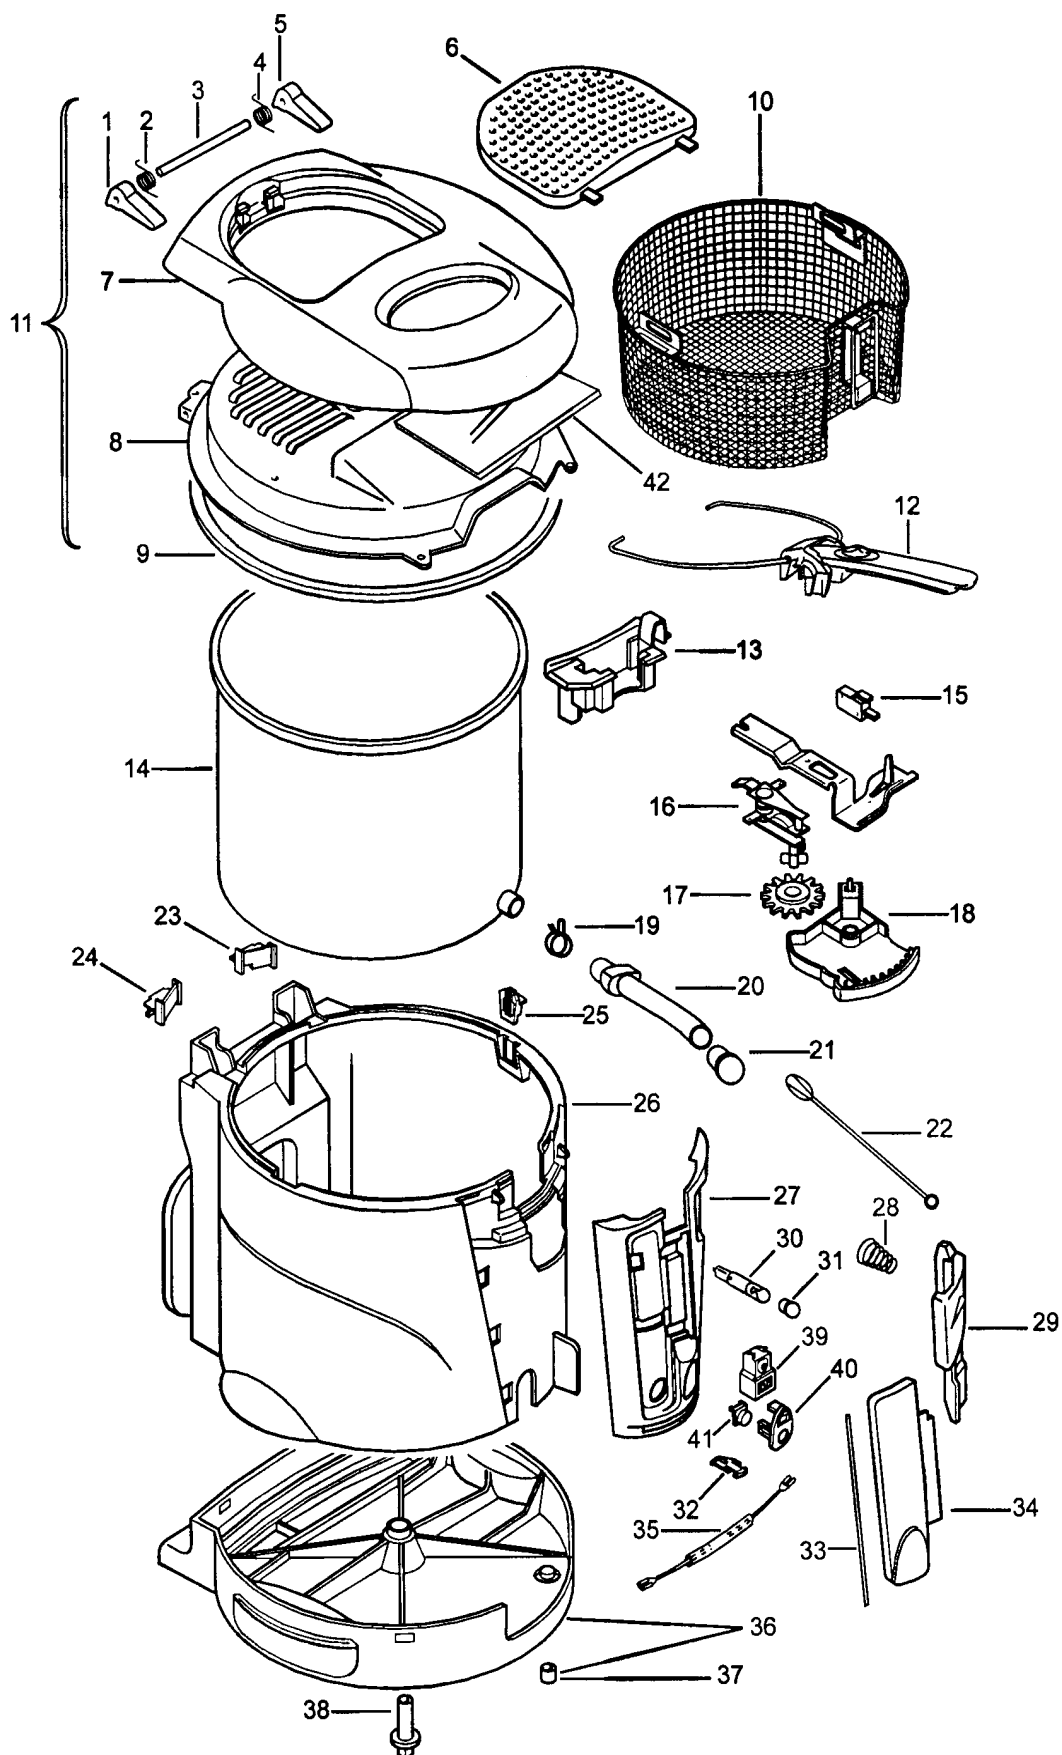

| Position | Code       | description                    |
|----------|------------|--------------------------------|
| 01       | 5325112900 | LEFT HINGE                     |
| 02       | 6125102600 | SPRING                         |
| 03       | 6125101900 | PIN                            |
| 04       | 6125102500 | SPRING                         |
| 05       | 5325113000 | RIGHT HINGE                    |
| 06       | 5325113600 | GRID                           |
| 07       | 5325114100 | COVER                          |
| 08       | 6025102900 | BOTTOM OF COVER                |
| 09       | 5325143300 | GASKET                         |
| 10       | 7025105700 | BASKET                         |
| 11       | 7312570469 | TOP COVER ASSY FOR 0125692013  |
| 12       | 7312570509 | BASKET AND HANDLE              |
| 13       | NOCODE01   | NOT AVAILABLE                  |
| 14       | 7325113900 | PAN                            |
| 15       | 512113     | MICROSWITCH                    |
| 16       | 5225101300 | THERMOSTAT (240V16A-120V15A)   |
| 17       | 5325120200 | GEAR                           |
| 18       | 5325120100 | LEVER                          |
| 19       | 9824800015 | CLIP CLAMP (18.70-18.20-17.70) |
| 20       | 5512500089 | OIL DRAIN TUBE                 |
| 21       | 5325120600 | STOPPER                        |
| 22       | 536330     | BRUSH                          |
| 23       | 5325114000 | SPACER                         |
| 24       | 5325113900 | SPACER                         |
| 25       | 5325104700 | SPACER                         |
| 26       | 5325120500 | CASING                         |
| 27       | 5925112700 | CONTROL PANEL                  |
| 28       | 6125103400 | SPRING                         |
| 29       | 5325127300 | PUSH BUTTON                    |
| 30       | 513080     | LAMP                           |
| 31       | 5311811071 | LENS                           |
| 32       | 5325120000 | SLIDER                         |
| 33       | 6125102900 | PIN                            |
| 34       | 5925112500 | DOOR                           |
| 35       | 511816     | TCO (226°)                     |
| 36       | 5525108600 | PEDESTAL                       |
| 37       | 532233     | RUBBER PAD                     |

|    |            |                          |
|----|------------|--------------------------|
| 38 | 5325106400 | BUSH                     |
| 39 | 5225100200 | TIMER WITH BATTERY (99') |
| 40 | 5325118400 | SUPPORT                  |
| 41 | 5325118500 | PUSH BUTTON              |
| 42 | 5325115200 | GLASS                    |