




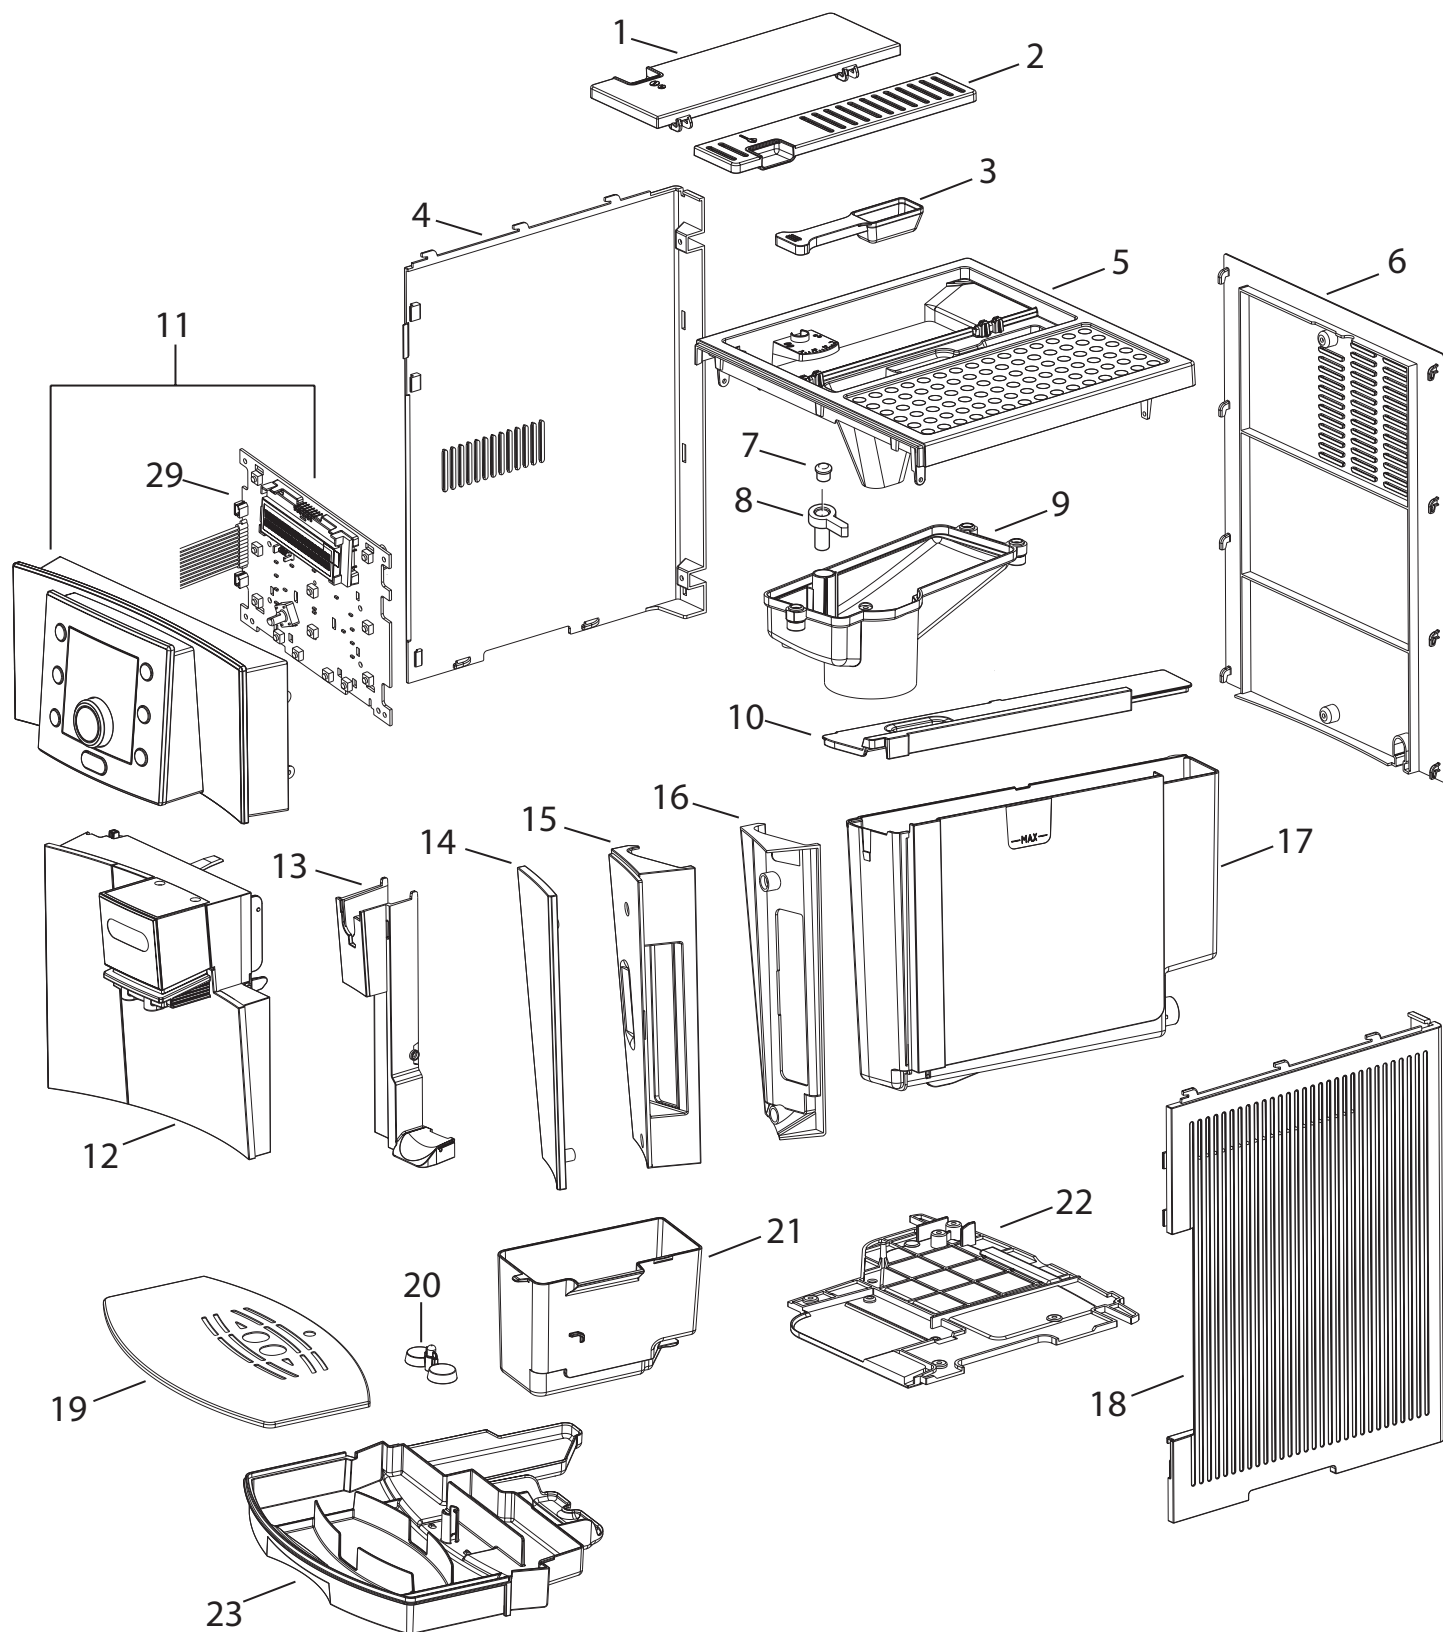

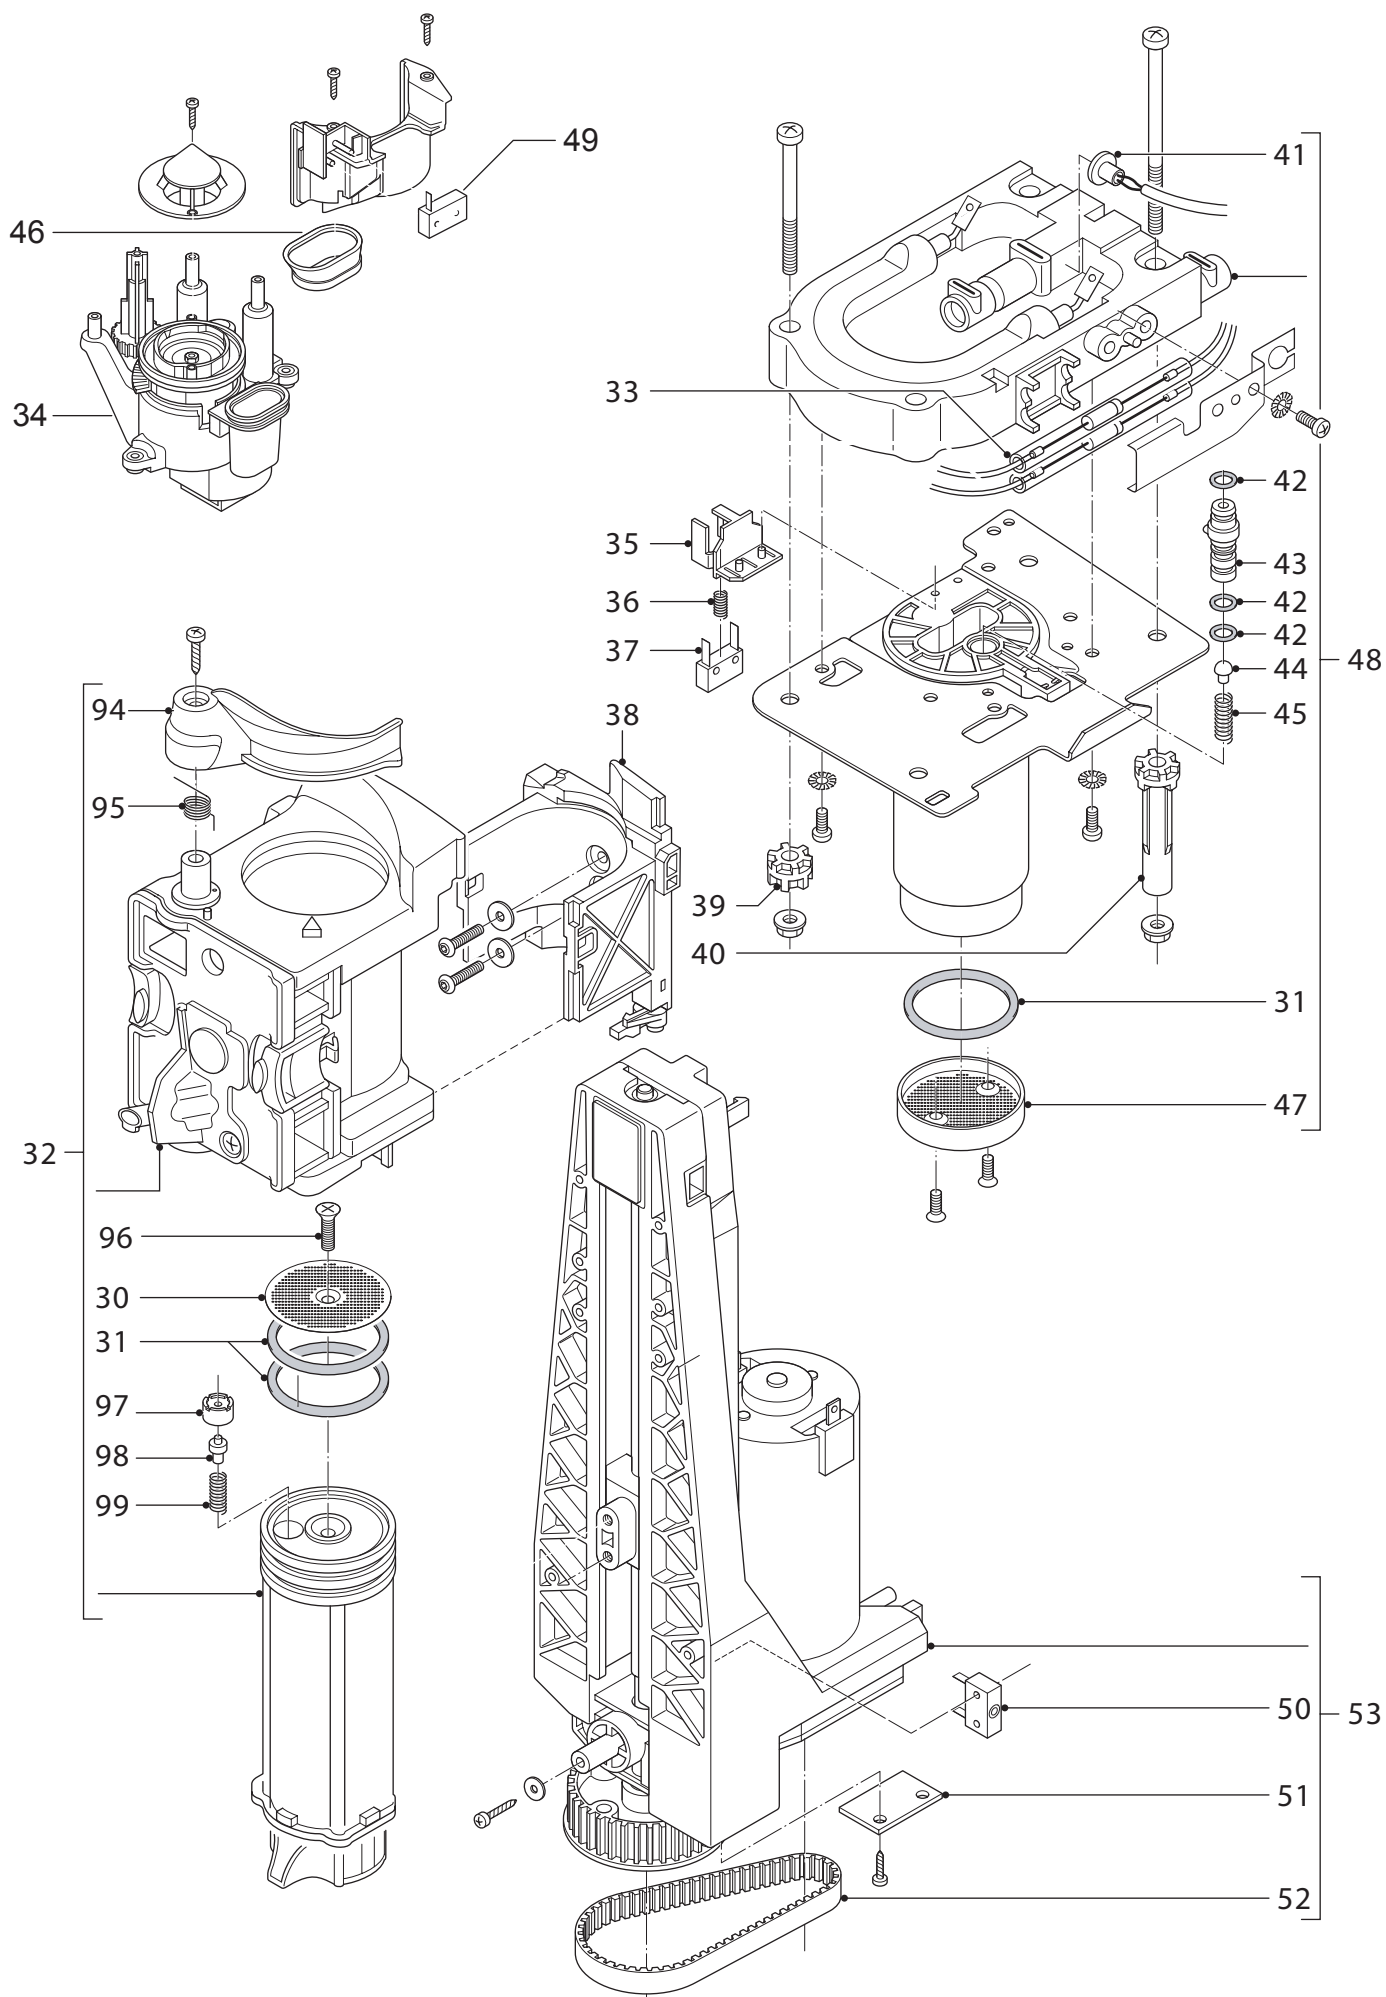

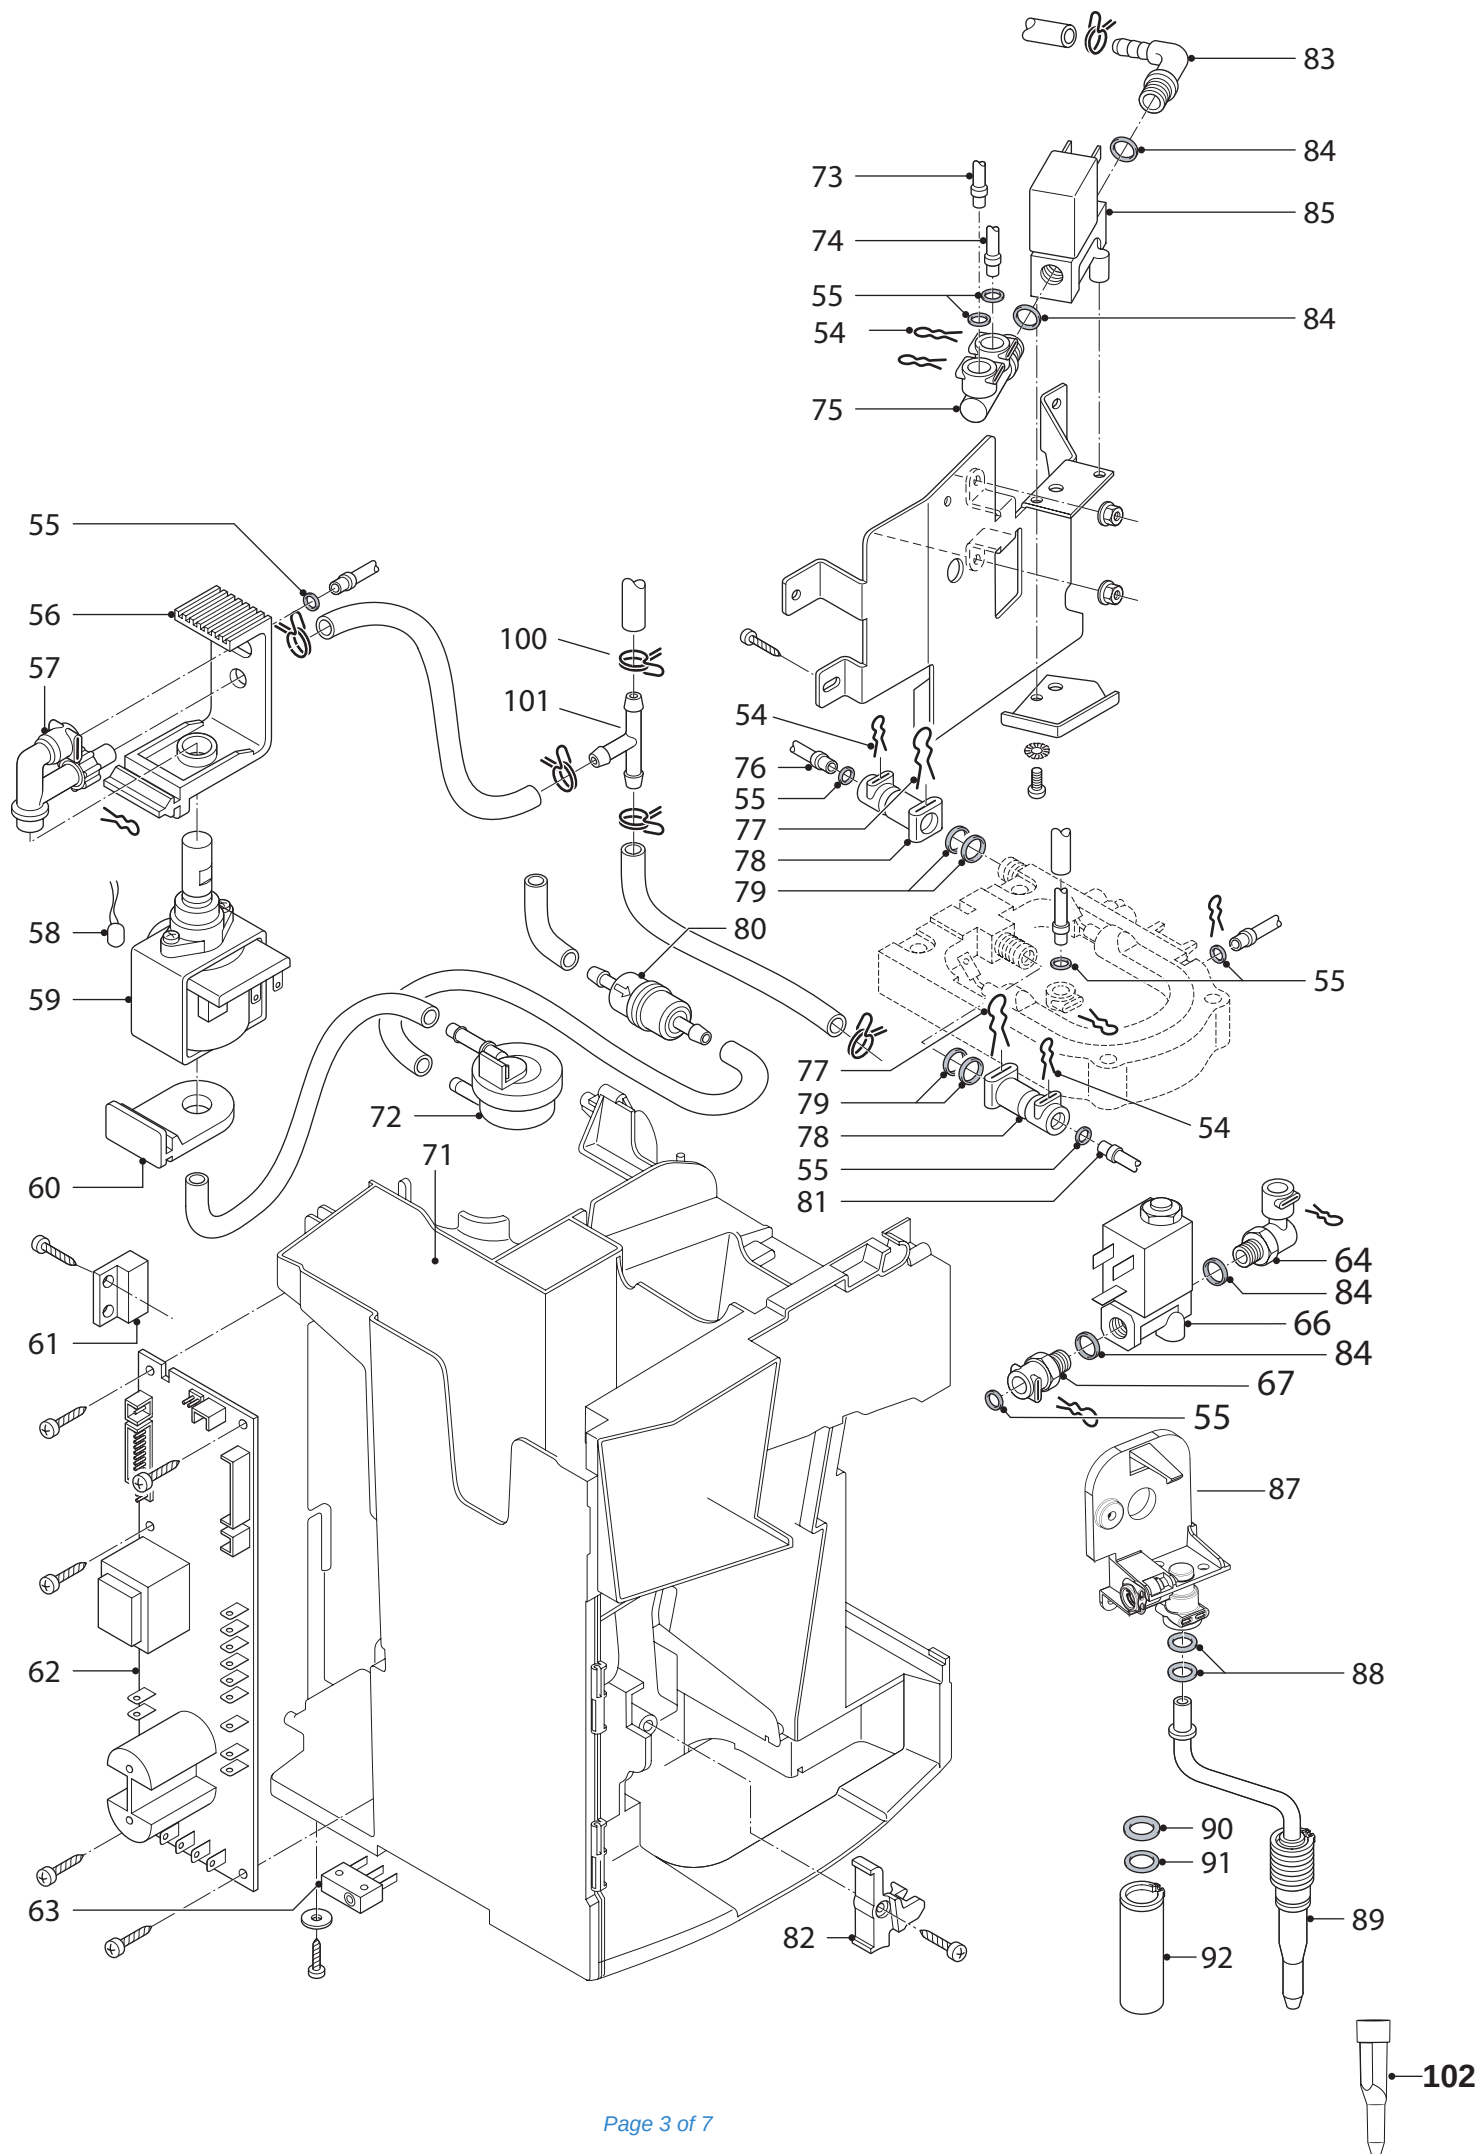

Position	Code	description
00AA	5132112500	SWITCH
00AB	5332108700	GASKET
00AC	7313217261	MOTOR WITH PULLEY (ECM 230V)
00AD	5032514800	FLOWMETER WIRING (L 470)
00AE	5332186200	DRAIN HOSE (90°L180)
00AF	5332224100	MOTOR BELT
00AG	5332238300	DRAIN HOSE (90° L=180)
00AH	AS13200107	COVER ASSEMBLY
00AI	5332164700	RUNNER FRAME
00AJ	5013252911	WIRING FOR FLOWMETER (L630)
00AK	5313211301	BLACK REAR PANEL CAP
00AL	5313215891	SCUFF-PROOF RUBBER PAD
00AM	5332283000	DISPENSER GLASS
00AN	5513211891	SCRAPER BRUSH WITH BRISTLES
00AO	5913210181	SELECTOR KEY
00AP	6113210111	FIXING BRACKET (TCO)
00AQ	6113210121	SENSOR BRACKET
00AR	5913212241	LEFT FUNCTION KEYBOARD
00AS	5913210371	FUNCTION KEYBOARD
00AT	5313231191	RIGHT ANGLE DOUBLE INLET CONNECTION
00AU	5313219181	GRINDER BELLOW GASKET
00AV	6932102800	BRACKET
00AW	6913210021	SOLENOID VALVE SUPPORT (2V)
00AX	6913210031	SOLENOID VALVE SUPPORT (3V)
00AY	6913210011	POD SUPPORT
00AZ	5313239751	GRINDER PANEL
00BA	5332286300	HANDLE
00BB	6932104400	GRID
00BC	IT1000	PORTABLE DIGITAL THERMOMETER (-50°C +150°C)
00BD	AS00000378	ECOMULTICLEAN 10ML VIAL
00BE	5313210591	RING SELECTOR CHROME (4E)MCSA
00BF	6913210111	FRONT BRACKET DEGREASED ESAM69
001	5332278100	TANK COVER
002	53132C8052	TOP COVER
003	5332226300	MEASURING SPOON
004	5332278400	LEFT SIDE

005	7313224431	UPPER COVER
006	5332278600	REAR PANEL
007	535714	STOPPER
008	5313211001	GRINDING ADJUSTMENT KNOB
009	5532145700	TANK
010	5313251461	TANK COVER
011	7313223101	CONTROL PANEL ASSEMBLY
012	7313224941	DOOR ASSEMBLY
013	5313222761	FROTHER NICHE
014	5332282300	FRONT PIECE
015	5332282100	SUPPORT
016	5332282200	SUPPORT
017	7313254531	WATER TANK
018	5332278300	RIGHT SIDE
019	6032120800	CUP HOLDER
020	5332266600	FLOAT
022	5332225000	BOTTOM
023	5332283900	DRIP TRAY
029	5513211001	CONTROL BOARD
030	6013213181	FILTER (D.40X2.3 TAI-FENG)
031	5332149100	O-RING
032	7313251441	INFUSER
033A	5032526800	TCO WITH WIRING
033B	5032526900	TCO WITH WIRING
034	5513227971	GRINDER ASSEMBLY (2D-DL 230V)
034A	AS00009946	GRINDER ASSEMBLY
0035	5313284261	SUPPORT
036	6132104700	SPRING (x micro 12 x 5)
037	5132105700	MICROSWITCH
038	7332166600	SLIDER
039	5332142400	BUSH
040	5332142300	BUSH
041	5217100200	SENSOR (NTC L400)
042	5313217751	O-RING BLACK (D=6.07 T=1.78)
043	5332213000	PIN
044	5332148400	VALVE
045	6132106900	SPRING
046	5313276531	GASKET

047	5332139200	FILTER
048	5513227901	GENERATOR WITH MECHANICS VALVE (5X0.5 230V)
049	5113210421	MICROSWITCH
050	5132110500	MICROSWITCH (250V 85°)
051	5213213971	HALL SENSOR (L620)
052	5313243071	TOOTHED BELT
053	5513227951	TRANSMISSION ASSEMBLY (CHIAPHUA 230V)
054	6132101300	SPRING
055	5313217701	O-RING (D=3.85 T=2)
056	5313216501	PUMP SUPPORT
057	7313219431	SAFETY VALVE
058	5232103200	PROTECTOR
059	5113270612	PUMP (230V)
060	534848	SUPPORT
061	5232104600	REED SENSOR
062	5213210971	POWER BOARD (SW1.1 230V)
063	5132105400	MICROSWITCH (10A/ 250V/ 125°)
064	5332196900	CONNECTION
066	5513225701	SOLENOID VALVE KIT (2VA 230V)
067	5332196800	CONNECTION
071	NOCODE04	SEE TECHNICAL BULLETIN
072	5213225251	FLOWMETER
073	5513219841	TUBE WITH NUT AND 1 BUSH (L135)
075	5332188800	CONNECTION
076	5513213501	TUBE WITH 2 BUSHES (L150)
077	6113213191	CLIP (WIRE 1,2 AISI302)
078	5332239200	CONNECTOR
079	5313217761	O-RING (D=5.28 T=1.78)
080	5513220521	IMPURITY FILTER
081	5532151500	TUBE
082	5332142600	HOOK
083	5332180500	CONNECTION
084	535692	GASKET
085	5513225701	SOLENOID VALVE KIT (2VA 230V)
087	5313219781	SOLENOID VALVE SUPPORT
088	5332144800	O-RING (D=6)
089	5513210491	TUBE LOWER

090	535692	GASKET
091	533135	GASKET (D=7,66 T=1,78)
092	AS00008426	TUBE
094	5332139800	LEVER
095	6132103500	SPRING
096	9812631250	SCREW (3.5X12)
097	5313277681	STOPPER
098	53132C9532	FROTH DEVICE VALVE NATURAL(PSU)ESAM&ECAM
099	6132106700	SPRING
100	9824800009	CLIP CLAMP (8.30-8.10-7.80)
101	537407	CONNECTION
102	5332169300	LOWER TUBE