




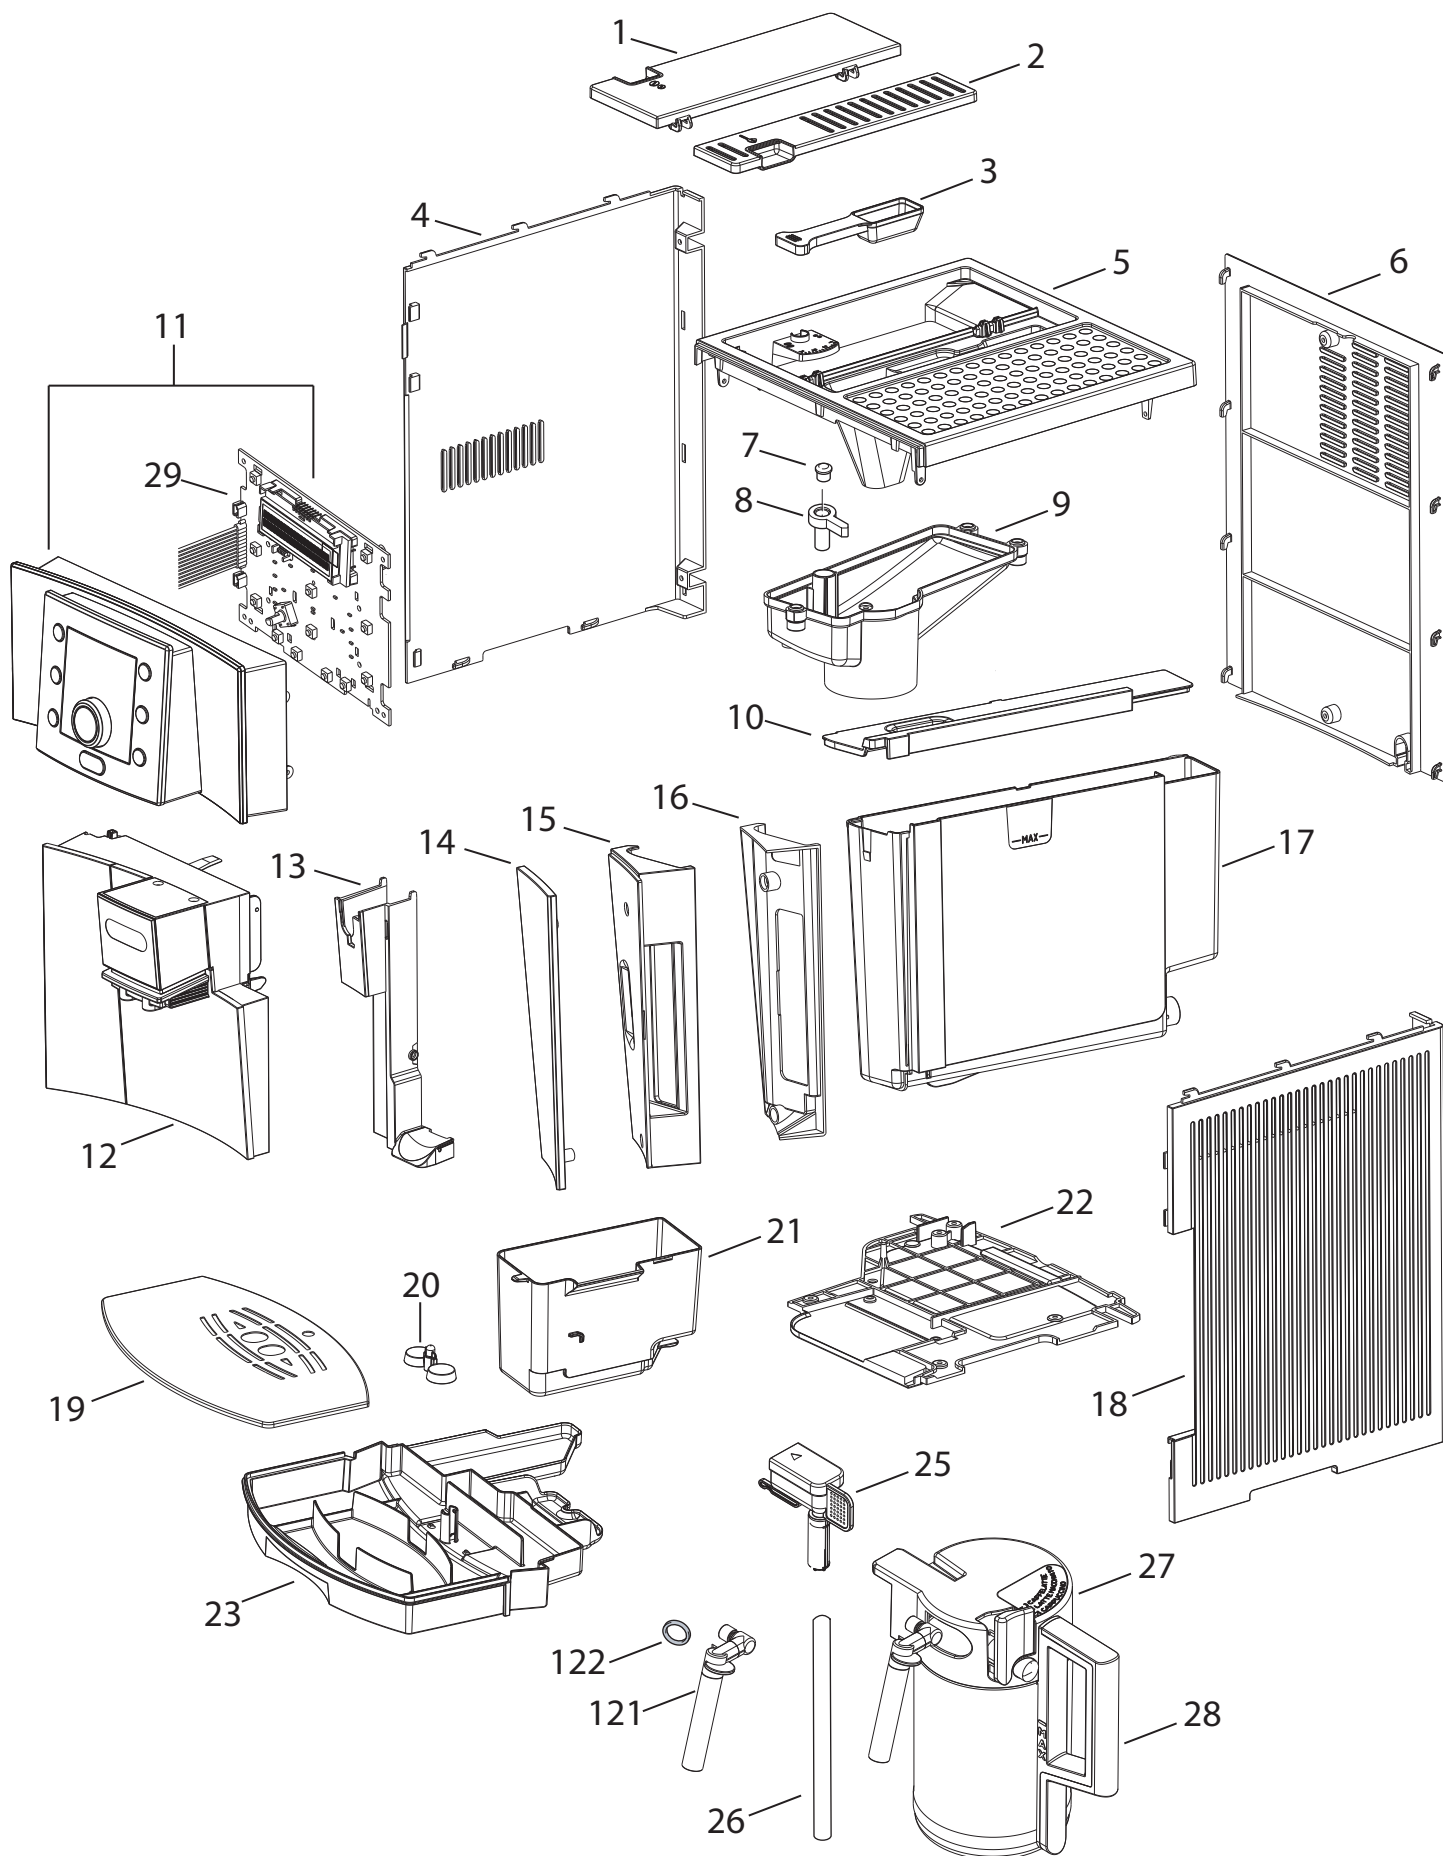

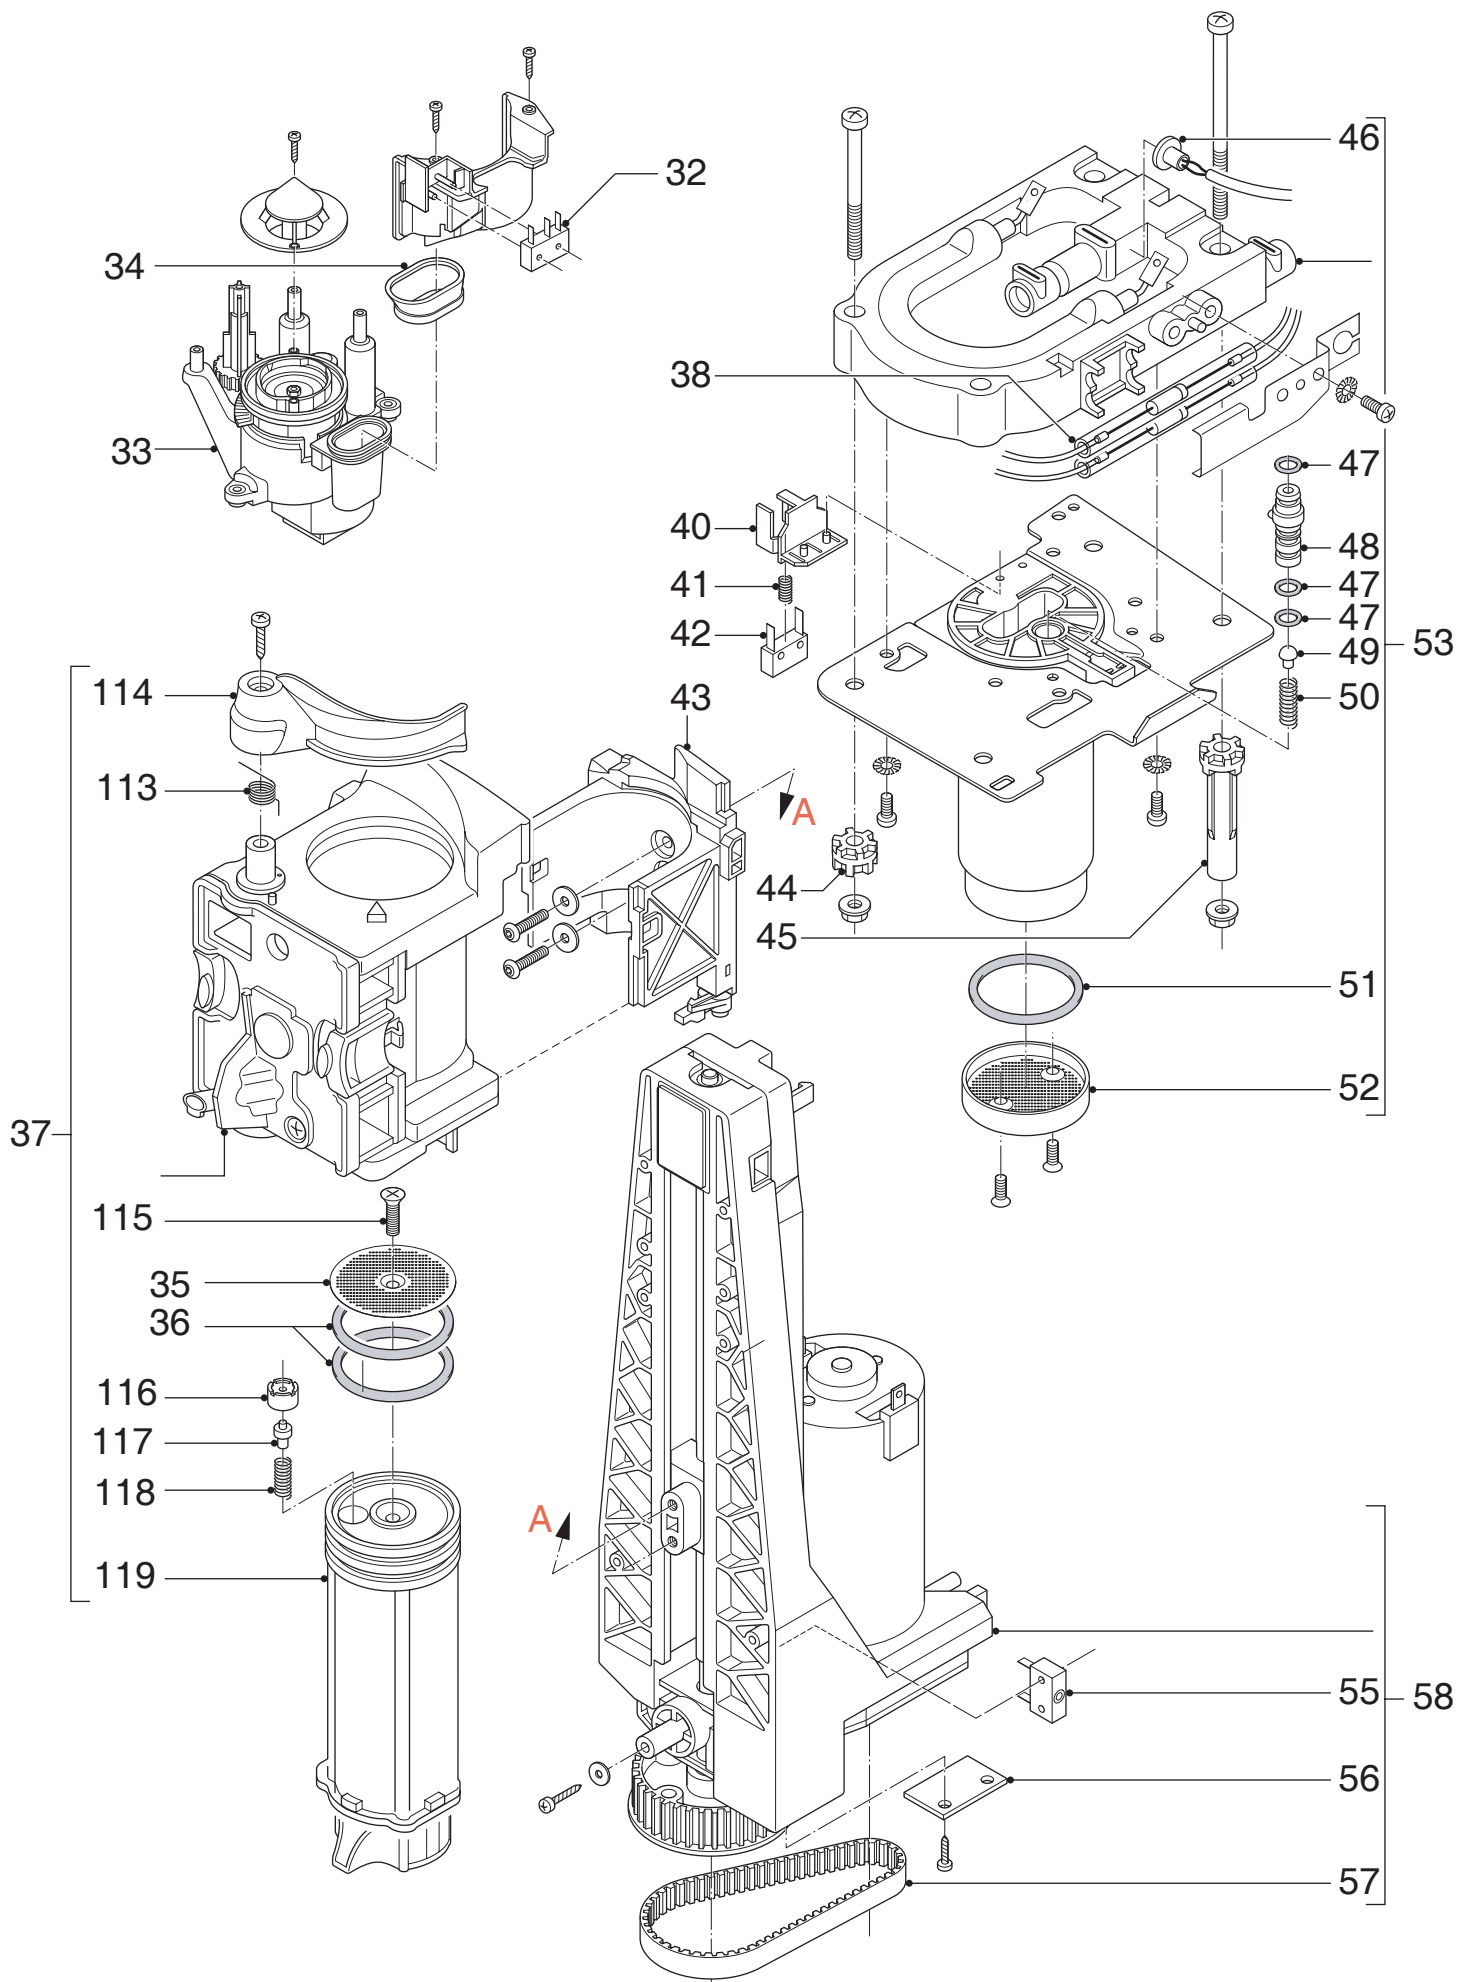

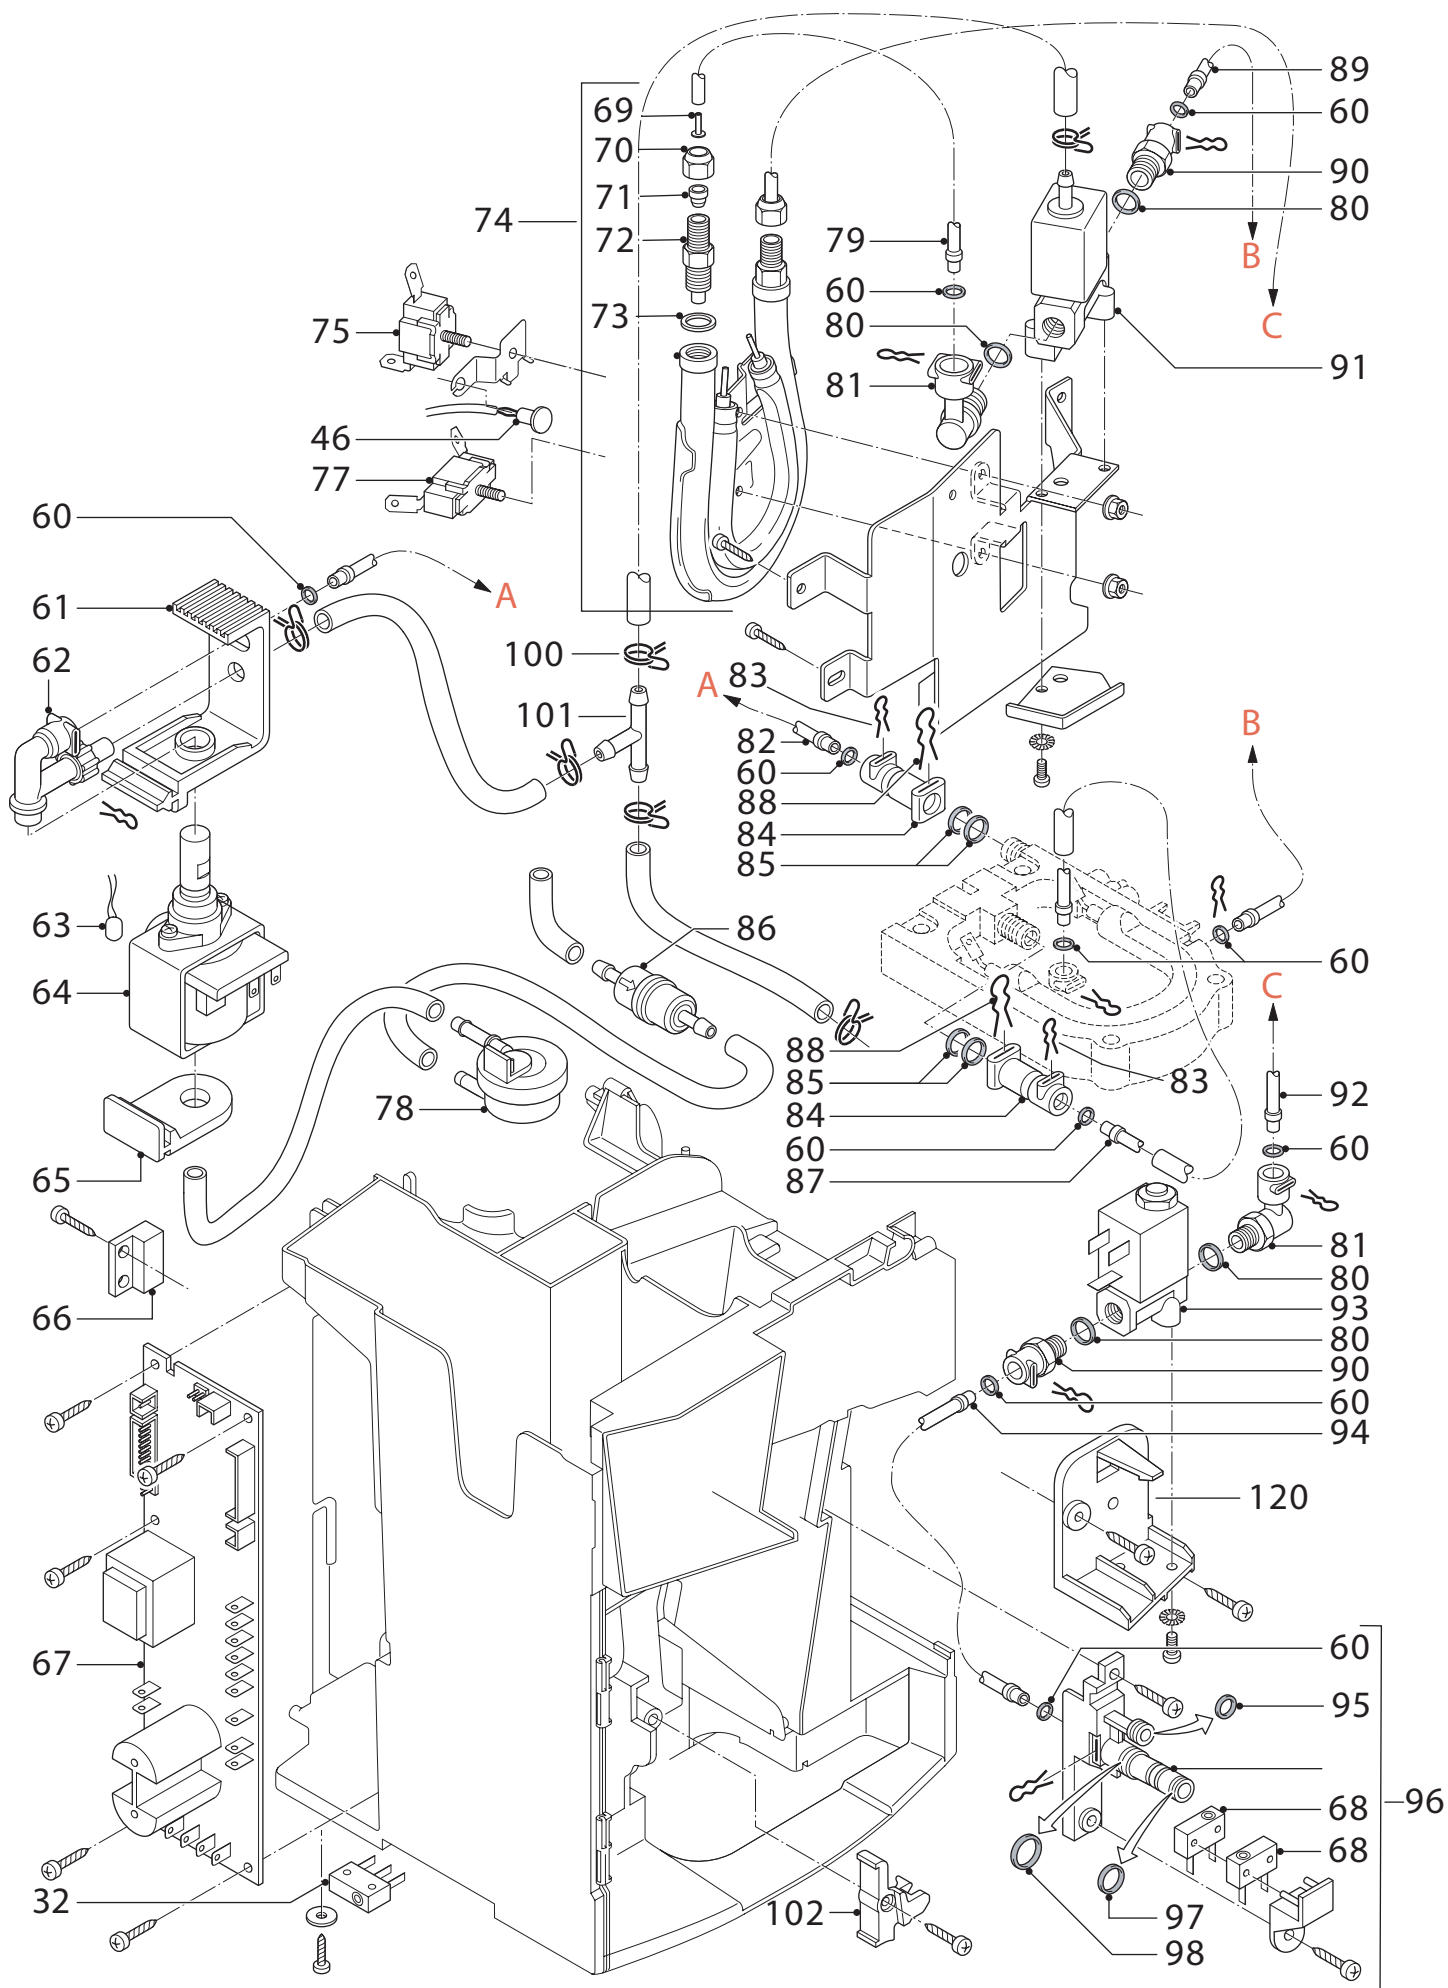

Position	Code	description
00BF	5313283911	TUBE
00BG	5332115400	SILICONE HOSE (DI=5 L=145)
00BH	5313283721	TUBE (DI=7 DE=10 L=120)
00BI	5313249311	SILICONE HOSE (DI=3 DE=5,5 L15)
00BJ	6913210111	FRONT BRACKET DEGREASED ESAM69
0AAA	5332108700	GASKET
0AAB	5332283000	DISPENSER GLASS
0ABA	5332108700	GASKET
0ABB	5032514800	FLOWMETER WIRING (L 470)
0ACA	5032514800	FLOWMETER WIRING (L 470)
0ACB	5332186200	DRAIN HOSE (90°L180)
0ADA	5332224100	MOTOR BELT
0ADB	5332224100	MOTOR BELT
0AEA	5332238300	DRAIN HOSE (90° L=180)
0AEB	7313217271	MOTOR WITH PULLEY (ECM 120V)
0AFA	7313217271	MOTOR WITH PULLEY (ECM 120V)
0AFB	5332164700	RUNNER FRAME
0AGA	AS13200107	COVER ASSEMBLY
0AGB	5013252911	WIRING FOR FLOWMETER (L630)
0AHA	5332164700	RUNNER FRAME
0AHB	5313211301	BLACK REAR PANEL CAP
0AIA	5013252911	WIRING FOR FLOWMETER (L630)
0AIB	5313215891	SCUFF-PROOF RUBBER PAD
0AJA	5313211301	BLACK REAR PANEL CAP
0AJB	5313265471	SPACER
0AKA	5313212721	NICHE FRONT PIECE (IFD)
0AKB	5913210181	SELECTOR KEY
0ALA	5313215891	SCUFF-PROOF RUBBER PAD
0ALB	5913210211	KEY (IFD)
0AMA	5313265471	SPACER
0AMB	6113210111	FIXING BRACKET (TCO)
0ANA	5332283000	DISPENSER GLASS
0ANB	6113210121	SENSOR BRACKET
0AOA	5513211891	SCRAPER BRUSH WITH BRISTLES
0AOB	5913210191	FUNCTION KEYBOARD
0APA	5913210181	SELECTOR KEY
0APB	5913212251	FUNCTION KEYBOARD

0AQA	5913210211	KEY (IFD)
0AQB	6932102800	BRACKET
0ARA	6113210111	FIXING BRACKET (TCO)
0ARB	6913210021	SOLENOID VALVE SUPPORT (2V)
0ASA	6113210121	SENSOR BRACKET
0ASB	6913210031	SOLENOID VALVE SUPPORT (3V)
0ATA	5913210191	FUNCTION KEYBOARD
0ATB	5332279100	CONTROL PANEL
0AUA	5913212251	FUNCTION KEYBOARD
0AUB	6913210011	POD SUPPORT
0AVA	5313219181	GRINDER BELLOW GASKET
0AVB	5313239751	GRINDER PANEL
0AWA	5313212721	NICHE FRONT PIECE (IFD)
0AWB	6932102800	BRACKET
0AXA	6913210021	SOLENOID VALVE SUPPORT (2V)
0AXB	5332286300	HANDLE
0AYA	5332238300	DRAIN HOSE (90° L=180)
0AYB	6913210031	SOLENOID VALVE SUPPORT (3V)
0AZA	5332279100	CONTROL PANEL
0AZB	AS13200107	COVER ASSEMBLY
0BAA	5313219181	GRINDER BELLOW GASKET
0BAB	6913210011	POD SUPPORT
0BBA	5313239751	GRINDER PANEL
0BBB	5332261200	GASKET
0BCA	5513211891	SCRAPER BRUSH WITH BRISTLES
0BCB	5332286300	HANDLE
0BDA	AS00000378	ECOMULTICLEAN 10ML VIAL
0BDB	AS00000378	ECOMULTICLEAN 10ML VIAL
0BEA	5332186200	DRAIN HOSE (90°L180)
0BEB	6913210111	FRONT BRACKET DEGREASED ESAM69
1	5332278100	TANK COVER
2	53132C8052	TOP COVER
3	5332226300	MEASURING SPOON
4	5313212911	LEFT SIDE
5	7313224431	UPPER COVER
6	5313212921	REAR PANEL
7	535714	STOPPER
8	5313211001	GRINDING ADJUSTMENT KNOB

9	5532149100	TANK
10	5313251461	TANK COVER
011A	7313212021	CONTROL PANEL ASSEMBLY
011B	7313249881	CONTROL PANEL ASSEMBLY
12	7313224141	DOOR ASSEMBLY
13	5313212891	FROTHER NICHE (IFD)
14	5332282600	FRONT PIECE
15	5332282400	SUPPORT
16	5332282500	SUPPORT
17	7313254531	WATER TANK
18	5313212901	RIGHT SIDE
19	6032120800	CUP HOLDER
20	5332266600	FLOAT
21	NOCODE04	SEE TECHNICAL BULLETIN
22	5332225800	BOTTOM
23	5332283900	DRIP TRAY
25	5513212801	HOT WATER SPOUT
26	5332259800	WATER INTAKE TUBE
27	7313210411	COVER ASSEMBLY
28	7313229411	CARAFE
029A	5513211151	CONTROL BOARD
029B	5513214691	DISPLAY BOARD
32	5132105400	MICROSWITCH (10A/ 250V/ 125°)
33	NOCODE04	SEE TECHNICAL BULLETIN
34	5313276531	GASKET
35	6013213181	FILTER (D.40X2.3 TAI-FENG)
36	5332149100	O-RING
37	7313251441	INFUSER
38	5032527700	TCO WITH WIRING
40	5332142200	SUPPORT
41	6132104700	SPRING (x micro 12 x 5)
42	5132104100	MICROSWITCH (250V 85°)
43	7332166600	SLIDER
44	5332142400	BUSH
45	5332142300	BUSH
46	5232105100	SENSOR (NTC)
47	5313217751	O-RING BLACK (D=6.07 T=1.78)
48	5332213000	PIN

49	5332148400	VALVE
50	6132106900	SPRING
51	5332149100	O-RING
52	5332139200	FILTER
53	NOCODE04	SEE TECHNICAL BULLETIN
55	5132110500	MICROSWITCH (250V 85°)
56	5213213971	HALL SENSOR (L620)
57	5313243071	TOOTHED BELT
058A	AS13200351	TRANSMISSION (CHIAPHUA 120V)
058B	AS00004230	TRANSMISSION ASSEMBLY (ECM 120V)
60	5313217701	O-RING (D=3.85 T=2)
61	5313216501	PUMP SUPPORT
62	7313219431	SAFETY VALVE
63	5232102000	PROTECTOR
64	5113211291	PUMP (ULKA 120V 52W)
65	534848	SUPPORT
66	5232104600	REED SENSOR
067A	5213210721	POWER BOARD (SW1.1 120V)
067B	5213210931	POWER BOARD (SW1.2 120V)
68	5132104100	MICROSWITCH (250V 85°)
69	6113210751	INSERT
70	6213210351	NUT
71	6213211521	BRASS BUSH
72	6213210091	CONNECTION
73	6113210741	RING
74	NOCODE04	SEE TECHNICAL BULLETIN
75	5232105000	SAFETY THERMOSTAT (13.5A 318°)
76	NOCODE04	SEE TECHNICAL BULLETIN
77	5232105000	SAFETY THERMOSTAT (13.5A 318°)
078	5213225251	FLOWMETER
79	5513219841	TUBE WITH NUT AND 1 BUSH (L135)
80	5313217741	O-RING (D=6.75 T=1.78)
81	5332196900	CONNECTION
82	5513213501	TUBE WITH 2 BUSHES (L150)
83	6132101300	SPRING
84	5332239200	CONNECTOR
85	535692	GASKET
086	5513220521	IMPURITY FILTER

87	5513212881	TUBE WITH 2 BUSHES (L270)
088	6113213191	CLIP (WIRE 1,2 AISI302)
89	5513213501	TUBE WITH 2 BUSHES (L150)
90	5332196800	CONNECTION
91	5513225801	SOLENOID VALVE KIT (3VA 120V)
92	5513219851	TUBE WITH NUT AND 1 BUSH (L335)
93	5513225741	SOLENOID VALVE KIT (2VA 120V)
95	5332196000	O-RING
96	AS13200286	CARAFE COUPLING
97	5313217751	O-RING BLACK (D=6.07 T=1.78)
98	5332177500	O-RING
100	9824800009	CLIP CLAMP (8.30-8.10-7.80)
101	5313216541	A T CONNECTION (PRES BLOCK)
102	5332142600	HOOK
113	6132103500	SPRING
114	5332139800	LEVER
115	9812631250	SCREW (3.5X12)
116	5313277681	STOPPER
117	5313268011	VALVE
118	6132112200	SPRING
119	5332140300	PISTON
120	5313252051	SOLENOID VALVE SUPPORT
121	AS00007977	DISPENSING TUBE
122	5332144800	O-RING (D=6)