


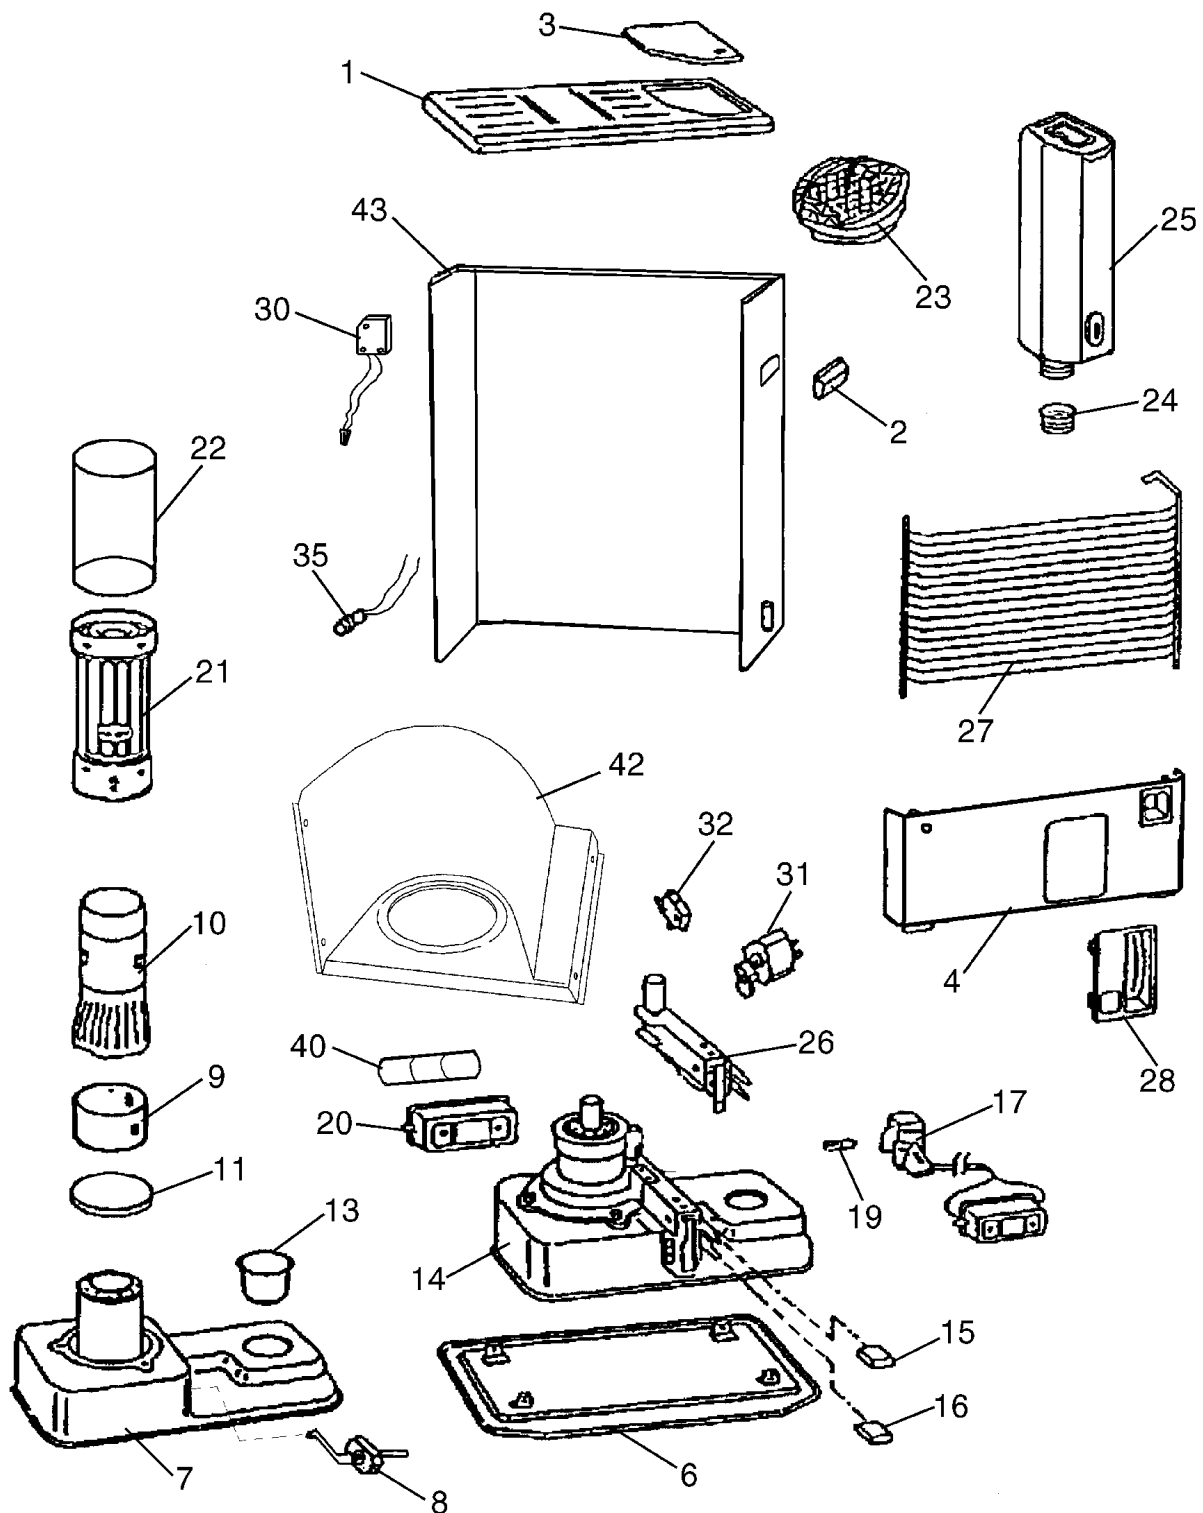

| Position | Code     | description                |
|----------|----------|----------------------------|
| 01       | CR1002   | COVER                      |
| 02       | CR1004   | HANDLE                     |
| 03       | NOCODE01 | NOT AVAILABLE              |
| 04       | CR1009   | FRONT PANEL                |
| 06       | CR1011   | BASE                       |
| 07       | CR1013   | TANK                       |
| 08       | CR1015   | PIN                        |
| 09       | CR1017   | RUNNER                     |
| 10       | CR1019   | BLOCK                      |
| 11       | CR1021   | GASKET                     |
| 13       | CR1022   | TRAY                       |
| 14       | CR1024   | SUPPORT BASE               |
| 15       | CR1026   | KNOB                       |
| 16       | CR1028   | KNOB                       |
| 17       | CR1030   | LIGHTER                    |
| 19       | CR1031   | HEATING ELEMENT            |
| 20       | CR1033   | CONTAINER                  |
| 21       | CR1036   | BURNER                     |
| 22       | CR1039   | GLASS                      |
| 23       | CR1040   | FILTERS KIT                |
| 24       | CR1041   | STOPPER                    |
| 25       | CR1043   | TANK                       |
| 26       | CR1045   | CONTROL MECHANISM ASSEMBLY |
| 27       | CR1048   | GRID                       |
| 28       | CR1050   | CONTROL PANEL              |
| 30       | CR1051   | THERMOSTAT                 |
| 31       | CR1052   | MOTOR                      |
| 32       | CR1053   | MICROSWITCH                |
| 35       | CR1054   | WARNING LIGHT              |
| 40       | CR1055   | COVER                      |
| 42       | CR1058   | PARABOLA                   |
| 43       | CR1061   | HOUSING                    |