


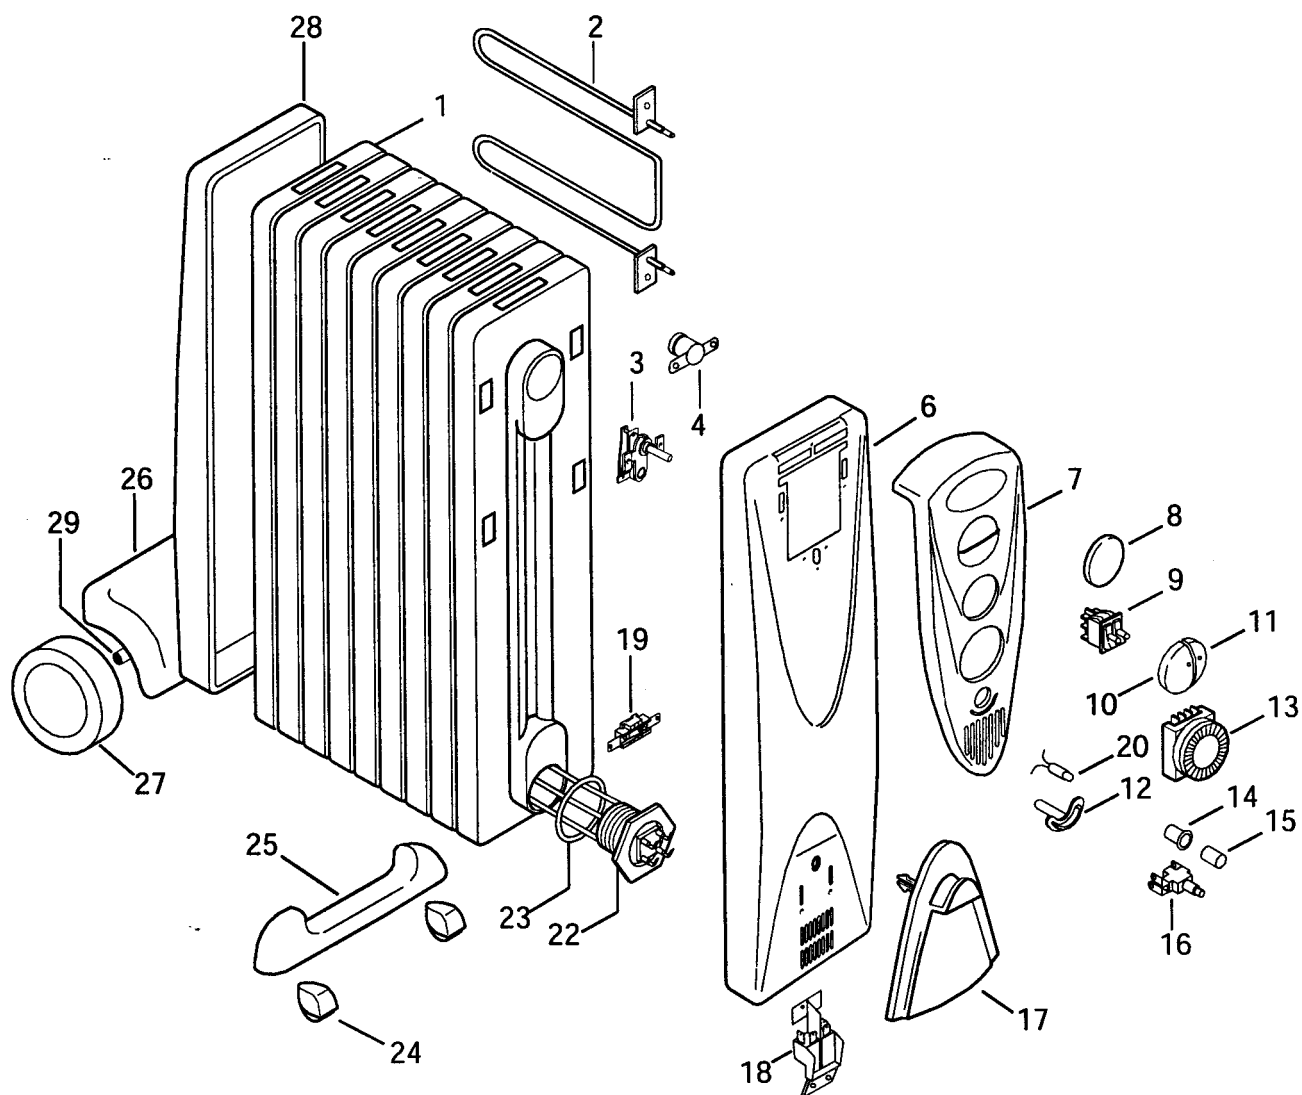

Position	Code	description
01	7086000100	BATTERY
02	5186000700	HEATING ELEMENT
03	511435	THERMOSTAT
04	5285000500	KLIXON
06	NOCODE01	NOT AVAILABLE
07	5986000200	CONTROL PANEL
08	5985000100	THERMOSTAT KNOB
09	5185001200	LUMINOUS DOUBLE SWITCH
10	5385005400	Push Button Left
11	5385005300	Push Button Right
12	5313009100	LENS
13	5286000000	TIMER
14	5386001300	SUPPORT
15	5386001400	KEY
16	5185000400	UNIPOLAR CHANGE OVER SWITCH (16A-250V)
17	5386001000	CABLE HOLDER
18	7385000000	WIRE CLAMP
19	5286000100	KLIXON
20	512357	WARNING LIGHT (220V)
22	5186000000	HEATING ELEMENT
23	5310810031	GASKET
24	5586000200	CASTOR
25	5386000800	FOOT
26	5386000900	SUPPORT
27	5386000700	REAR CASTOR
29	6186000000	PIN