

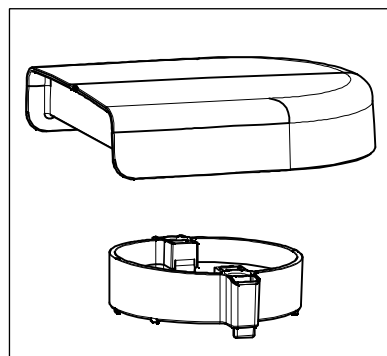
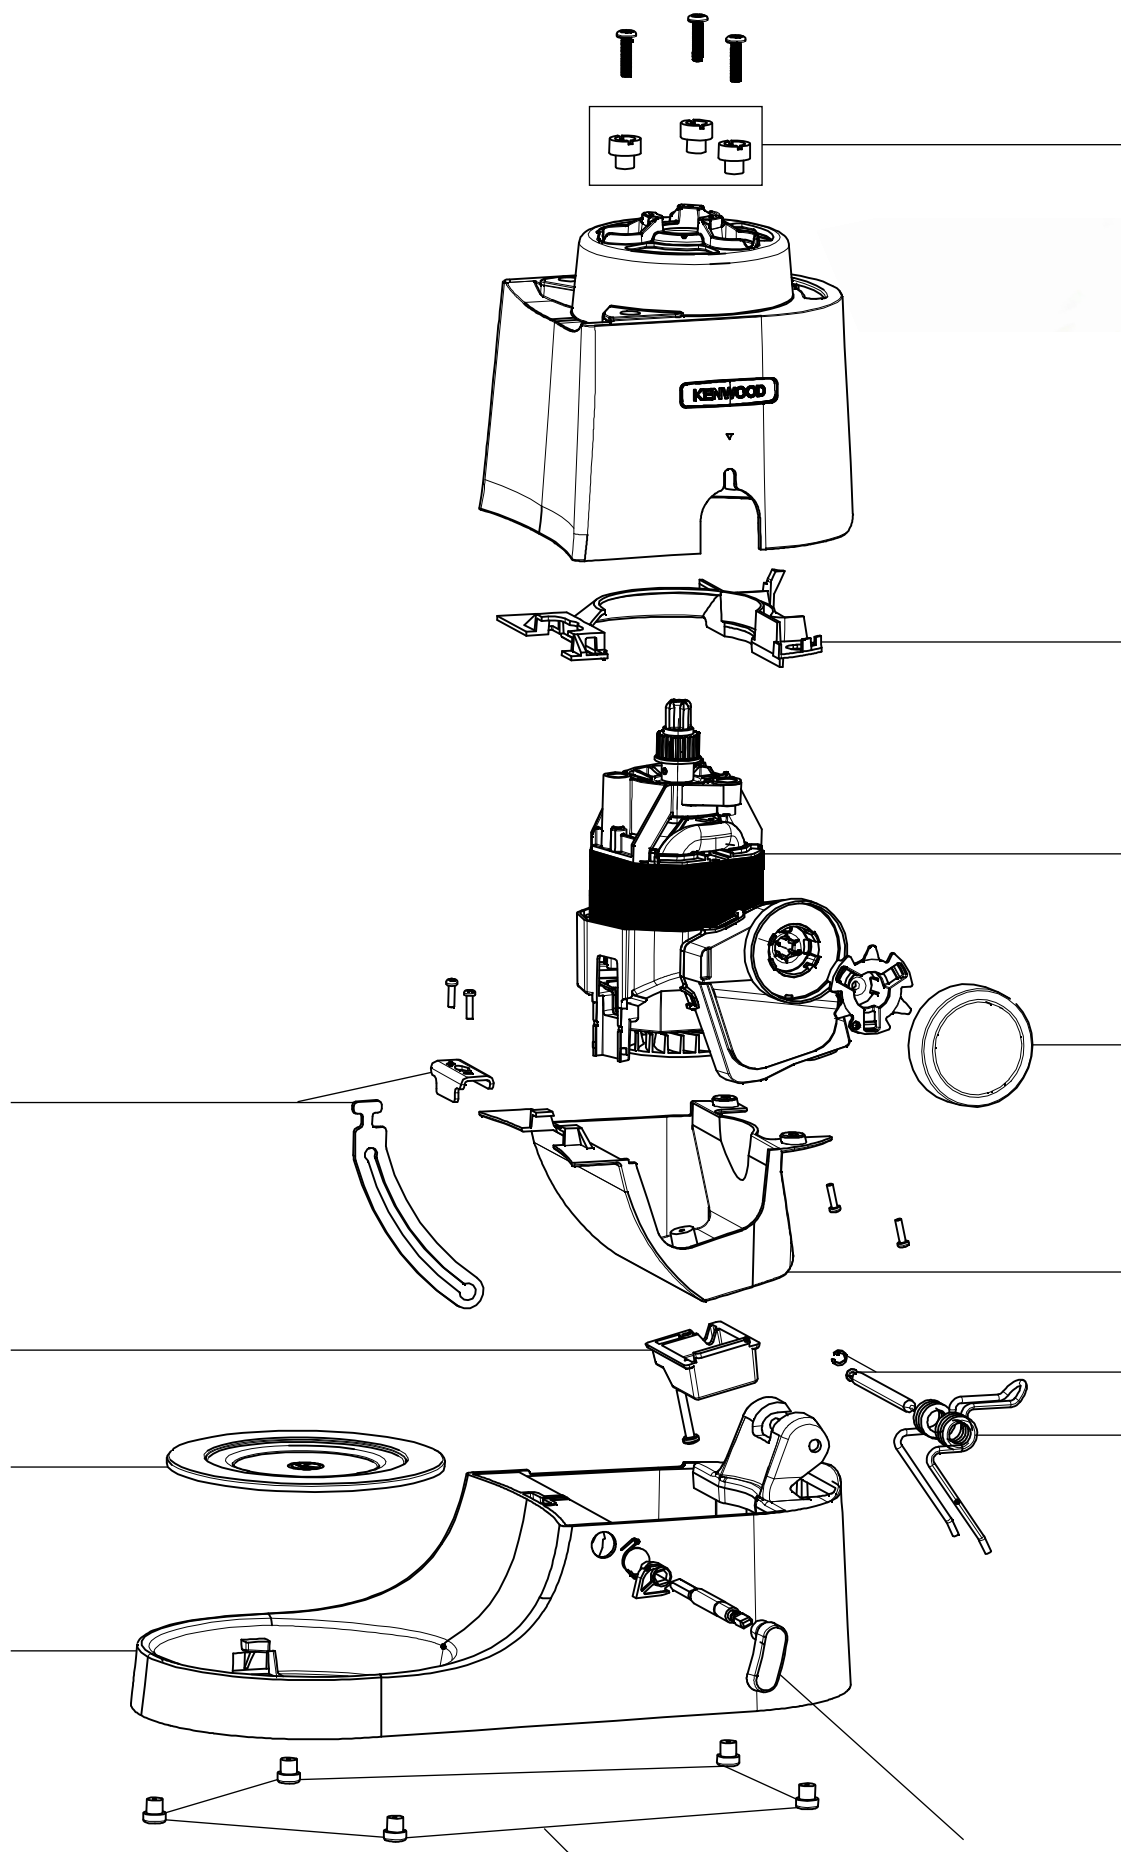
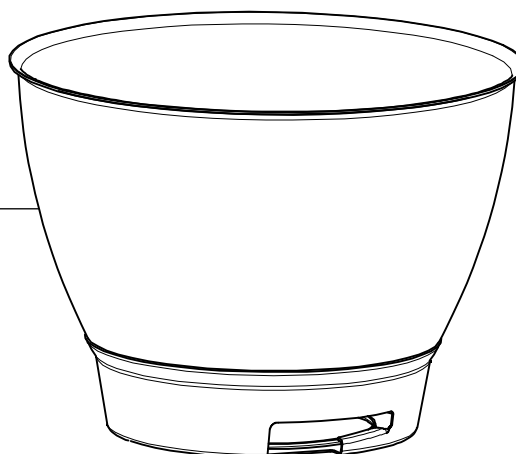
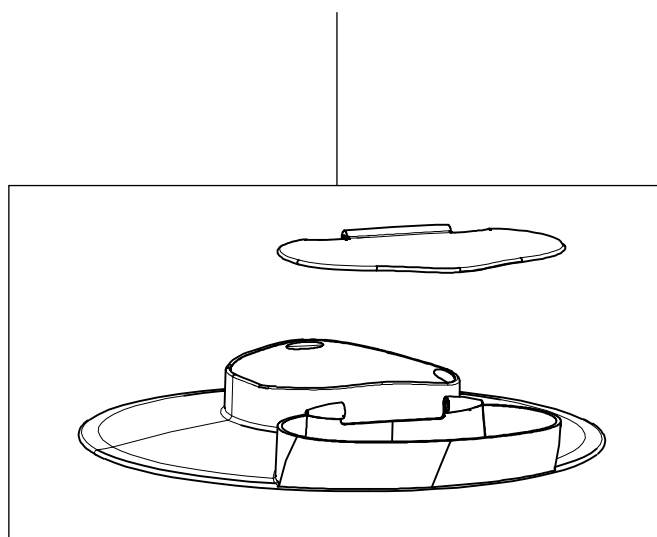


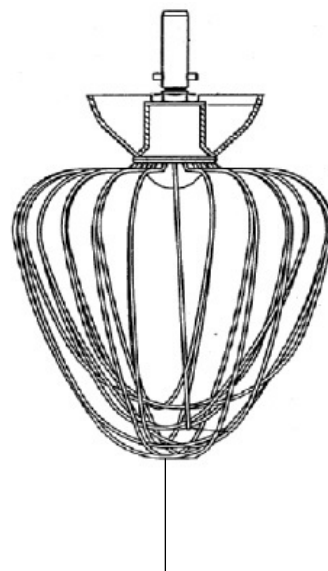

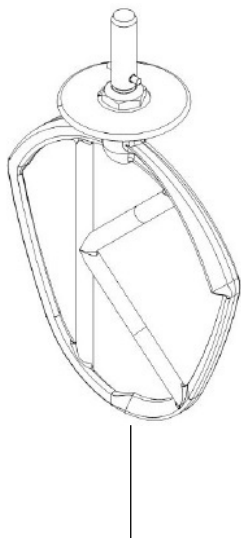

INT KVC3100S

KVC3100S KITCHEN MACHINE -
CHEF

Position	Code	description
000A	KW710658	SPANNER
000B	KW712212	WHISK 9 WIRE ALUMINIUM
000D	KW715814	SSO ASSY O RING & SCREW
000E	KW716134	STALL PLUG
000F	AW20011057	KAT51.000SS ATT KW CHEF WHISK SS INT
000G	AS00001021	SSO SEAL x5
000H	AS00002913	GEARBOX ASSY
01	KW716661	HIGH SPEED OUTLET COVER ASSEMBLY
02	KW696201	SPIGOT LIGHT GREY
03	KW696213	SPIGOT SEAT PLATE
04	KW716662	TOP COVER
05	KW716660	SLOW SPEED OUTLET COVER ASSEMBLY
06	KW716558	BELT
07	KW696380	BOLT
08	KW716668	GEARBOX ASSEMBLY
09	KW715817	PANET HUB ASSY CHEF COVER & HUB NUT
10	KW650099	DOWEL TUBE
11	AS00006835	FELT GEARBOX COVER LOWER
12	KW716657	HEAD UNDERSIDE
13	KW649973	BUSHES (10 PIECES)
15	KW716653	SEPARATOR
16	KW716659	MOTOR ASSEMBLY
17	KW716656	ASSIEME DI CONTROLLO DELLA VELOCITÀ
18	KW696354	QUADRANT AND BRACKET
19	KW716652	COVER
20	KW710224	TERMINAL COVER 3 CORE LEAD
21	KW715468	COUNTER BALANCE PIN KIT
22	KW696366	SPRING
23	KW716655	PEDESTAL (CHEF XL)
24	KW716663	POWER SUPPLY CORD WITH PLUG (EU)
25	KW714249	HEADLIFT ASSY CHEF CHROME KNOB
26	KW650568	FOOT ASSY HAMMER DRIVE SCREW 5PC
27	KW711918	BOWL SEAT PAD CHEF (14cm)
28	AW20011064	KAT50.000CA KW CHEF K BEATER ALU INT
29	KW712210	DOUGH HOOK ALUMINIUM
31	KW716119	SPLASHGUARD ASSY
32	AW20010011	KWSK001 SOFT-SPATULA KW

INT KVC3100S

KVC3100S KITCHEN MACHINE -
CHEF

33	AW20011030	KAT300SS - CHEF STAINLESS STEEL BOWL
0040	AS00011304	GEARBOX ASSY