 
 
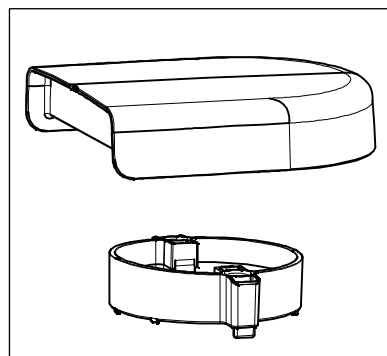 
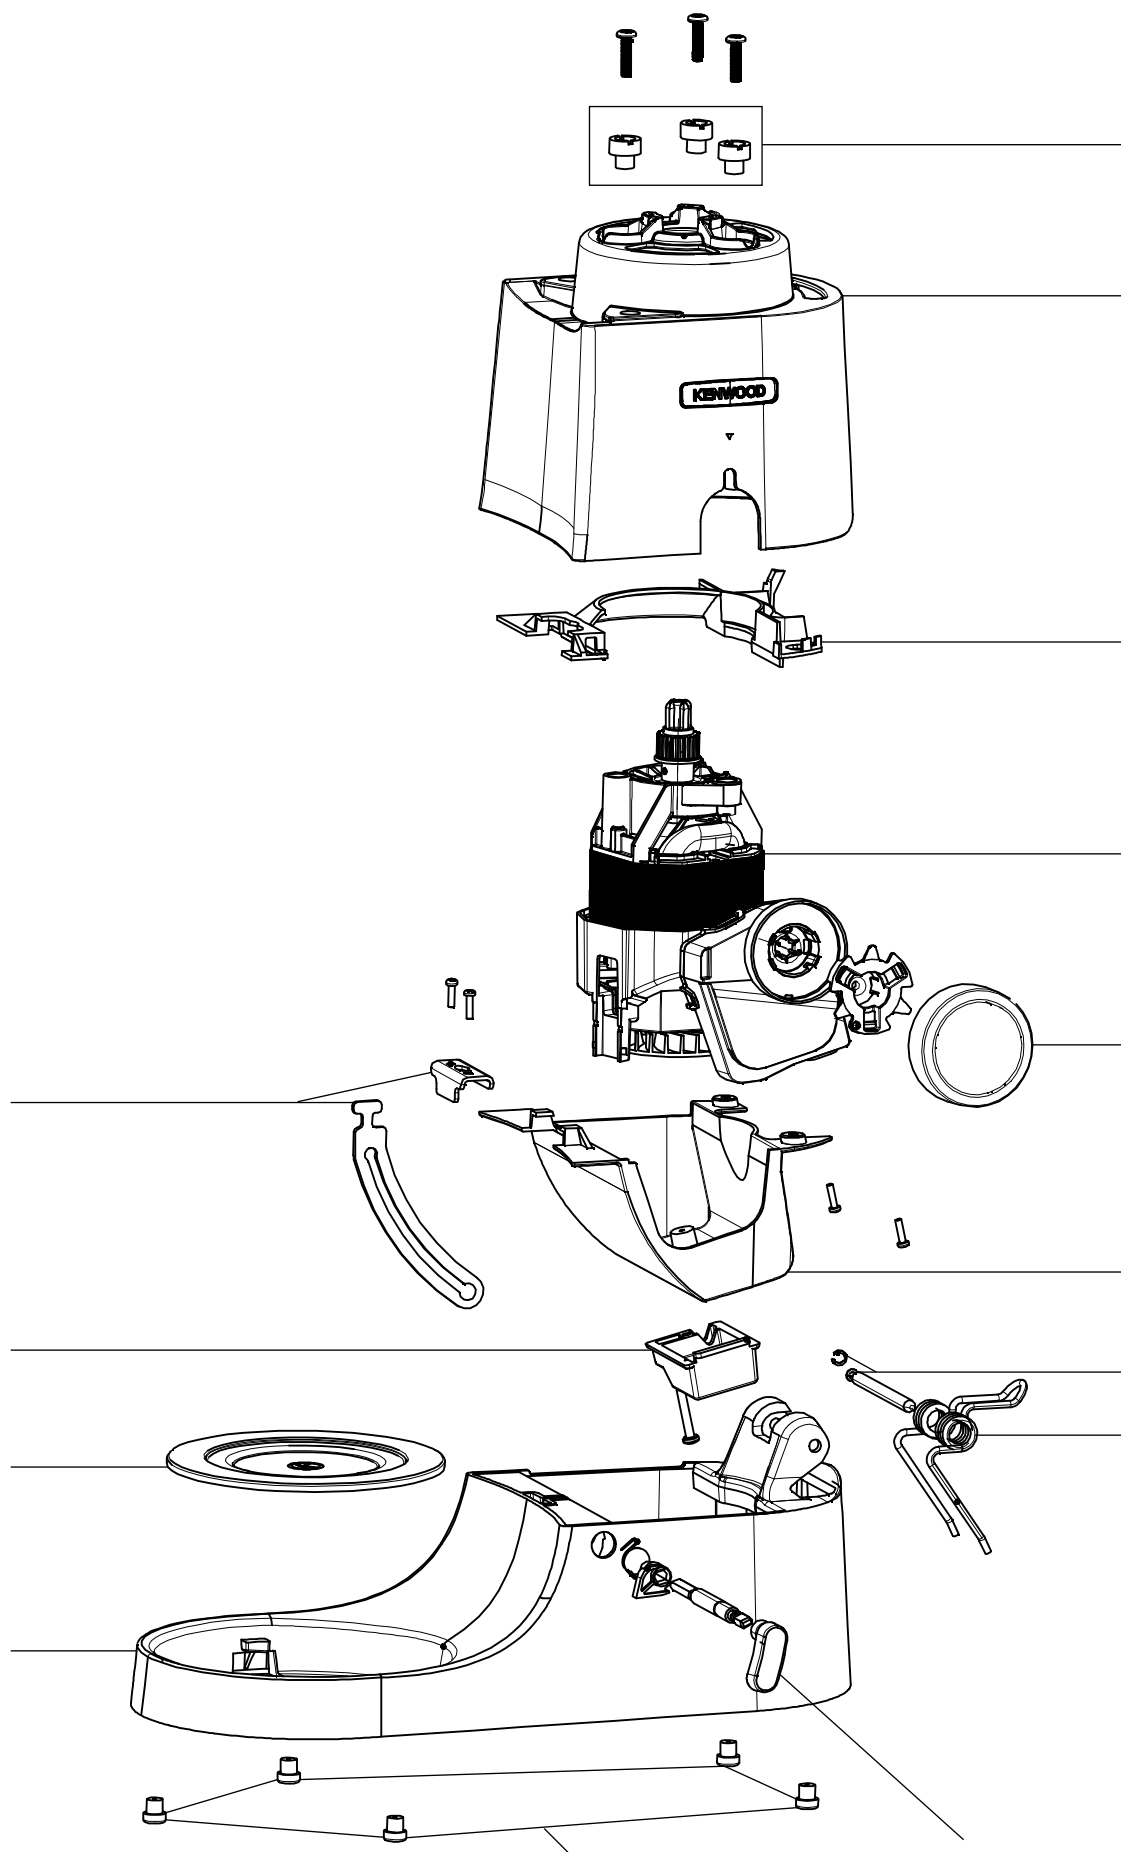 
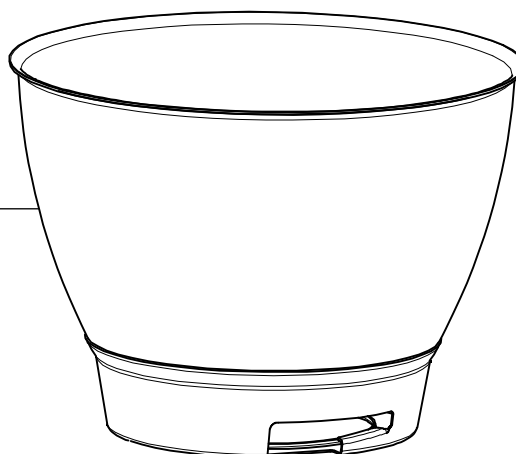 
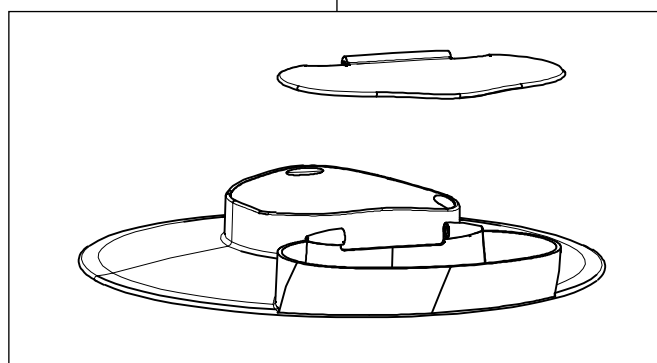 


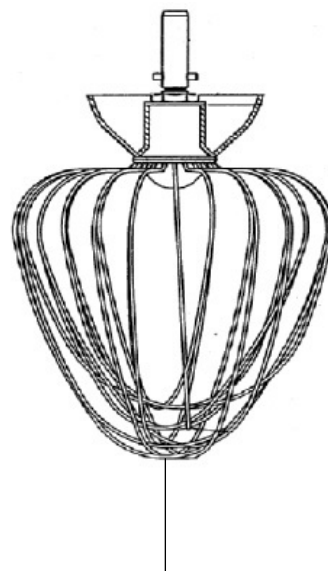

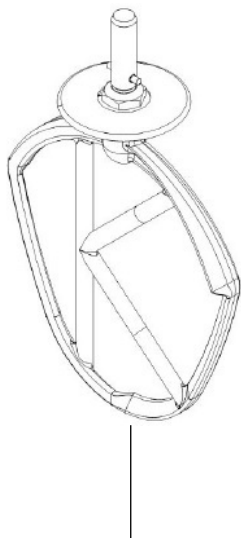

CN KVC3100W

KVC3100W KITCHEN MACHINE -
CHEF

Position	Code	description
000A	KW710658	SPANNER
000B	KW712212	WHISK 9 WIRE ALUMINIUM
000C	KW715814	SSO ASSY O RING & SCREW
000D	KW716134	STALL PLUG
000E	AW20011057	KAT51.000SS ATT KW CHEF WHISK SS INT
000F	AS00001021	SSO SEAL x5
000G	AS00002913	GEARBOX ASSY
001A	KW716660	SLOW SPEED OUTLET COVER ASSEMBLY
001B	KW716896	HIGH SPEED OUTLET COVER
02	KW696201	SPIGOT LIGHT GREY
03	KW696213	SPIGOT SEAT PLATE
04	KW716891	HEAD CASTING
06	KW716558	BELT
07	KW696380	BOLT
08	KW716668	GEARBOX ASSEMBLY
09	KW715817	PANET HUB ASSY CHEF COVER & HUB NUT
10	KW650099	DOWEL TUBE
11	AS00006835	FELT GEARBOX COVER LOWER
12	KW716657	HEAD UNDERSIDE
13	KW649973	BUSHES (10 PIECES)
14	KW716892	BODY
15	KW716653	SEPARATOR
16	KW716659	MOTOR ASSEMBLY
17	AS00000951	ASSIEME DI CONTROLLO DELLA VELOCITÀ
18	KW696354	QUADRANT AND BRACKET
19	KW716652	COVER
20	KW710224	TERMINAL COVER 3 CORE LEAD
21	KW715468	COUNTER BALANCE PIN KIT
22	KW696366	SPRING
23	KW716893	PEDESTAL
25	KW714249	HEADLIFT ASSY CHEF CHROME KNOB
26	KW650568	FOOT ASSY HAMMER DRIVE SCREW 5PC
27	KW711918	BOWL SEAT PAD CHEF (14cm)
028A	KW711985	K BEATER ASSEMBLY - ALUMINIUM - Chef - bayonet hub & non-circlip shaft
028B	AW20011064	KAT50.000CA KW CHEF K BEATER ALU INT
029A	KW712210	DOUGH HOOK ALUMINIUM

CN KVC3100W

KVC3100W KITCHEN MACHINE -
CHEF

029B	KW712210	DOUGH HOOK ALUMINIUM
31	KW716119	SPLASHGUARD ASSY
032A	AW20010011	KWSK001 SOFT-SPATULA KW
032B	AW20010012	HIGH-TEMPERATURE SPATULA KW
33	AW20011030	KAT300SS - CHEF STAINLESS STEEL BOWL