



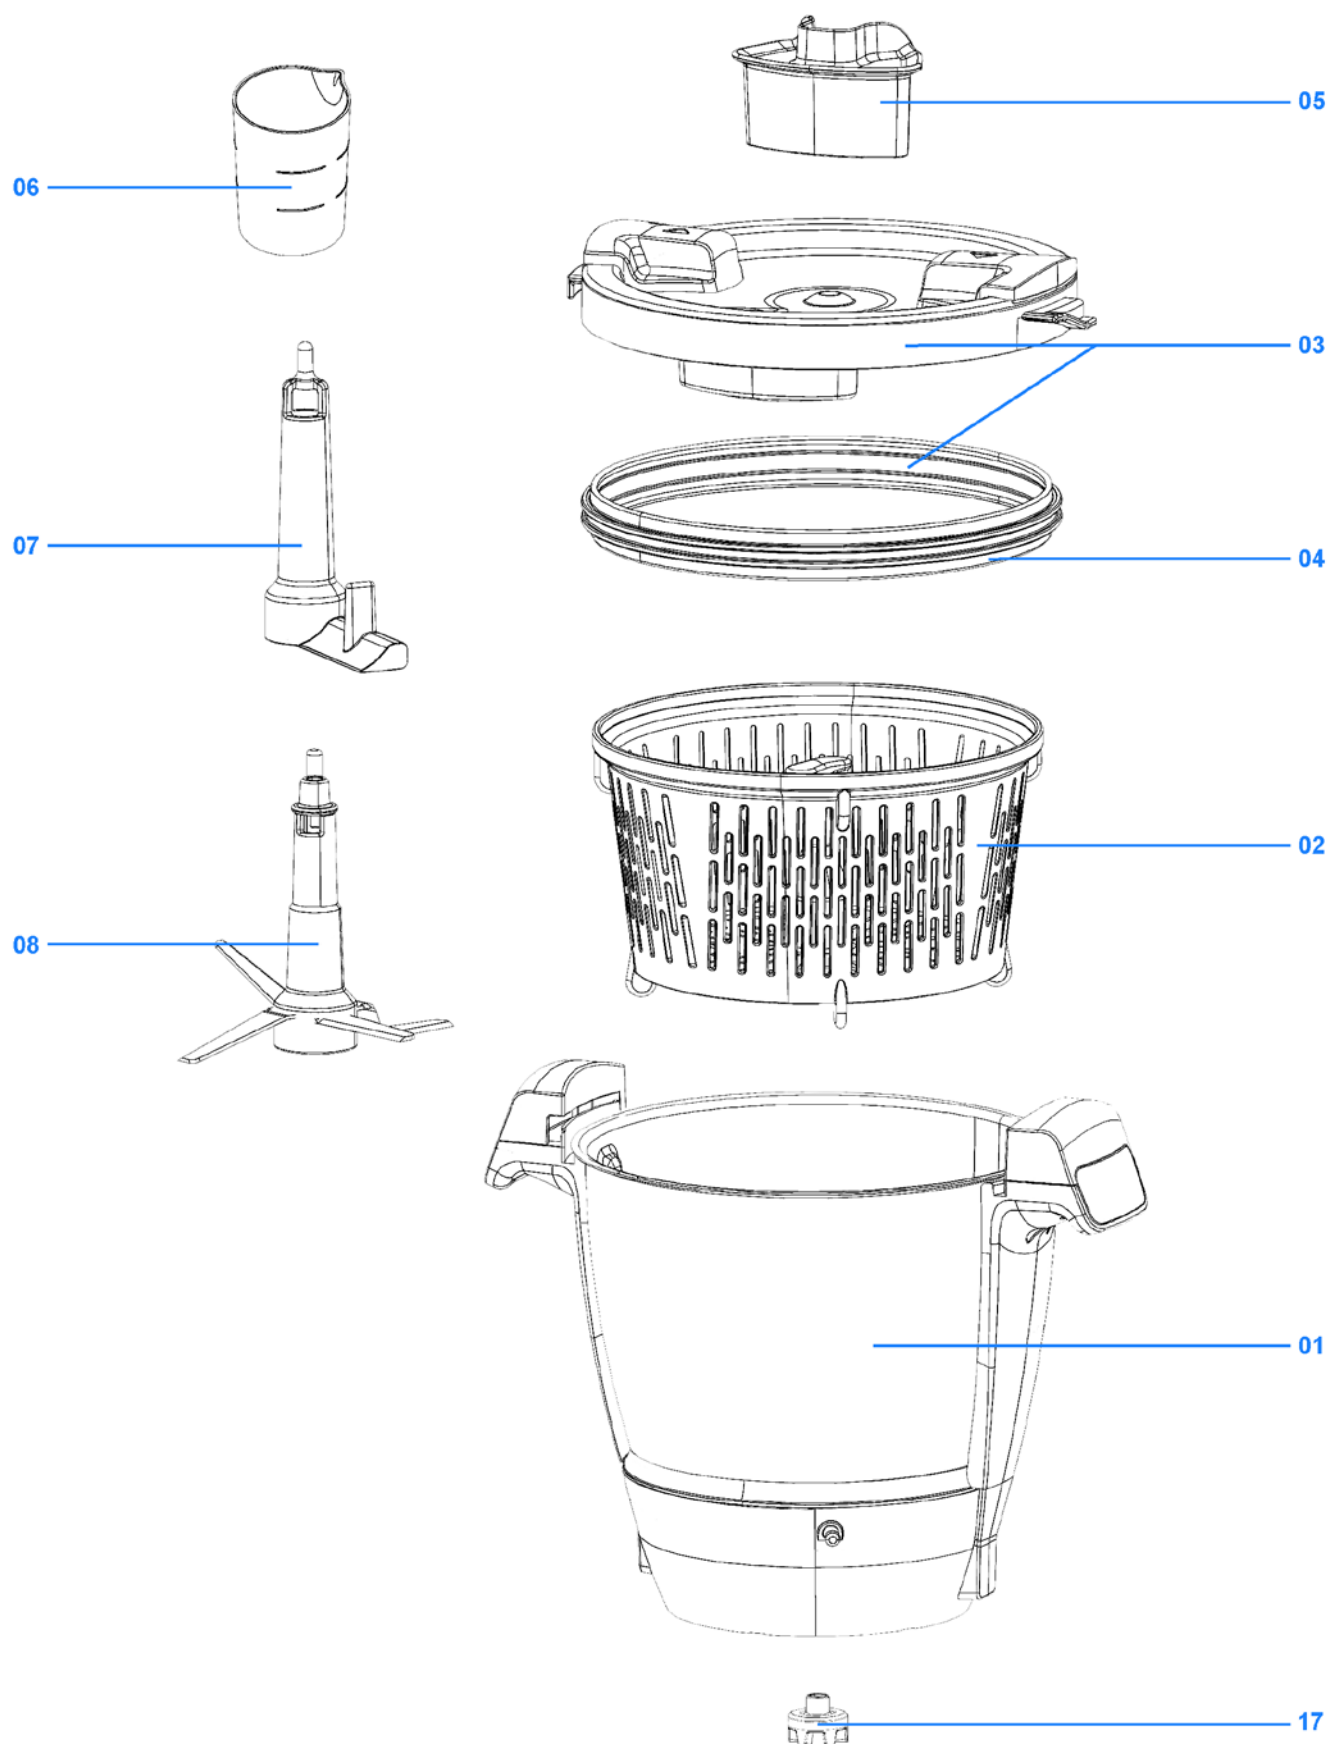

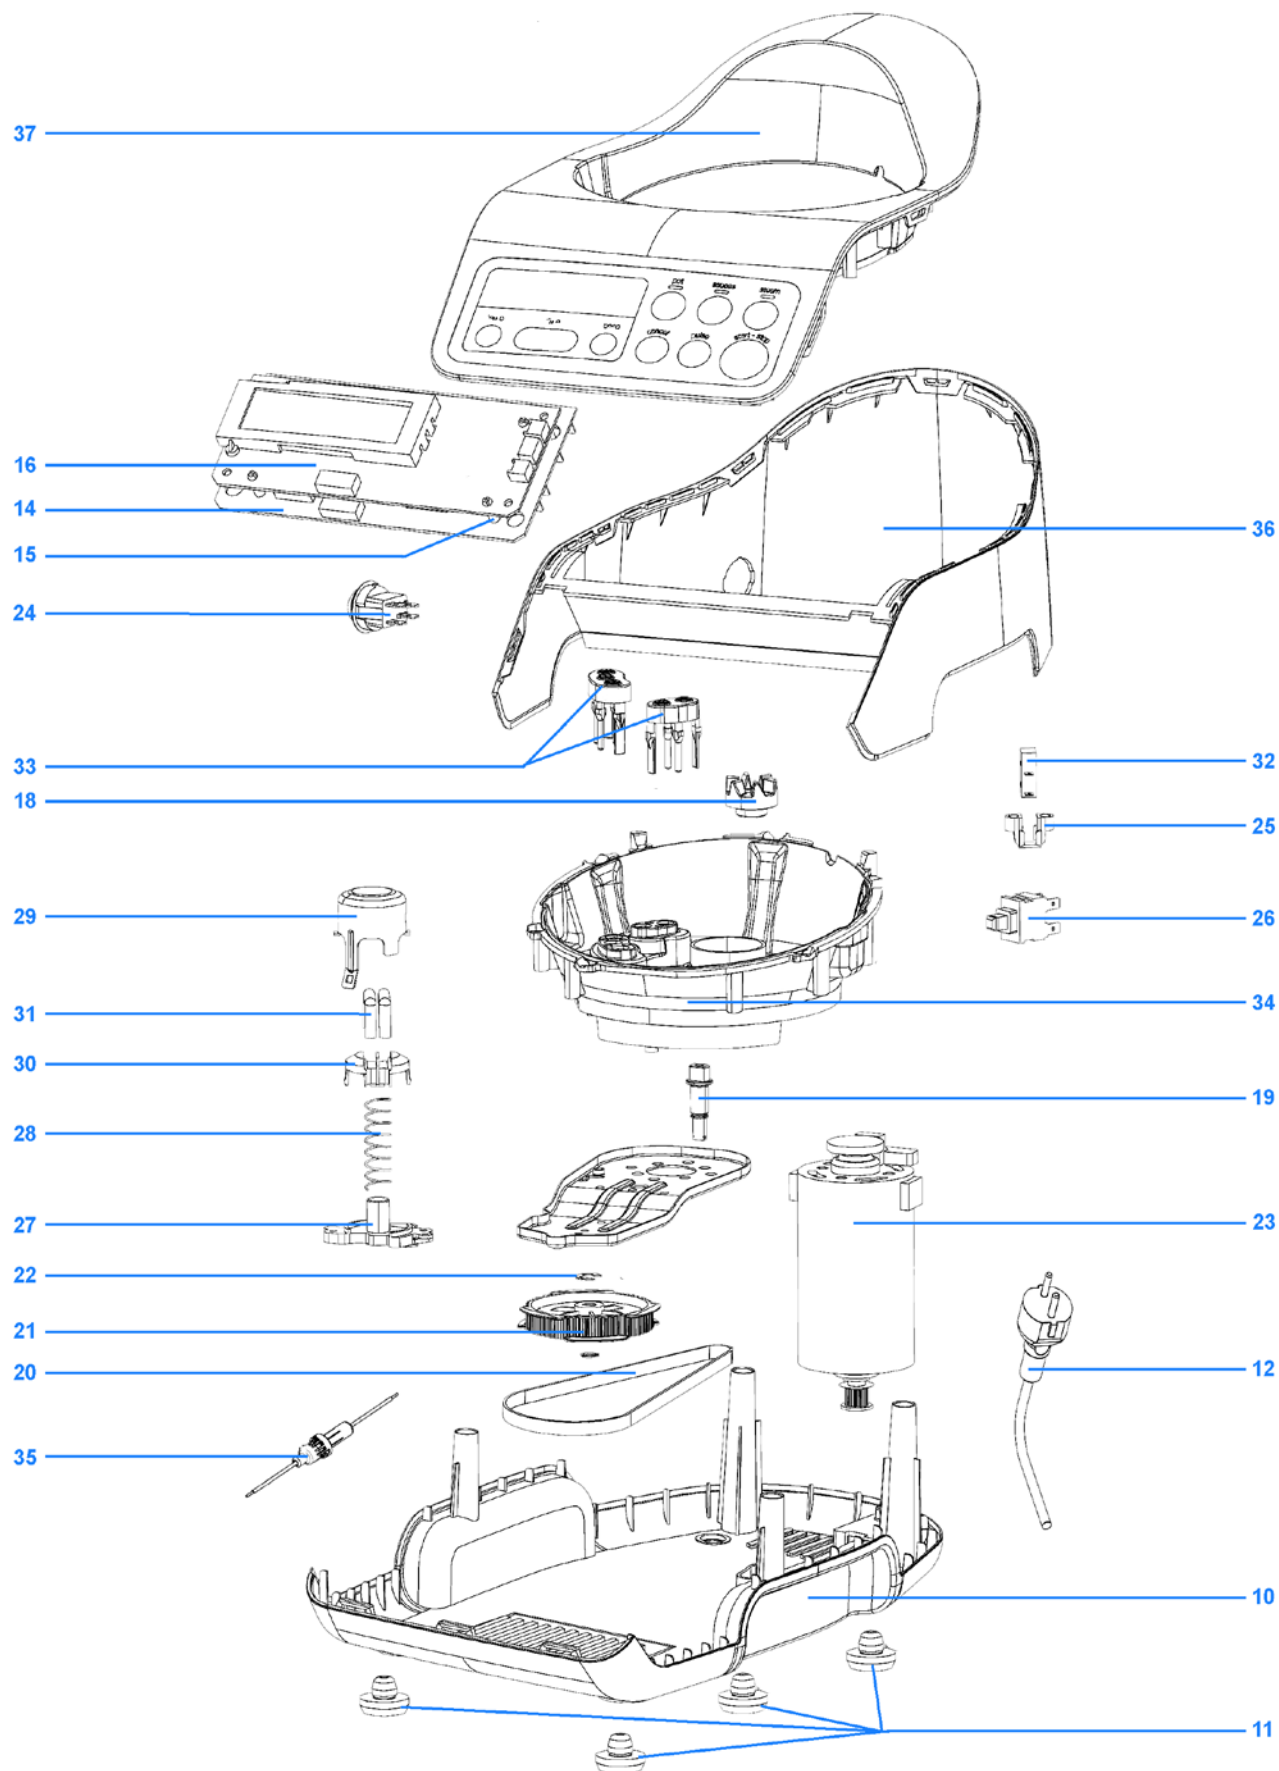

Position	Code	description
000A	KW716096	LCD COVER
000B	9811031250	SCREW (M3x12)
000C	KW716889	WASHER SET (10x)
000D	9801031250	SCREW (M3X12) LEFT-HAND THREAD
01	KW716078	BOWL ASSY
02	KW716074	STEAM BASKET ASSY
03	KW716081	BOWL LID ASSY SEAL
04	KW716080	LID SEAL
05	KW716079	FILLER CAP
06	KW716075	MEASURING JUG
07	KW716077	STIR TOOL
08	KW716076	BLADE ASSY
09	KW712667	BRUSH
10	KW716088	BASE
11	KW716082	FOOT BLACK RUBBER 4PC
12	KW716092	POWER CORD ASSY AUS/NZ PLUG
14	KW716094	PCB MAIN
15	KW716097	PCB SUPPORT PEG 4PC
16	KW716095	PCB LCD DISPLAY
17	KW716952	COUPLING ASSEMBLY
18	6220610061	LOWER DRAGGER
19	6120670089	SHAFT
20	5320610601	TOOTHED BELT
21	5320610541	PULLEY
22	9824500006	CLIP (D6X0.7)
23	5120610041	MOTOR WITH PULLEY
24	KW716083	SWITCH ASSY
25	5320610521	MICROSWITCH SUPPORT
26	5120610031	SWITCH
27	5320610561	COVER
28	6120610091	SPRING
29	6220610021	COVER
30	5320610551	SUPPORT
31	KW716090	TCO (133°C, 10A)
32	7320670089	MICROSWITCH SPRING
33	KW716084	RUBBER GASKET KIT
34	KW716085	SUPPORT

AU CCC201WH

CCC201WH kCook COOKING FOOD
PROCESSOR

35	KW716089	FUSE ASSY
36	KW716086	BODY
37	KW716087	CONTROL PANEL ASSY