


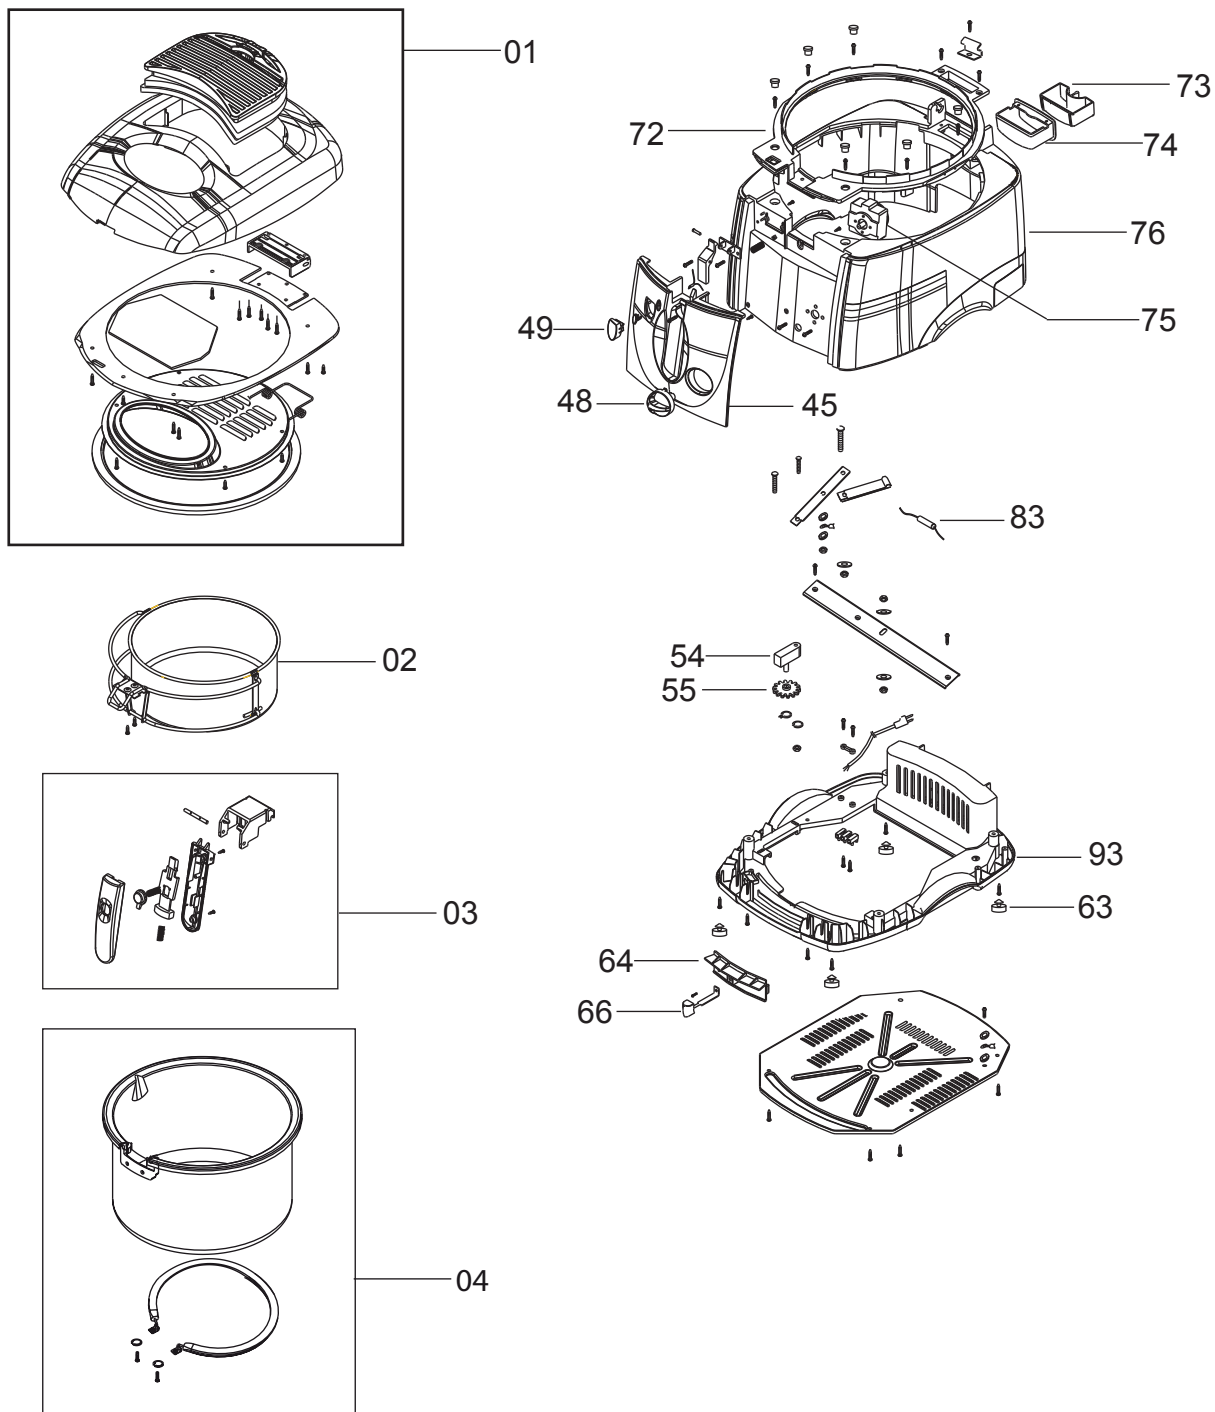

Position	Code	description
01	SX1006	COVER
02	SX1007	BASKET
03	SX1008	HANDLE
04	SX1009	PAN ASSY.
44	SX1010	LAMP
45	SX1011	CONTROL PANEL
48	SX1012	TIMER KNOB
49	SX1013	PUSH BUTTON
54	SX1014	THERMOSTAT
55	SX1015	GEAR
63	SX1016	FOOT
64	SX1017	SUPPORT
66	SX1018	KNOB
72	SX1020	FRAME
73	SX1021	TRAY
74	SX1022	SUPPORT
75	SX1023	TIMER
76	SX1024	BODY
83	SX1025	FUSE
93	SX1026	BOTTOM