




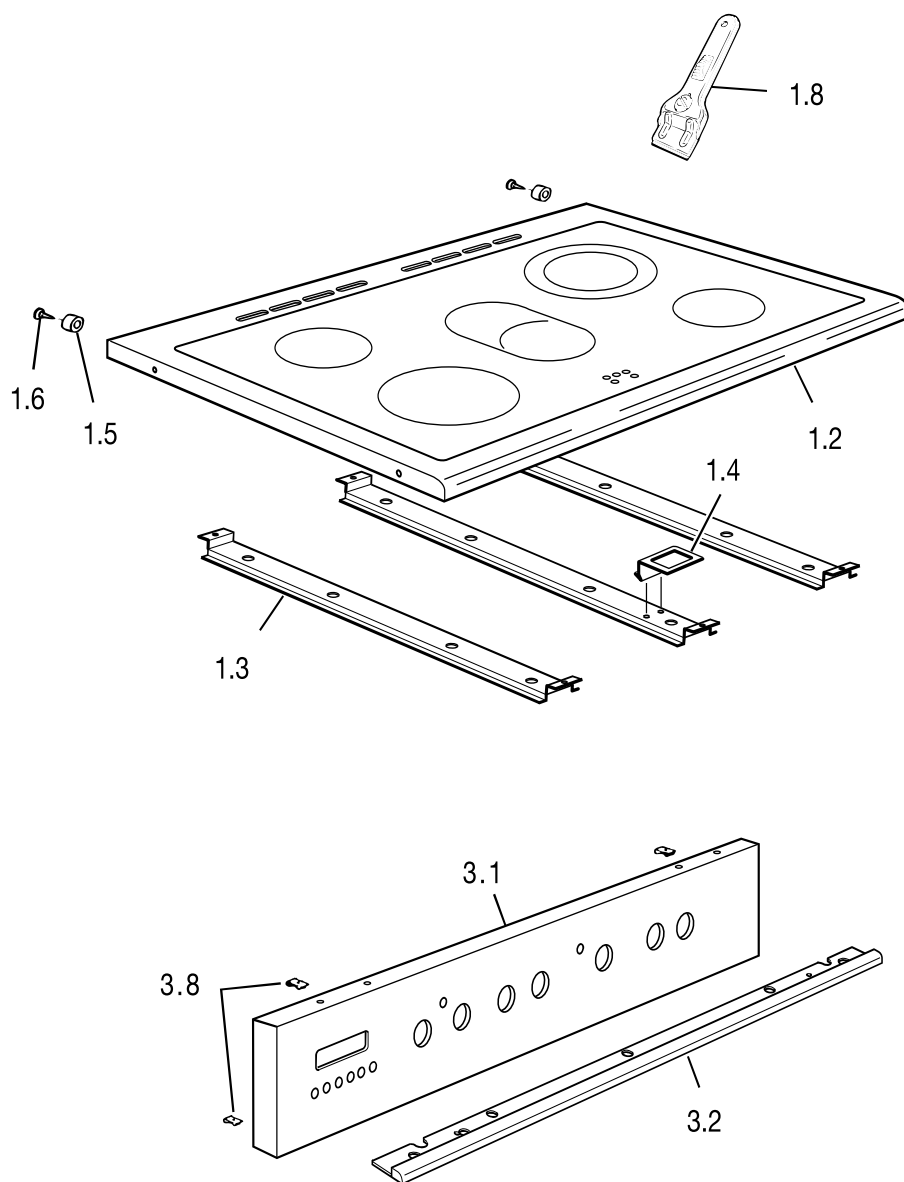


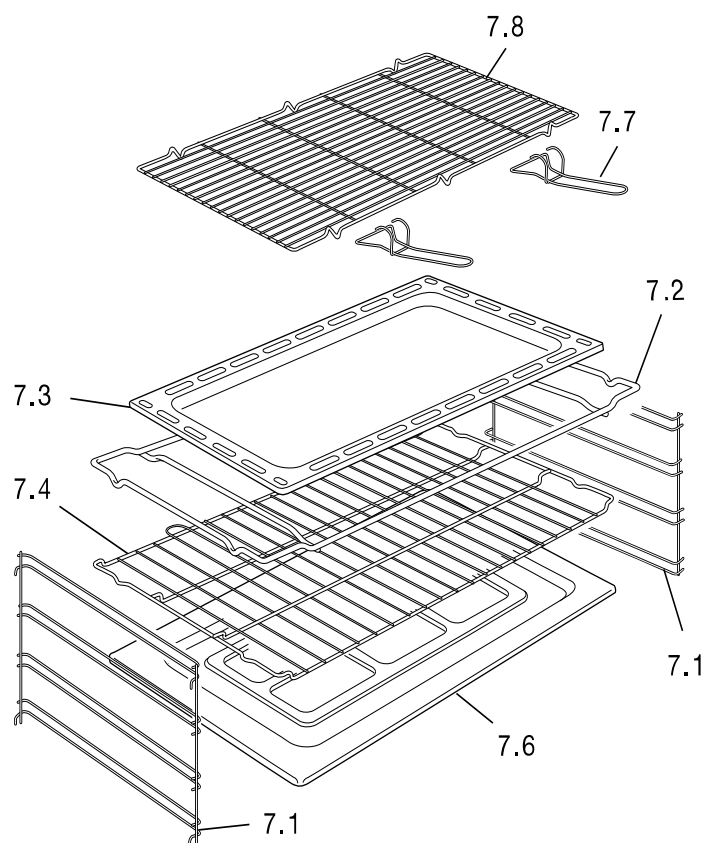

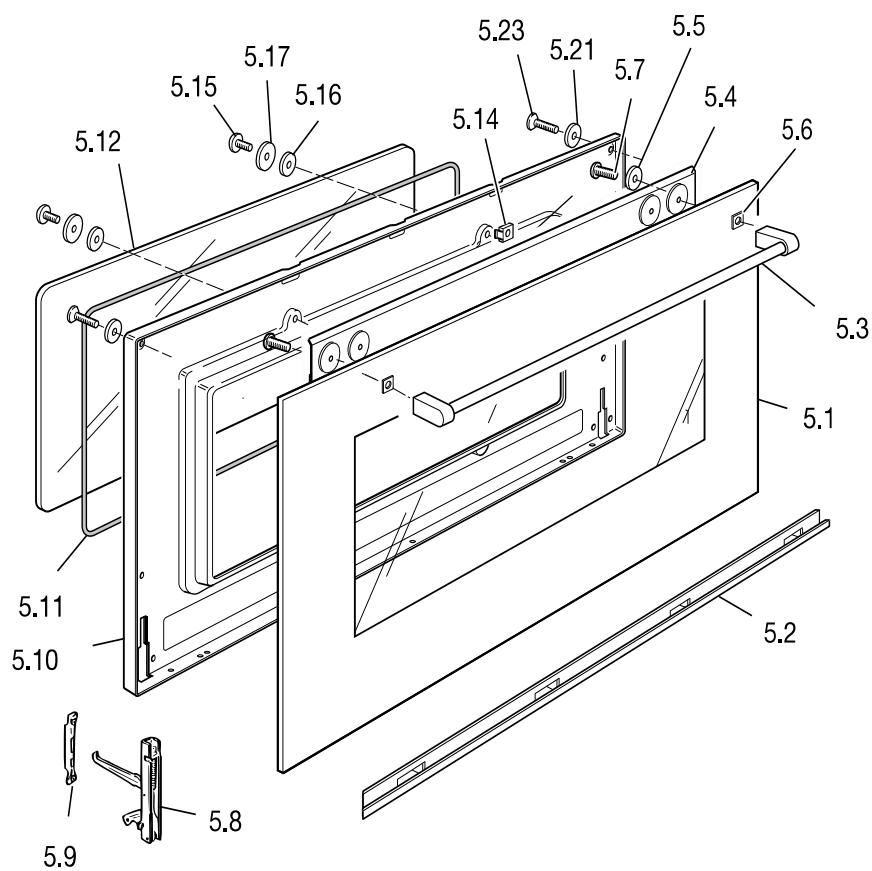

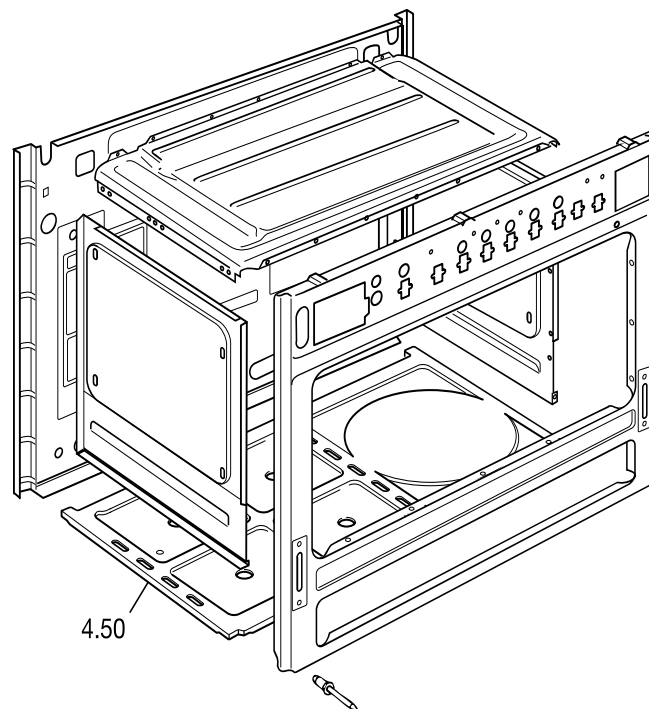

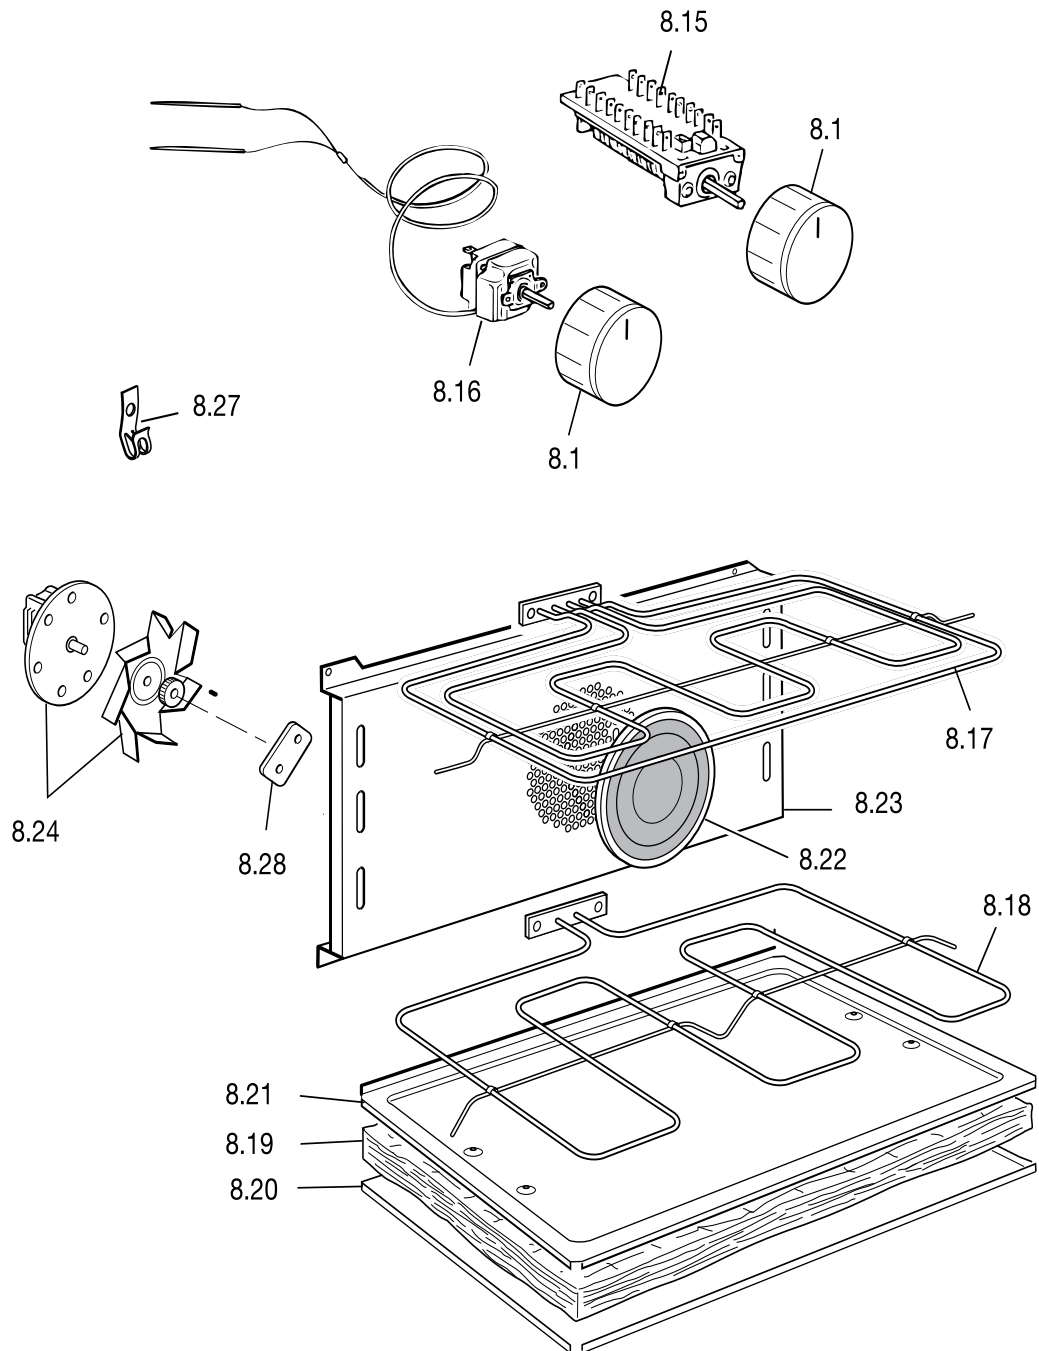

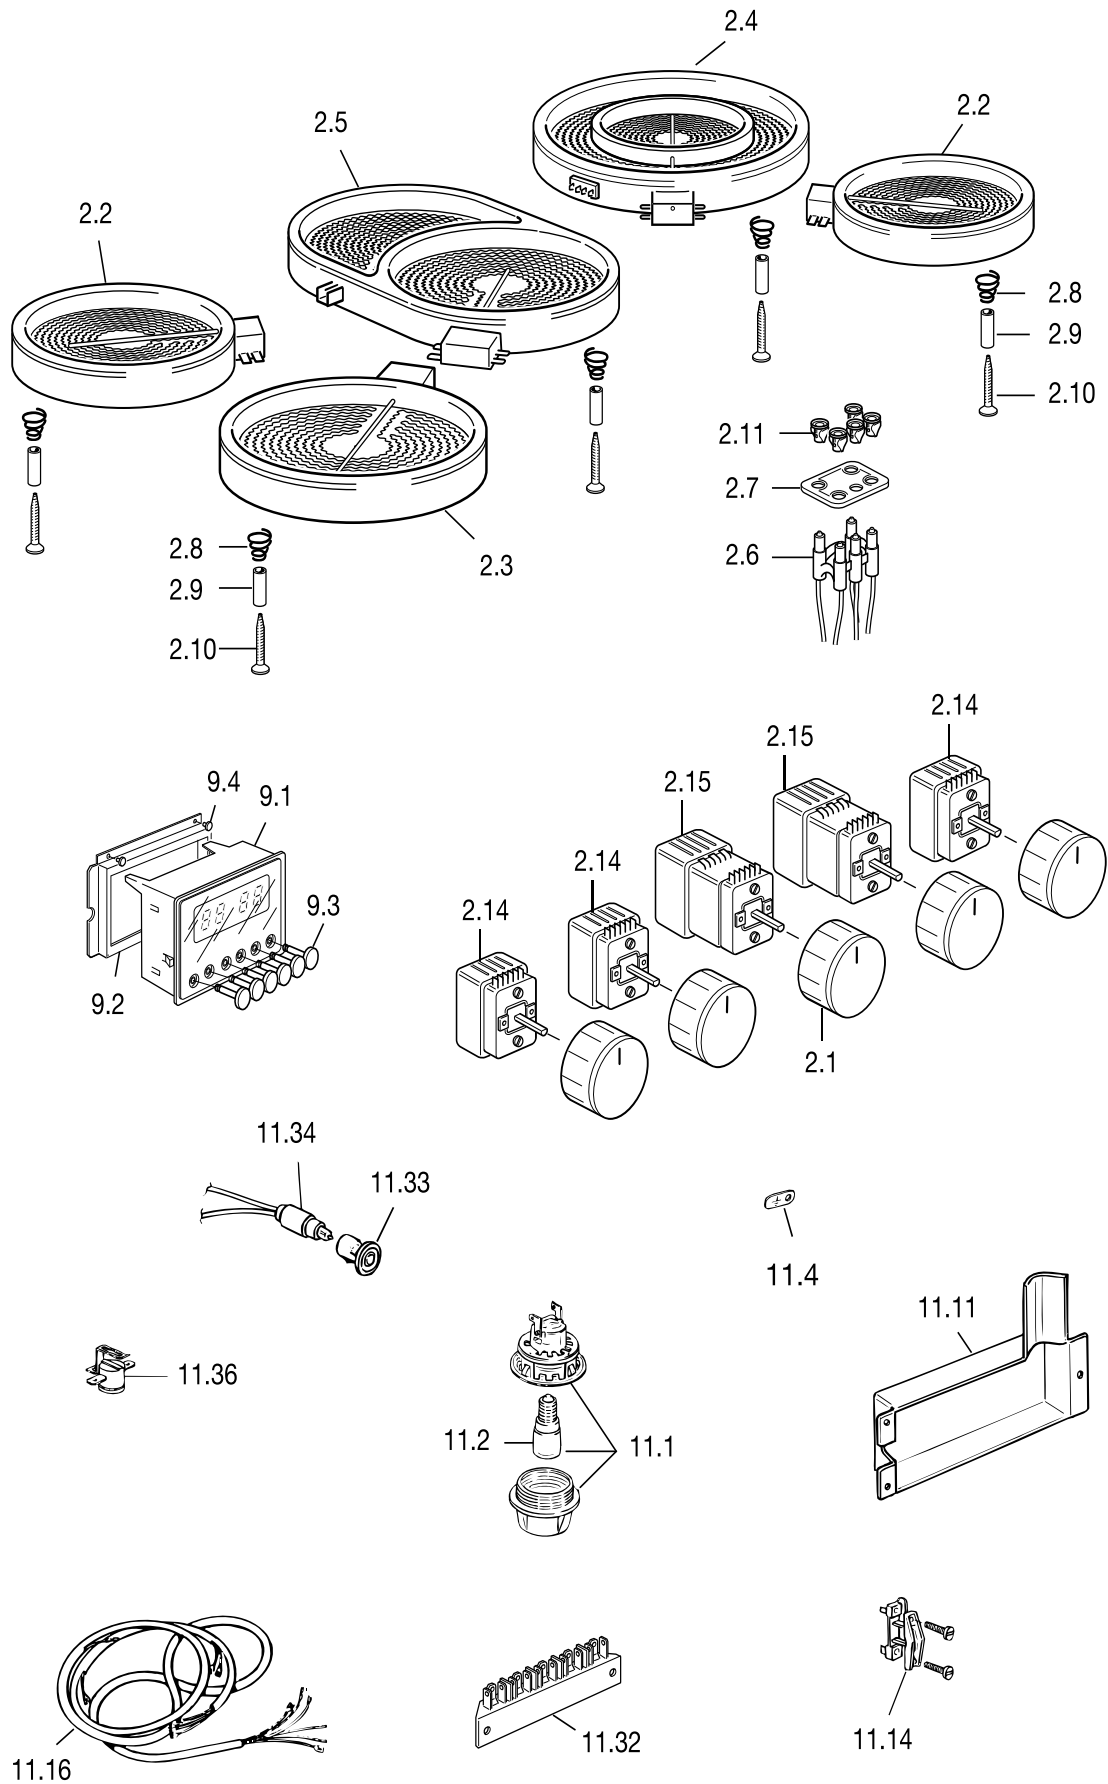

Position	Code	description
1= 1.2	355VC9S03	Glass with frame
2= 1.3	51B9S02	Hotplate support
3= 1.4	094408	Front control lamp support
4= 1.5	040041001	PLUG
5= 1.6	001057	Stainless steel screw
6= 1.8	103138	SCRAPER
7= 3.1	35N9199LD1	CONTROL PANEL
8= 3.2	103760	Control panel trim
9= 3.8	213007	CLIP
10= 5.1	0312662	DOOR GLASS
11= 5.2	083240061	Lower door trim
12= 5.3	037195062	Door handle
13= 5.4	51B9605	Handle trim
14= 5.5	003057	WASHER
15= 5.6	103713	Door handle plaque
16= 5.7	001030	SCREW
17= 5.8	063146	Door hinge (male)
18= 5.9	063148	Door hinge (female)
19= 5.10	373F9606G	Door panel
20= 5.11	053058	GASKET
21= 5.12	0311292/TH	Inner glass
22= 5.14	214021	NUT
23= 5.15	001327	SCREW
24= 5.16	003035	WASHER
25= 5.17	103205.1	WASHER
26= 5.21	003030	WASHER
27= 5.23	001056	SCREW
28= 7.1	217291	Shelf support
29= 7.2	217497	Oven tray support
30= 7.3	48B8501G	Oven tray
31= 7.4	217626	OVEN SHELF
32= 7.6	47E9603G	Oven floor
33= 7.7	037208	Grill-pan grid handle
34= 7.8	217523	Grill-pan grid
35= 4.4	030267	Oven insulation
36= 4.5	030213	Rear insulation
37= 4.6	094502DX	Rear right hinge bracket

AU, NZ DEF905E

38= 4.7	094502SX	Rear left hinge bracket
39= 4.8	4119602	REAR PANEL
40= 4.9	4219T06Z	Upper shelter
41= 4.11	040056	Rubber
42= 4.12	085044	SLEEVE
43= 4.13	053101	SEAL
44= 4.17	035097	Rotisserie hole plug
45= 4.18	6309608	SHIM
46= 4.20	040061	BUFFER
47= 4.21	063075	HINGE
48= 4.23	371V9601L	FRONT PANEL
49= 4.24	373V9601A	Inside panel
50= 4.25	36C96D1H	Side panel right
51= 4.26	36C96S1H	Side panel left
52= 4.32	4219604Z	Rear insulation support
53= 4.36	081084080	Left stopper
54= 4.37	081083080	Right stopper
55= 4.38	46A9S02Z	Air conveyor
56= 4.39	46A9S01Z	FUNNEL
57= 4.40	079025	Tangential fan
58= 4.48	6300040	Anti tilt bracket
59= 4.50	4419S1EM100	Oven frame
60= 8.1	2183009461	Knob hi-light cooking zone
61= 8.15	050030	Oven switch
62= 8.16	066072	Oven thermostat
63= 8.17	062100004	Top element
64= 8.18	062101004	Bottom element
65= 8.19	030076.1	Bottom element insulation
66= 8.20	4219602Z	Bottom insulation support
67= 8.21	4219605Z	Bottom element support
68= 8.22	103085	FILTER
69= 8.23	47A9603G	Fan diffuser
70= 8.24	079008001F	Fan motor - 230 V
71= 8.27	213025	CLIP
72= 8.28	094660	Plaque
73= 2.1	2183009461	Knob hi-light cooking zone
74= 2.2	04796230	Hi-light cooking zone - diam 140 mm 1200 W
75= 2.3	04797230	Hi-light cooking zone - diam 180 mm 1800 W

76= 2.4	04799230	Double hi-light cooking zone diam 210/120 mm 2200/750 W
77= 2.5	04769230	Oval hi-light cooking zone - centre diam 140x250 - 1800/1000W
78= 2.6	073087	Hob hot assembly front centre
79= 2.7	1031134	Control lamp plate
80= 2.8	035075	SPRING
81= 2.9	085043	Spacer hob for each hot plate (2 for each hotplate)
82= 2.10	001111	SCREW
83= 2.11	1031121	Control lamp bush
84= 2.14	050110230	Energy regulator
85= 2.15	050052230	Energy regulator
86= 9.1	074069	Electronic programmer
87= 9.2	094363	Electronic timer seal
88= 9.3	1031057007	Button
89= 9.4	040056	Rubber
90= 11.1	072025	Lamp holder assembly
91= 11.2	073013001	LAMP
92= 11.4	041210	Earth plate
93= 11.11	103638A	Terminal block cover - rear cooker
94= 11.14	052008	Cable clamp - rear cooker
95= 11.16a	1132177	WIRING LOOM
96= 11.16b	1131775	Wires for hotplates
97= 11.32	051037	Terminal block - rear cooker 40A- 6P
98= 11.33	073090	Control lamp cover (Blue)
99= 11.34	073091	Control lamp L = 230
100=11.36	066123	Cut-out thermostat 160 degree C