




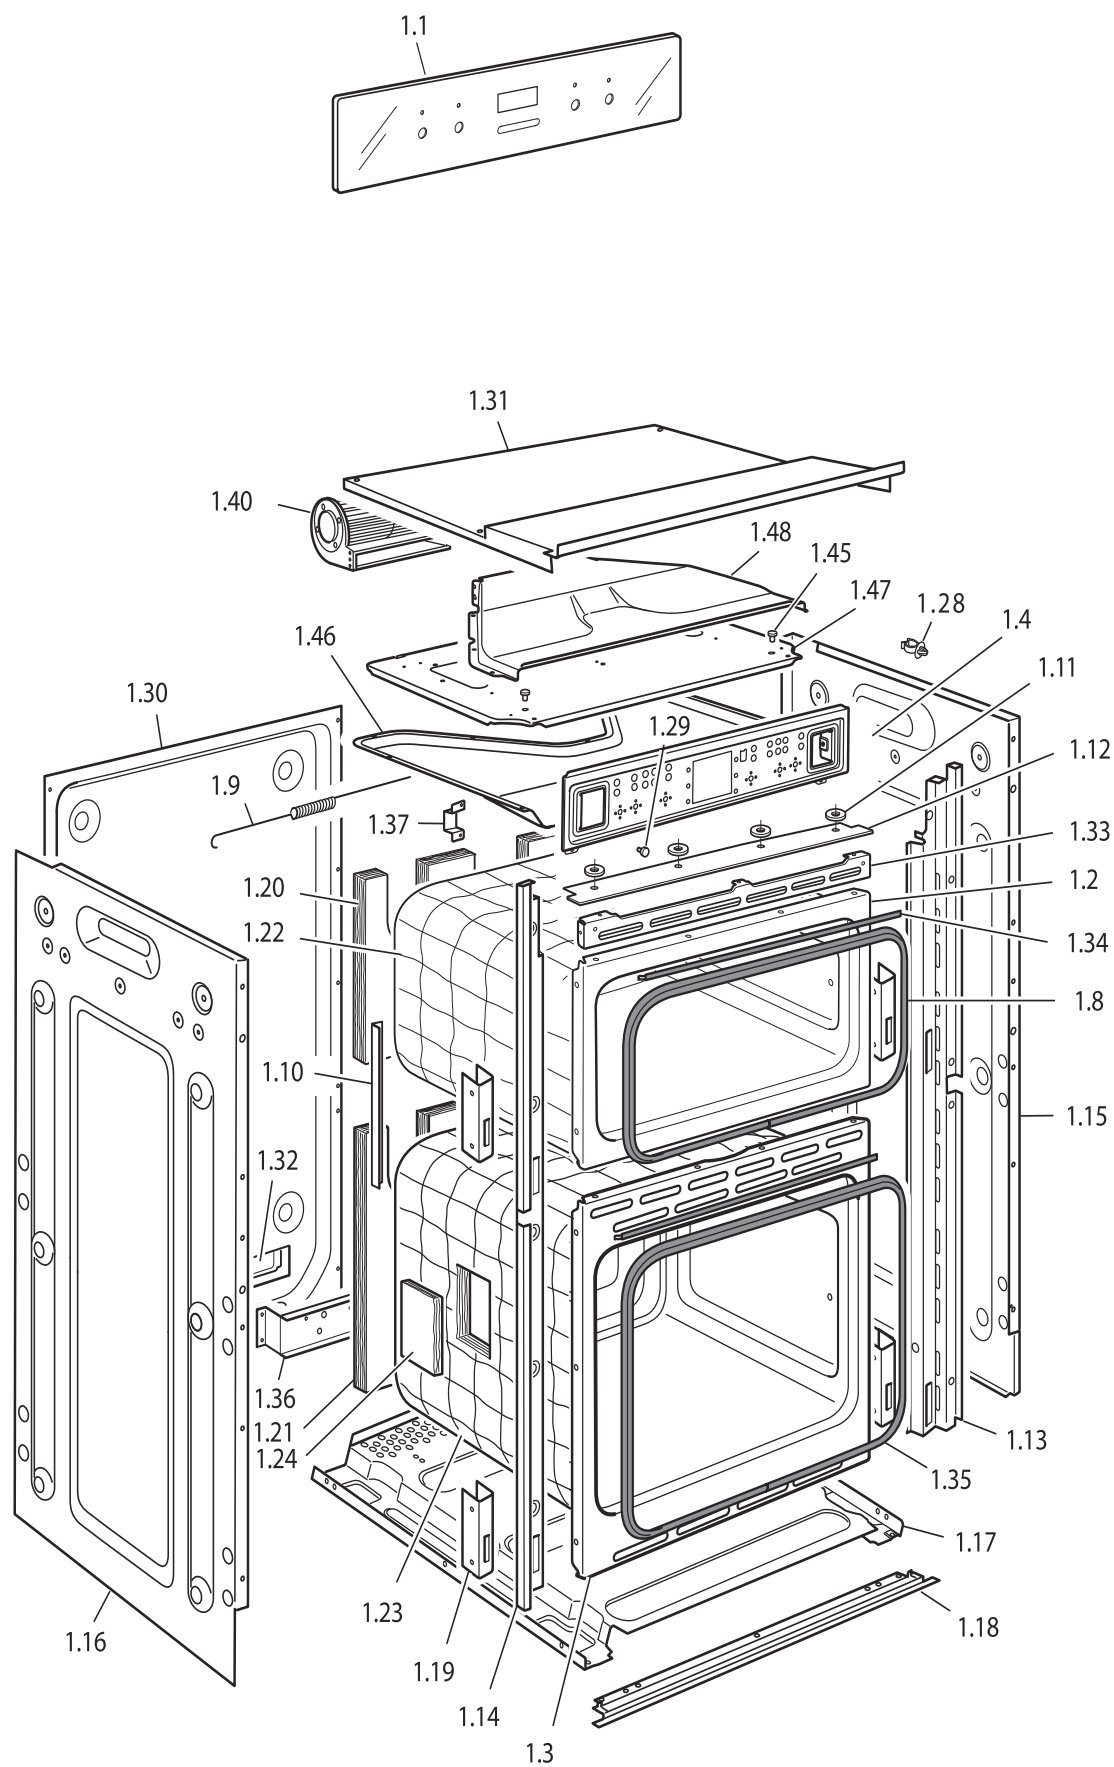


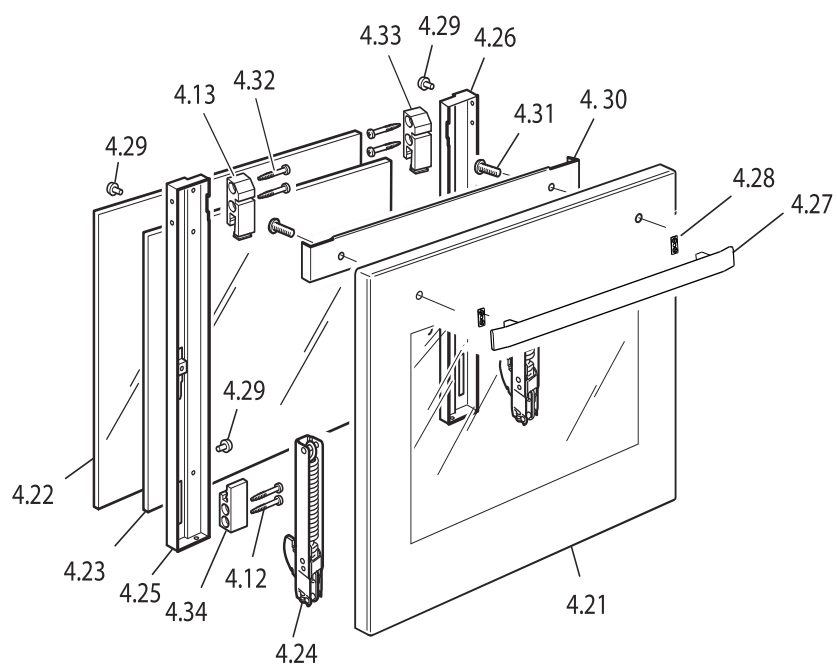

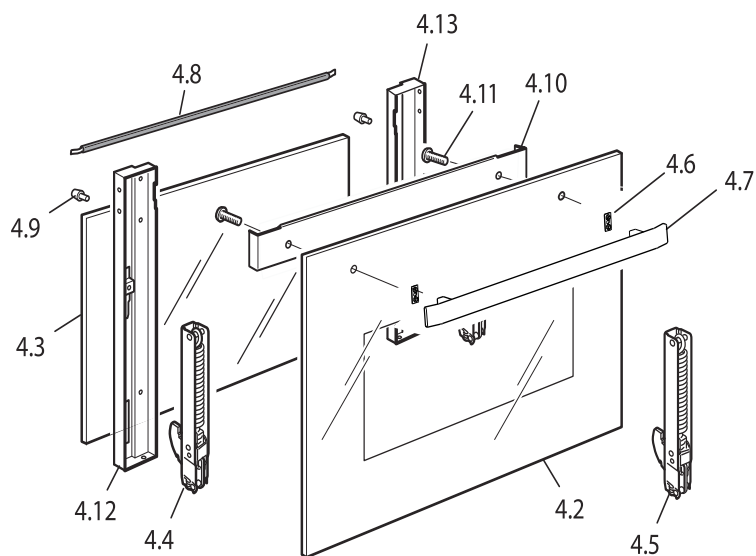

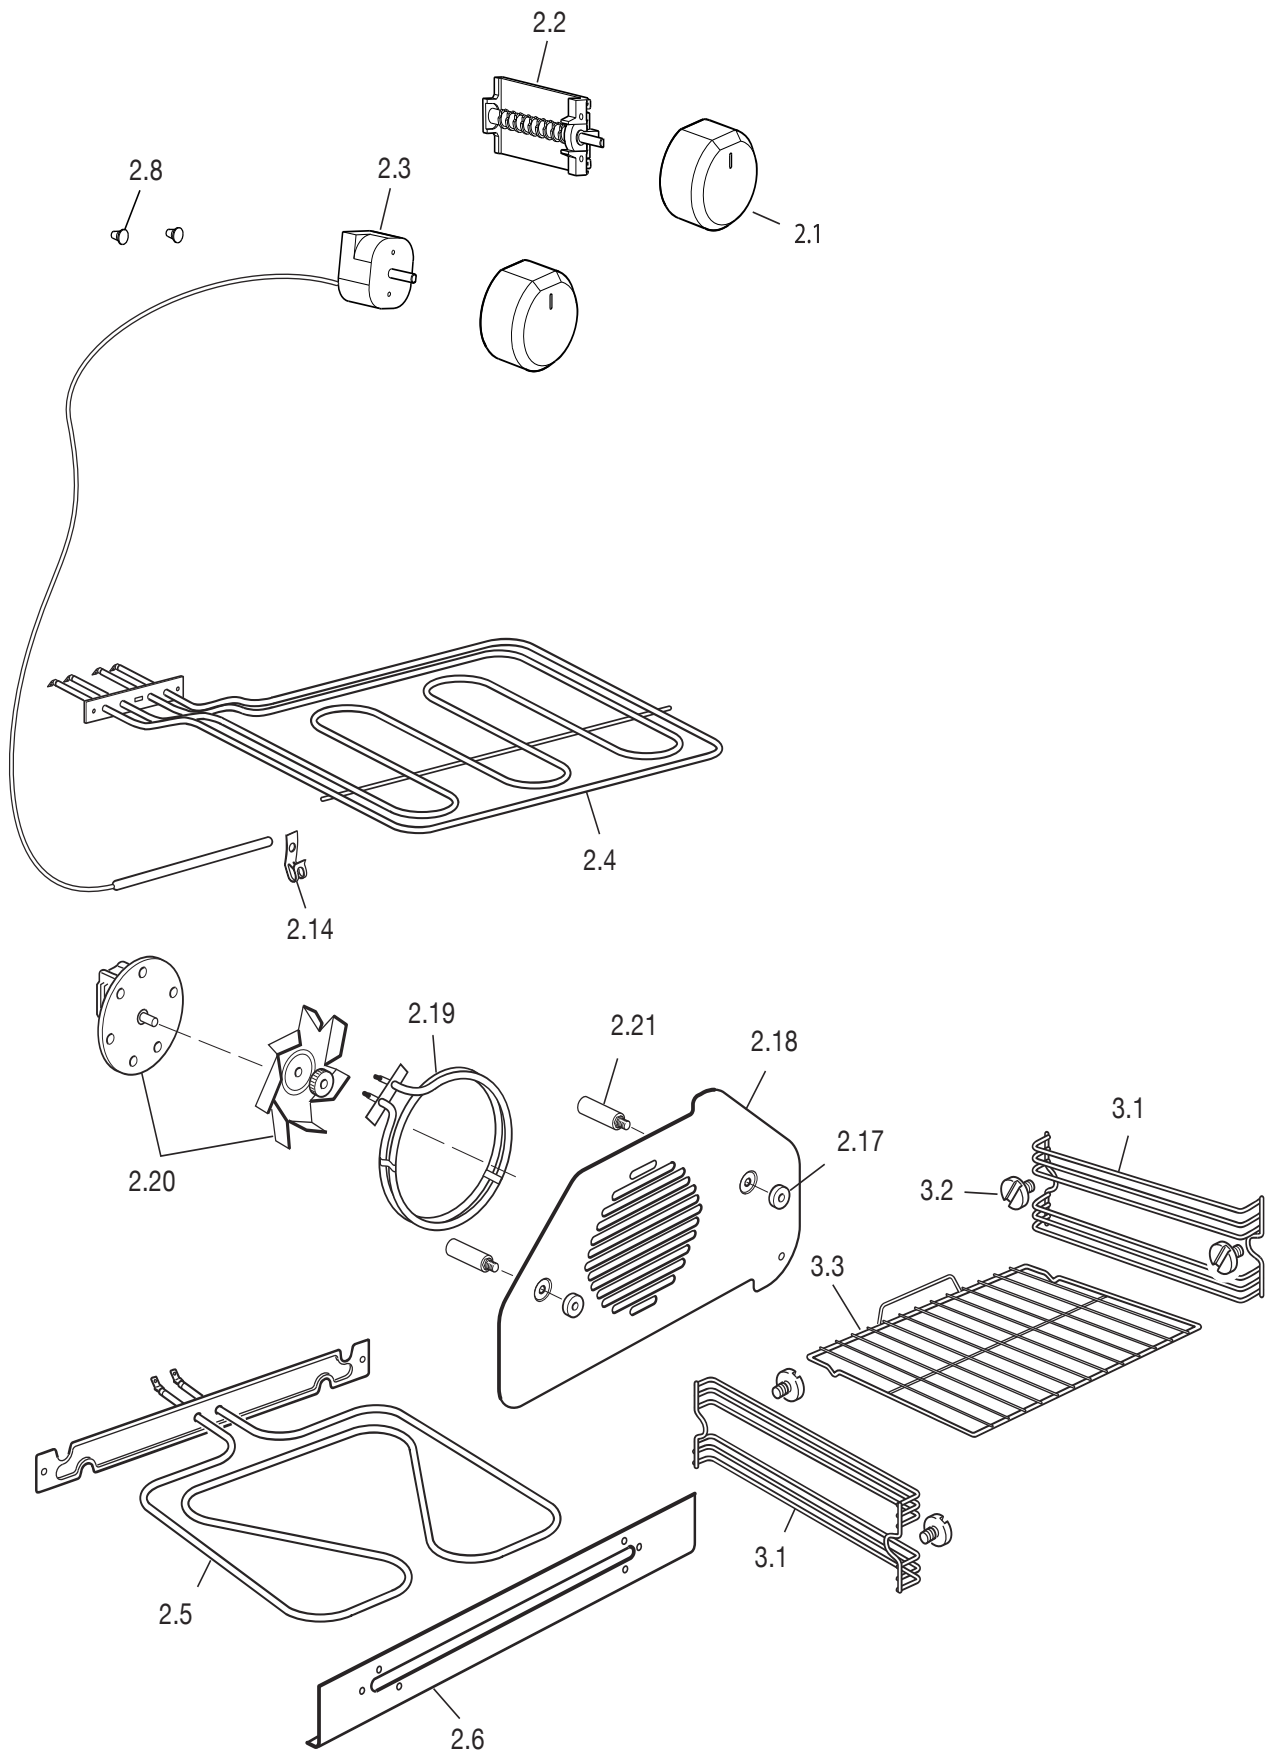

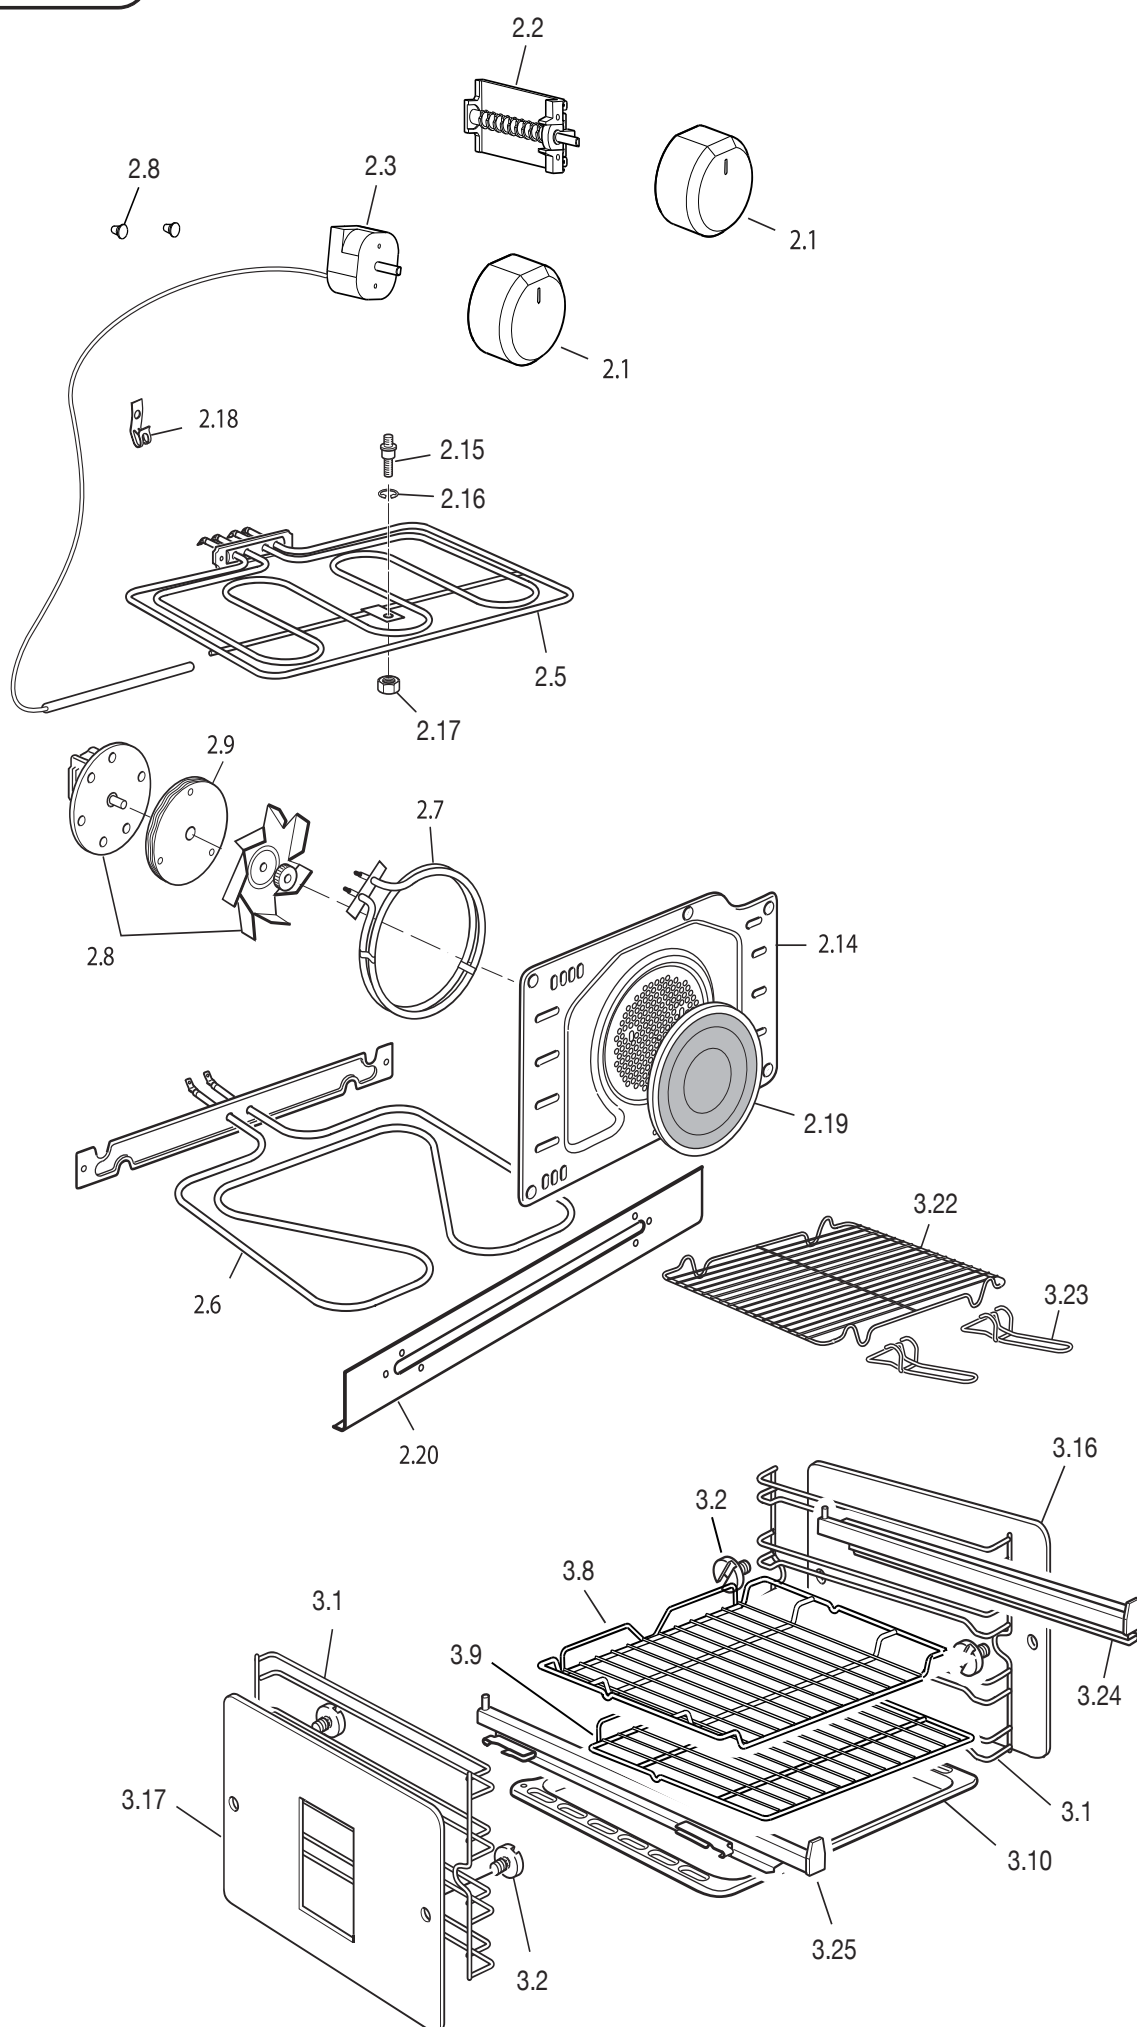

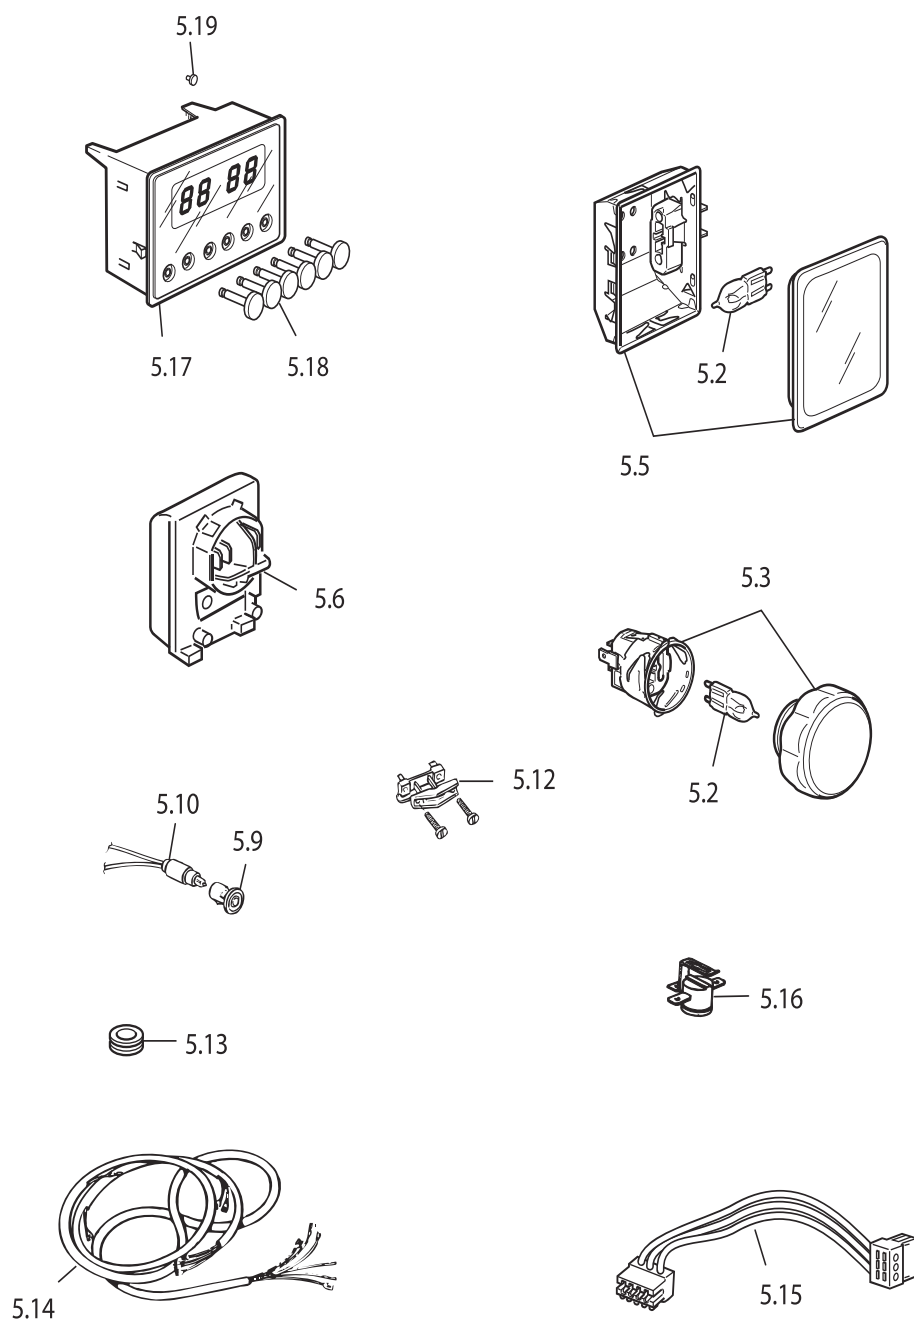

Position	Code	description
1=1.1	032F3286DA	CONTROL PANEL
2=1.2	450F31EM41	Top oven body
3=1.3	450F61EM59	Bottom oven body
4=1.4	35MF6015A	Interior control panel
5=1.8	053102	Top oven seal
6=1.9	035101	Insulation spring
7=1.10	51BF613	Oven body bar
8=1.11	003044	SPACER
9=1.12	51BF614S.1	Deflector
10=1.13	51BFD01DA	Right front trim
11=1.14	51BFD01SA	Left front trim
12=1.15	411FDD1Z	Right side panel
13=1.16	411FDS1Z	Left side panel
14=1.17	411F602.1	Bottom panel
15=1.18	08328400A	Lower trim
16=1.19	094390	Door hinge (female)
17=1.20	030218.1	Top oven rear insulation
18=1.21	030189	Rear insulation
19=1.22	030139.1	Top oven insulation
20=1.23	030191	Oven insulation
21=1.24	030229.1	Side lamp insulation
22=1.28	103672	WIRE CLAMP
23=1.29	040078	BUFFER
24=1.30	411FD01	REAR PANEL
25=1.31	411F604	Upper shelter
26=1.32	51BF609	Terminal block shield
27=1.33	51BF612A	Top oven body panel
28=1.34	053074	Upper seal
29=1.35	053087	SEAL
30=1.36	094620	Terminal block support
31=1.37	094392	Thermal overload support
32=1.40	079017	Tangential fan
33=1.45	040078	BUFFER
34=1.46	411FD02	Bottom air conveyor
35=1.47	421F602Z	Conveyor support
36=1.48	411F605	Air conveyor
37=4.2	032F3113D1	DOOR GLASS

38=4.3	0313246TH	Inner glass
39=4.4	063112	Hinge (male)
40=4.5	063112	Hinge (male)
41=4.7	037351061	Door handle
42=4.8	053125	SEAL
43=4.9	040056	Rubber
44=4.10	51BF623A	Handle bar
45=4.11	001275	Door handle screw
46=4.12	51AF303SA	Left door trim
47=4.13	51AF303DA	Right door trim
48=4.21	032F3074D7	Door glass
49=4.22	0313241TH	Inner glass
50=4.23	0312570TH	Intermediate glass
51=4.24	063120	Hinge (male)
52=4.25	51AF621SA	Left door trim
53=4.26	51AF621DA	Right door trim
54=4.27	037351061	Door handle
55=4.28	1031697080	Handle spacer
56=4.29	040056	Rubber
57=4.30	51BF625A	Handle bar
58=4.31	001275	Door handle screw
59=4.32	001270	SCREW
60=4.33	1031052	Top middle glass clamp
61=4.34	1031053	Bottom middle glass clamp
62=2.1	218E00H554	CONTROL KNOB
63=2.2	050028.1	Oven switch
64=2.3	066078	THERMOSTAT
65=2.4	062132004	Top + grill element 230 V
66=2.5	062105004	Bottom element 230 V
67=2.6	51BF603.1	Bottom element support
68=2.8	040056	Rubber
69=2.14	213023	CLIP
70=2.15	211035	Stud
71=2.16	003074	WASHER
72=2.17	214088	NUT
73=2.18	47AF301G	Fan diffuser
74=2.19	062133004	Fan element 230 V
75=2.20	079050	Fan motor 230 V

76=2.21	085104	Diffuser bush
77=3.1	217648	Shelf support
78=3.2	001142	Shelf support screw
79=3.3	217551.1	WIRE SHELF
80=2.1	218E00H554	CONTROL KNOB
81=2.2	050028.1	Oven switch
82=2.3	066157	THERMOSTAT
83=2.5	062144004	Top + grill element 230V
84=2.6	062090004	Bottom element - 230 V
85=2.7	062097004	Fan element
86=2.8	079008001F	Fan motor - 230 V
87=2.9	030136.1	Fan motor insulation
88=2.14	47AF6020	Fan diffuser
89=2.15	211035	Stud
90=2.16	003074	WASHER
91=2.17	214070	NUT
92=2.18	213023	CLIP
93=2.18	213025	CLIP
94=2.19	103085	FILTER
95=2.20	51BF603.1	Bottom element support
96=3.1	217646	Shelf support
97=3.2	001142	Shelf support screw
98=3.8	217551.1	WIRE SHELF
99=3.9	217558.2	WIRE SHELF
100=3.10	48BF602G	Oven tray
101=3.16	473070	Lateral catalytic panel
102=3.17	473160	Left lateral catalytic panel
103=3.22	217546	Grill-pan grid
104=3.23	037144	Grill pan grid handle
105=3.24	1031037	Right telescopic runner
106=3.25	1031038	Left telescopic runner
107=5.2	073103	LAMP
108=5.3	072026	LAMP HOLDER
109=5.5	072022	Side lamp holder
110=5.6	051062	Terminal block
111=5.9	073092	Control lamp cover
112=5.10	073091	Control lamp L = 230
113=5.12	052008	Cable clamp - rear cooker

114=5.13	052007	Wire ring
115=5.14	1132418	WIRING
116=5.15	1131595	Electronic cards wiring (Side lamp)
117=5.16	066068	Cut-off thermostat 130 degree
118=5.16	066123	Cut-out thermostat 160 degree C
119=5.16	066080	Cut-off thermostat 55 degree
120=5.17	074069	Electronic programmer
121=5.18	1031668	Button
122=5.19	040011	BUFFER