
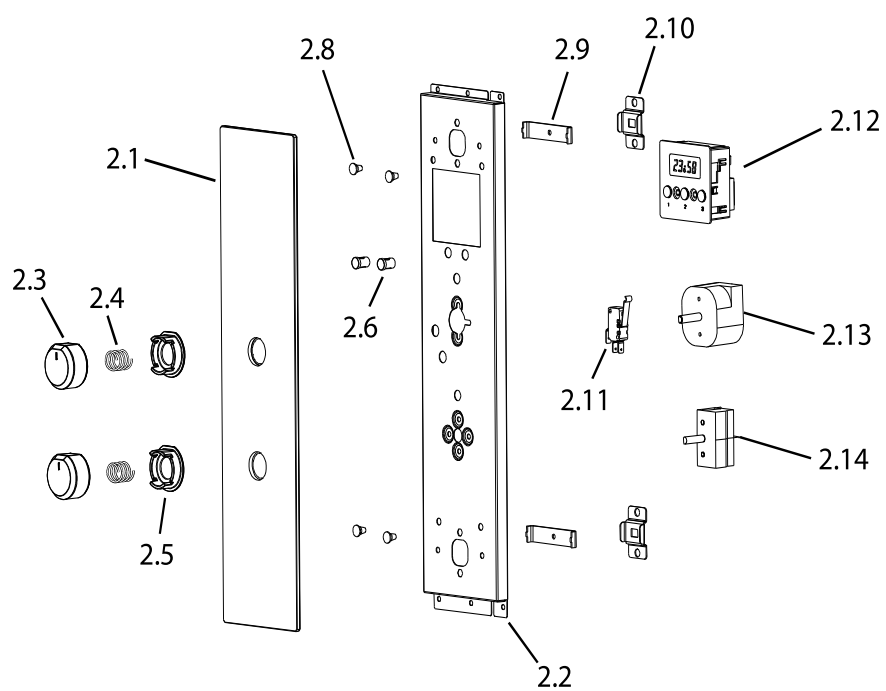
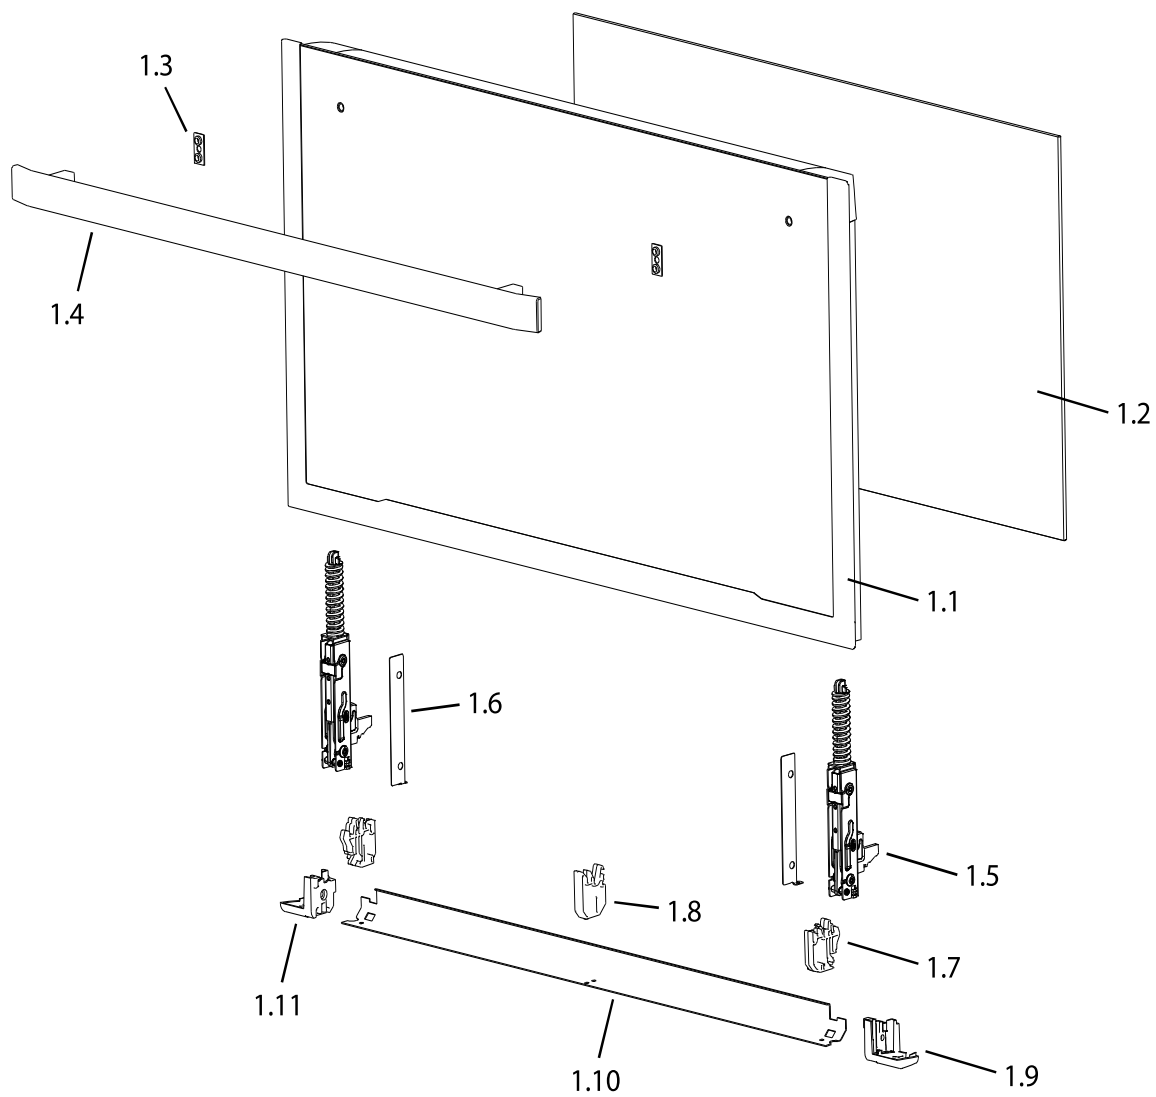


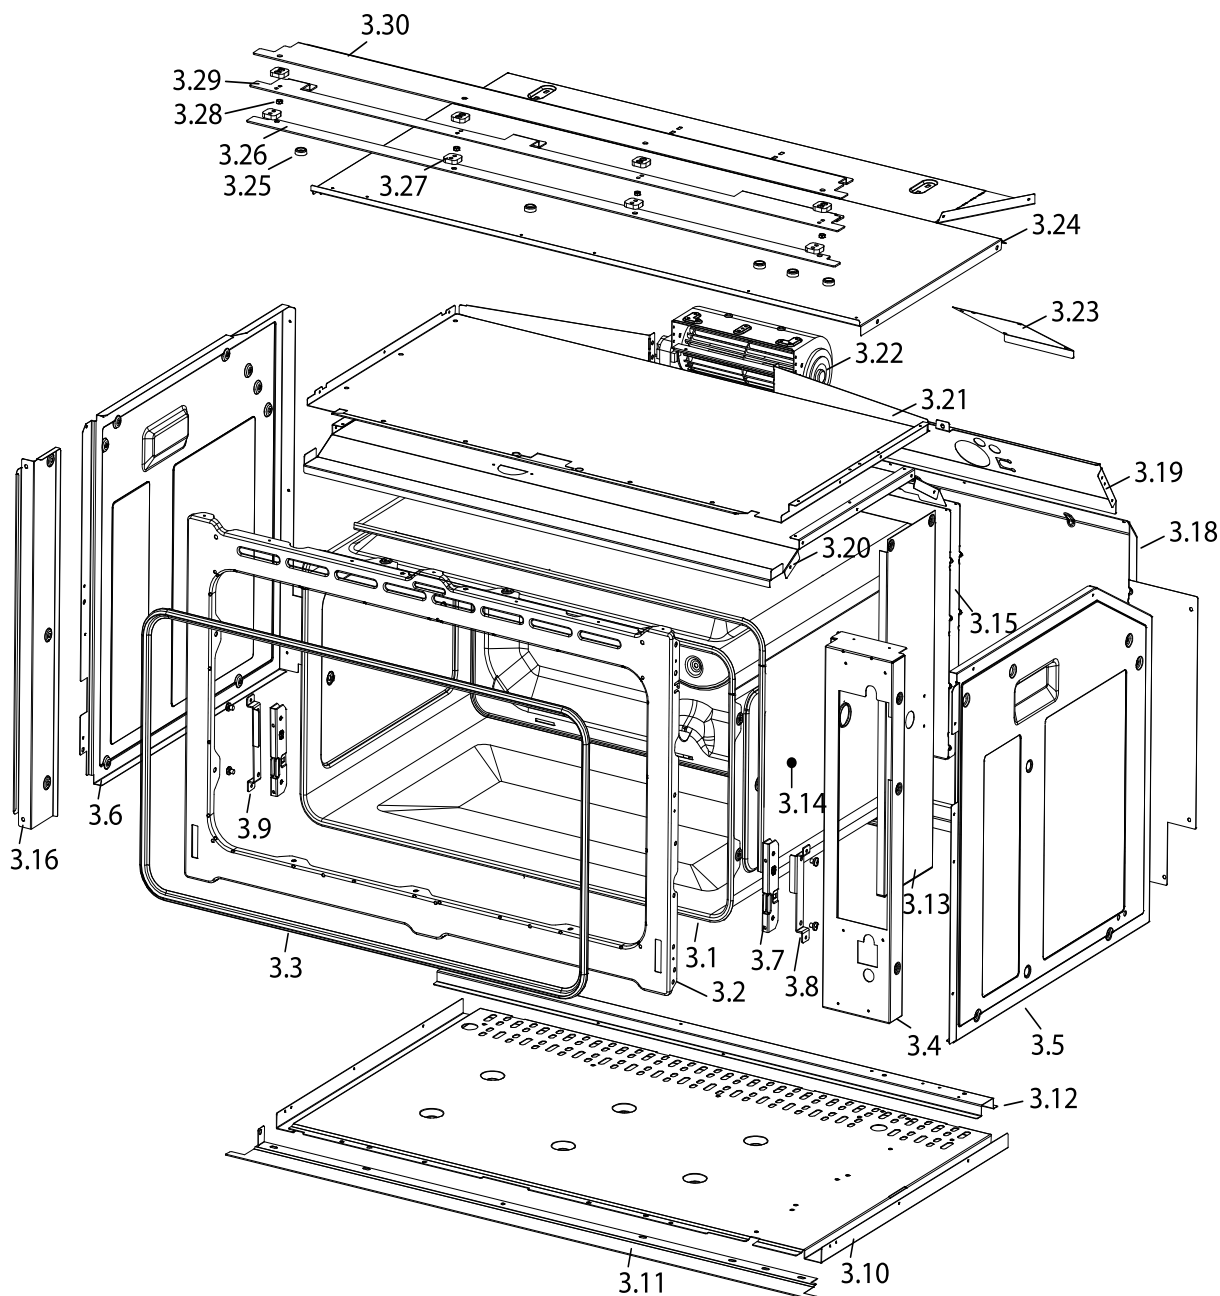



**WARNING, VERY IMPORTANT:**


The oven is supplied with **no.6 rubber spacers fixed** at the bottom

DO NOT install the oven without these spacers correctly in place.

If one or more rubber spacers are missing, please use the ones contained in this kit and fix them to the bottom of the oven as indicated in this figure.

Should you require assistance please contact our Customer Service Centre for your nearest Authorised Delonghi Service Agent.

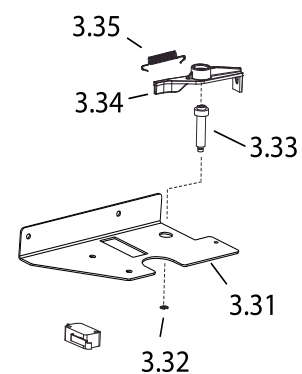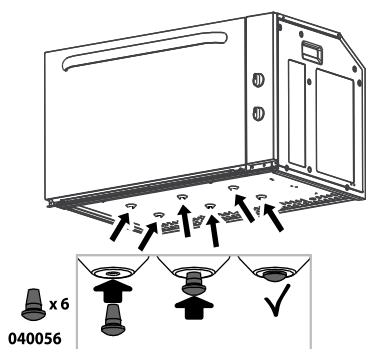

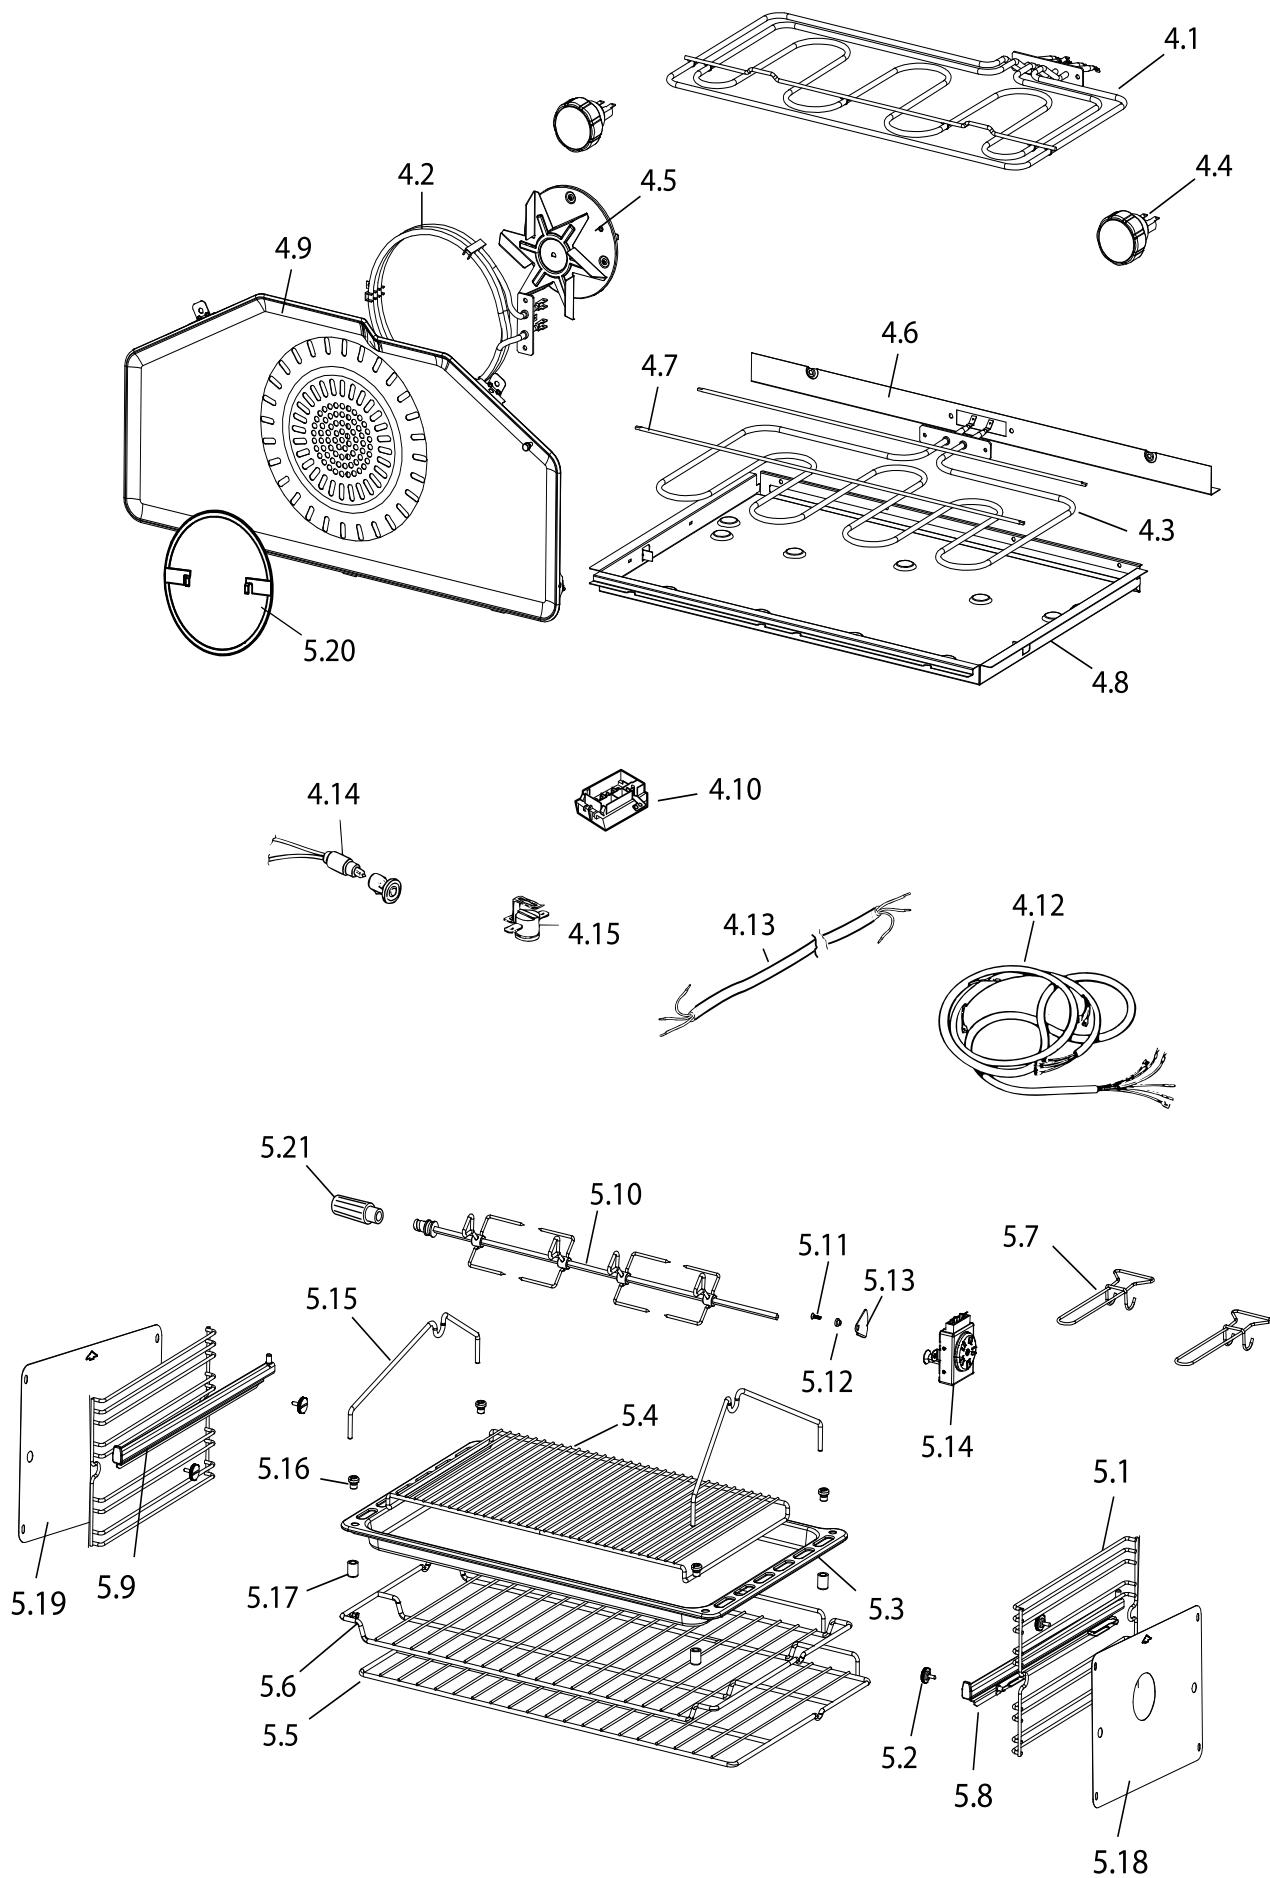

Position	Code	description
1= 1.1	0329E057	OVEN DOOR GLASS
2= 1.2	0312813	INNER DOOR GLASS
3= 1.3	1031697080	Handle spacer
4= 1.4	037354061	OVEN DOOR HANDLE
5= 1.5	063158	SOFT CLOSE HINGE MALE SX - DX
6= 1.6	094860	HINGE MALE SUPPORT SX - DX
7= 1.7	069097	Retainer door glass
8= 1.8	069098	Support door glass
9= 1.9	081108	CORNER DOOR LOWER RH RIGHT
10= 1.10	51BF904A	LOWER BAR
11= 1.11	081109	CORNER DOOR LOWER LH LEFT
12= 2.1	0329E051	GLASS FACIA PANEL
13= 2.2	35MF9G01A	INTERIOR CONTROL PANEL
14= 2.3	218E00H561	CONTROL KNOB
15= 2.4	035036	KNOB SPRING
16= 2.5	10317470A	KNOB RING
17= 2.6	073090	Control lamp cover (Blue)
18= 2.8	040056	Rubber
19= 2.9	094657	BRACKET
20= 2.10	094868	BRACKET
21= 2.11	077088	SWITCH DOOR
22= 2.12	074103	PROGRAMMER
23= 2.13	066078	THERMOSTAT
24= 2.14	050100	SWITCH
25= 3.1	450F91EM42	Oven frame
26= 3.2	45BF9003G	BODY FRONT PANEL
27= 3.3	053179	SEAL
27b= 3.3	053179	SEAL
28= 3.4	35M9E002A	INTERIOR CONTROL PANEL
29= 3.5	411F915	RIGHT SIDE PANEL
30= 3.6	411F905	LEFT SIDE PANEL
31a= 3.7	063159	FEMALE HINGE LEFT
31b= 3.7	063160	FEMALE HINGE RIGHT
32= 3.8	094858	RIGHT BRACKET
33= 3.9	094859	LEFT BRACKET
34= 3.10	411F901	LOWER SHELTER
35= 3.11	08333100A	LOWER TRIM

36= 3.12	51BF907	SUPPORT BAR
37= 3.13	51BF909	MOTOR SUPPORT
38= 3.14	030219	Oven insulation
39= 3.15	030242	Rear insulation
40= 3.16	51BF906A	FRONT TRIM
41= 3.18	411F913	REAR SHELTER
42= 3.19	51BF910	REAR SUPPORT
43= 3.20	421F905Z	LOWER SHELTER
44= 3.21	421F909Z	PANEL VENTING MIDDLE
45= 3.22	079054	TANGENTIAL FAN
46= 3.23	51BF915	REAR BRACKET
47= 3.24	411F914	UPPER SHELTER
48= 3.25	040041001	PLUG
49= 3.26	083334061S	LOWER TRIM
50= 3.27	1031234	SPACER
51= 3.28	214005	NUT
52= 3.29	083333061S	MIDDLE TRIM
53= 3.30	083332061S	TOP TRIM
54= 3.31	094864	LOCK DOOR BRACKET
55= 3.32	003040	STARLOCK WASHER
56= 3.33	085118	PIN PIVOT LOCK
57= 3.34	1031277	TRIGGER DOOR SENSOR
58= 3.35	035113	SPRING
59= 4.1	062157004	Top + grill element
60= 4.2	062097004	Fan element
61= 4.3	062146004	Bottom element
62= 4.4	072026	LAMP HOLDER
63= 4.5	079049	Fan motor 230 V
64= 4.6	51BF911	SUPPORT BAR
65= 4.7	1031283	Element support
66= 4.8	421F908Z	LOWER PROTECTION
67= 4.9	47AF9020	Fan diffuser
68= 4.10	051072	TERMINAL BLOCK
69= 4.12	1132403	WIRING
70= 4.13	054041	CORD
71= 4.14	073091	Control lamp L = 230
72= 4.14	073095	Control lamp L 600/230
73= 4.15	066068	Cut-off thermostat 130 degree

74= 5.1	217659	Shelf support
75= 5.2	001142	Shelf support screw
76= 5.3	48BF902G	Oven tray
77= 5.4	217651	Grill pan grid
78= 5.5	217657	FLAT SHELF
79= 5.6	217650	OVEN SHELF
80= 5.7	037224.1	GRILL-PAN GRID HANDLE
81= 5.8	1031782	Right telescopic runner
82= 5.9	1031783	LEFT TELESCOPIC RUNNER
83= 5.10	080037	Rotisserie spear (including handle)
84= 5.11	001162	SCREW
85= 5.12	085113	Douille
86= 5.13	094671	Equerre
87= 5.14	079053	Rotisserie motor
88= 5.15	217652	Rotisserie support
89= 5.16	085109	Rotisserie screw
90= 5.17	085110	Rotisserie bush
91= 5.18	473140	RIGHT CATALYTIC PANEL
92= 5.19	473150	LEFT CATALYTIC PANEL
93= 5.20	103085	FILTER
94= 5.21	037012	Spear handle