




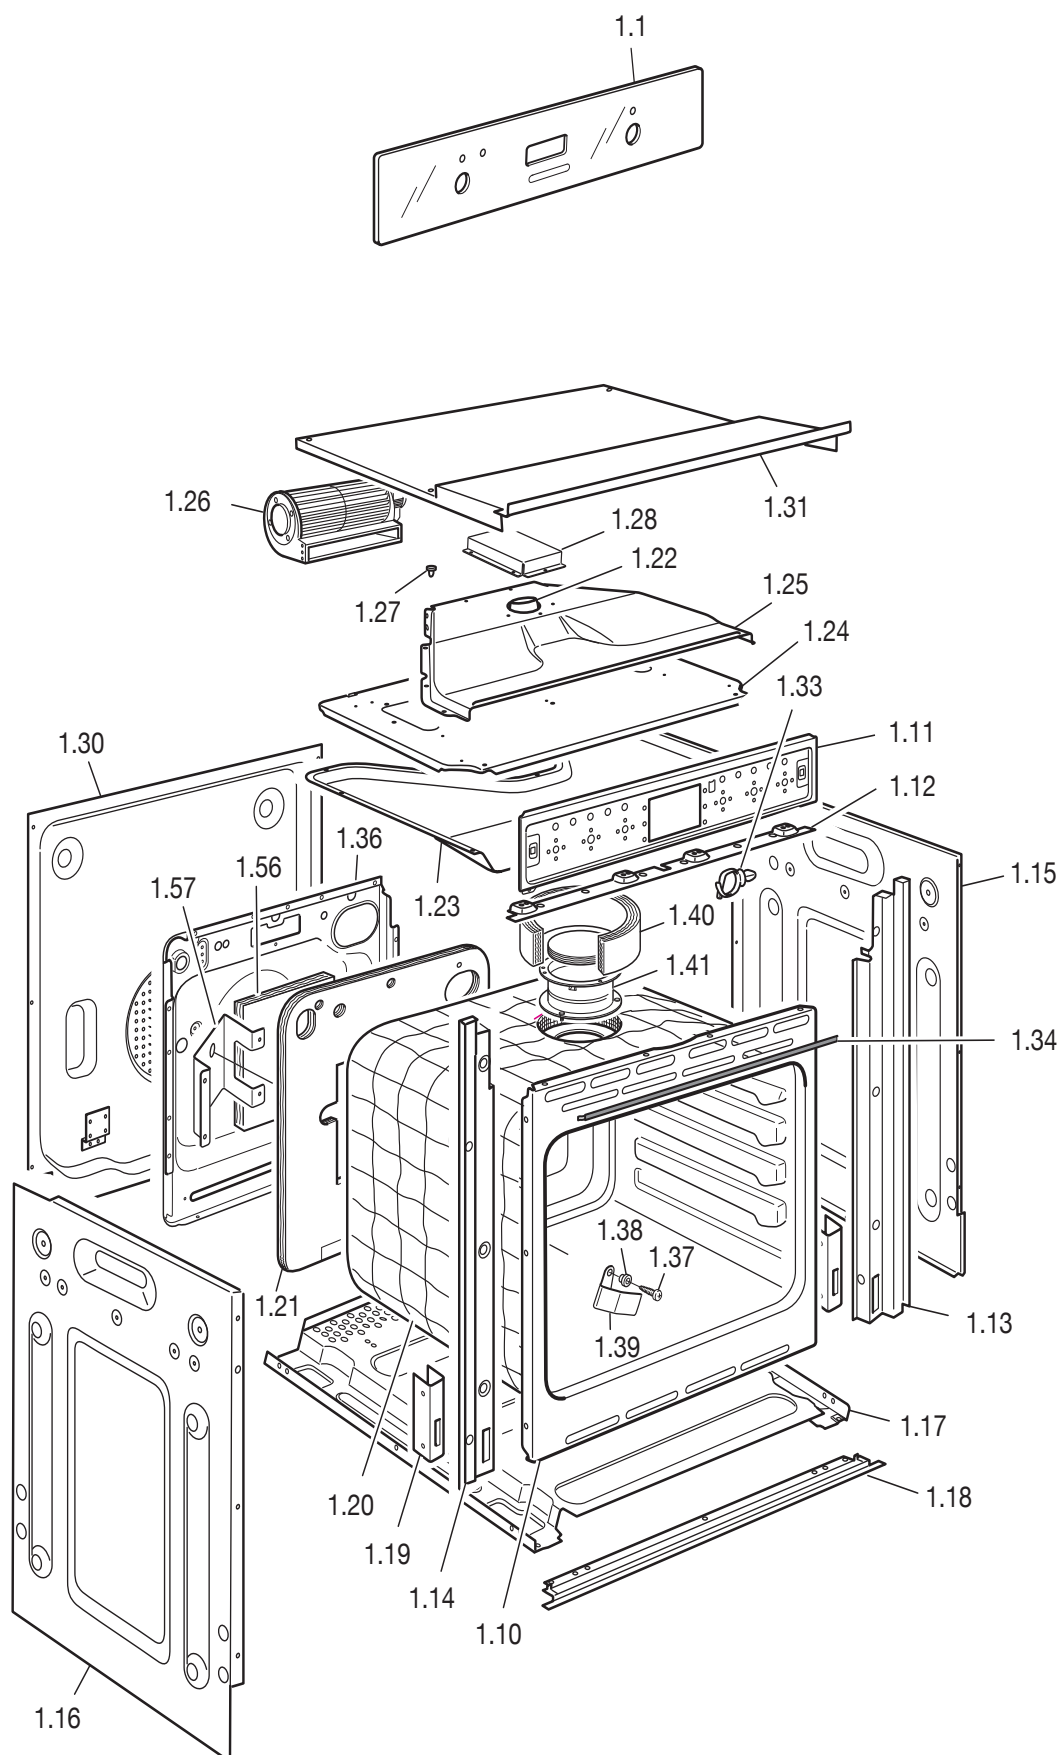

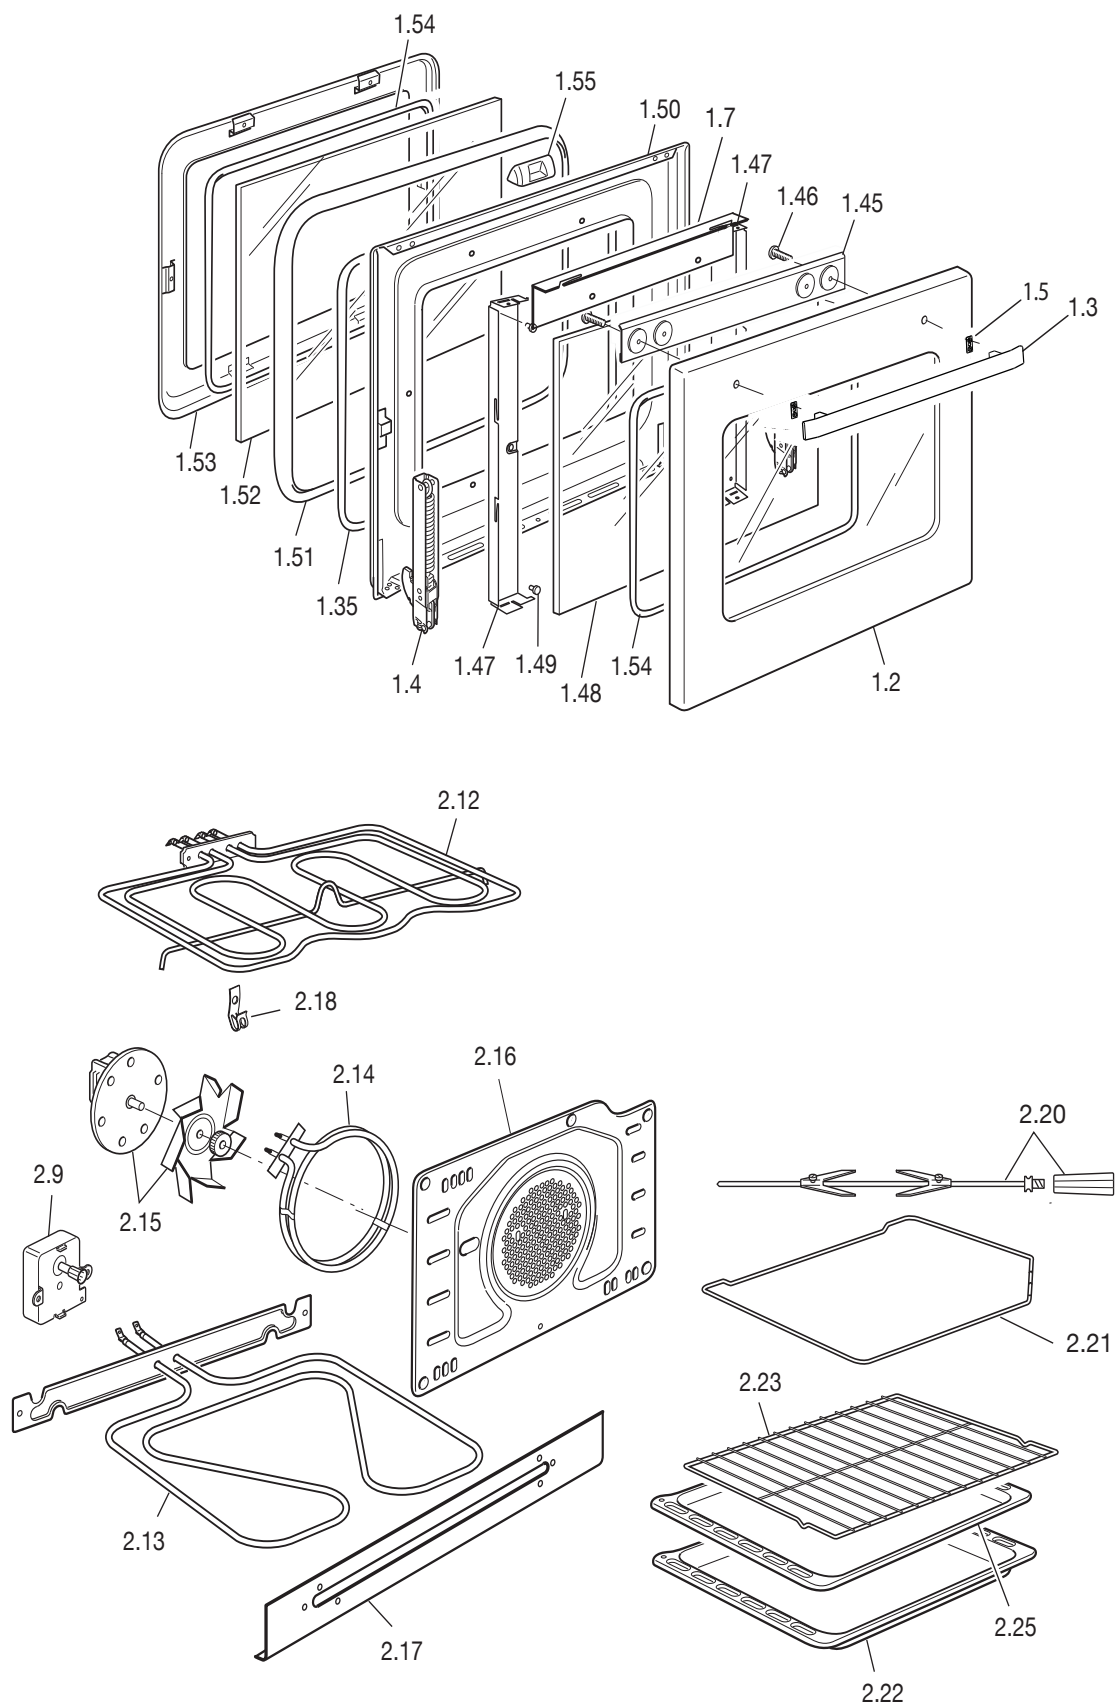

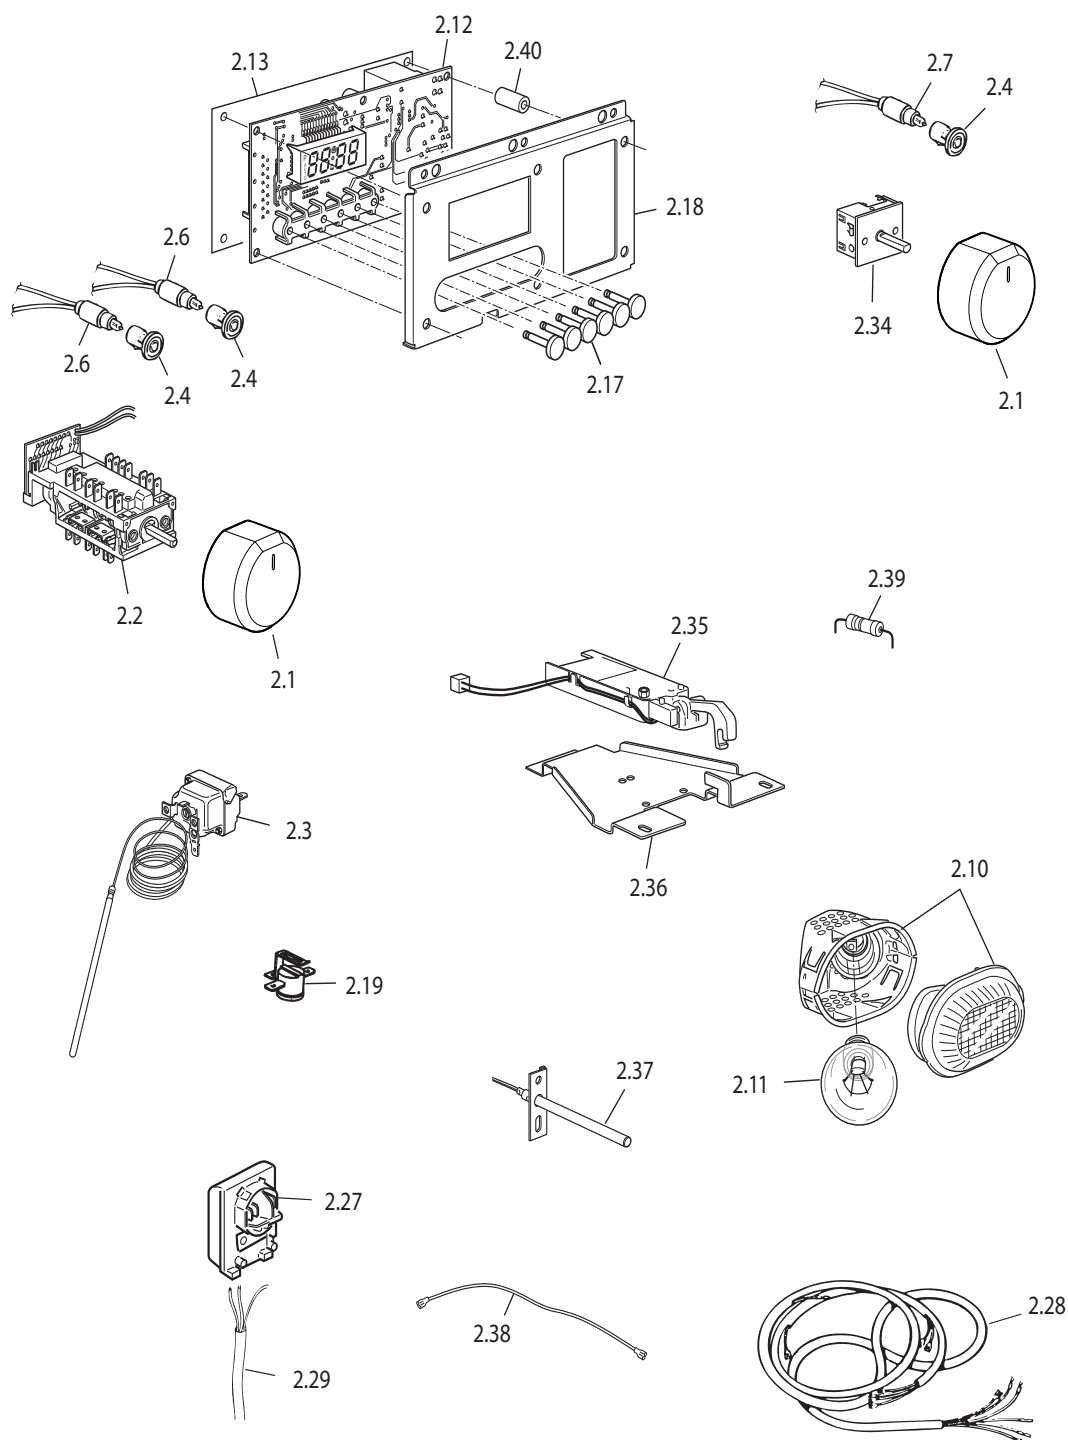

Position	Code	description
1= 1.1	032F3287DA	Glass panel
2= 1.10	450FP1EM47	Oven cube
3= 1.11	35MF6016H	Interior control panel
4= 1.12	51BF614S.1	Deflector
5= 1.13	51BF601DH	Right front trim
6= 1.14	51BF601SH	Left front trim
7= 1.15	411F6D1Z	Right side panel
8= 1.16	411F6S1Z	Left side panel
9= 1.17	411F602.1	Bottom panel
10= 1.18	08328400A	Lower trim
11= 1.19	094779	Door hinge (female)
12= 1.20	030123	Oven insulation
13= 1.21	030137	Rear insulation
14= 1.22	103617	Fumes filter
15= 1.23	411F607	Lower air conveyor
16= 1.24	421F604Z	Air conveyor support
17= 1.25	411F606	Upper air conveyor
18= 1.26	079024	Tangential fan
19= 1.27	040056	Rubber
20= 1.28	094435	Fumes conveyor
21= 1.30	411F603	REAR PANEL
22= 1.31	411F604	Upper shelter
23= 1.33	103672	WIRE CLAMP
24= 1.34	053074	Upper seal
25= 1.36	421F603Z	REAR PANEL
26= 1.37	001135	SCREW
27= 1.38	085060	SLEEVE
28= 1.39	51BF607	Rotisserie door
29= 1.40	030132	Fumes catalyst insulation
30= 1.41	103723	Fumes catalyst
31= 1.56	030131	Rear central insulation
32= 1.57	094434	Rotisserie motor support
33= 1.2	032F3118D1	DOOR GLASS
34= 1.3	037351061	Door handle
35= 1.4	063139	Hinge (male)
36= 1.5	1031697080	Handle spacer
37= 1.7	083316061	PROTECTION

38= 1.35	053099	SEAL
39= 1.45	51BF604	Handle bar
40= 1.46	001071	Door handle screw
41= 1.47	51BF606	Middle inner glass support
42= 1.48	0312117	Middle inner glass
43= 1.49	040056	Rubber
44= 1.50	372FF609GG	Door panel
45= 1.51	053089	Door panel gasket
46= 1.52	0312116	Inner glass
47= 1.53	372FF610GG	Door panel frame
48= 1.54	053090	Inner glass gasket
49= 1.55	103620	Door lock block
50= 2.9	079014	Rotisserie motor
51= 2.12	062155004	Top + grill element
52= 2.13	062093004	Bottom element
53= 2.14	062097004	Fan element
54= 2.15	079023	FAN MOTOR
55= 2.16	47AF602G	Fan diffuser
56= 2.17	51BF603.1	Bottom element support
57= 2.18	213031	CLIP
58= 2.20	080033	Rotisserie spear
59= 2.21	217532	Rotisserie support
60= 2.22	48B6201G	Oven tray
61= 2.23	217603	WIRE SHELF
62= 2.25	48E6202G	Grill flat
63= 2.1	218E00H561	CONTROL KNOB
64= 2.2	050061.1	SWITCH
65= 2.3	066143	THERMOSTAT
66= 2.4	073092	Control lamp cover
67= 2.6	073091	Control lamp L = 230
68= 2.7	073093	Control lamp L = 600
69= 2.10	072026	LAMP HOLDER
70= 2.11	073103	LAMP
71= 2.12	074091	Display electronic card
72= 2.13	039068	Programmer electronic card insulator
73= 2.17	1031589	Button
74= 2.18	094866	Electronic programmer bracket
75= 2.19a	066068	Cut-off thermostat 130 degree

76= 2.19b	066080	Cut-off thermostat 55 degree
77= 2.27	051079	Terminal Block
78= 2.28	1132165	WIRING
79= 2.29	054120	Cord 3x1.5
80= 2.34	050063	POTENTIOMETER
81= 2.35	103619	Door lock
82= 2.36	094398	Door lock support
83= 2.37	107054	PROBE
84= 2.38	103829	CABLE
85= 2.39	1031009	HEATING ELEMENT
86= 2.40	071060	Programmer electronic peg