
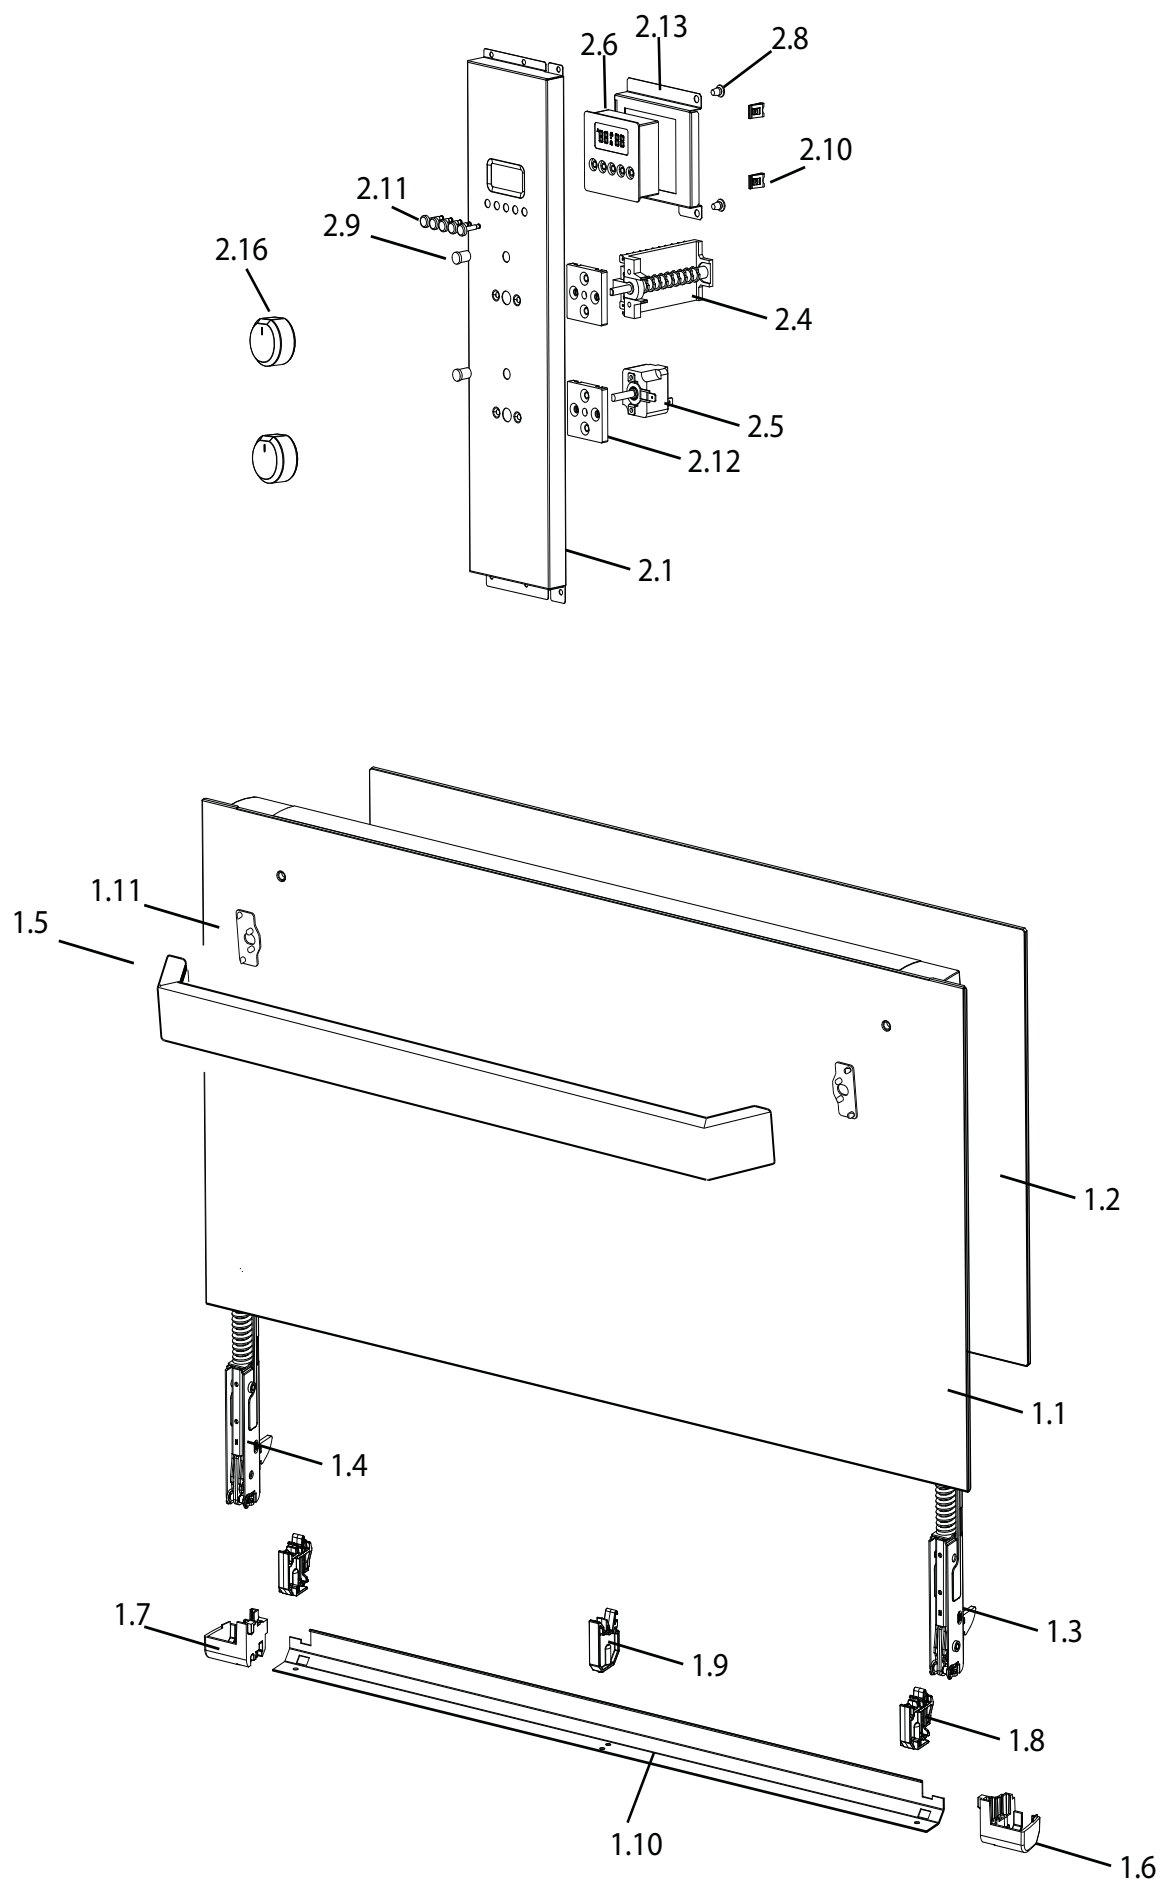


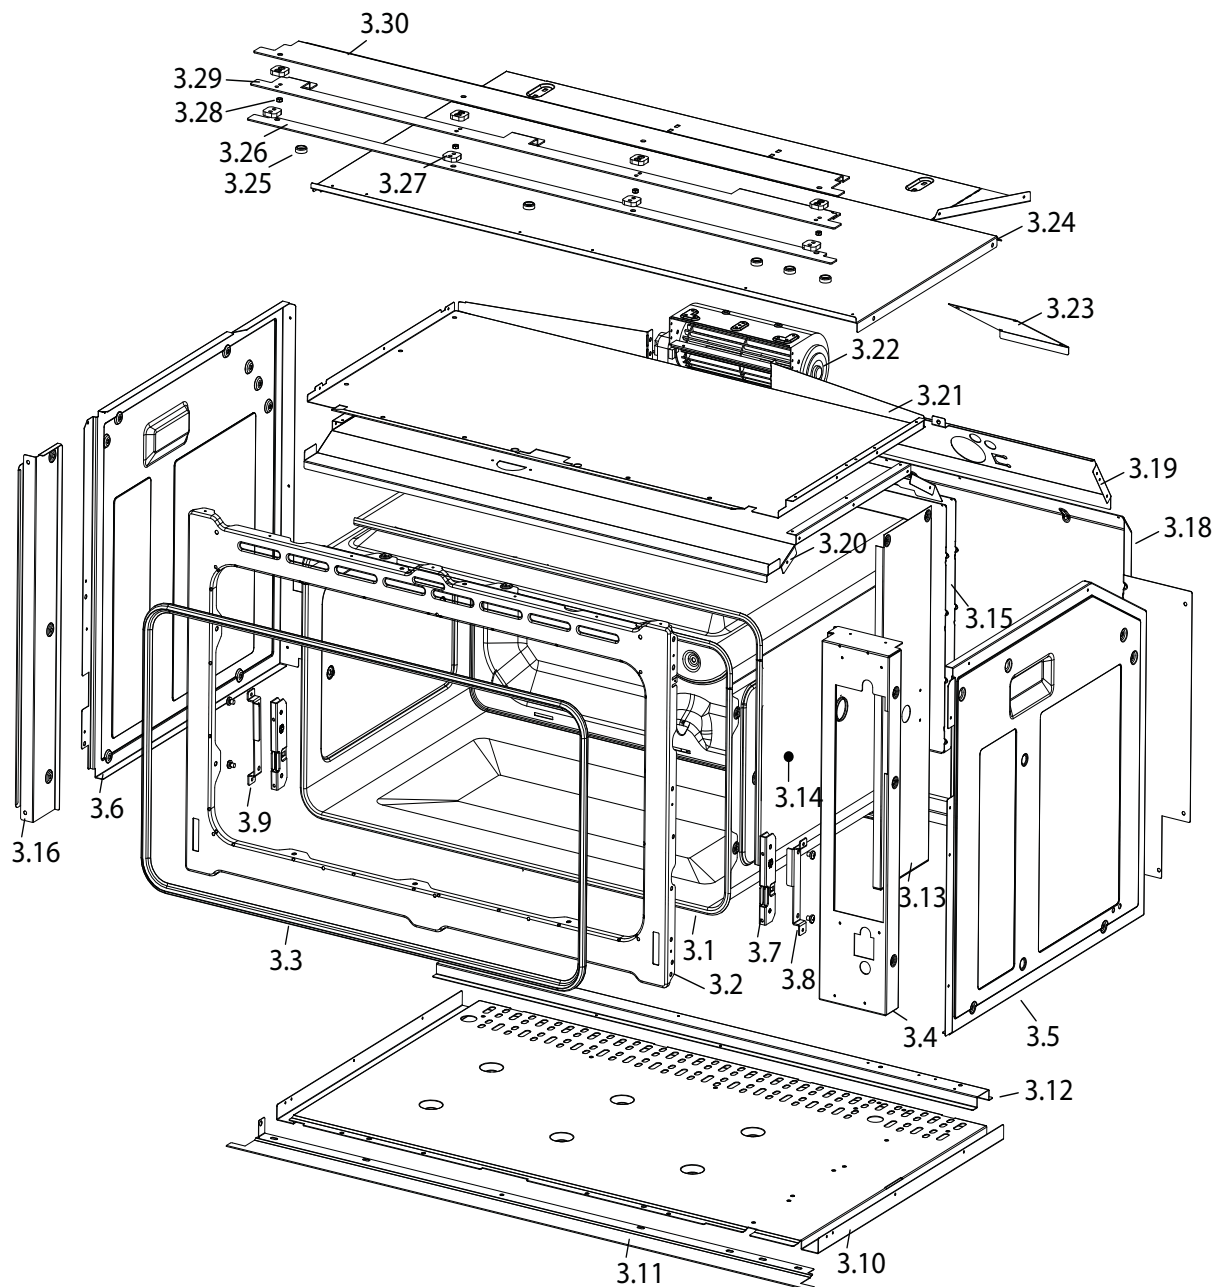



**WARNING, VERY IMPORTANT:**


The oven is supplied with **no.6 rubber spacers fixed** at the bottom

DO NOT install the oven without these spacers correctly in place.

If one or more rubber spacers are missing, please use the ones contained in this kit and fix them to the bottom of the oven as indicated in this figure.

Should you require assistance please contact our Customer Service Centre for your nearest Authorised Delonghi Service Agent.

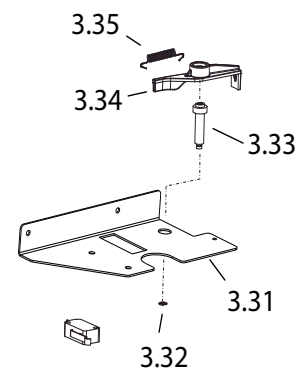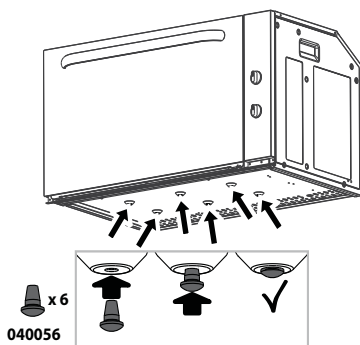

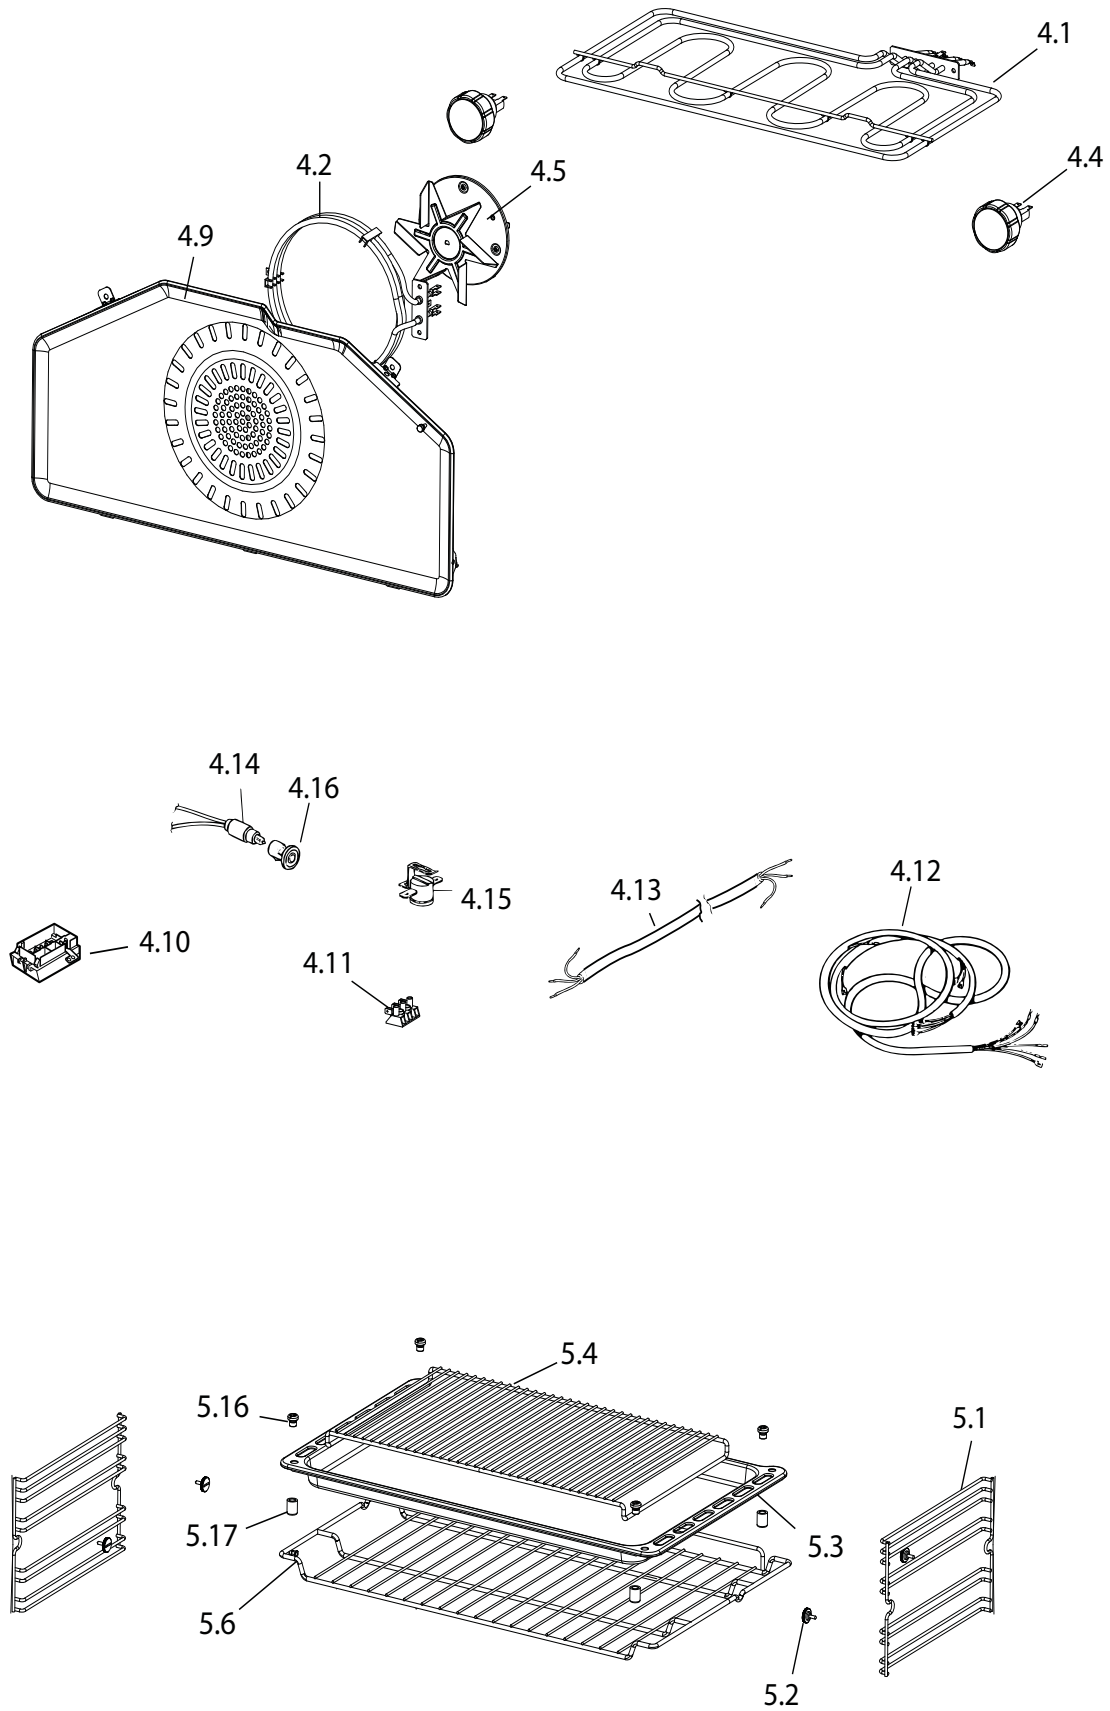

Position	Code	description
1= 1.1	0329E075	OVEN DOOR GLASS
2= 1.2	0312813	INNER DOOR GLASS
3= 1.3	063163	HINGE MALE LEFT
4= 1.4	063163	HINGE MALE LEFT
5= 1.5	037355061	OVEN DOOR HANDLE
6= 1.6	069115	CORNER DOOR LOWER RH RIGHT
7= 1.7	069116	CORNER DOOR LOWER LH LEFT
8= 1.8	069097	Retainer door glass
9= 1.9	069098	Support door glass
10= 1.10	51BF904A	LOWER BAR
11= 1.11	1031685	SPACER
12= 2.1	35CF901LDA	CONTROL PANEL
13= 2.4	050096	SWITCH
14= 2.5	066078	THERMOSTAT
15= 2.6	074076	PROGRAMMER
16= 2.8	040056	Rubber
17= 2.9	073090	Control lamp cover (Blue)
18= 2.10	213007	CLIP
19= 2.11	1031589	Button
20= 2.12	1031532	SPACER
21= 2.13	094706	PROGRAMMER SUPPORT
22= 2.16	218000E572	KNOB
23= 3.1	450F91EM42	Oven frame
24= 3.2	45BF9003G	BODY FRONT PANEL
25= 3.3	053179	SEAL
26= 3.4	35M9E002A	INTERIOR CONTROL PANEL
27= 3.5	411F915	RIGHT SIDE PANEL
28= 3.6	411F905	LEFT SIDE PANEL
29= 3.7	063130	Door hinge (female)
30= 3.8	094917DX	RIGHT BRACKET
31= 3.9	094917SX	LEFT BRACKET
32= 3.10	411F901	LOWER SHELTER
33= 3.11	08333100A	LOWER TRIM
34= 3.12	51BF907	SUPPORT BAR
35= 3.13	51BF909	MOTOR SUPPORT
36= 3.14	030219	Oven insulation
37= 3.15	030264	REAR INSULATION

AU, NZ DE904PSC

38= 3.16	51BF906A	FRONT TRIM
39= 3.18	411F913	REAR SHELTER
40= 3.19	51BF910	REAR SUPPORT
41= 3.20	421F905Z	LOWER SHELTER
42= 3.21	421F909Z	PANEL VENTING MIDDLE
43= 3.22	079054	TANGENTIAL FAN
44= 3.23	51BF915	REAR BRACKET
45= 3.24	411F914	UPPER SHELTER
46= 3.25	040041001	PLUG
47= 3.26	083334061	LOWER TRIM
48= 3.27	1031234	SPACER
49= 3.28	214005	NUT
50= 3.29	083333061	MIDDLE TRIM
51= 3.30	083332061S	TOP TRIM
52= 3.31	094864	LOCK DOOR BRACKET
53= 3.32	003040	STARLOCK WASHER
54= 3.33	085118	PIN PIVOT LOCK
55= 3.34	1031277	TRIGGER DOOR SENSOR
56= 3.35	035113	SPRING
57= 4.1	062147004	TOP+GRILL ELEMENT
58= 4.2	062097004	Fan element
59= 4.4	072026	LAMP HOLDER
60= 4.5	079049	Fan motor 230 V
61= 4.9	47AF902G	FAN DIFFUSER
62= 4.10	051079	Terminal Block
63= 4.11	051072	TERMINAL BLOCK
64= 4.12	1132510	WIRING
65= 4.13	054041	CORD
66= 4.14	073091	Control lamp L = 230
67= 4.15a	066068	Cut-off thermostat 130 degree
68= 4.15b	066145	Cut-off thermostat 80 degrees
69= 4.16	073090	Control lamp cover (Blue)
70= 5.1	217659	Shelf support
71= 5.2	001142	Shelf support screw
72= 5.3	48BF902G	Oven tray
73= 5.4	217651	Grill pan grid
74= 5.6	217650	OVEN SHELF
75= 5.16	085109	Rotisserie screw

76= 5.17

085110

Rotisserie bush
