




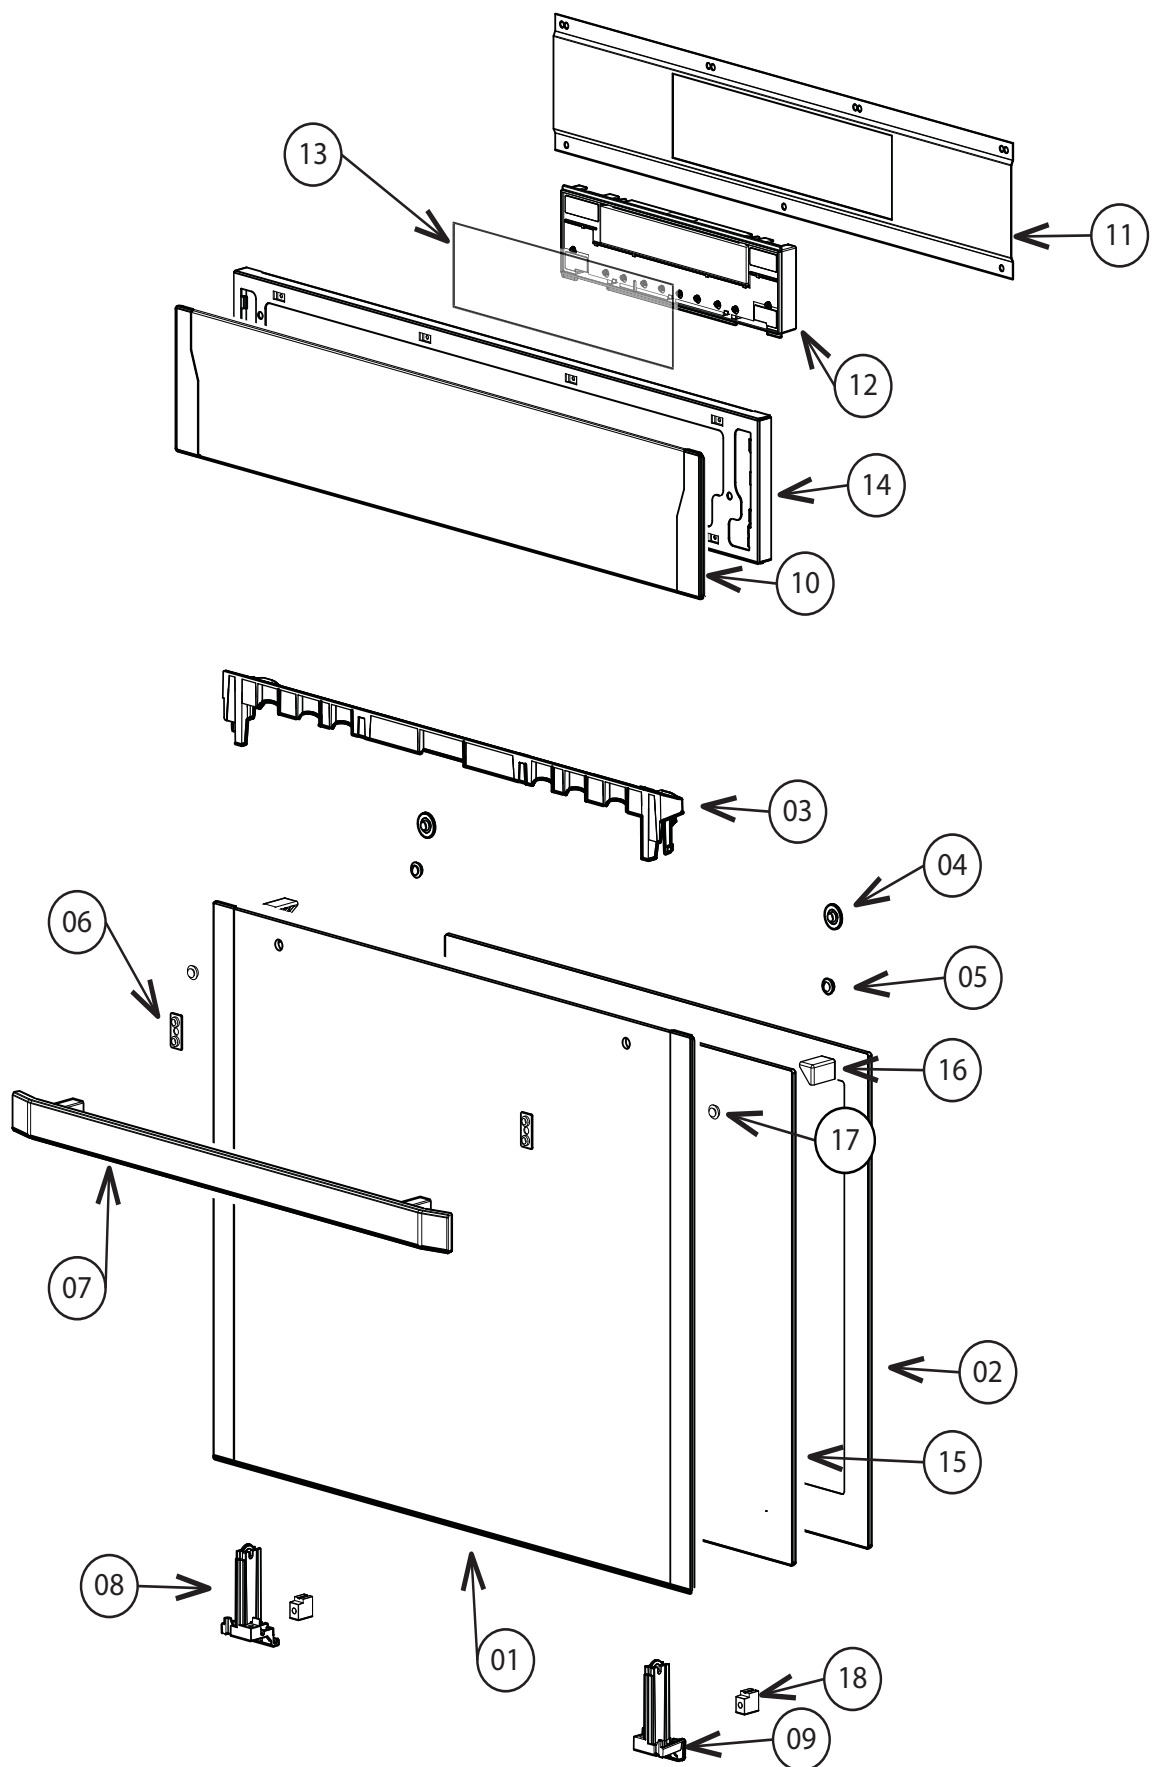

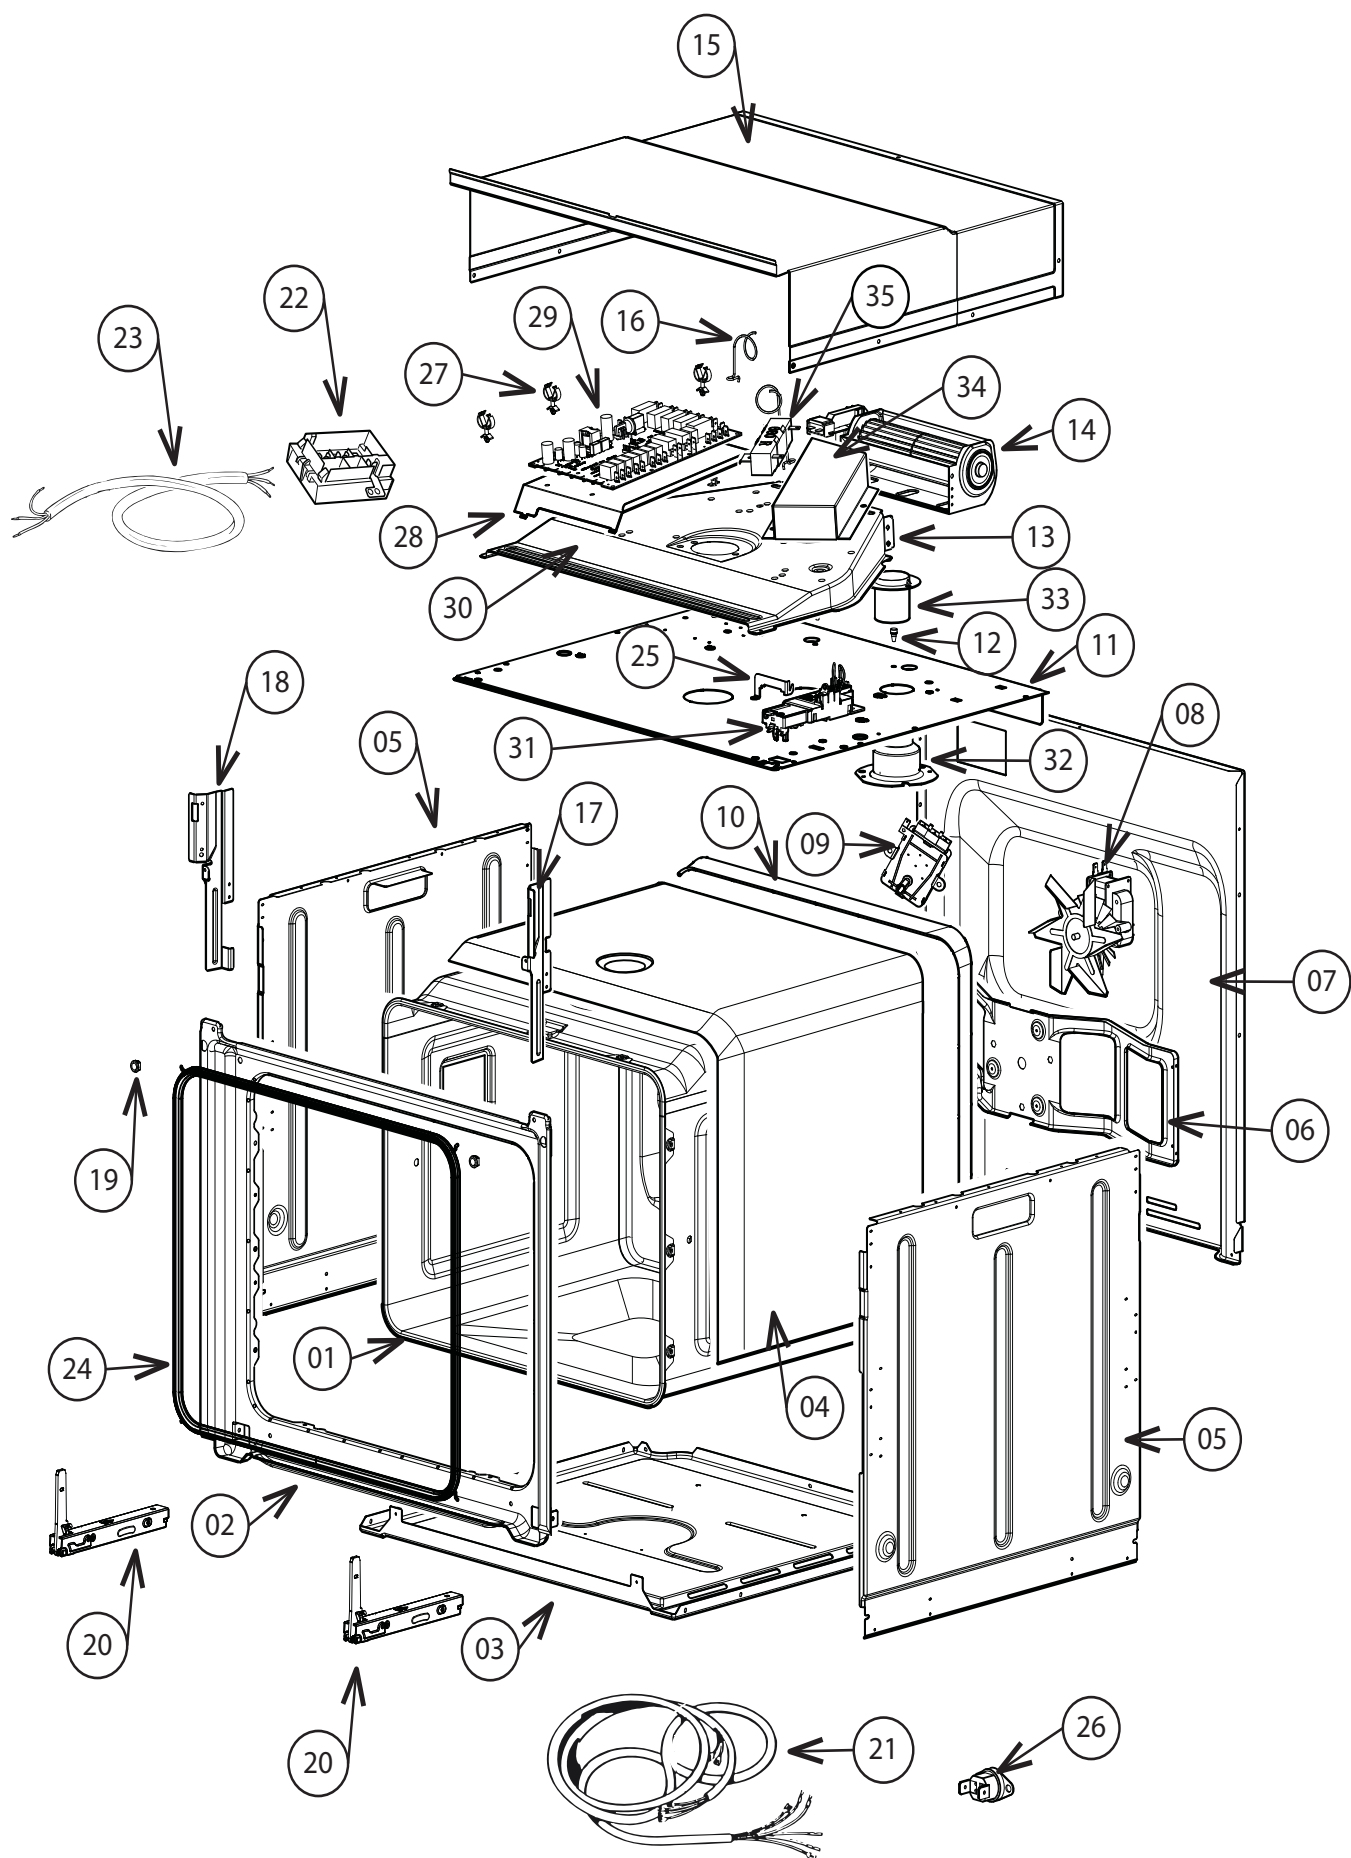

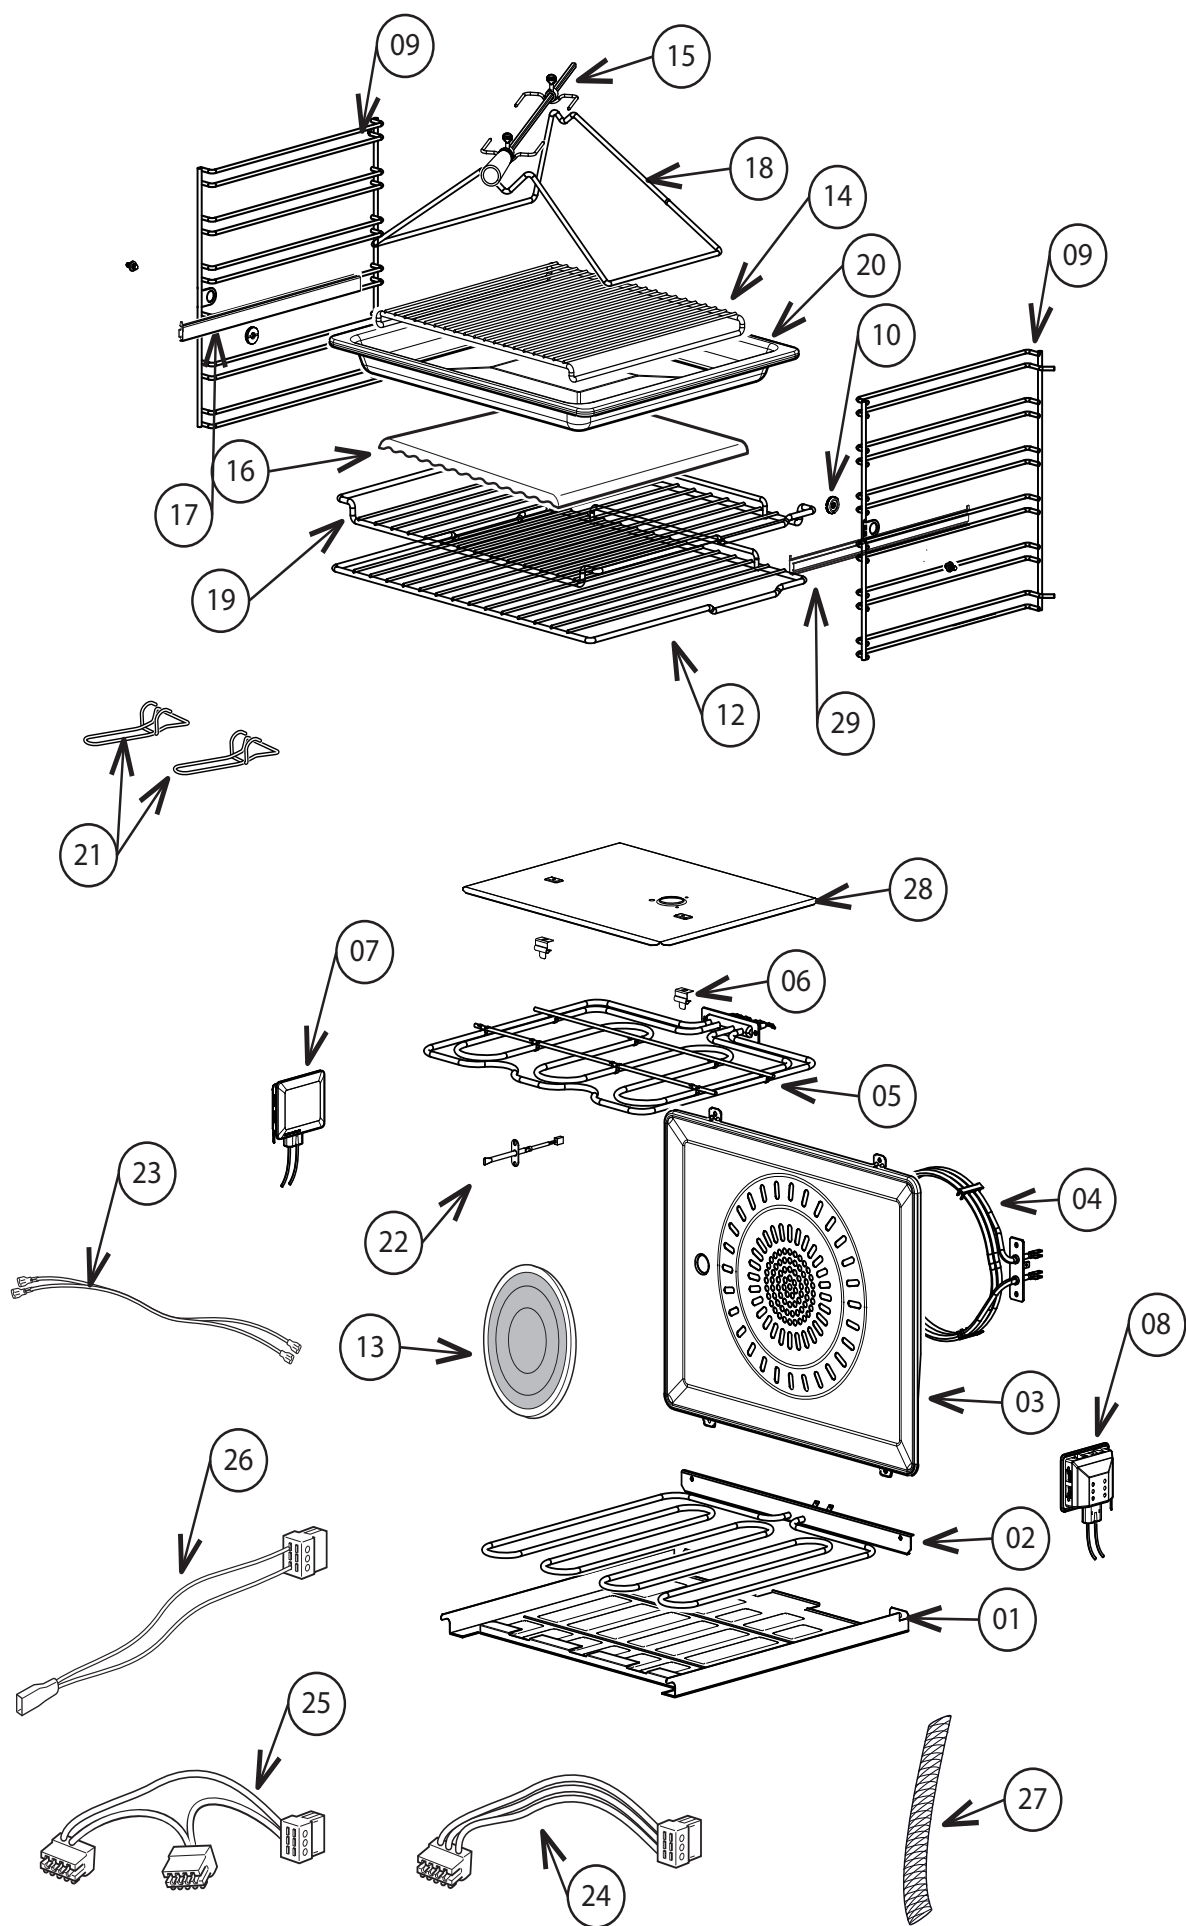

Position	Code	description
01_01	032C6005	GLASS FACIA PANEL ASSY
01_02	0313291	INNER DOOR GLASS
01_03	51BC601	TOP TRIM
01_04	001265	Door handle screw
01_05	085108	Plaque
01_06	1031697080	Handle spacer
01_07	0373510DL	OVEN DOOR HANDLE
01_08	069114	CORNER DOOR LOW ER LH
01_09	069113	CORNER DOOR LOW ER RH
01_10	032C6004	CONTROL PANEL ASSY
01_11	35MC6003	SWITCH SUPPORT
01_12	074133	PROGRAMMER ELECTRONIC CARD
01_13	1031764	PROGRAMMER MASK
01_14	35MC6002A	INTERIOR CONTROL PANEL
01_15	0313306	INNER GLASS
01_16	040098	RUBBER
01_17	040094	RUBBER
01_18	040095	RUBBER
02_01	450CP1EM41	OVEN CUBE
02_02	45BC6002G	BODY FRONT PANEL
02_03	411C604	BOTTOM PANEL
02_04	030273	OVEN INSULATION
02_05	411C605	SIDE PANEL
02_06	51BC604	MOTORS SUPPORT
02_07	411C603	REAR PANEL
02_08	079023	FAN MOTOR
02_09	079067	ROTISSERIE MOTOR
02_10	030272	REAR INSULATION
02_11	421CP02Z	AIR CONVEYOR SUPPORT
02_12	040076	BUFFER
02_13	411CP01	LOWER AIR CONVEYOR
02_14	079069	TANGENTIAL FAN
02_15	411C602	UPPER SHELTER
02_16	035118	WIRE STANDOFF COIL
02_17	094853	BRACKET FRONT RH
02_18	094854	BRACKET FRONT LH
02_19	040094	RUBBER

02_20	063162	OVEN DOOR HINGE
02_21	1132415	WIRING
02_22	051072	TERMINAL BLOCK
02_23	054041	CORD
02_24	053186	SEAL
02_25	094863	DOOR SWITCH BRACKET
02_26	066204	CUT-OFF THERMOSTAT T.110
02_27	531533	TUBE RETAINER
02_28	094862	POWER BOARD SUPPORT
02_29	074132	POWER BOARD
02_30	071064	PIN
02_31	077092	DOOR SWITCH
02_32	1031759	FUMES CATALYST
02_33	1031761	TUBE
02_34	094867	BRACKET
02_35	1031760	RESISTOR
03_00	073103	LAMP
03_01	421C602Z	LOWER ELEMENT SUPPORT
03_02	062162004	BOTTOM ELEMENT
03_03	47AC601G	FAN DIFFUSER
03_04	062135004	Fan element 2.5 kw
03_05	062163004	TOP & GRILL ELEMENT
03_06	213034	CLIP
03_07	072028	LAMP HOLDER LH
03_08	072027	LAMP HOLDER RH
03_09	217757	SHELF SUPPORT
03_10	1031222	NUT RUNNER
03_11	211039	INSERT
03_12	217760	WIRE SHELF FLAT
03_13	103085	FILTER
03_14	217645	GRILL PAN GRID
03_15	080039	ROTISSERIE SPEAR
03_16	103406	Kit pizza stone
03_17	1031766	LH TELESCOPIC RUNNER
03_18	217758	ROTISSERIE SUPPORT
03_19	217759	WIRE SHELF
03_20	48BC601G	OVEN TRAY
03_21	037144	Grill pan grid handle

03_22	107073	PROBE
03_23	1132426	ROTISSERIE CONNECTION
03_24	1132398	PROGRAMMER CARD TO POWER BOARD CONNECTION
03_25	1132412	POWER BOARD TO DOOR SWITCH CONNECTION
03_26	1132400	POWER BOARD TO PROBE CONNECTION
03_27	039081	WIRE INSULATION
03_28	421CP01Z	GRILL REFLECTOR
03_29	1031765	LH TELESCOPIC RUNNER