


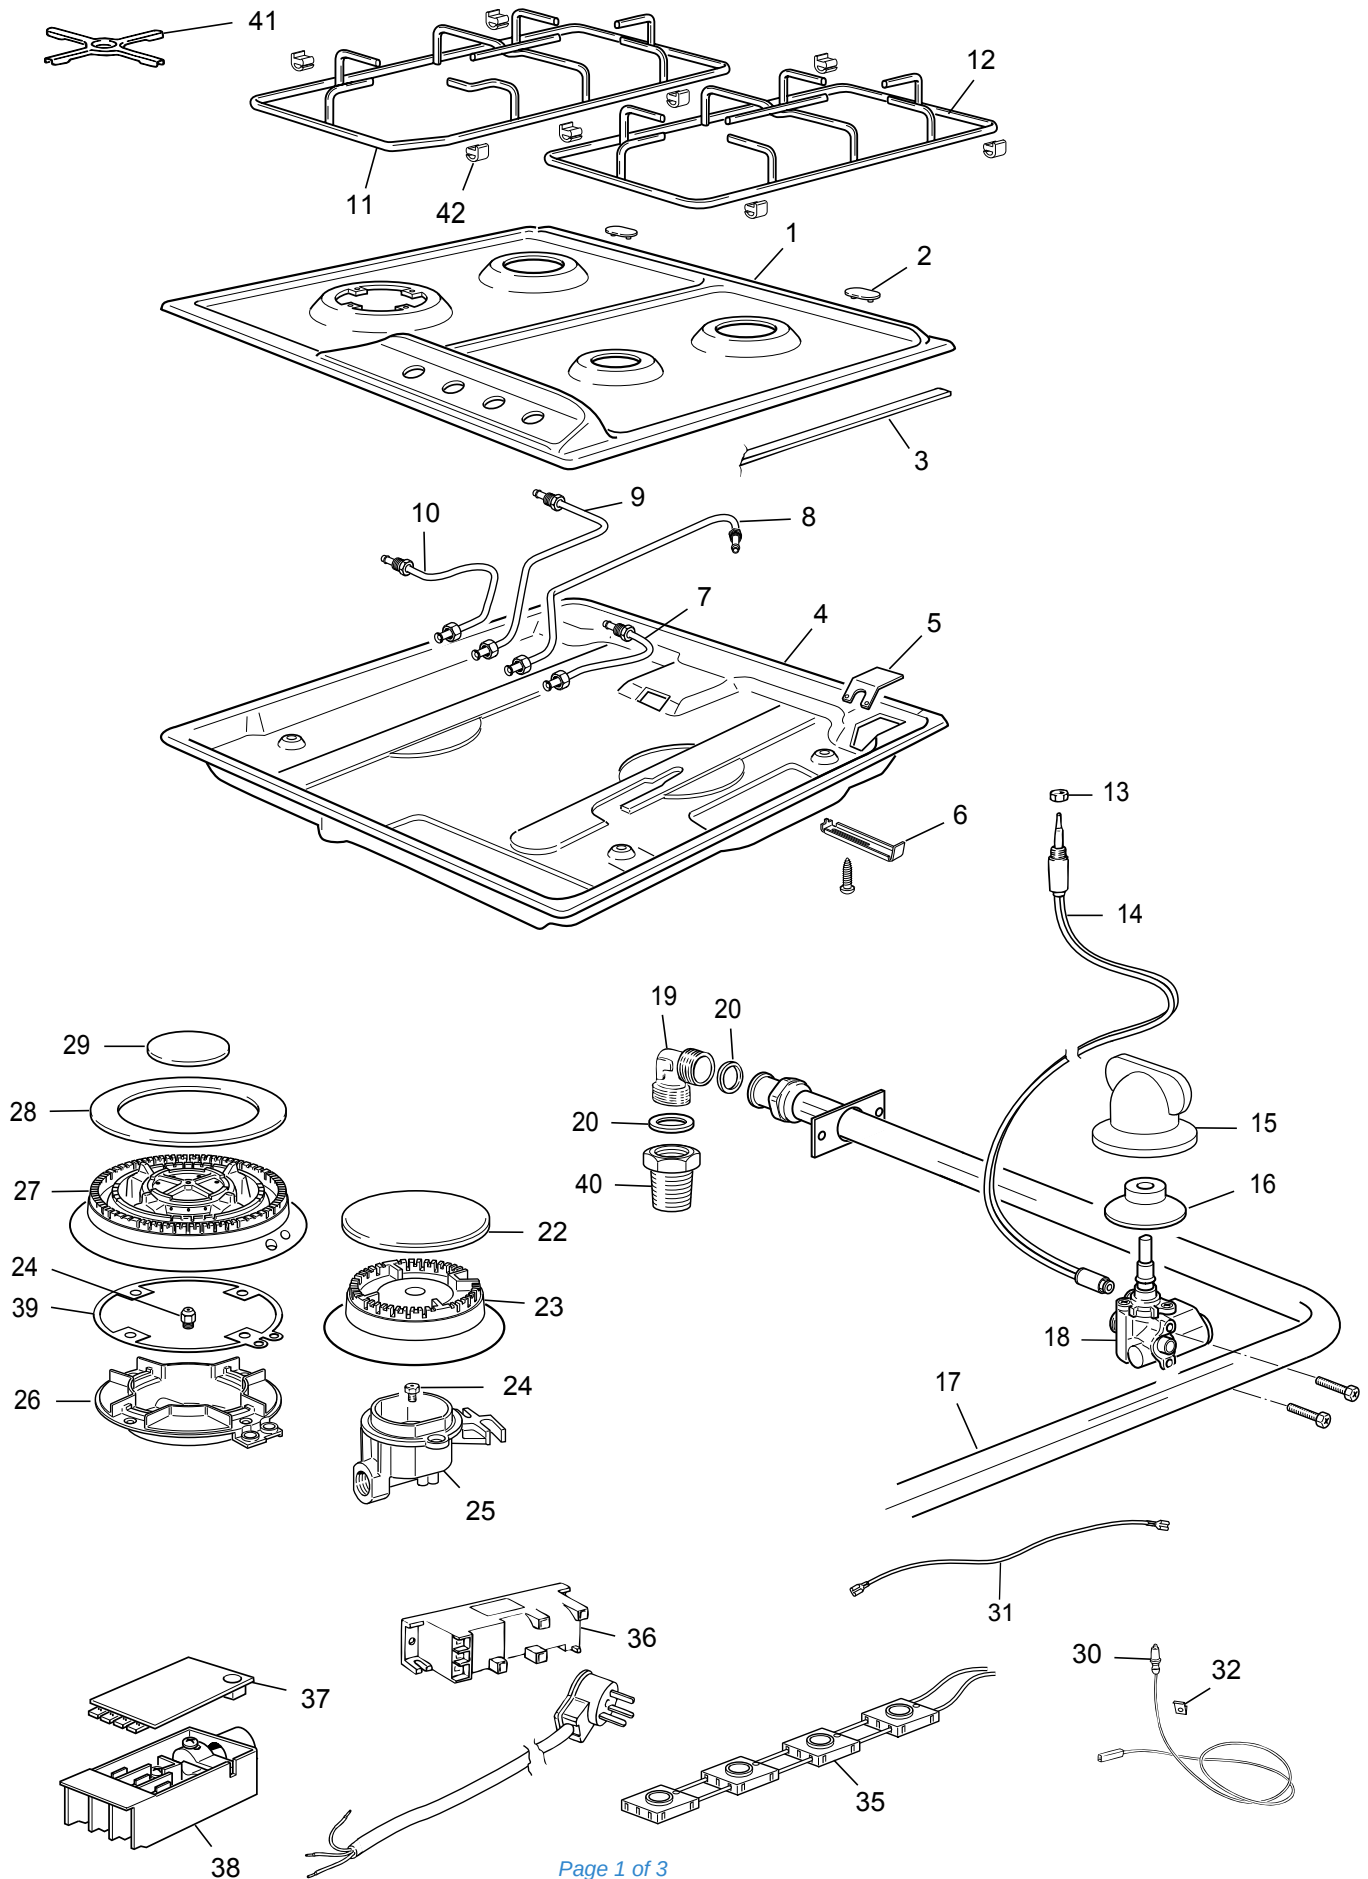

Position	Code	description
01	336D409VD5	WORK TOP
02	103481002	PLUG
03	053037	SEAL
04	4116D02	Burner casing
05	094337	Inlet pipe fixing bracket
06	094338	Fixing bracket
07	029842	A burner pipe
08	029841	Right SR burner pipe
09	029843	Left SR burner pipe
10	029848	TR burner pipe
11	217540005	GRID LEFT
12	217541005	GRID RIGHT
13	214057	NUT
14	107039	Burner thermocouple L=500 mm
14A	107039	Burner thermocouple L=500 mm
14B	107043	Burner thermocouple L=500mm (triple-ring burner)
15	2183382O39	KNOB
16	040057	Rubber joint
17	3426D40G02	4 gas inlet pipe
18	106249	Tap Auxiliary diam 0.27
18A	106252	Tap Semi-rapid diam 0.34
18B	106254	Tap Triple-ring diam 0.65
19	067008	Elbow
20	053024.1	Sealing washer
22	216129005A	Burner-capA
22A	216130005A	Burner-capSR
23	068109003	Burner-head Auxiliary
23A	068110003	Burner-head Semi-rapid
24	101180	Injector (ulpg) diam 0.50 - DU CENTR
24A	101181	INJECTOR d. 0,65
24B	101234	INJECTOR d. 0,72
24C	101235	INJECTOR d. 0,97
24D	101243	INJECTOR d. 1.24
24E	101244	Injector Rapid diam 0.91 - LPG
25	215465	Burner-cupA
25A	215466	Burner-cupSR
26	215469	Burner-cup Triple-ring

27	068115003	Burner-head Triple-ring
28	216133005A	Burner-cap outside TR
29	216132005A	Burner-cap inside TR
30	084028	Spark plug L=250mm (auxiliary burner)
30A	084032	Spark plug L=250mm (triple-ring burner)
30B	084029	Spark plug L=630mm (semirapid &
31	103389	Cable L = 400
32	035094	Igniter spring
35	1031123	Ignition switches
36	082082	Electronic ignition
37	103451	Terminal block cover
38	051054	Terminal block
39	053078	Triple-ring burner-cup gasket
40	067026	Conical adaptor
41	217303	Grate for small pans
42	040026	Top grate buffer