 
 
 
 
 
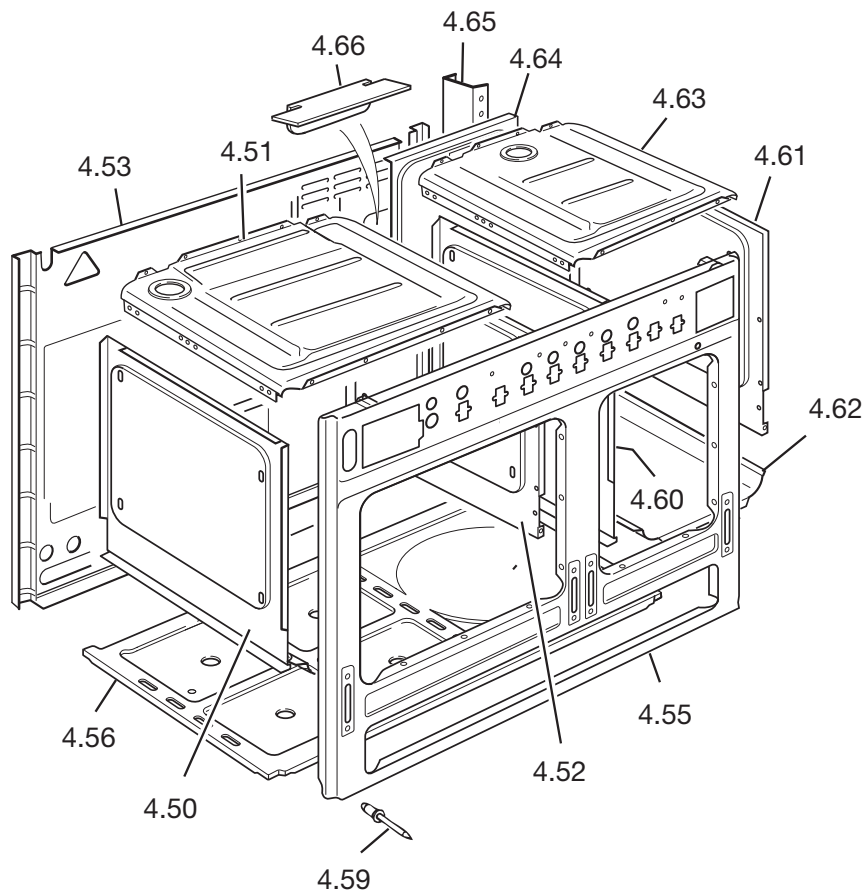 
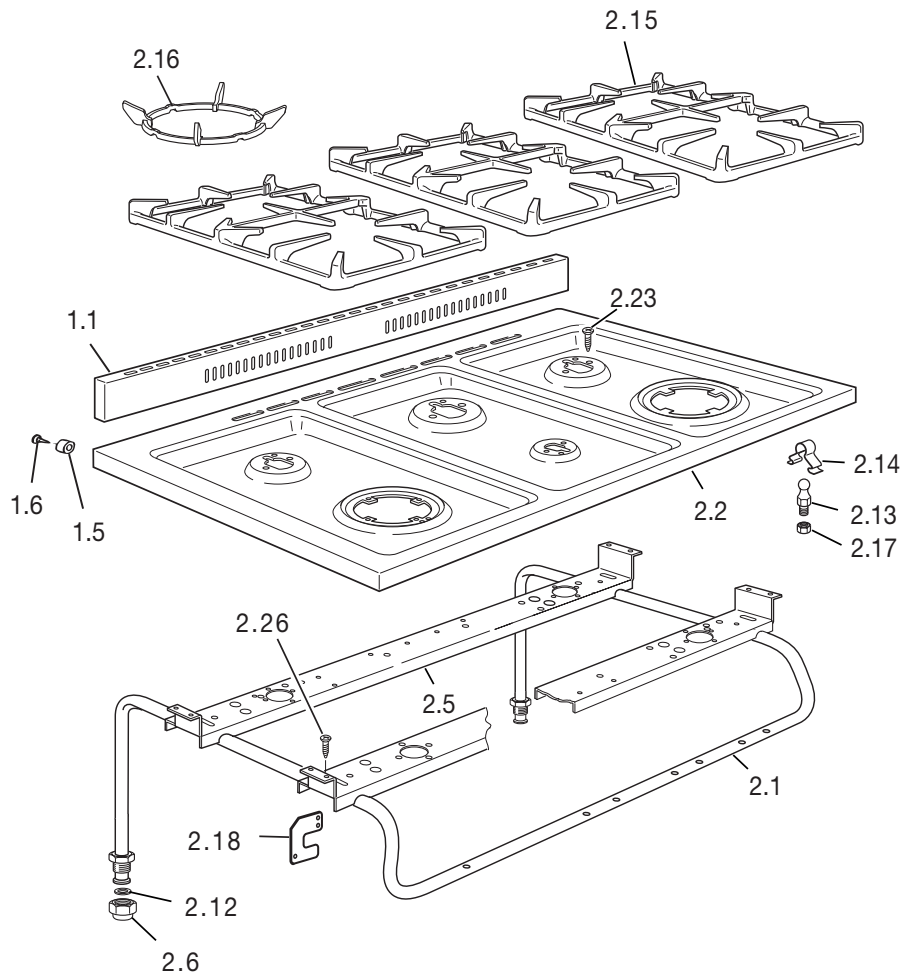 


 
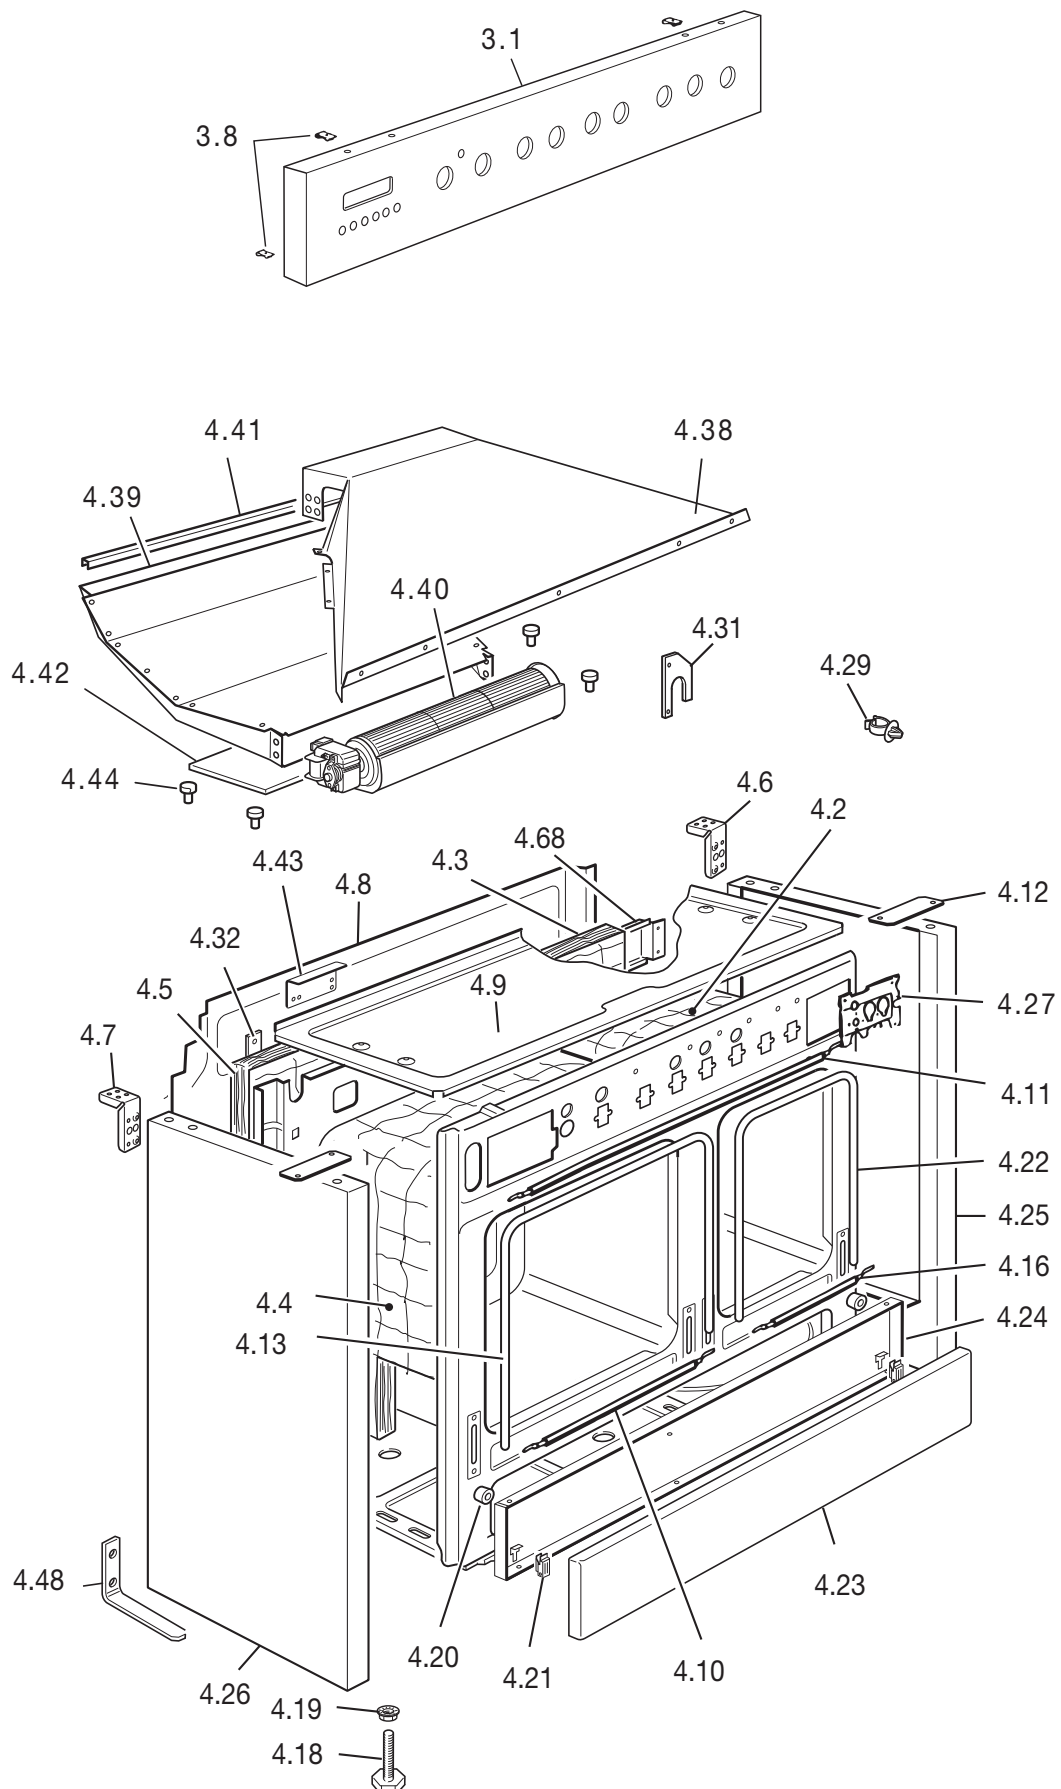 


 
 
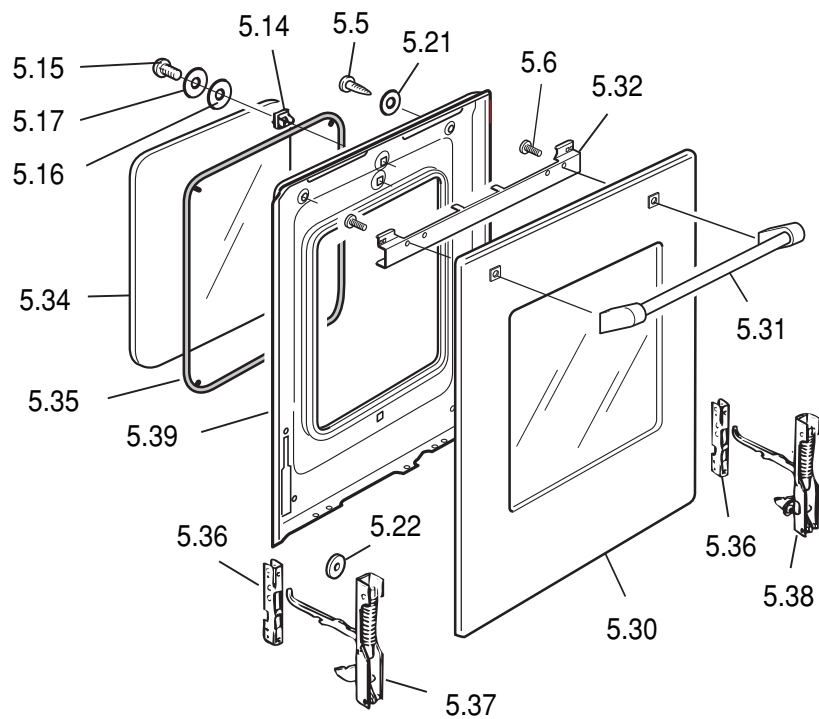 


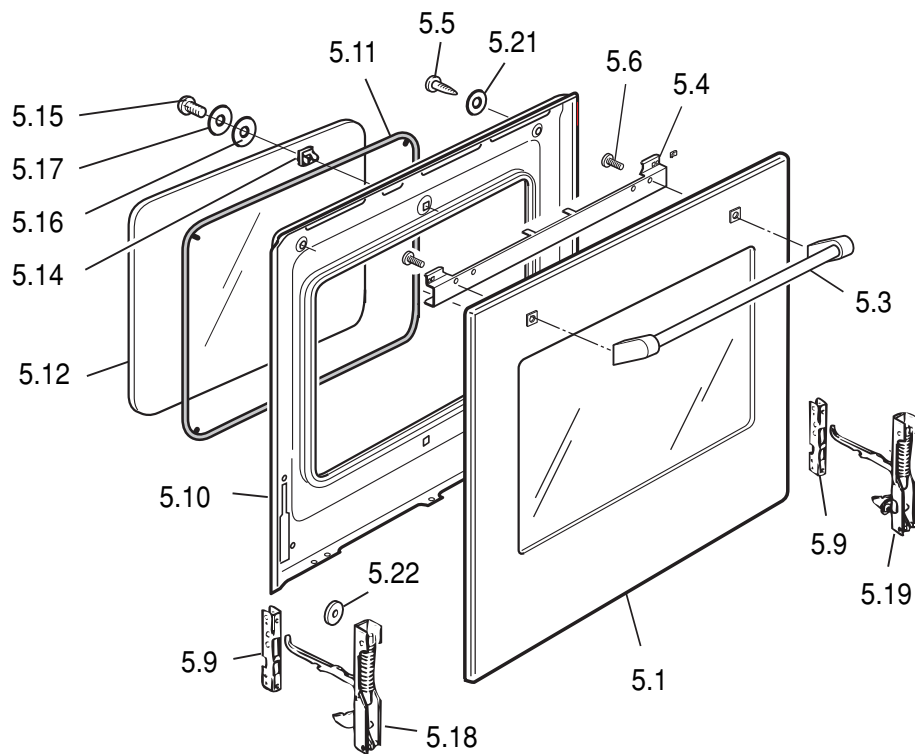

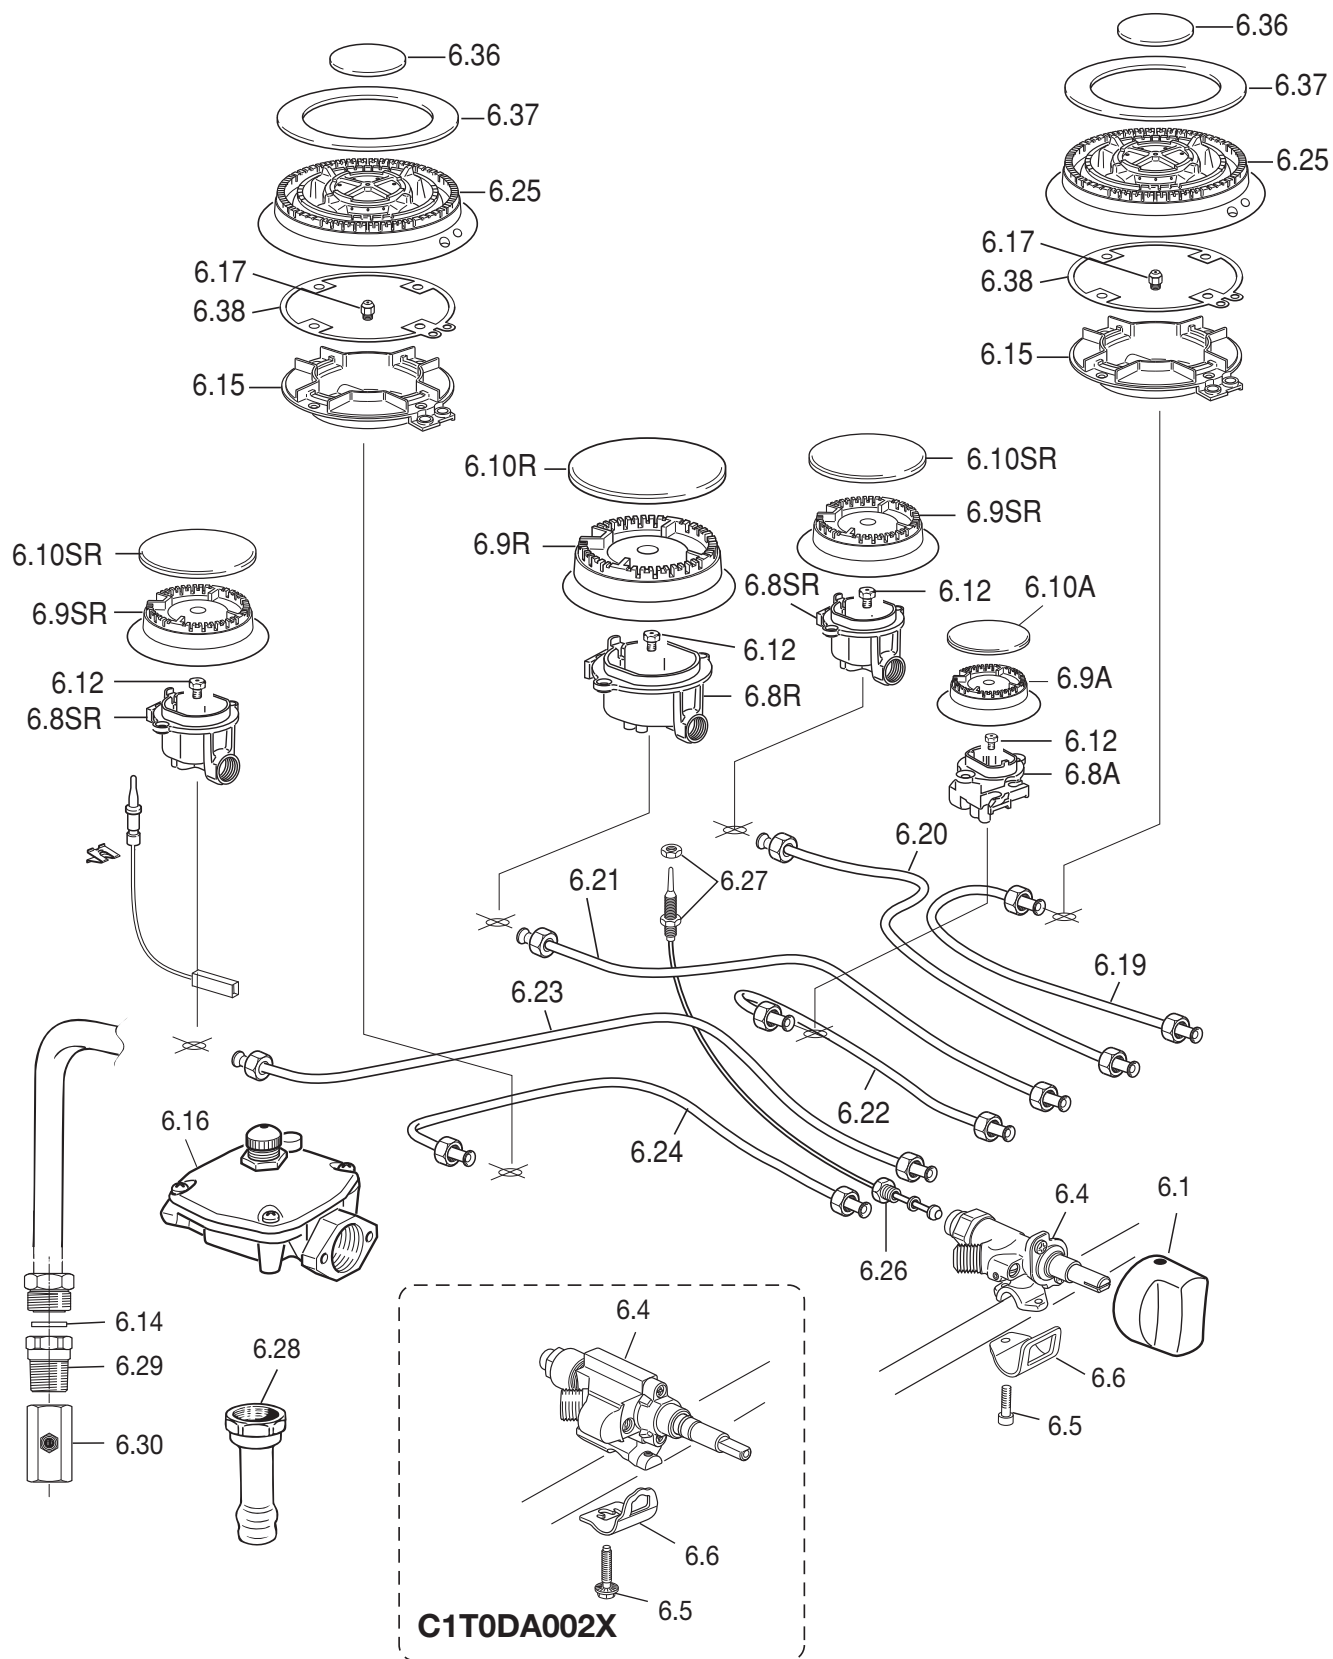

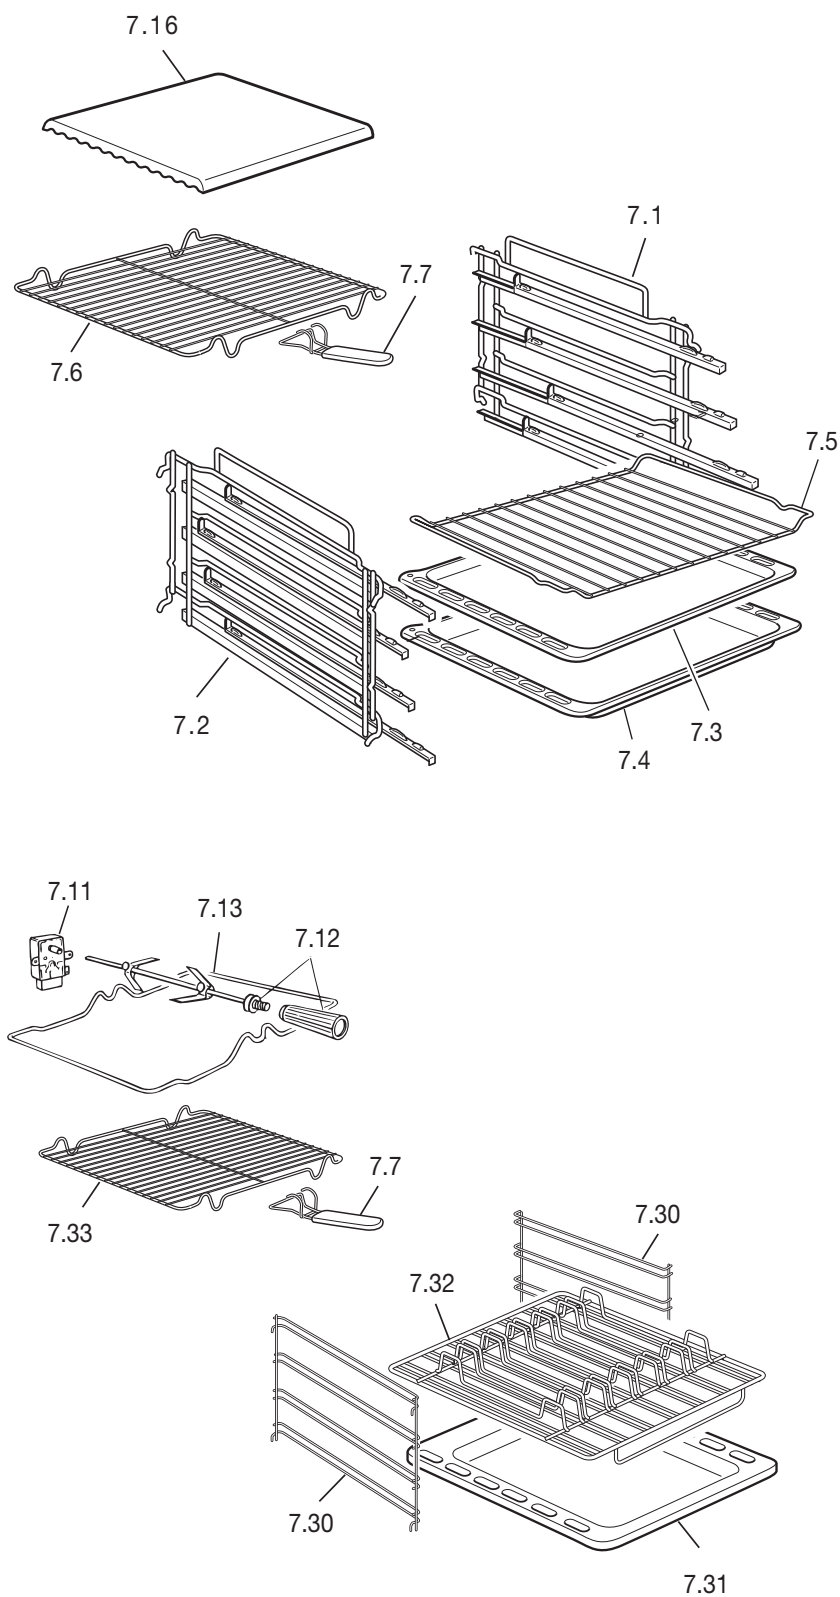

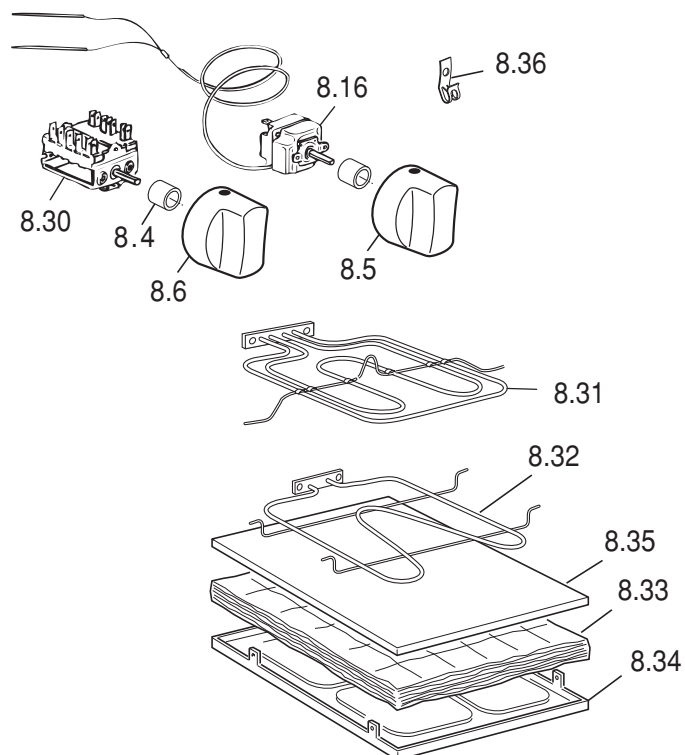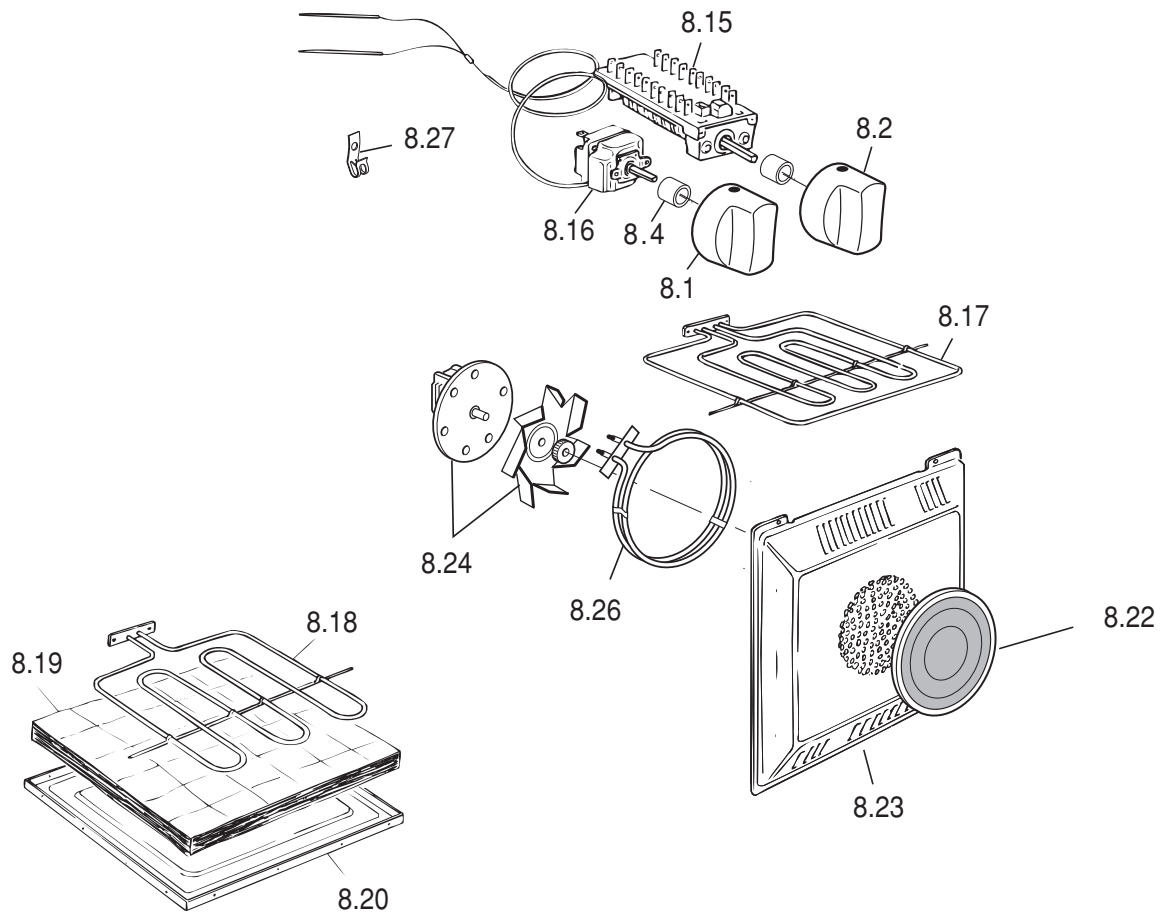

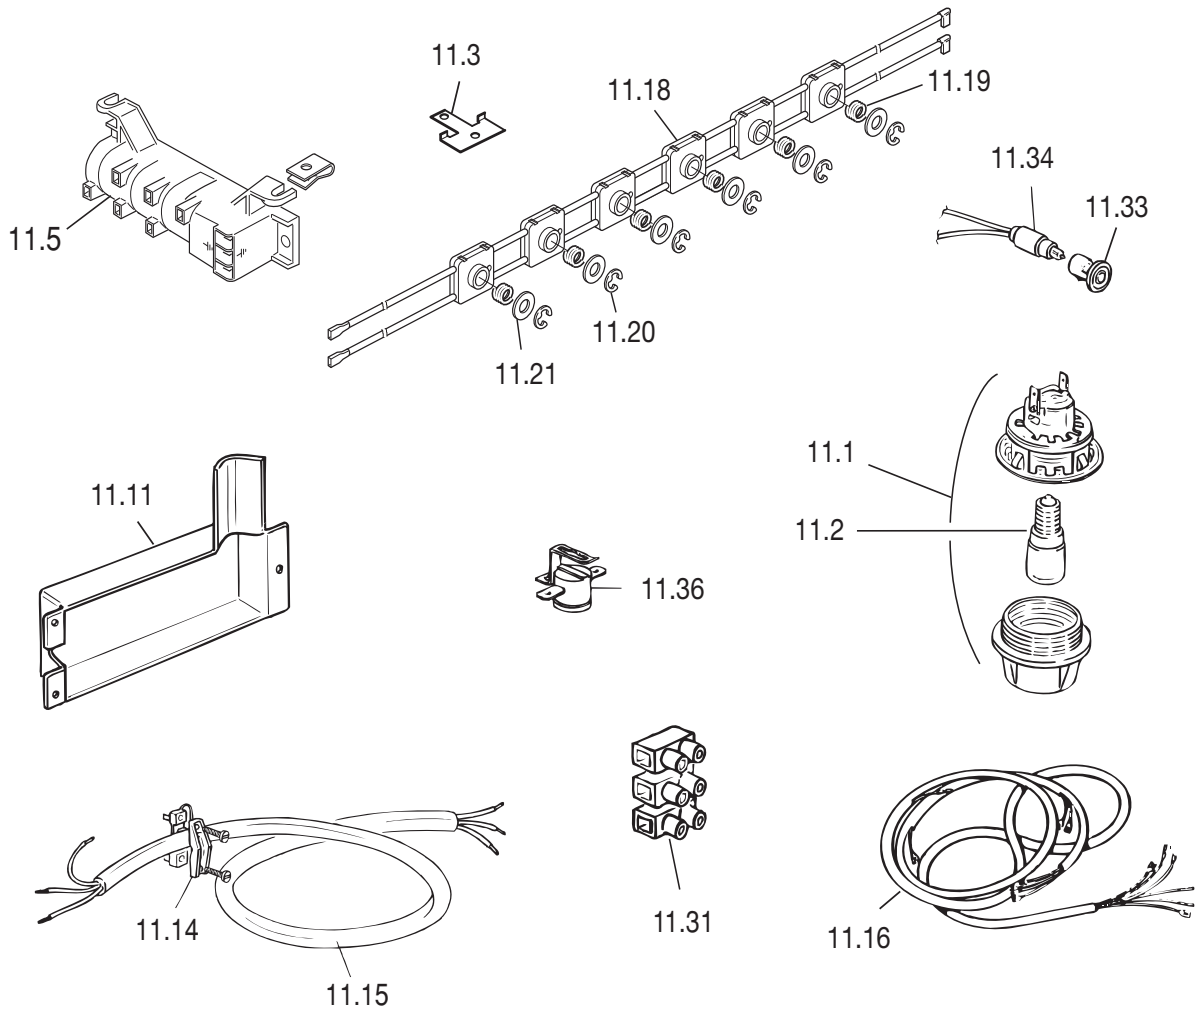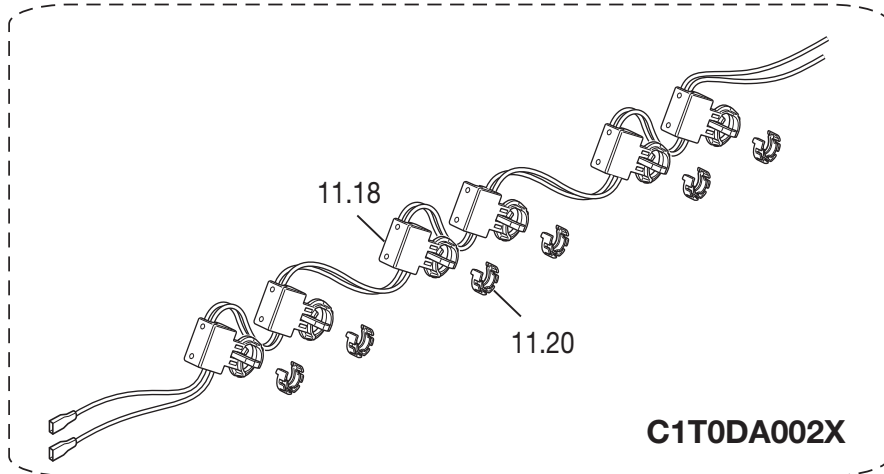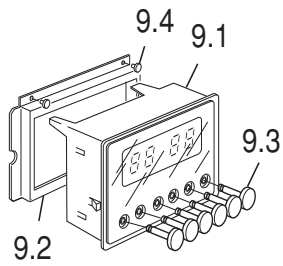

Position	Code	description
1.1	103670063	Rear trim
1.5	040041001	PLUG
1.6	001007	Vis
2.1	3421060001	Manifold
2.12	053024.1	Sealing washer
2.13	103615	PIN
2.14	035100	SPRING
2.15	217547	Pan-support
2.16	217555	Wok grid
2.17	214062	NUT
2.18	094473	Fixing plate
2.23	001008	SCREW
2.26	001167	SCREW
2.5	51B1002	Burners support
2.6	027015	Inlet pipe plug
3.8	213007	CLIP
4.10	053074	Upper seal
4.11	053095	Top seal
4.12	094429	Side panel bracket
4.16	053094	Bottom seal
4.18	103410080	SHIM
4.19	214056	Shim nut
4.2	030127.1	Oven insulation
4.20	040061	BUFFER
4.21	063075	HINGE
4.22	053093	SEAL
4.23	371V9606YS	FRONT PANEL
4.25	3611TD1S	Side panel right
4.26	3611TS1S	Side panel left
4.27	094136	BRACKET
4.3	030128.1	Rear insulation
4.31	094419	BRACKET
4.32	4219604Z	Rear insulation support
4.38	46A9S02Z	Air conveyor
4.39	46A9S01Z	FUNNEL
4.4	030113.1	Oven insulation
4.40	079025	Tangential fan

4.41	053092	Funnel gasket
4.48	094153	Anti tilt bracket
4.5	030098.1	Rear insulation
4.50	45EN6106P	Left oven side panel (Left)
4.51	45EN6101P	Left top oven panel
4.52	45EN6107P	Left oven side panel (Right)
4.53	45H9S001P	BODY REAR PANEL
4.54	47E6102P	Left oven floor
4.55	45B9S001P	Body front panel
4.56	45K96001Z	Lower element cover
4.59	211012	RIVET
4.6	094417DX	Rear hob support right
4.60	45E65104P	Right oven side panel (Left)
4.61	45E65105P	Right oven side panel (Right)
4.62	47E9S001P	Right oven floor
4.65	4219S02Z	Right oven rear spacer channel
4.66	4219S03Z	Right oven lower rear panel spacer
4.68	51B9S03	Rear insulation support
4.7	094417SX	Rear hob support left
4.8	4119S01	REAR PANEL
4.9	4219S01Z	Upper shelter
5.1	032912196	DOOR GLASS
5.11	053084	Bottom oven glass seal
5.12	0311000.1T	Inner glass
5.14	214021	NUT
5.15	001143	SCREW
5.16	003035	WASHER
5.17	103205.1	WASHER
5.18	063059/ZA	Left door hinge (male)
5.19	063058/ZA	Right door hinge (male)
5.21	003030	WASHER
5.22	003041	WASHER
5.3	037221062	Door handle
5.30	0329T2197	DOOR GLASS
5.31	037222062	Door handle
5.32	51B9S04	Fixing bar
5.34	0312159T	Inner glass
5.35	053096	GASKET

5.37	063111	Left door hinge (male)
5.38	063110	Right door hinge (male)
5.39	373F9S01P	Door panel
5.4	51B9102	Fixing bar
5.5	001056	SCREW
5.6	001083	SCREW
5.9	063109	Door hinge (female)
6.1	218P25A344	Burner knob
6.15	215469	Burner-cup Triple-ring
6.16	103347	Gas pressure regulator 1/2
6.20	029646	Inlet pipe - rear right SR
6.21	029645	Inlet pipe - rear central R
6.22	029644	Inlet pipe - front central A
6.23	029643	Inlet pipe - rear left SR
6.24	029642	Inlet pipe - front left TR
6.25	068112003	TR burner head
6.27	214057	NUT
6.28	027013	NG connection
6.29	067026	Conical adaptor
6.30	103468	Test point adaptor
6.36	216132005A	Burner-cap inside TR
6.37	216133005A	Burner-cap outside TR
6.38	053078	Triple-ring burner-cup gasket
6.4A	106236	Tap diam 0.27 A
6.4B	106237	Tap diameter 0.32
6.4C	106238	Tap - diameter 0.42 R
6.4D	106239	Tap diameter 0.65 TR
6.5	001233	Tap fixing screw
6.6	094382	Tap bracket
6.8A	215465	Burner-cupA
6.8R	215467	Burner-cupTR
6.9A	068109003	Burner-head Auxiliary
6.9R	068111003	Burner-head Rapid
7.11	079014	Rotisserie motor
7.13	217539	Rotisserie support
7.16	103406	Kit pizza stone
7.3	48EF601	Pastry plate
7.30	217307	Shelf support

7.31	48B9S001P	Oven tray
7.32	217538	Oven dish rack
7.33	217537	Grill-pan grid
7.4	48B6101P	Oven tray
7.6	217546	Grill-pan grid
7.7	037224.1	GRILL-PAN GRID HANDLE
8.1	218P06A345	Multifunction oven thermostat knob
8.16	066072	Oven thermostat
8.18	062066004	Bottom element 230V
8.19	030083.1	Bottom element insulation
8.2	218P41A345	Multifunction oven switch knob
8.20	4216102Z	Bottom element support
8.22	103085	FILTER
8.23	47AN601P	Fan diffuser
8.26	062057004	Fan element - 230 V
8.27	213023	CLIP
8.30	050030	Oven switch
8.31	062102004	HEATING ELEMENT
8.32	062096004	Bottom element
8.33	030129.1	Bottom element insulation
8.34	4219S04Z	Bottom element support
8.35	4219S05Z	Bottom element protection
8.36	213025	CLIP
8.4	085081	Knob sleeve
8.5	218P79A345	Conventional oven thermostat knob
9.1	074041	Electronic timer
9.2	094363	Electronic timer seal
9.3	103376080	Programmer Button
9.4	040056	Rubber
11.2	073013001	LAMP
11.7	035094	Igniter spring
68SR	215466	Burner-cupSR
69SR	068110003	Burner-head Semi-rapid
118A	084029	Spark plug L=630mm (semirapid &
118B	084033	Igniter TR - L = 500
118C	084035	Igniter TR - L = 900
118D	084036	Igniter L = 900
136A	066073	Cut-off thermostat 150 degrees

136B	066123	Cut-out thermostat 160 degree C
136C	066145	Cut-off thermostat 80 degrees
610A	216129005A	Burner-capA
610R	216131005A	Burner-cap R
610S	216130005A	Burner-capSR
612A	101244	Injector Rapid diam 0.91 - LPG
612E	101182	Injector NATURAL GAS Ø 0.85 - A
617B	101233	Injector ULPG Ø 0.95 - TR
626A	107039	Burner thermocouple L=500 mm
626B	107039	Burner thermocouple L=500 mm
626C	107040	Burner thermocouple - L=600 mm
626D	107043	Burner thermocouple L=500mm (triple-ring burner)
626E	107044	Burner thermocouple L=250 mm - TR
1111	103230.1A	Terminal block protection
1114	052008	Cable clamp - rear cooker
1115	054056	Cord
1116	1131313	WIRING
1118	103633	Ignition switches
1119	035080	Ignition switches spring
1120	003039	RETAINING RING
1121	003038	WASHER
1131	051049	Terminal block 25A-3P
1133	07306202	Control lamp cover - Red
1134	073039.2	Control lamp L 230