



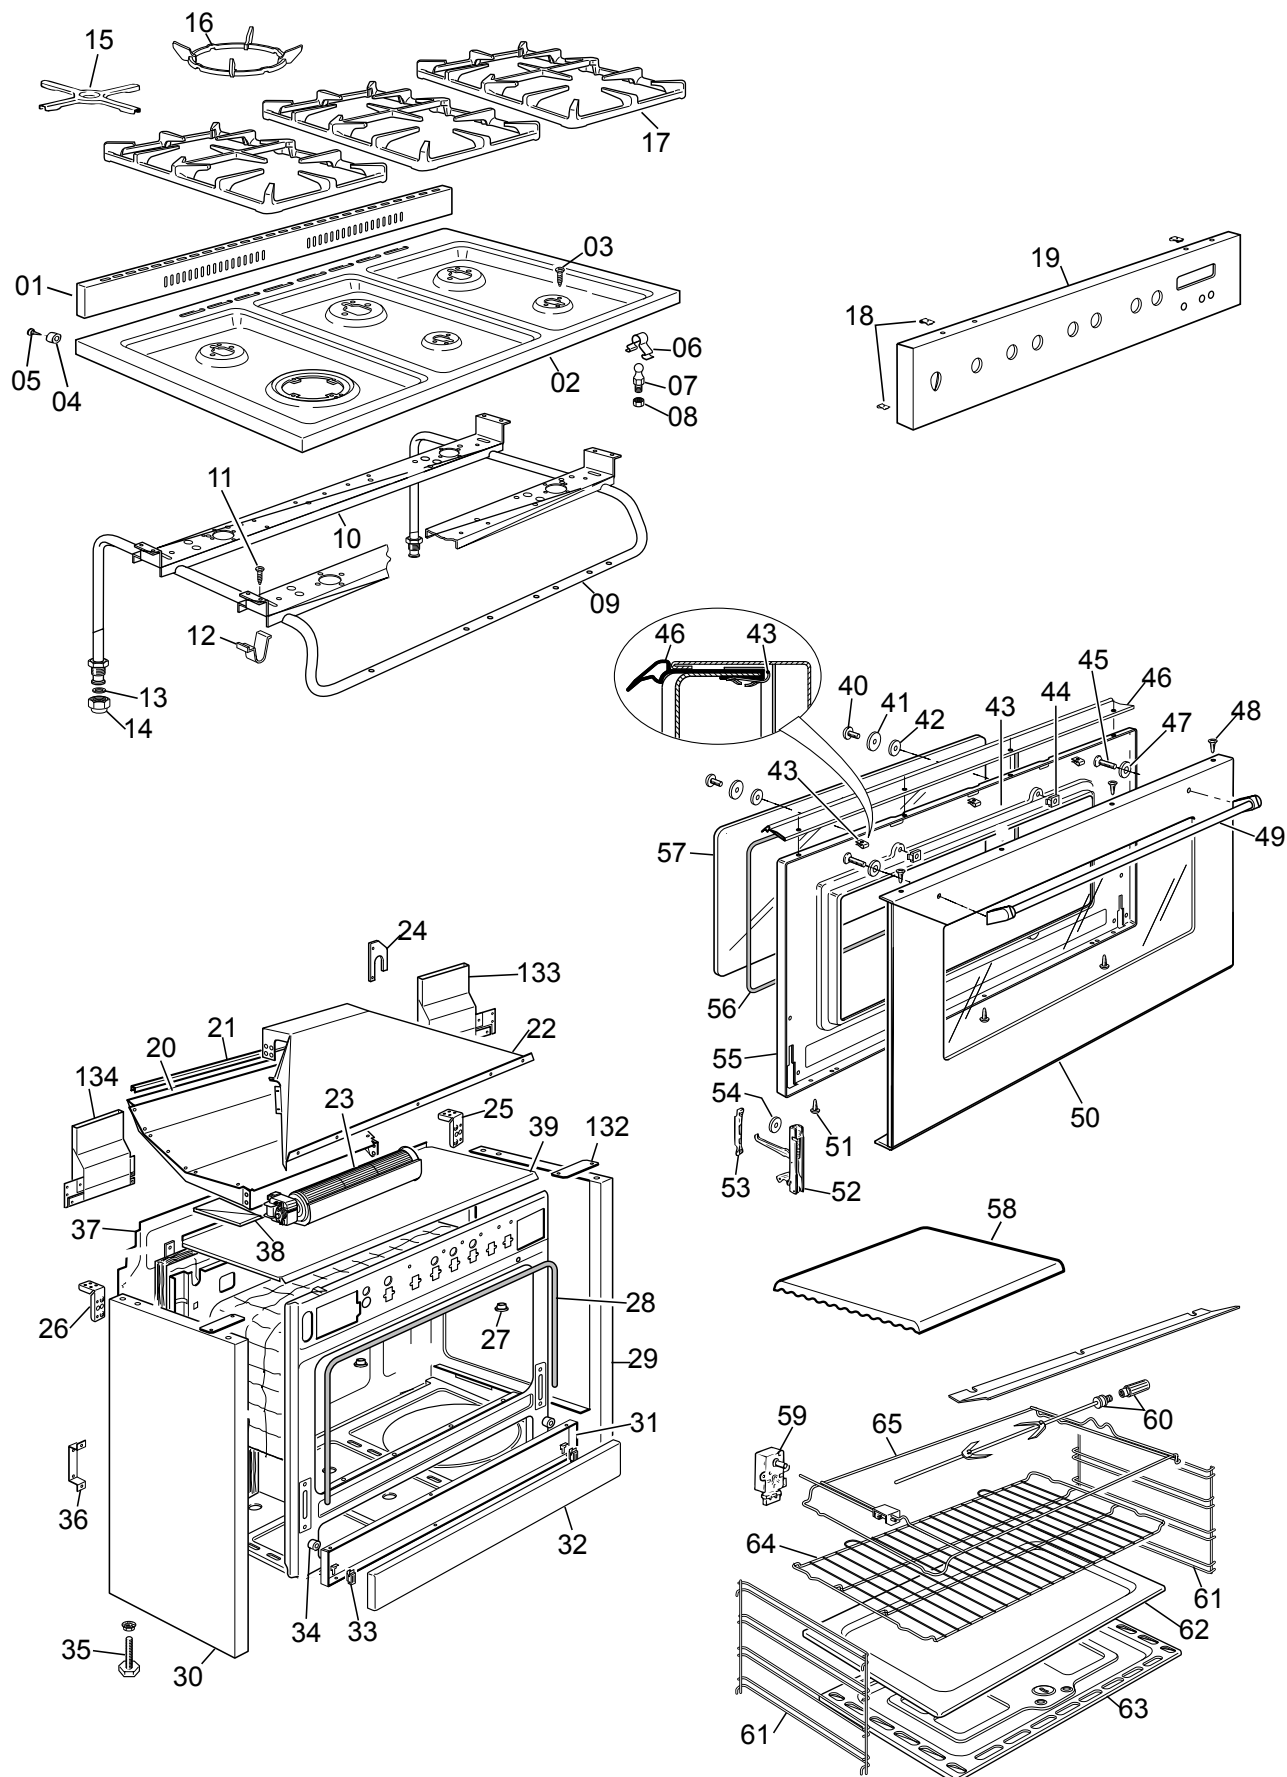

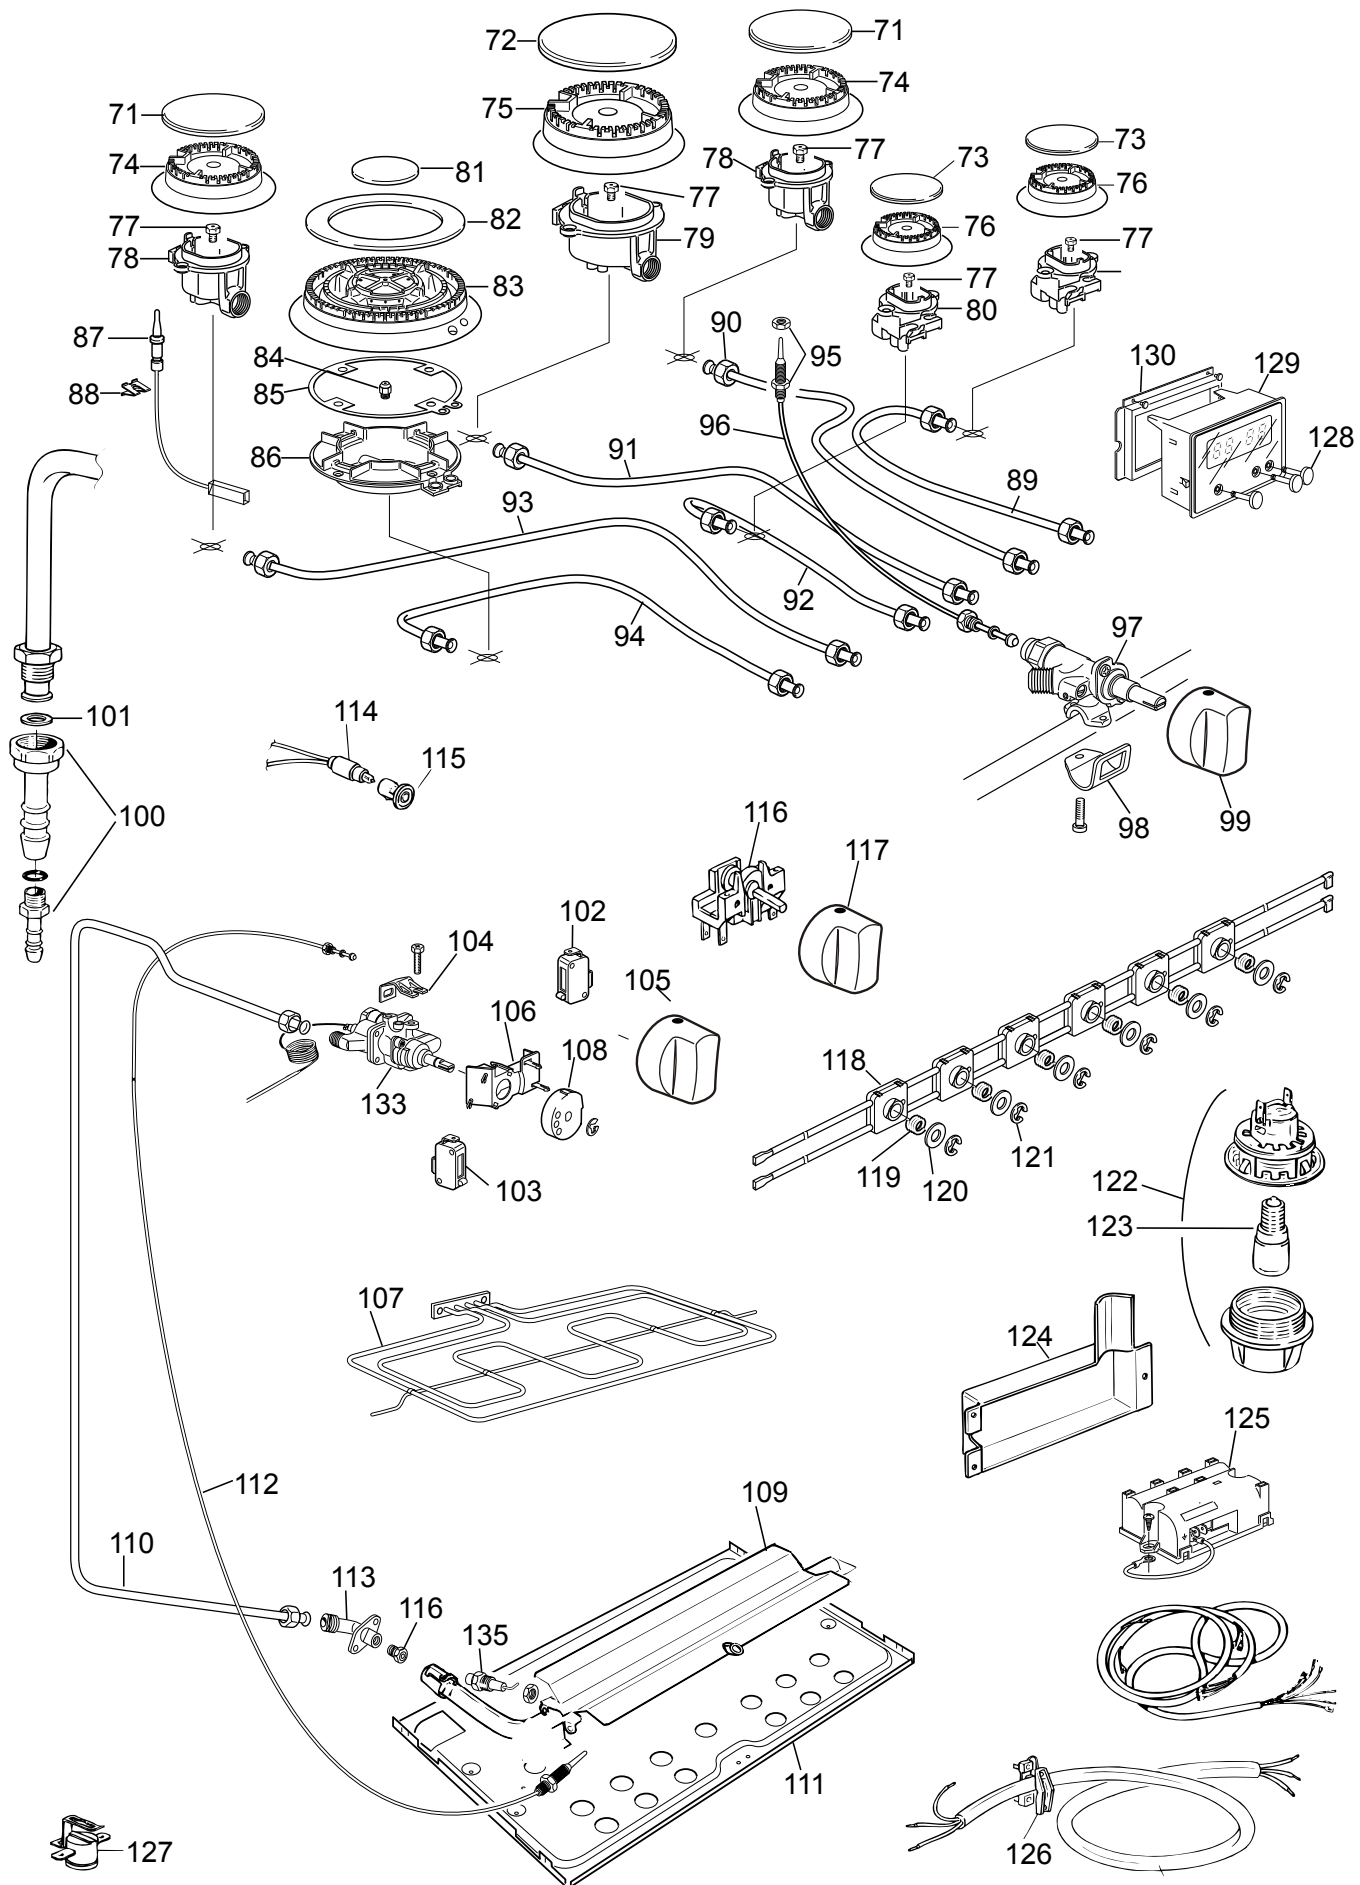

Position	Code	description
001	103670063	Rear trim
002	33110601S	WORK TOP
003	001130	SCREW
004	040041001	PLUG
006	035100	SPRING
007	103615	PIN
008	NOCODE01	NOT AVAILABLE
009	3421060002	FEED ASSY
011	001008	SCREW
012	094473	Fixing plate
014	027015	Inlet pipe plug
015	217303	Grate for small pans
016	217555	Wok grid
017	217547	Pan-support
018	213007	CLIP
019	35C1008SDL	FRONT PANEL
020	46A1001Z	CHIMNEY
022	46A9S02Z	Air conveyor
023	079025	Tangential fan
025	094417DX	Rear hob support right
026	094417SX	Rear hob support left
027	085044	SLEEVE
028	053057	Seal (3 sided)
029	36110D1S	Side panel right
030	36110S1S	Side panel left
032	371V1001U	FRONT PANEL
033	063075	HINGE
035	103410080	SHIM
037	4119602	REAR PANEL
039	4219S01Z	Upper shelter
040	001143	SCREW
041	103205.1	WASHER
042	003035	WASHER
043	213029	CLIP
044	214021	NUT
045	001083	SCREW
046	053083	GASKET

047	003057	WASHER
049	037220062	Door handle
050	032961882J	OVEN DOOR GLASS
051	001007	Vis
052	063100	Door hinge (male)
053	063081	HINGE
054	003041	WASHER
055	373F9604G	INNER DOOR
056	053058	GASKET
058	103406	Kit pizza stone
059	079014	Rotisserie motor
060A	037012	Spear handle
060B	080027	Rotisserie spear (without handle)
061	217291	Shelf support
062	48B9601P	DRIP PAN
063	47E9604G	Oven floor
064	217403	GRID
065	217401.1	Rotisserie support
071	216130005A	Burner-capSR
072	216131005A	Burner-cap R
073	216129005A	Burner-capA
074	068110003	Burner-head Semi-rapid
075	068111003	Burner-head Rapid
076	068109003	Burner-head Auxiliary
077A	101180	Injector (ulpg) diam 0.50 - DU CENTR
077B	101181	INJECTOR d. 0,65
077C	101182	Injector NATURAL GAS Ø 0.85 - A
077D	101234	INJECTOR d. 0,72
077E	101235	INJECTOR d. 0,97
077F	101236	INJECTOR d. 1,15
078	215466	Burner-cupSR
079	215467	Burner-cupTR
080	215465	Burner-cupA
081	216132005A	Burner-cap inside TR
082	216133005A	Burner-cap outside TR
083	068112003	TR burner head
084A	101233	Injector ULPG Ø 0.95 - TR
084B	101237	Injector diam 1.35 - G20

085	053078	Triple-ring burner-cup gasket
086	215469	Burner-cup Triple-ring
087A	084029	Spark plug L=630mm (semirapid &
087B	084035	Igniter TR - L = 900
087C	084036	Igniter L = 900
088	035094	Igniter spring
089	029467	PIPING
091	029645	Inlet pipe - rear central R
095	214057	NUT
096A	107039	Burner thermocouple L=500 mm
096B	107039	Burner thermocouple L=500 mm
096C	107040	Burner thermocouple - L=600 mm
096D	107043	Burner thermocouple L=500mm (triple-ring burner)
097A	106236	Tap diam 0.27 A
097B	106237	Tap diameter 0.32
097C	106238	Tap - diameter 0.42 R
097D	106239	Tap diameter 0.65 TR
099	218P25A344	Burner knob
100A	027018P	HOSE COUPLING
100B	027018R	HOSE COUPLING
101	053024.1	Sealing washer
102	077066	MICROSWITCH
103	077073	MICROSWITCH
105	218P66A344	KNOB
106	103370	SUPPORT
107	062074004	Grill element
108	103392	CAM
109	215439	BURNER
111	4219603Z	Burner shield
112	107049	THERMOCOUPLE
113	067034	CONNECTION
114	073039.2	Control lamp L 230
115	050035	CHANGE OVER SWITCH
116	101203	INJECTOR d. 1,80
117	218P07A345	KNOB
118	103634	WIRING
119	035080	Ignition switches spring
120	003038	WASHER

121	003039	RETAINING RING
122	072025	Lamp holder assembly
123	073013001	LAMP
124	103230.1A	Terminal block protection
125	082068.1	GENERATOR
127	6309607	THERMOSTAT
128	103376080	Programmer Button
129	074051	BOARD
130	094425	FRAME
131	040056	Rubber
132	094429	Side panel bracket
133	46A1002Z	CHIMNEY
134	46A1003Z	CHIMNEY
135	084034	ELECTRODE