 
 
 
 
 
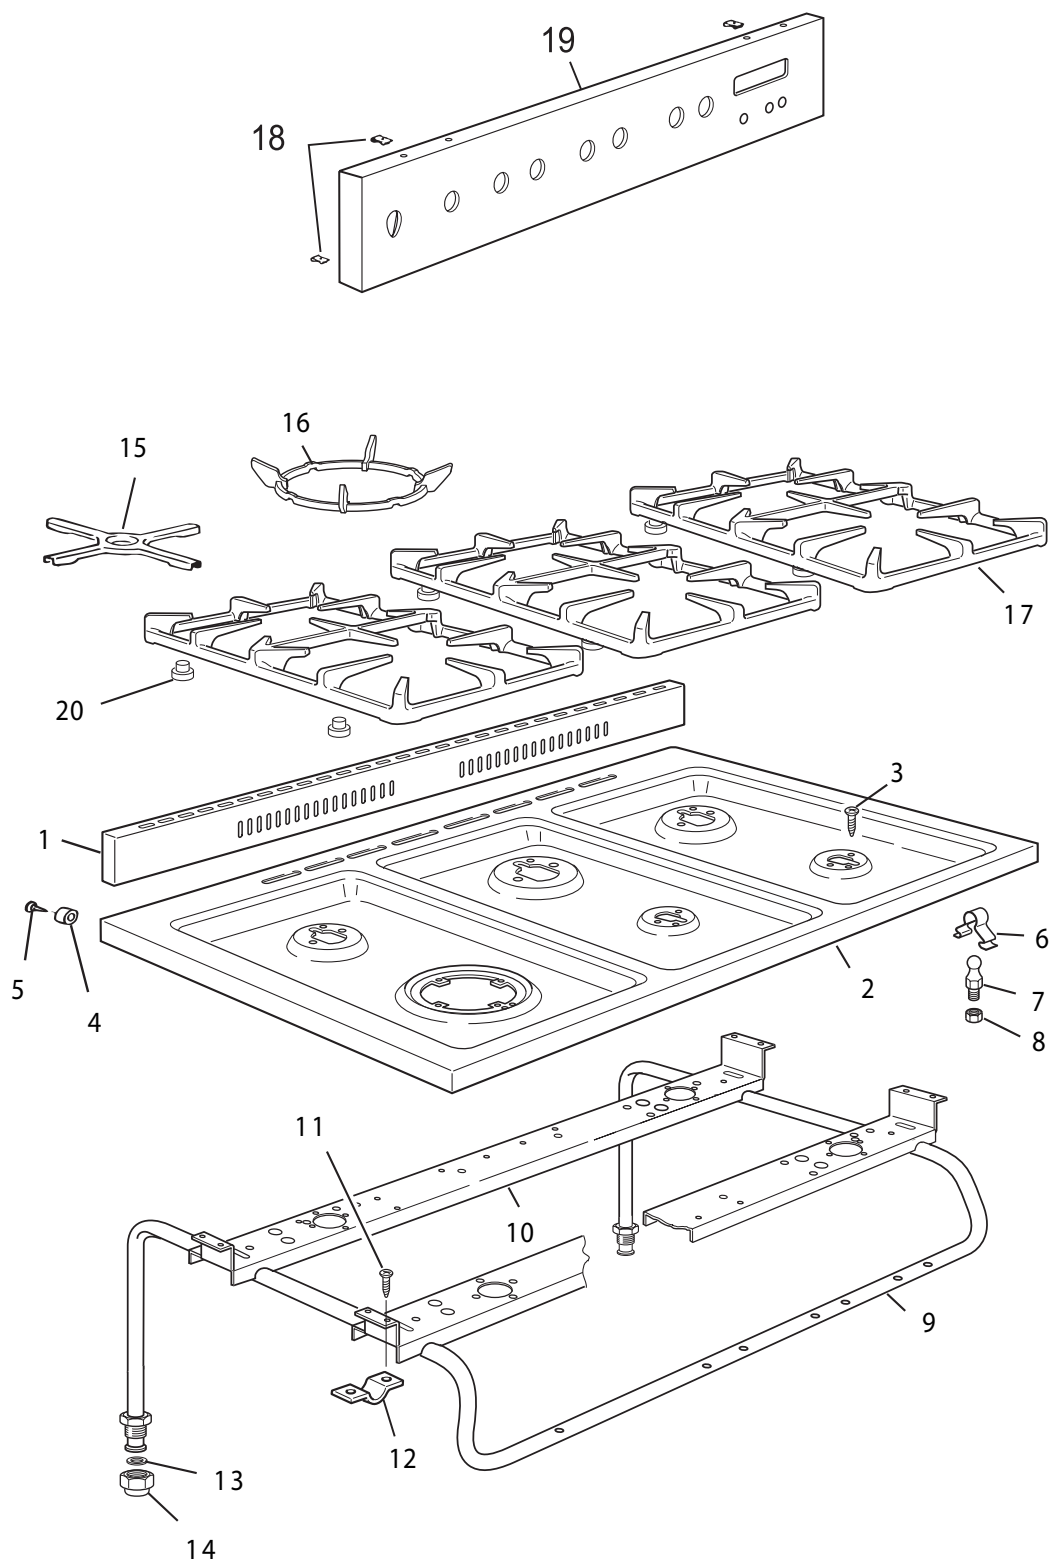 
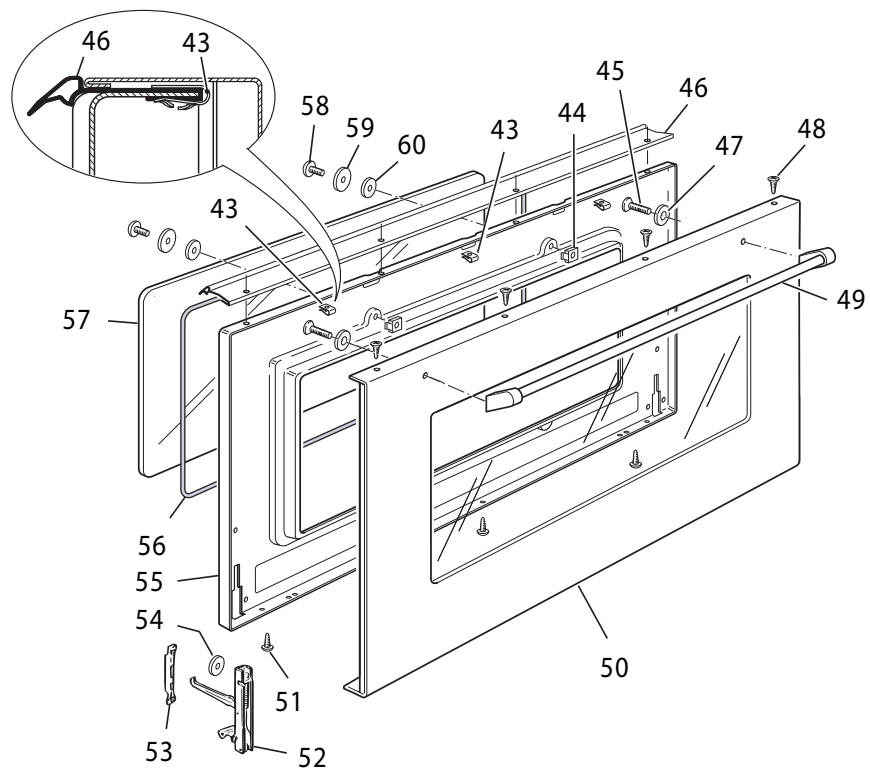 
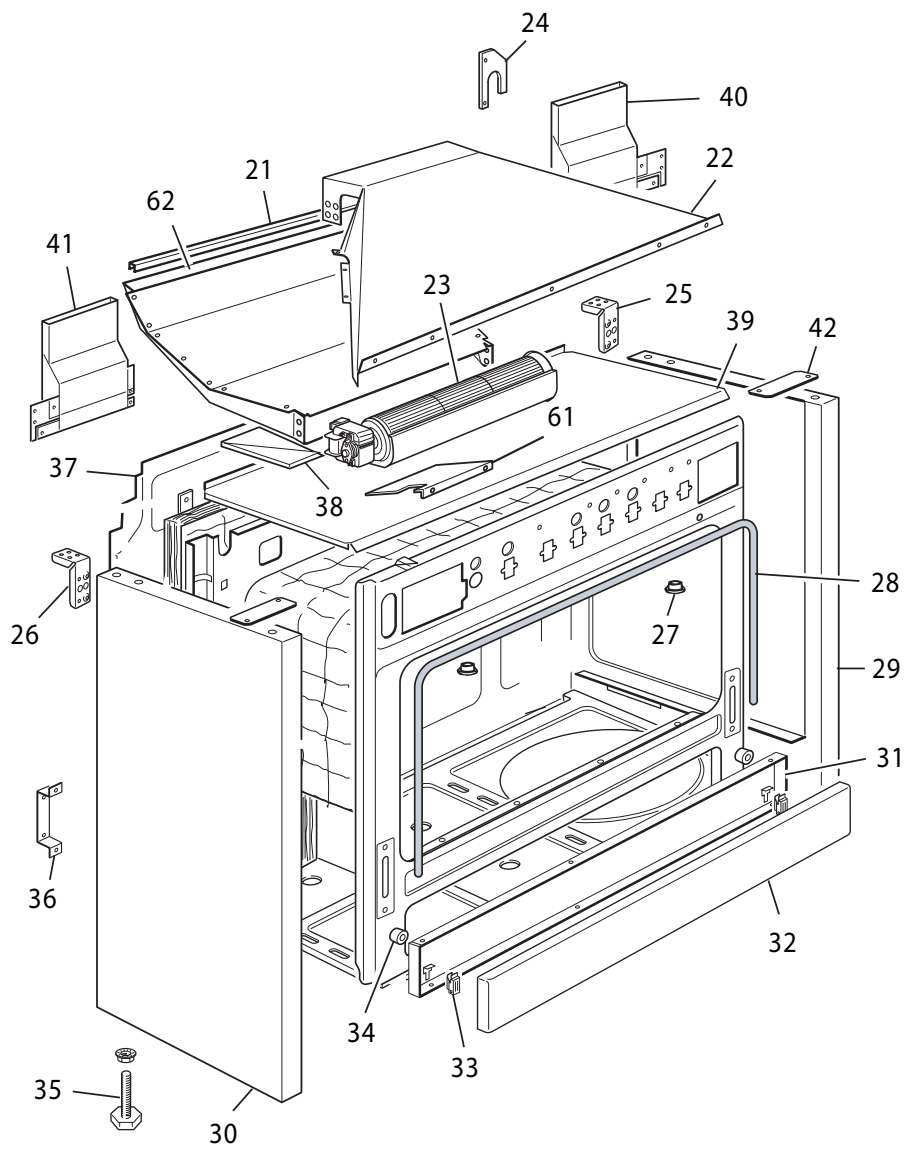 
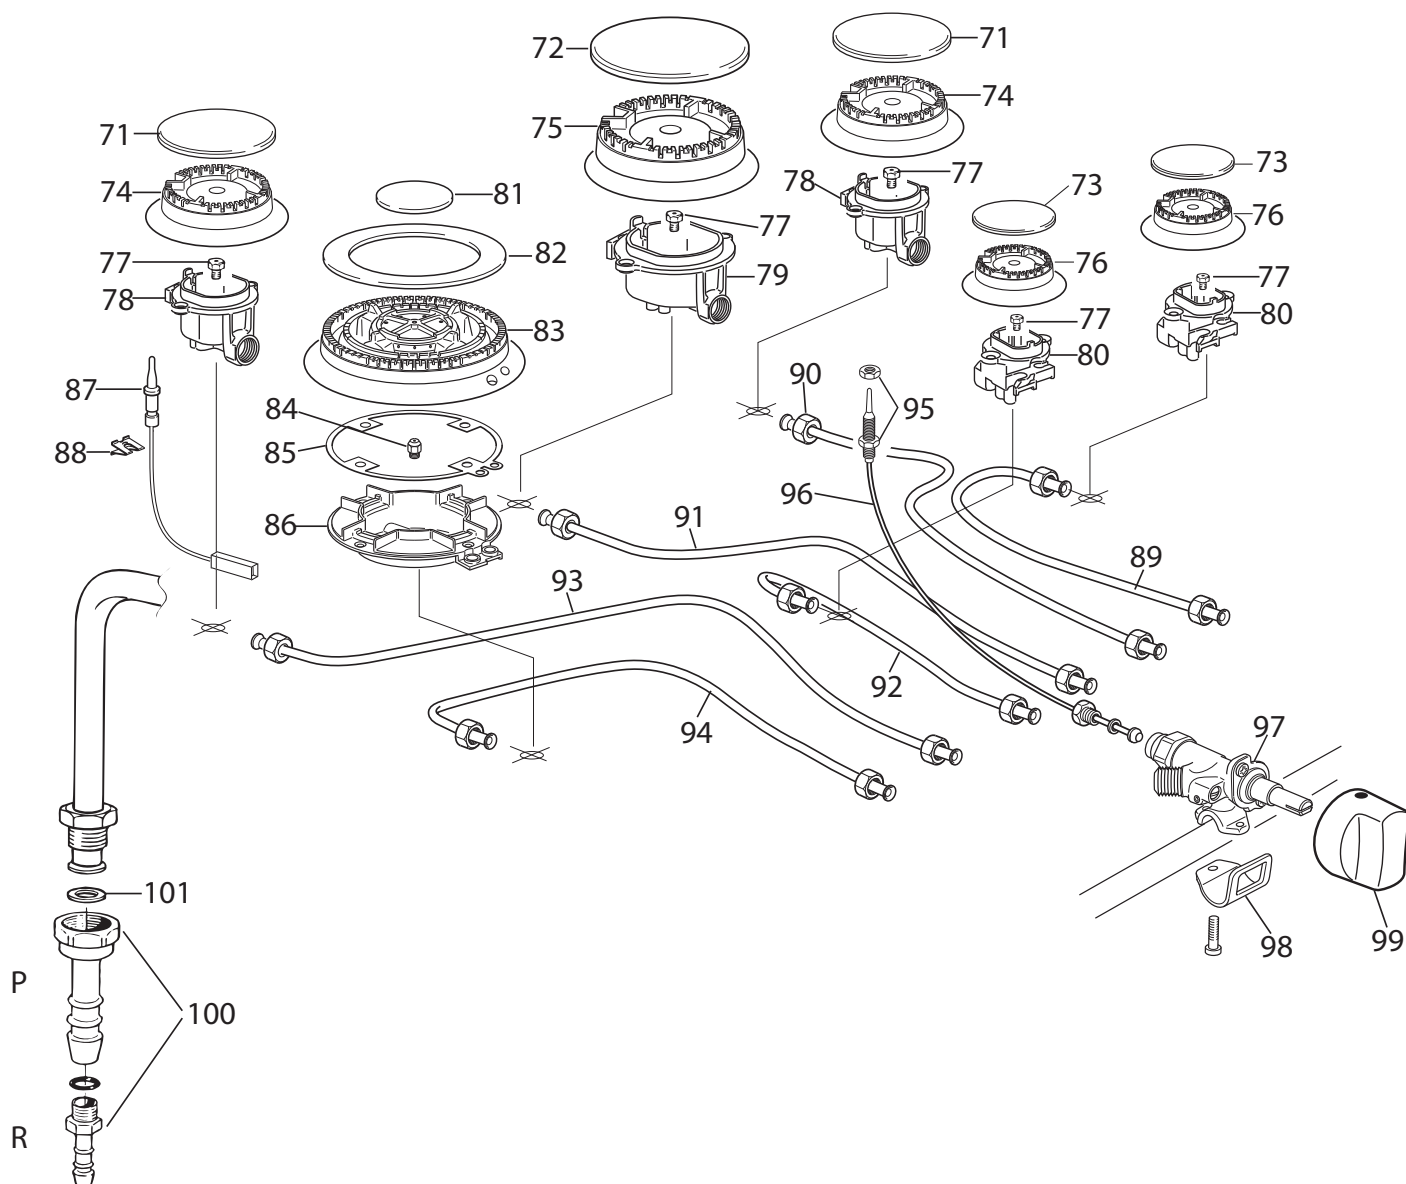 
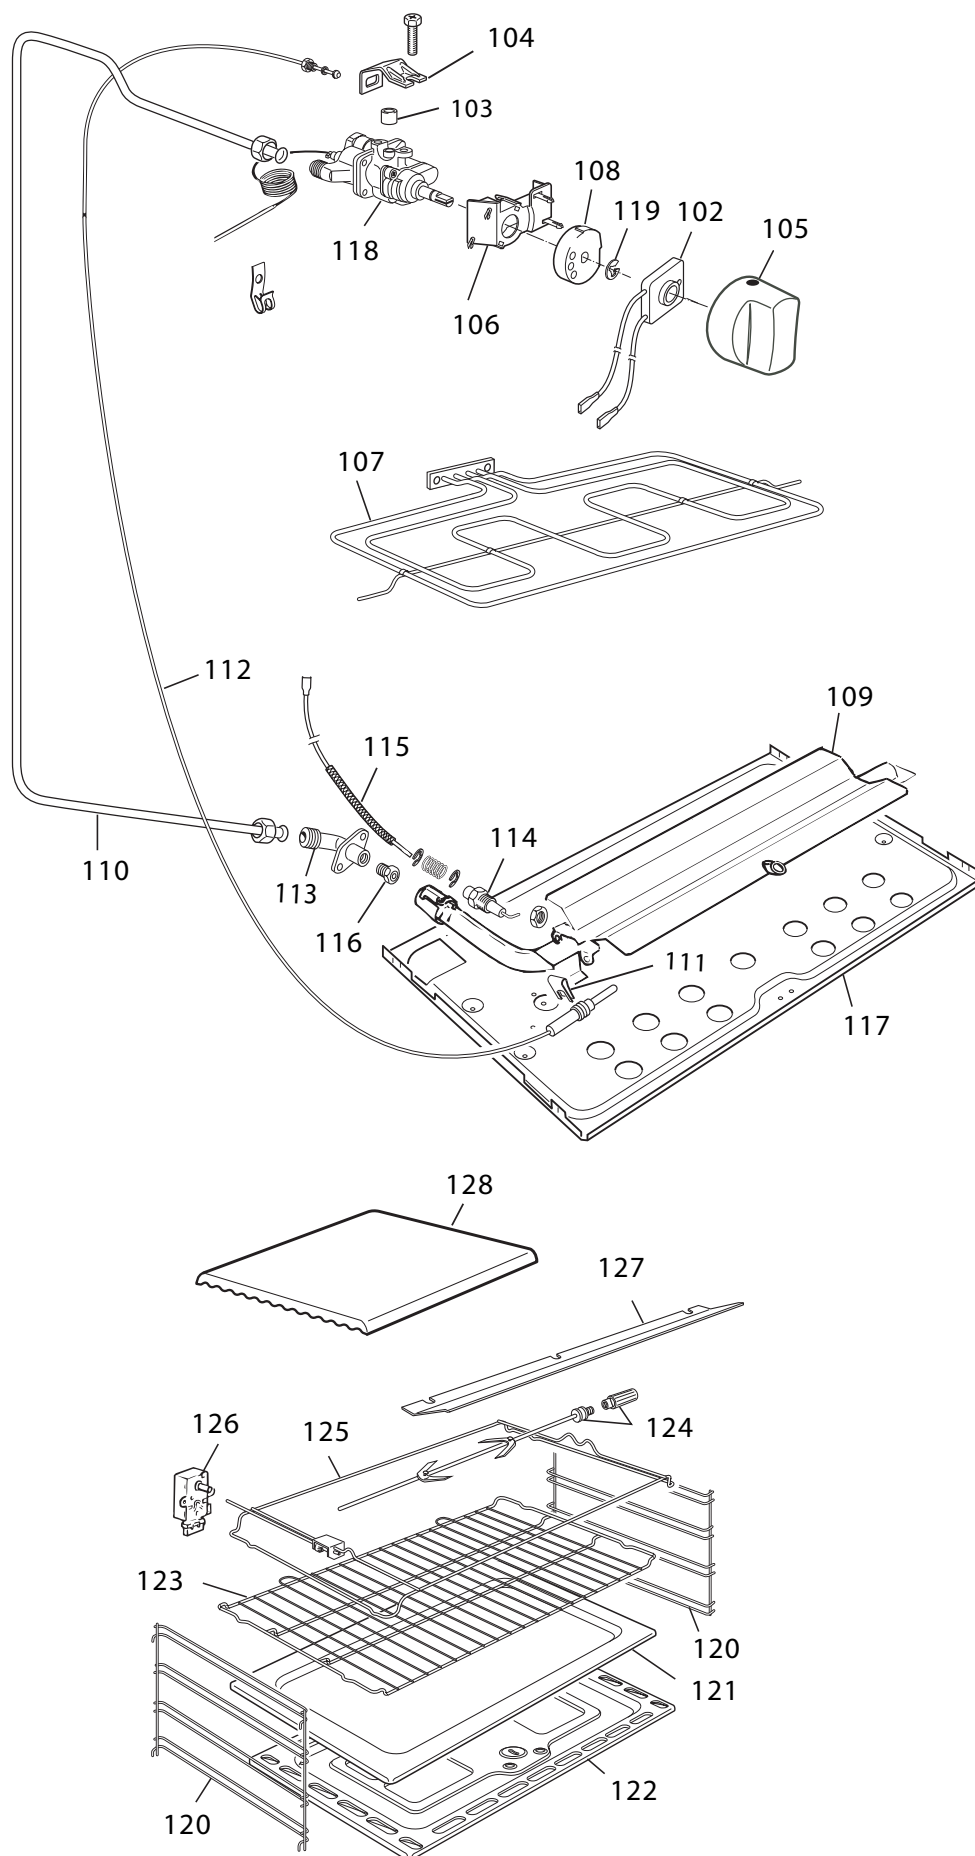 
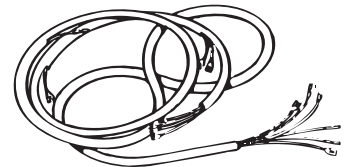 
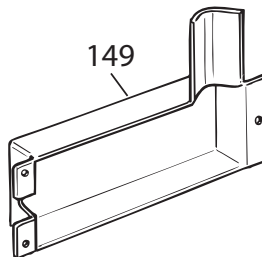 
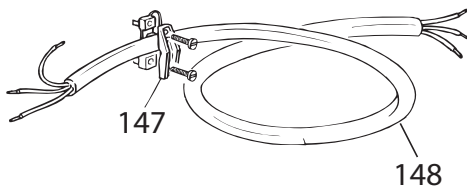 
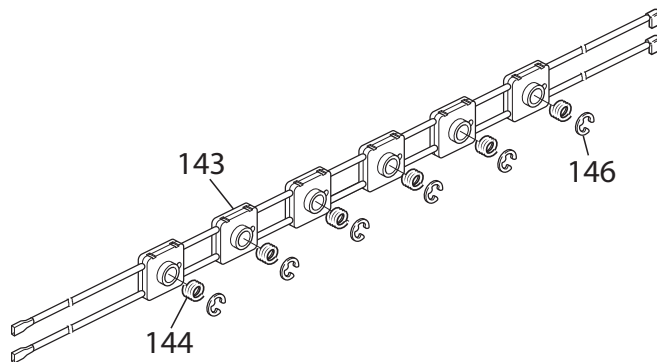 
 


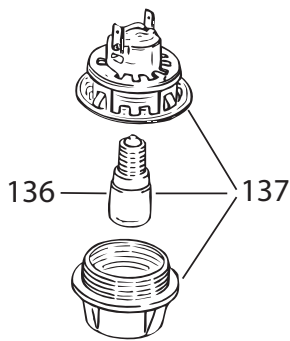

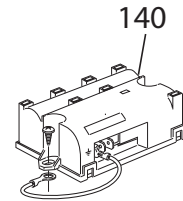

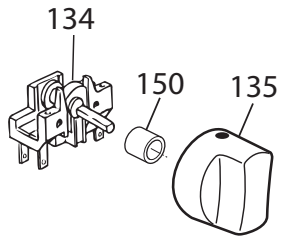

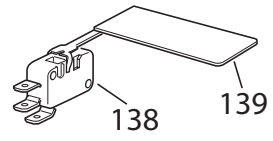

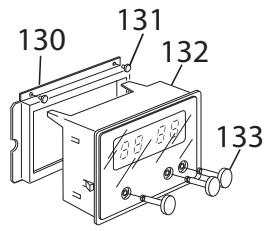

Position	Code	description
001	103670063	Rear trim
002	33110601S	WORK TOP
003	001130	SCREW
004	040041001	PLUG
005	001007	Vis
006	035100	SPRING
007	103615	PIN
009	3421060002	FEED ASSY
011	001008	SCREW
012	094473	Fixing plate
014	027015	Inlet pipe plug
015	217303	Grate for small pans
016	217555	Wok grid
017	217547	Pan-support
018	213007	CLIP
019	35C1008UDL	FRONT PANEL
020	040066	Rubber pad (for trivets)
022	46A9S02Z	Air conveyor
023	079025	Tangential fan
025	094417DX	Rear hob support right
026	094417SX	Rear hob support left
027	085044	SLEEVE
028	053057	Seal (3 sided)
029	36110D1S	Side panel right
030	36110S1S	Side panel left
032	371V1001U	FRONT PANEL
033	063075	HINGE
035	103410080	SHIM
037	4119602	REAR PANEL
038	NOCODE01	NOT AVAILABLE
039	4219S01Z	Upper shelter
040	46A1002Z	CHIMNEY
041	46A1003Z	CHIMNEY
042	094429	Side panel bracket
043	213029	CLIP
044	214021	NUT
045	001083	SCREW

046	053083	GASKET
049	037220062	Door handle
050	032961882J	OVEN DOOR GLASS
052	063100	Door hinge (male)
053	063081	HINGE
054	003041	WASHER
055	373F9604G	INNER DOOR
056	053058	GASKET
058	001143	SCREW
059	103205.1	WASHER
060	003035	WASHER
061	094407	BRACKET
062	46A1001Z	CHIMNEY
071	216130005A	Burner-capSR
072	216131005A	Burner-cap R
073	216129005A	Burner-capA
074	068110003	Burner-head Semi-rapid
075	068111003	Burner-head Rapid
076	068109003	Burner-head Auxiliary
077A	101180	Injector (ulpg) diam 0.50 - DU CENTR
077B	101181	INJECTOR d. 0,65
077C	101182	Injector NATURAL GAS Ø 0.85 - A
077D	101234	INJECTOR d. 0,72
077E	101235	INJECTOR d. 0,97
077F	101236	INJECTOR d. 1,15
078	215466	Burner-cupSR
079	215467	Burner-cupTR
080	215465	Burner-cupA
081	216132005A	Burner-cap inside TR
082	216133005A	Burner-cap outside TR
083	068112003	TR burner head
084	101237	Injector diam 1.35 - G20
085	053078	Triple-ring burner-cup gasket
086	215469	Burner-cup Triple-ring
087A	084029	Spark plug L=630mm (semirapid &
087B	084035	Igniter TR - L = 900
087C	084036	Igniter L = 900
088	035094	Igniter spring

091	029645	Inlet pipe - rear central R
095	214057	NUT
096A	107039	Burner thermocouple L=500 mm
096B	107039	Burner thermocouple L=500 mm
096C	107043	Burner thermocouple L=500mm (triple-ring burner)
097A	106236	Tap diam 0.27 A
097B	106238	Tap - diameter 0.42 R
097C	106239	Tap diameter 0.65 TR
099	218P25A344	Burner knob
100A	027018P	HOSE COUPLING
100B	027018R	HOSE COUPLING
101	053024.1	Sealing washer
102	1031147	Thermostat switch
103	053045	Oven thermostat gasket
104	094503	BRACKET
105	218P66A344	KNOB
106	103888	Switch support
107	062074004	Grill element
108	103894	CAM
109	215439	BURNER
110	029892	PIPING
111	035098	SPRING
112	107049	THERMOCOUPLE
113	067030	Oven injector housing
114	084034	ELECTRODE
115	103289	CABLE
116A	101201	INJECTOR d. 1,20
116B	101203	INJECTOR d. 1,80
117	4219603Z	Burner shield
118	066169	THERMOSTAT
120	217291	Shelf support
121	48B9601G	DRIP PAN
122	47E9604G	Oven floor
123	217403	GRID
124A	037012	Spear handle
124B	080027	Rotisserie spear (without handle)
125	217401.1	Rotisserie support
126	079014	Rotisserie motor

127	103560	PROTECTION
128	103406	Kit pizza stone
130	094425	FRAME
131	040056	Rubber
132	074051	BOARD
133	103376080	Programmer Button
134	050035	CHANGE OVER SWITCH
135	218P07A345	KNOB
136	073013001	LAMP
137	072025	Lamp holder assembly
138	077081	Microswitch (grill exclusion with gas oven operating)
139	094556	Microswitch lever
140	082068.1	GENERATOR
141	051049	Terminal block 25A-3P
142	066080	Cut-off thermostat 55 degree
144	035080	Ignition switches spring
146	003040	STARLOCK WASHER
148	054041	CORD
149	103230.1A	Terminal block protection
150	085081	Knob sleeve