

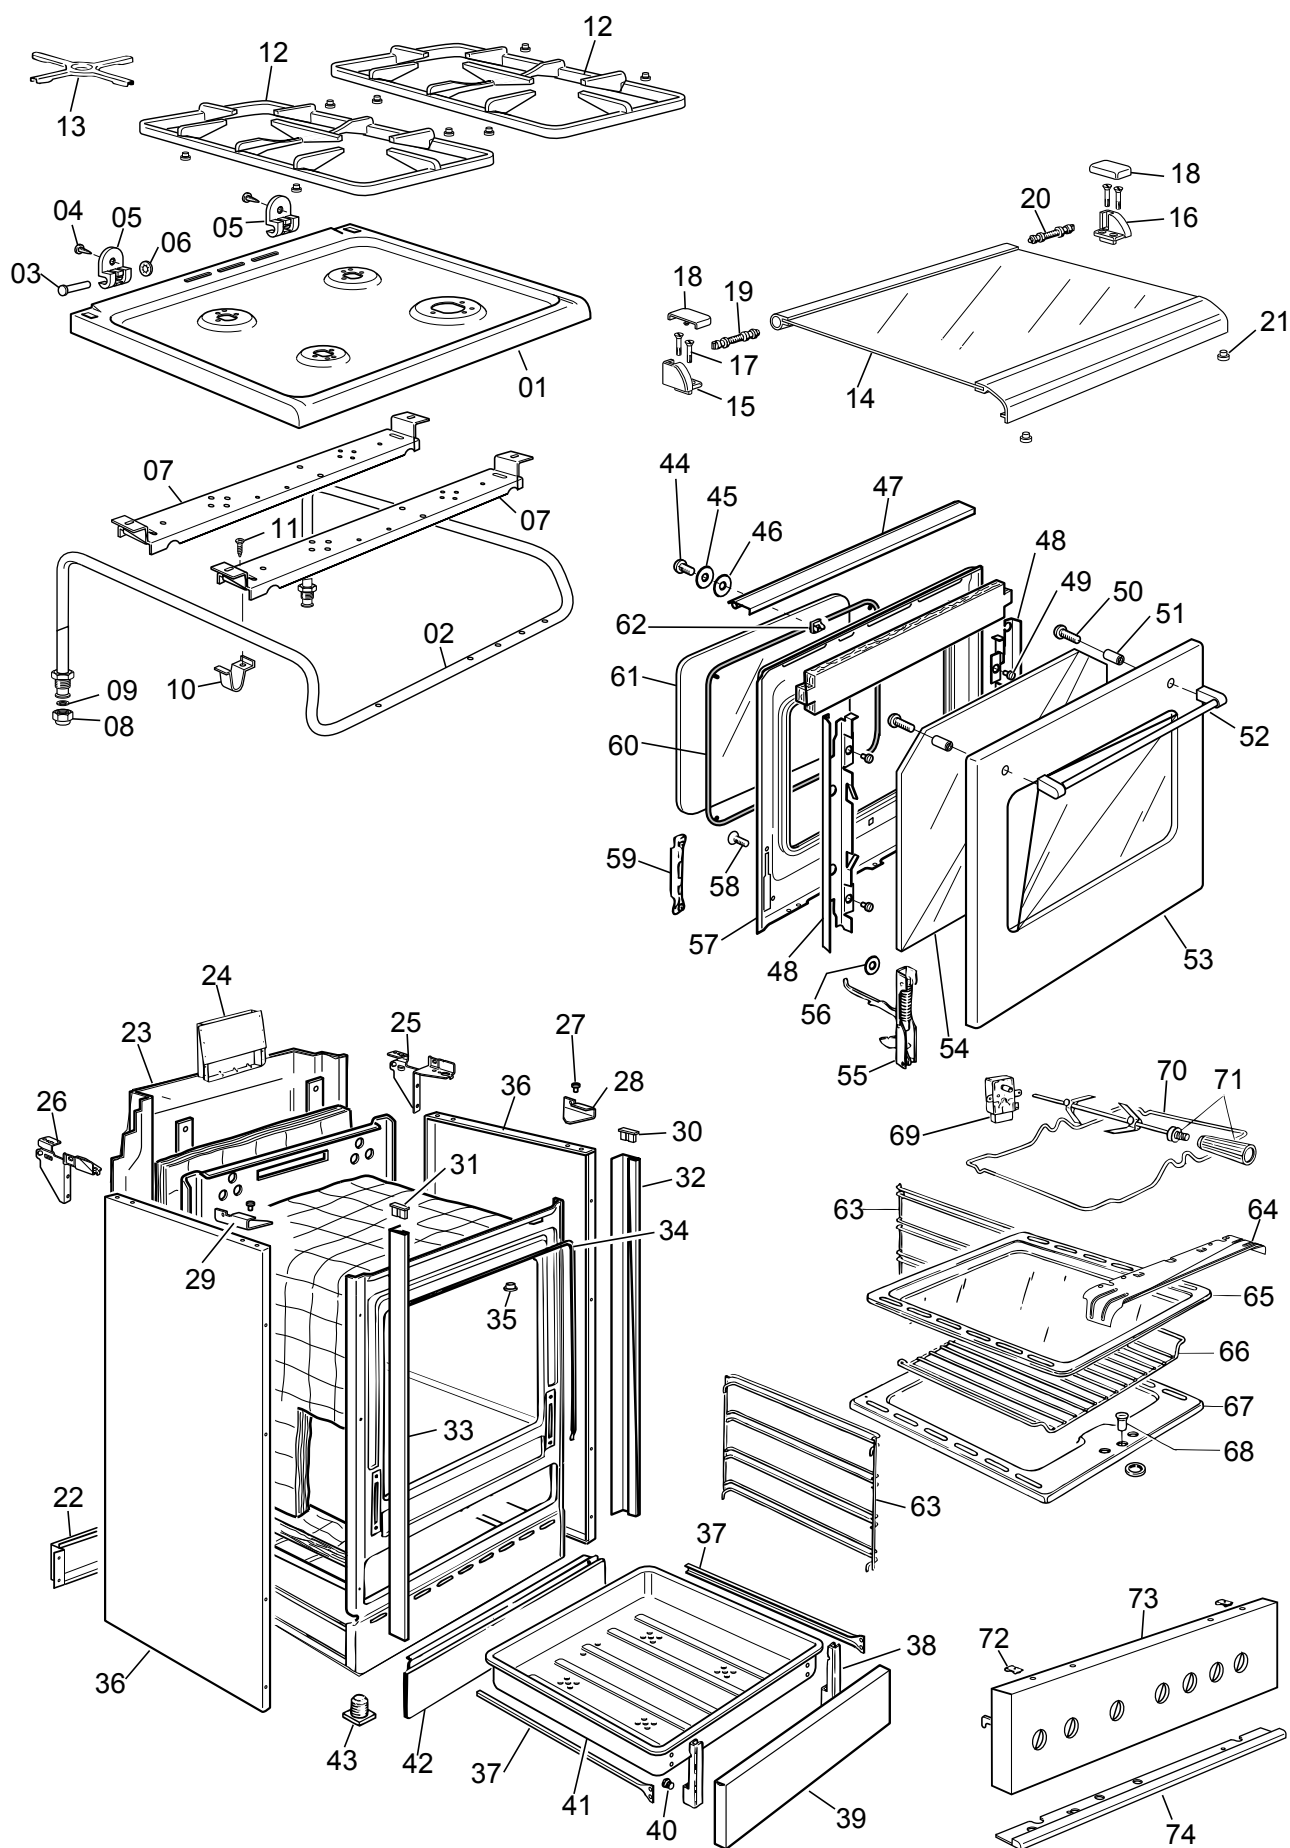
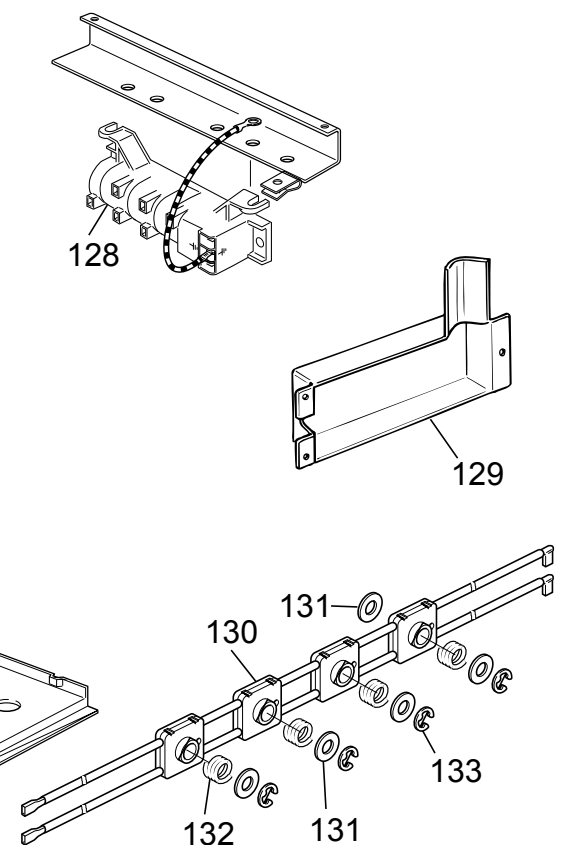
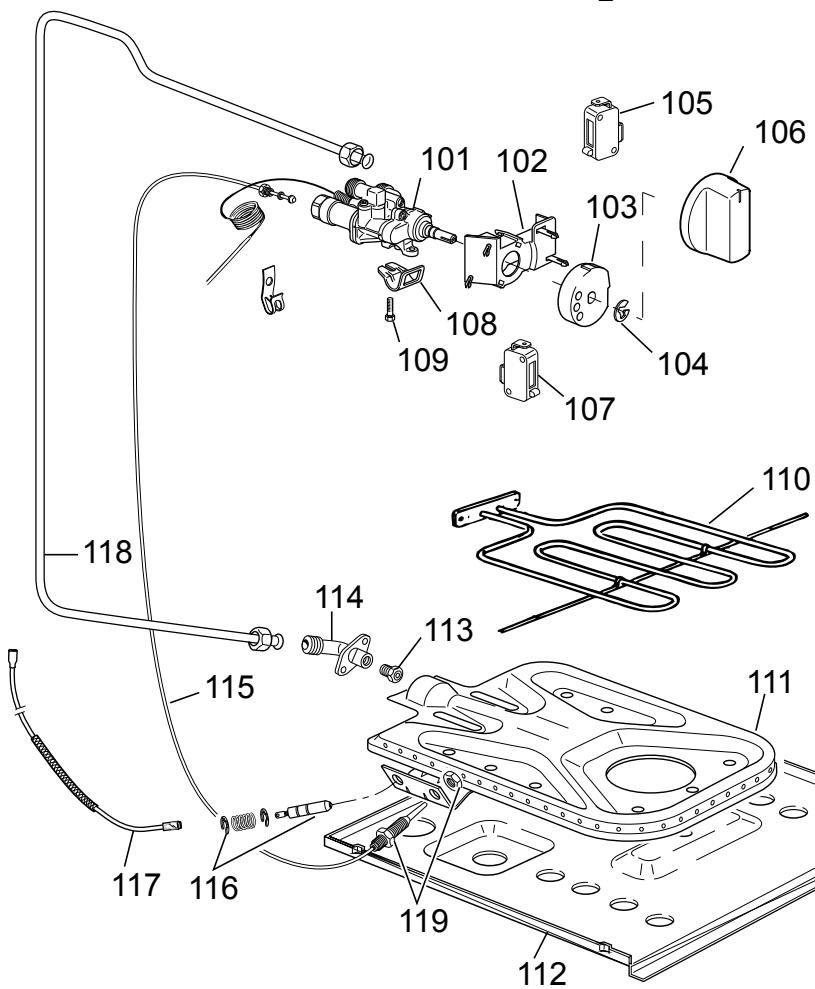


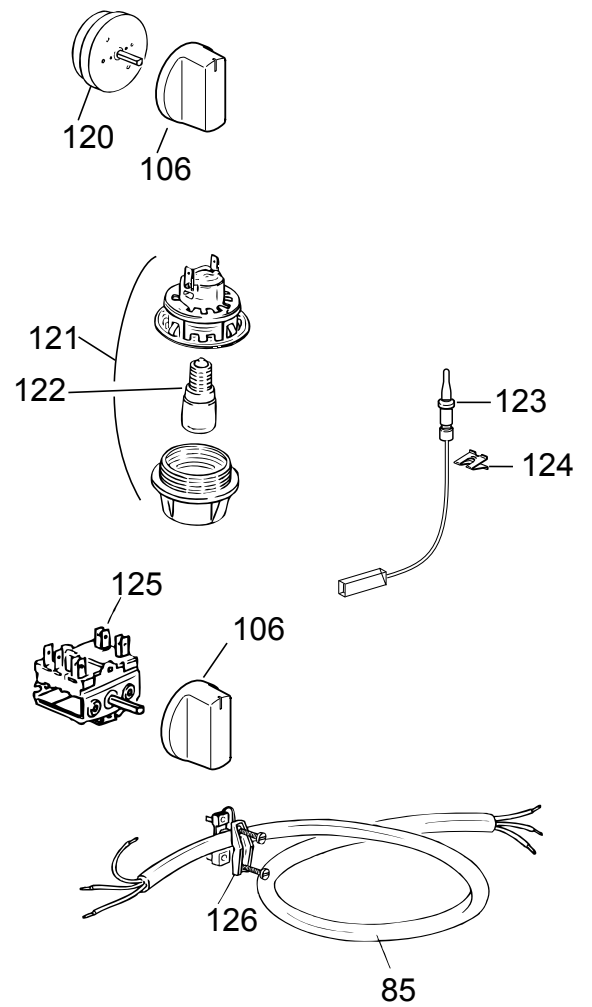

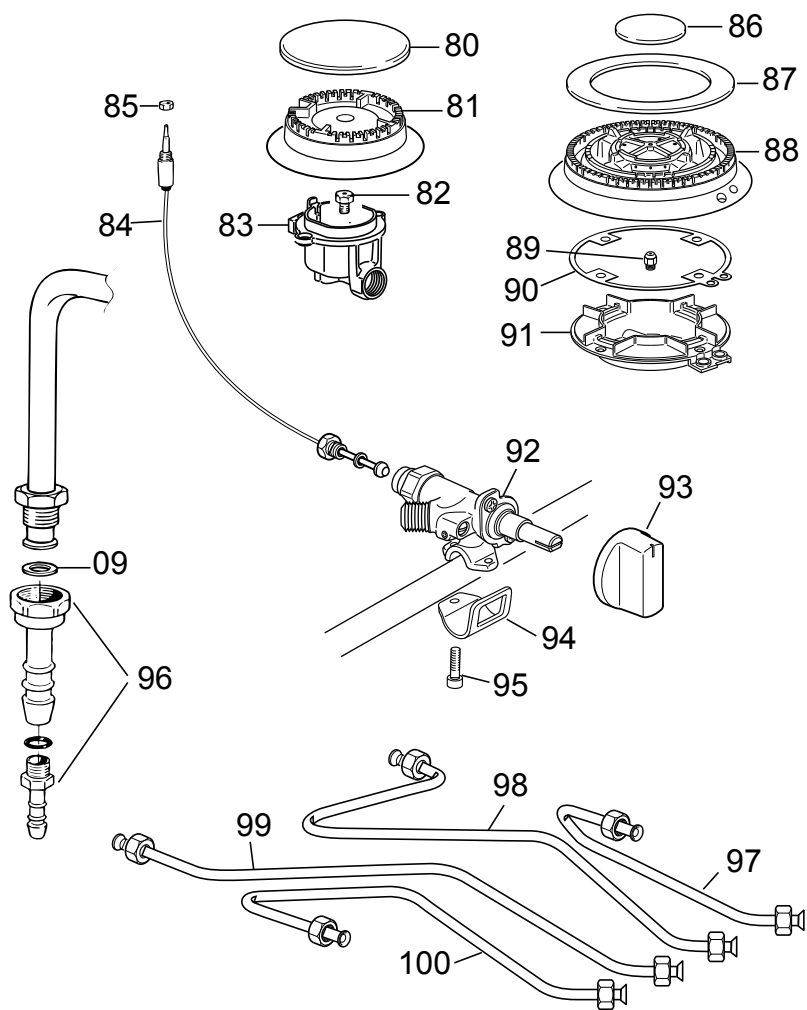

Position	Code	description
001	3316N402S	Cooktop
002	3426N40001	FEED ASSY
003	211022	Pivot
004	001138	SCREW
005	103572	Rear spacing
006	003060	Snap ring
008	027015	Inlet pipe plug
009	053024.1	Sealing washer
010	094254	CLAMP
011	001008	SCREW
012	217531	Pan-support
013	217303	Grate for small pans
014	0326N2786	COVER ASSEMBLY
015	069083	HEAD
016	069082	HEAD
018	081072002	STOPPER
019	063105	HINGE
020	063104	HINGE
021	040023001	Buffer (Brown)
023	4116N01	REAR PANEL
024	46A6N01Z	CHIMNEY
025	094354DX	Rear right coupler
026	094354SX	Left right coupler
027	040011	BUFFER
028	094333DX	Rear right coupler
029	094333SX	Rear left coupler
030	081068/NS	Right stopper
031	081067/NS	Left stopper
032	083290061	Right front trim
033	083289061	Left front trim
034	053199	Bottom oven seal
035	085044	SLEEVE
036	NOCODE04	SEE TECHNICAL BULLETIN
037	094075	Drawer rail
038	094138	Drawer fixing bracket
039	39E6601YS	Drawer front panel
040	040012	BUFFER

041	39K6101Y	DRAWER
042	103160061	Base panel
043	103181	FOOT
044	001214	SCREW
045	103205.1	WASHER
046	003035	WASHER
047	053077	GASKET
049	040056	Rubber
050	001184	SCREW
052	037191062	HANDLE
053	032611738H	GLASS DOOR
054	0312039	Third glass
055	063089	Door hinge (male) works with female hinge 063025
056	003041	WASHER
057	373FF706G	Door Skin
058	001105	SCREW
059	063025	Top oven hinge (female) works with male hinge 063089
060	053084	Bottom oven glass seal
061	0311000.1T	Inner glass
062	214021	NUT
063	217291	Shelf support
064	51BF703	PROTECTION
065	48B6101G	DRIP PAN
066	217220	GRID
067	47EN601K	BOTTOM
068	103057	LIGHTING TUBE
069	079014	Rotisserie motor
070	217302	SUPPORT
071	037012	Spear handle
072	213007	CLIP
073	35N6P06SDL	FRONT PANEL
080A	216129005A	Burner-capA
080B	216130005A	Burner-capSR
081A	068109003	Burner-head Auxiliary
081B	068110003	Burner-head Semi-rapid
082A	101180	Injector (ulpg) diam 0.50 - DU CENTR
082B	101181	INJECTOR d. 0,65

082C	101234	INJECTOR d. 0,72
082D	101235	INJECTOR d. 0,97
083A	215465	Burner-cupA
083B	215466	Burner-cupSR
084A	107039	Burner thermocouple L=500 mm
084B	107040	Burner thermocouple - L=600 mm
084C	107044	Burner thermocouple L=250 mm - TR
085	214057	NUT
086	216132005A	Burner-cap inside TR
087	216133005A	Burner-cap outside TR
088	068112003	TR burner head
089A	101233	Injector ULPG Ø 0.95 - TR
089B	101237	Injector diam 1.35 - G20
090	053078	Triple-ring burner-cup gasket
091	215469	Burner-cup Triple-ring
092A	106236	Tap diam 0.27 A
092B	106237	Tap diameter 0.32
092C	106239	Tap diameter 0.65 TR
093	2183007382	KNOB
095	001233	Tap fixing screw
096A	027018P	HOSE COUPLING
096B	027018R	HOSE COUPLING
098	029590	SR inlet pipe right
099	NOCODE01	NOT AVAILABLE
101	066139	THERMOSTAT
102	103370	SUPPORT
103	103392	CAM
104	003039	RETAINING RING
105	077066	MICROSWITCH
106	2183007383	KNOB
107	077073	MICROSWITCH
109	001189	SCREW
110	062067004	HEATING ELEMENT
111	215431	BURNER
112	4219106Z	SUPPORT
113A	101080	Injector - diameter 0.92
113B	101091	INJECTOR d. 1,40
114	067025	CONNECTION

115	107015	THERMOCOUPLE
116	084027	ELECTRODE
117	103290	CABLE
119	R00550280	BRASS NUT FOR THERMOCOUPLE
120	074009	60 min alarm
121	072023	Lamp holder assembly
122	073013001	LAMP
123A	084029	Spark plug L=630mm (semirapid &
123B	084033	Igniter TR - L = 500
124	035094	Igniter spring
125	050035	CHANGE OVER SWITCH
127	054050	WIRING
128	082053.1	GENERATOR
129	103230.1A	Terminal block protection
130	103592	SUPPORT
131	003038	WASHER
132	035080	Ignition switches spring