


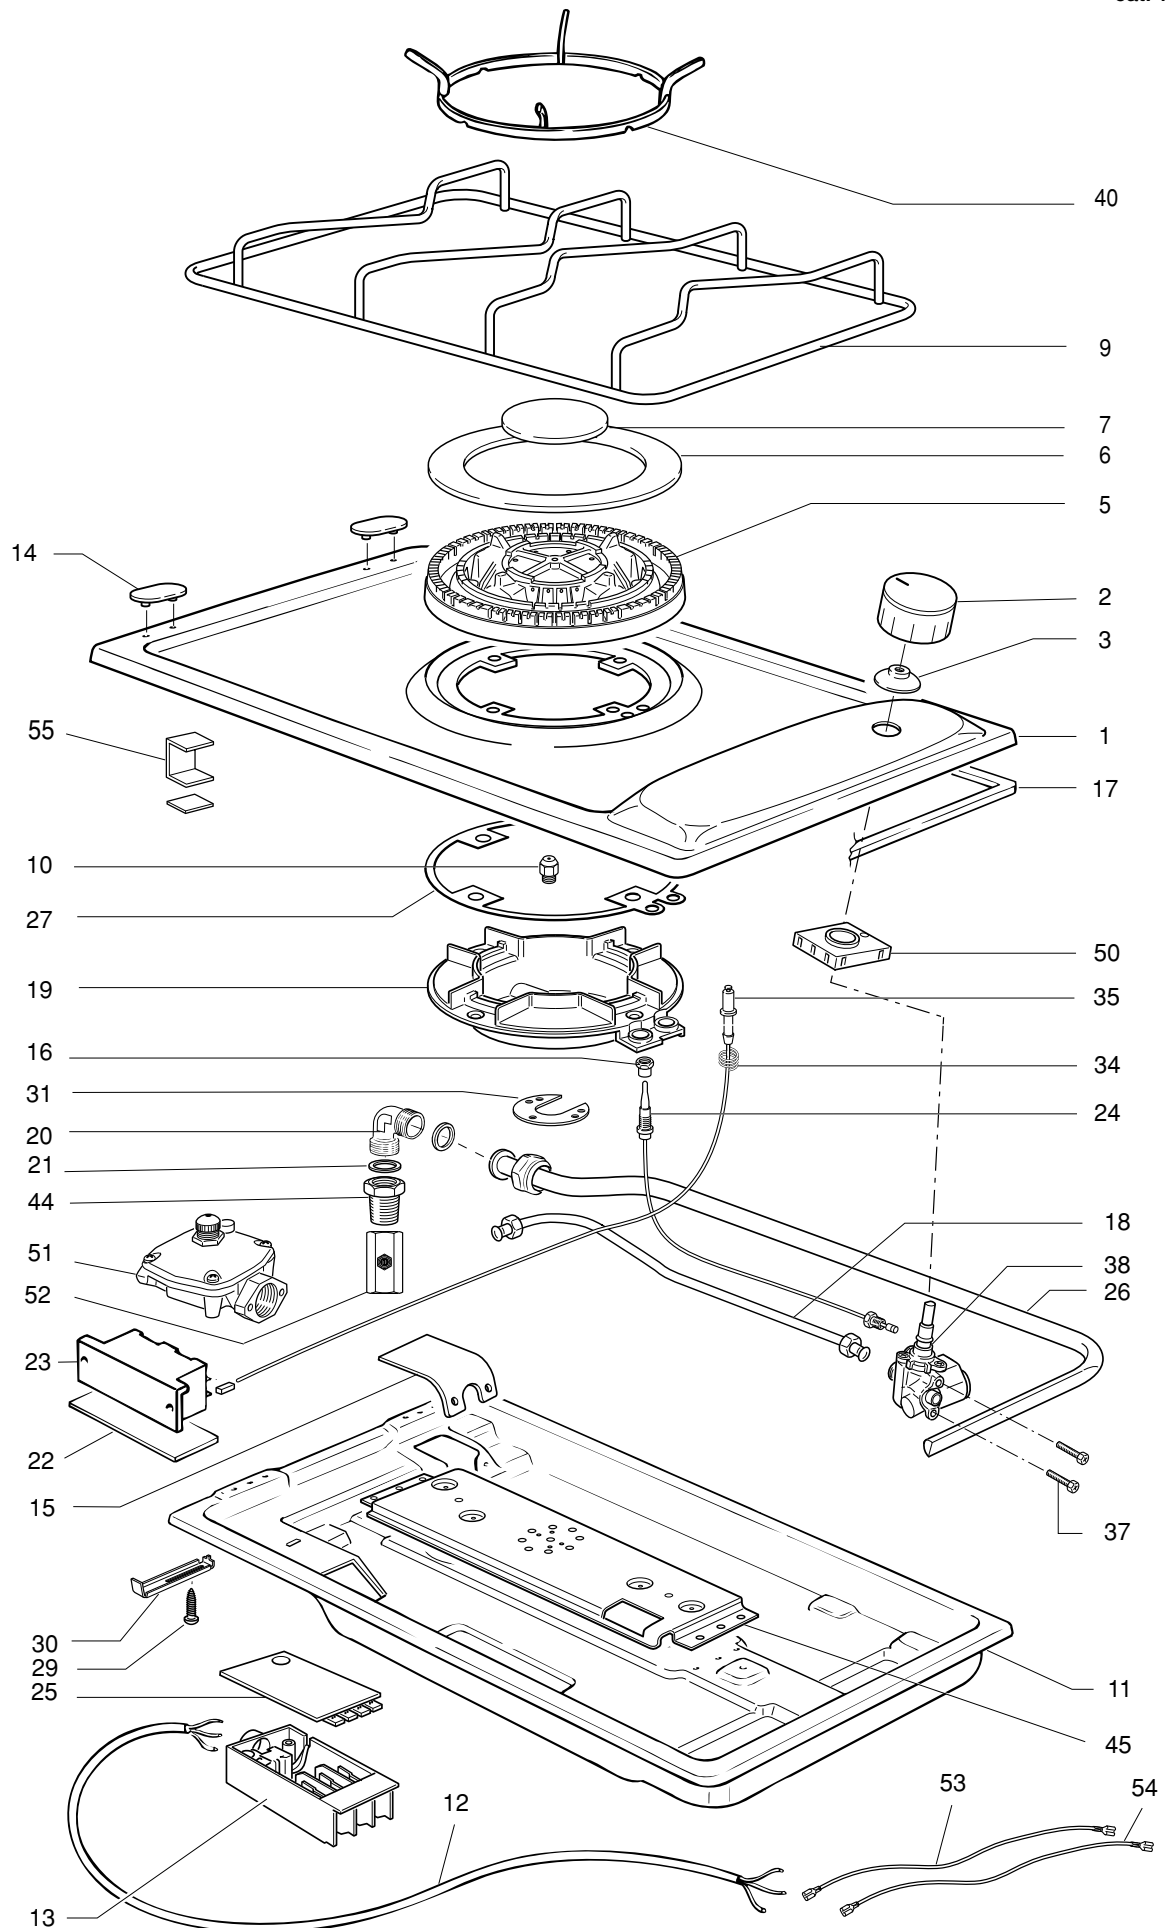

Position	Code	description
1	333A108SD4	Cooktop
2	2183009463	KNOB
3	040057	Rubber joint
5	068112003	TR burner head
6	216133005A	Burner-cap outside TR
7	216132005A	Burner-cap inside TR
9a	217516005	Pan-support
9b	101261	Injector - diameter 1.65 TR - Natural gas
10	101233	Injector ULPG Ø 0.95 - TR
11	4113A13	CASING
12	054090	Power cord with plug 3 x 0.75 mm ²
13	051054	Terminal block
14	10348100X	PLUG
15	094271	BRACKET
16	214057	NUT
17	053037	SEAL
18	029885	TR pipe
19	215469	Burner-cup Triple-ring
20	067008	Elbow
21	053024.1	Sealing washer
22	094243	Ignition coil bracket
23	082076	Electronic ignition
24	107042	Burner thermocouple TR L=350 mm
25	103451	Terminal block cover
26	3423A10G04	Inlet pipe
27	053078	Triple-ring burner-cup gasket
29	001221	SCREW
30	094338	Fixing bracket
31	094360	Fixing bracket
34	035094	Igniter spring
35	084032	Spark plug L=250mm (triple-ring burner)
37	001202	SCREW
38	106254	Tap Triple-ring diam 0.65
40	217507	Wok pan support
44	067026	Conical adaptor
45	51B3A03	Burners support
50	1031131	Ignition switches

51	103347	Gas pressure regulator 1/2
52	103468	Test point adaptor
53	103389	Cable L = 400
54	103607	Cable L = 400
55	094295	Spacing