 
 
 
 
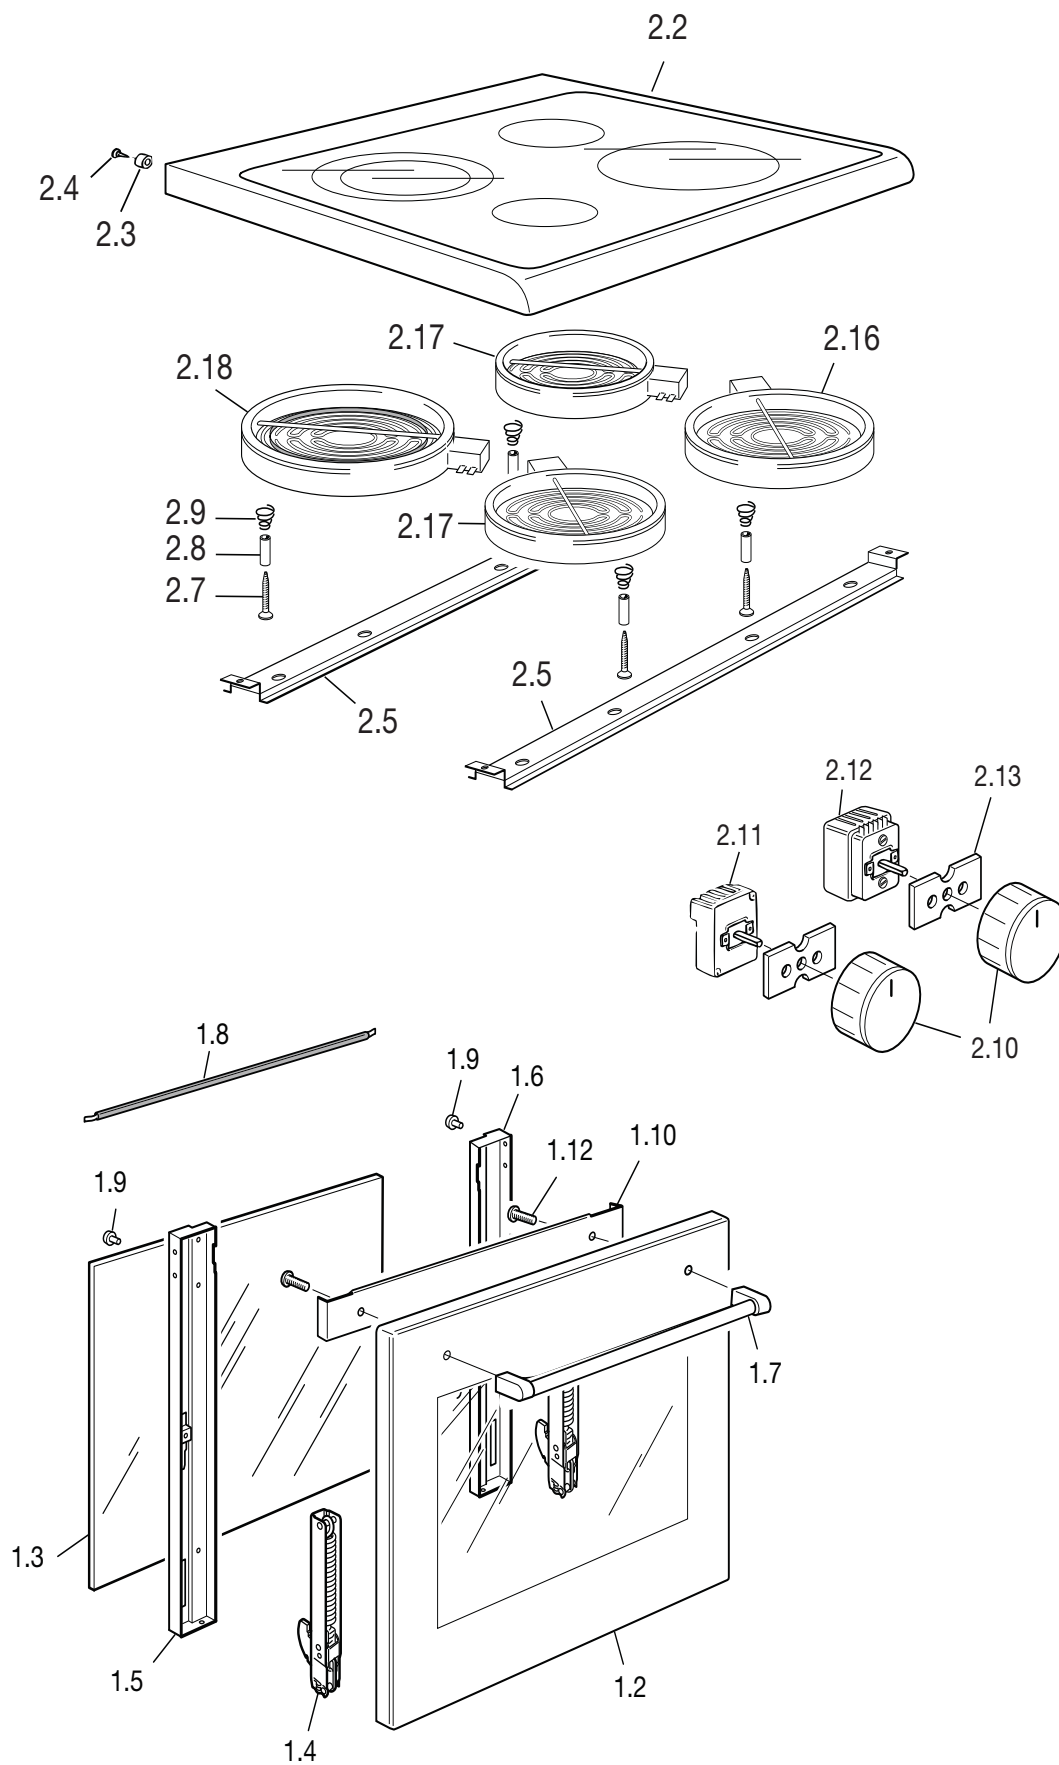 
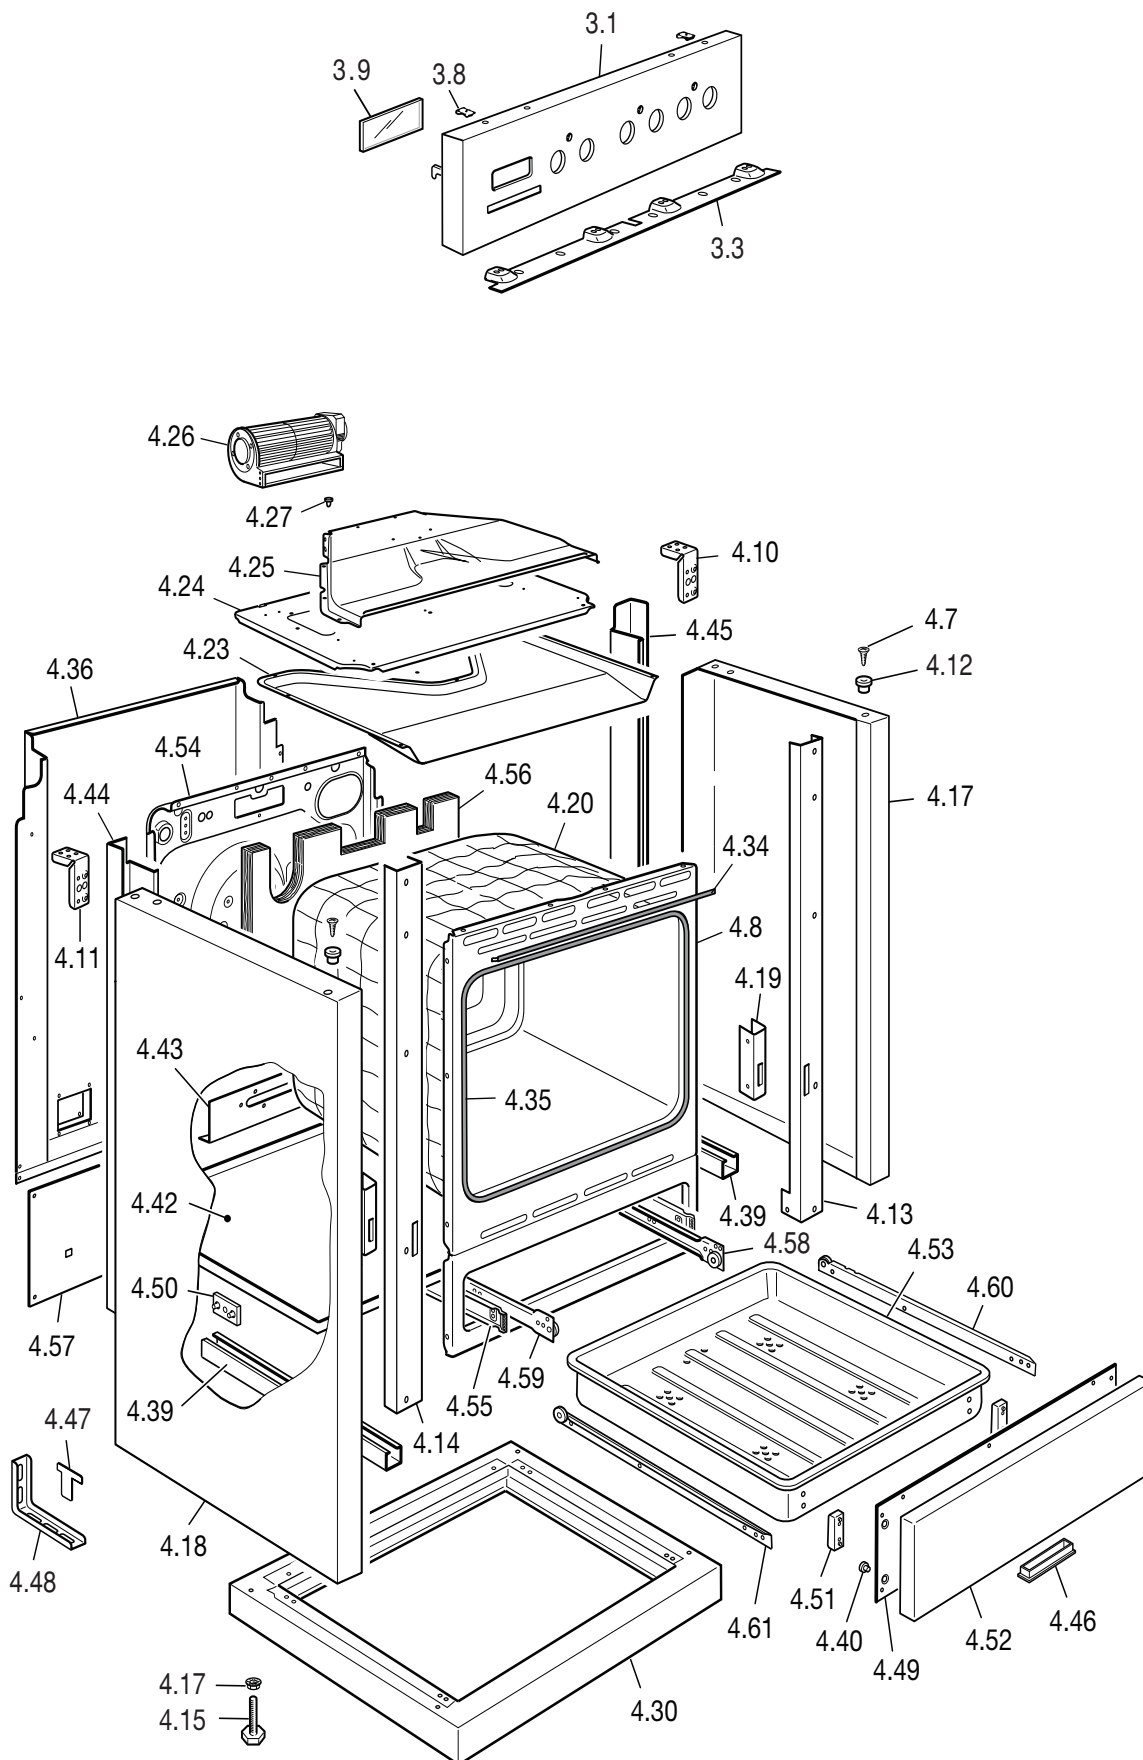 
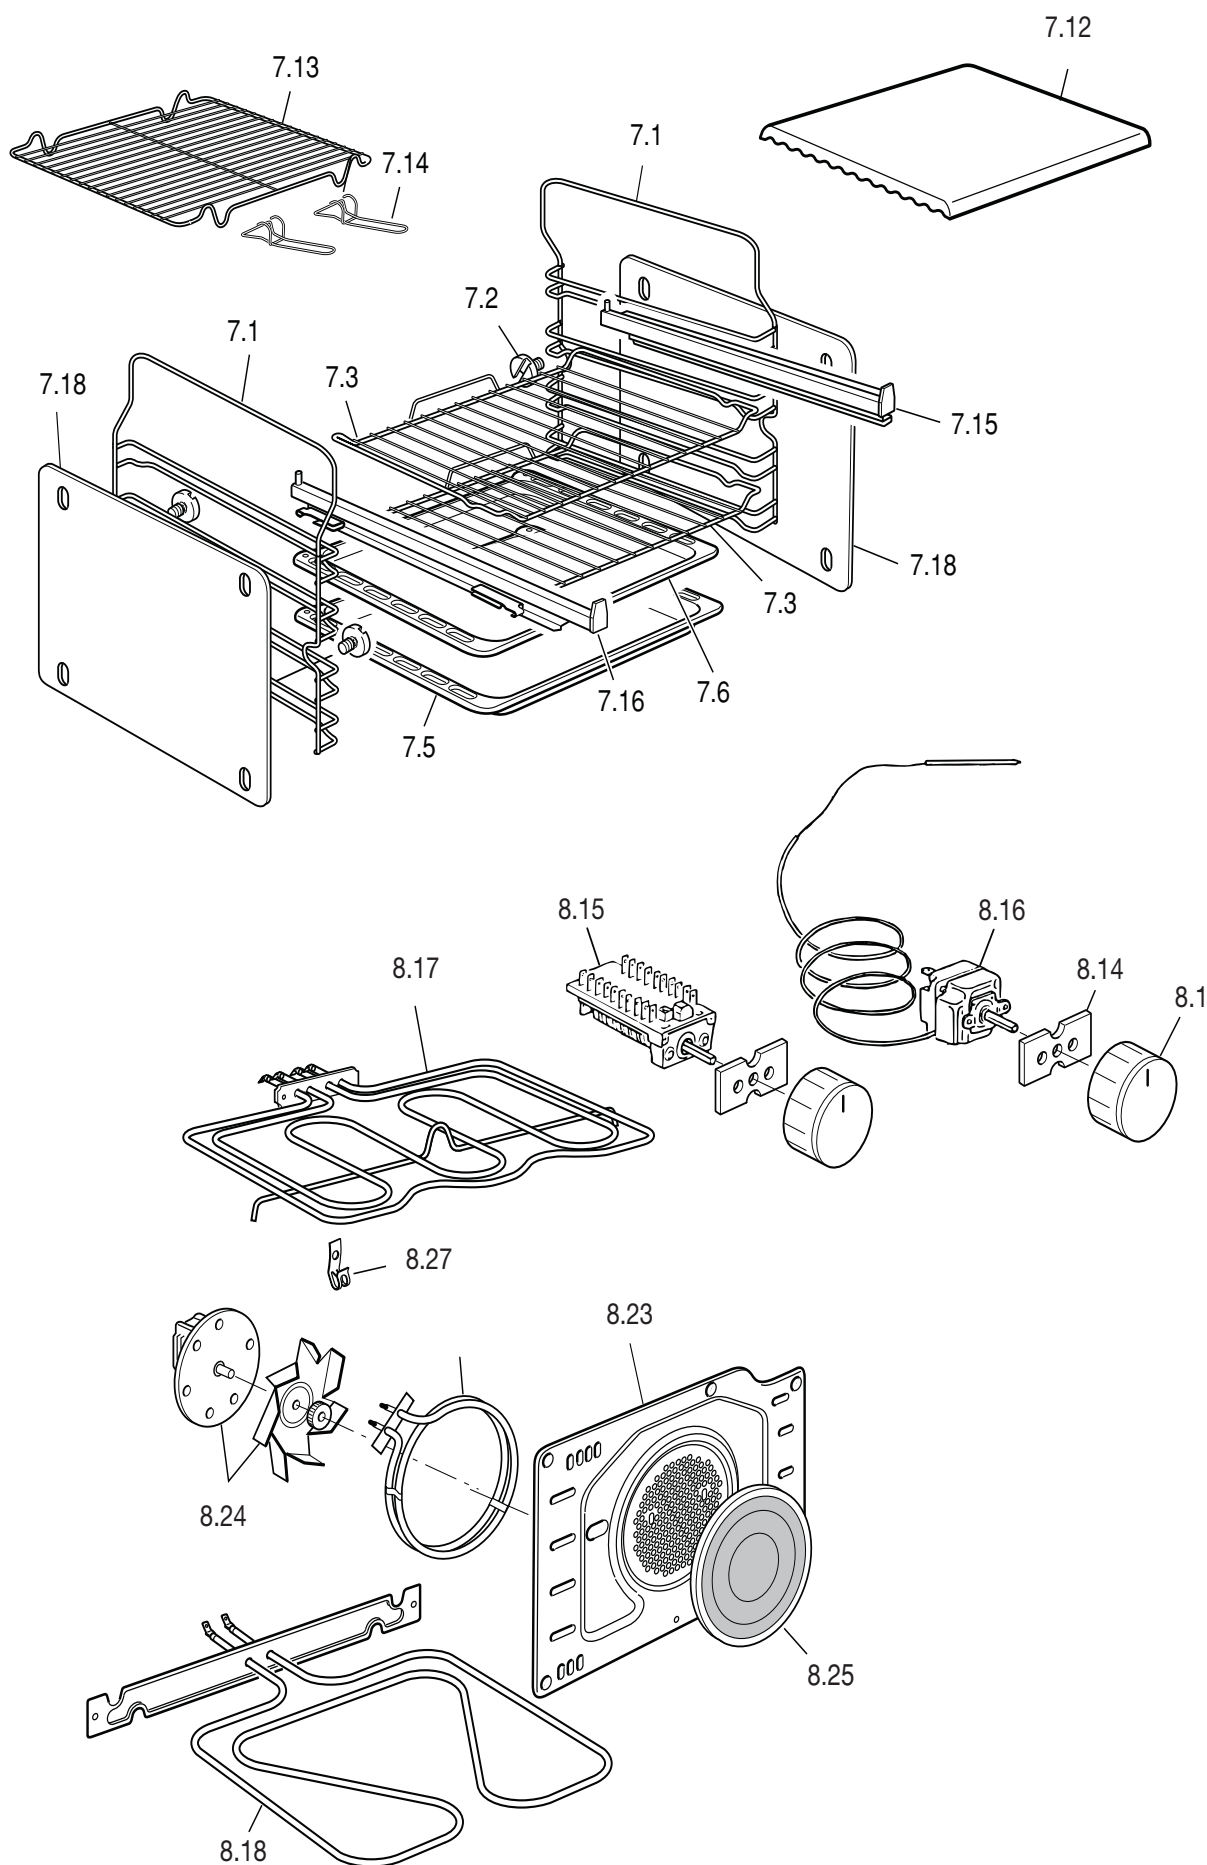 
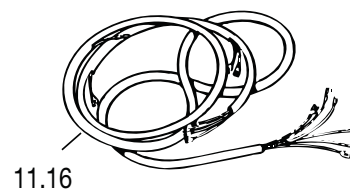 
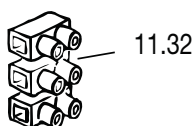 
 
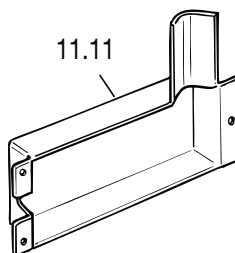 
 
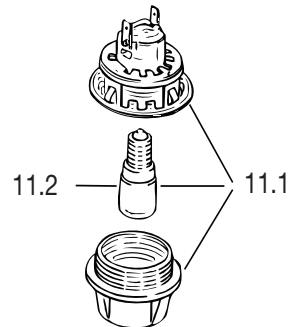 




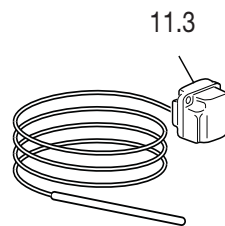

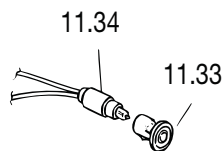

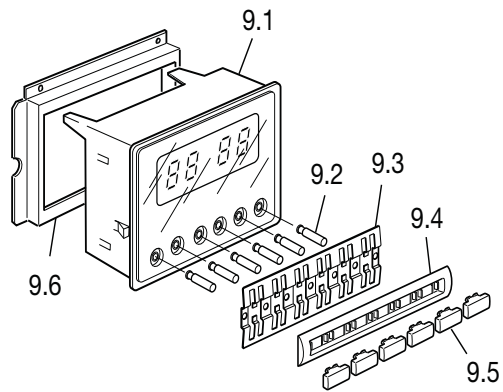

Position	Code	description
0= 01	630F612	Oven condensation kit
0= 0a	6306E01	CONTROL PANEL ASSEMBLY (INCLUDING REF. 3.1+ 3.9+ 9.2+ 9.3+ 9.4+ 9.5)
1= 1.2	032F2716DA	DOOR GLASS
2= 1.3	0313242TH	Inner glass
3= 1.4	063107	Hinge (male)
4= 1.5	51AF621SA	Left door trim
5= 1.6	51AF621DA	Right door trim
6= 1.7	037191062	HANDLE
7= 1.8	053125	SEAL
8= 1.9	040056	Rubber
9= 1.10	51BF623A	Handle bar
10= 2.2	355VC6S04	Glass with frame
11= 2.3	040041001	PLUG
12= 2.4	001057	Stainless steel screw
13= 2.5	51B6S01	Hotplates support
14= 2.7	001111	SCREW
15= 2.8	085043	Spacer hob for each hot plate (2 for each hotplate)
16= 2.9	035075	SPRING
17= 2.10	2183009464	KNOB
18= 2.11	050110230	Energy regulator
19= 2.12	050052230	Energy regulator
20= 2.13	103948	Switch spacer
21= 2.16	04732230	1 circuit hotplate diameter 180 - 1800W
22= 2.17	04711230	1 circuit hotplate diameter 145 - 1200W
23= 2.18	04744230	Two circuits hotplate diameter 210 - 2100W
24= 3.1	35C6E02UDA	CONTROL PANEL
25= 3.3	51B6E01S	Deflector
26= 3.8	213007	CLIP
27= 3.9	0312254	Glass programmer
28= 4.8	450F61EM46	Oven cube
30= 4.10	094417DX	Rear hob support right
31= 4.11	094417SX	Rear hob support left
32= 4.12	085044	SLEEVE
33= 4.13	51B6E02H	Right front trim
34= 4.14	51B6E03H	Left front trim
35= 4.15	103410080	SHIM

36= 4.16	214056	Shim nut
37= 4.17	36C6ED1S	Side panel right
38= 4.18	36C6ES1S	Side panel left
39= 4.19	094390	Door hinge (female)
40= 4.20	030191	Oven insulation
41= 4.23	411F607	Lower air conveyor
42= 4.24	421F602Z	Conveyor support
43= 4.25	411F605	Air conveyor
44= 4.26	079017	Tangential fan
45= 4.27	040056	Rubber
46= 4.30	68061008	Plinth
47= 4.34	053074	Upper seal
48= 4.35	053087	SEAL
49= 4.36	4116E02Z	REAR PANEL
50= 4.39	51B6E04Z	Lateral cross -piece support
52= 4.42	4216602Z	Bottom panel
53= 4.43	51BF603	Bottom element support
54= 4.44	51B6E06Z	Left rear trim
55= 4.45	51B6E05Z	Right rear trim
56= 4.46	037279080	Drawer handle front panel
57= 4.47	1031207	Lock pin
58= 4.48	094153	Anti tilt bracket
59= 4.49	4216E02Z	Drawer rear panel
60= 4.50	1031159	Drawer rail spacer
61= 4.51	1031160	Drawer spacer
62= 4.52	39E6E01L	Drawer front panel
63= 4.53	39K6E01Y	DRAWER
64= 4.54	421F603Z	REAR PANEL
65= 4.55	51B6107	Rail support
66= 4.56	030189	Rear insulation
67= 4.57	4216E01Z	Bottom rear panel
68= 4.58	103338DX/E	Right rail
69= 4.59	103338SX/E	Left rail
70= 4.60	103338DX/I	Right drawer rail
71= 4.61	103338SX/I	Right drawer rail
72= 7.1	217647	Shelf support
73= 7.2	001142	Shelf support screw
74= 7.3	217558.2	WIRE SHELF

75= 7.5	48BF601G	Oven tray
76= 7.6	48EF601G	PASTRY PLATE
77= 7.12	103406	Kit pizza stone
78= 7.13	217546	Grill-pan grid
79= 7.14	037144	Grill pan grid handle
80= 7.15	1031037	Right telescopic runner
81= 7.16	1031038	Left telescopic runner
82= 7.18	473070	Lateral catalytic panel
83= 8.1	2183009464	KNOB
85= 8.15	050028.1	Oven switch
86= 8.16	066141	THERMOSTAT
87= 8.17	062098004	Top + grill element 230V
88= 8.18	062128004	Bottom element 230V
89= 8.22	062097004	Fan element
90= 8.23	47AF6020	Fan diffuser
91= 8.24	079023	FAN MOTOR
92= 8.25	103085	FILTER
93= 8.27	213023	CLIP
94= 9.1	074069	Electronic programmer
95= 9.2	1031211	Pivot button
97= 9.4	103121307	Console frame (please order the complete control panel)
98= 9.5	103121207	Button (please order complete control panel)
99= 9.6	094647	Electronic programmer bracket
100= 11.1	072006	LAMP HOLDER
101= 11.2	073013001	LAMP
102= 11.3	066219	oven safety temperature thermostat
103= 11.11	103230.1A	Terminal block protection
104= 11.13	041210	Earth plate
105= 11.14	052008	Cable clamp - rear cooker
106= 11.16	1131800	WIRING
107= 11.16	1131802	Wires for hotplates
108= 11.22	094221	Earth plate
109= 11.30	066080	Cut-off thermostat 55 degree
110= 11.32	051025	Terminal block
111= 11.33	073090	Control lamp cover (Blue)
112= 11.34	073091	Control lamp L = 230