




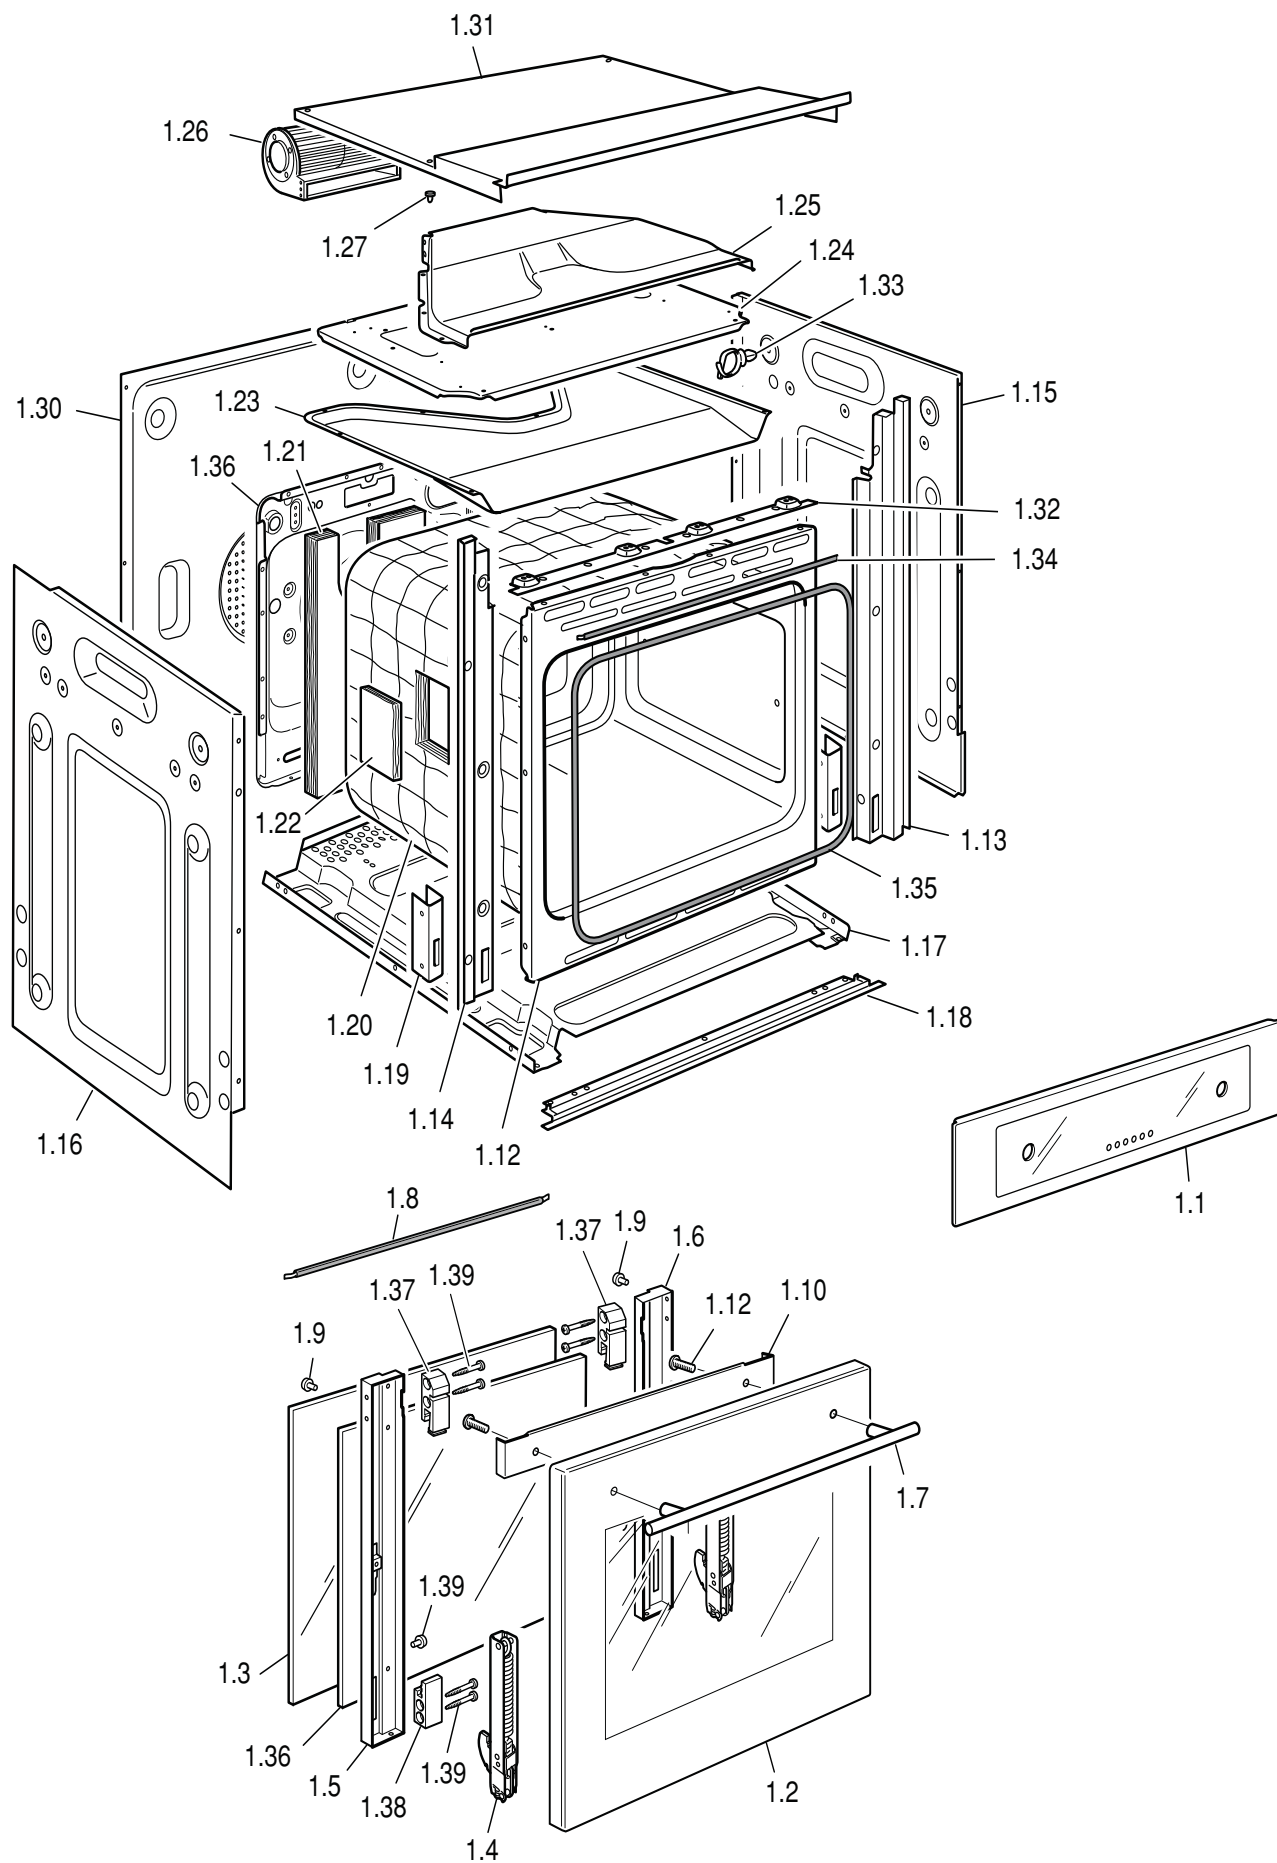

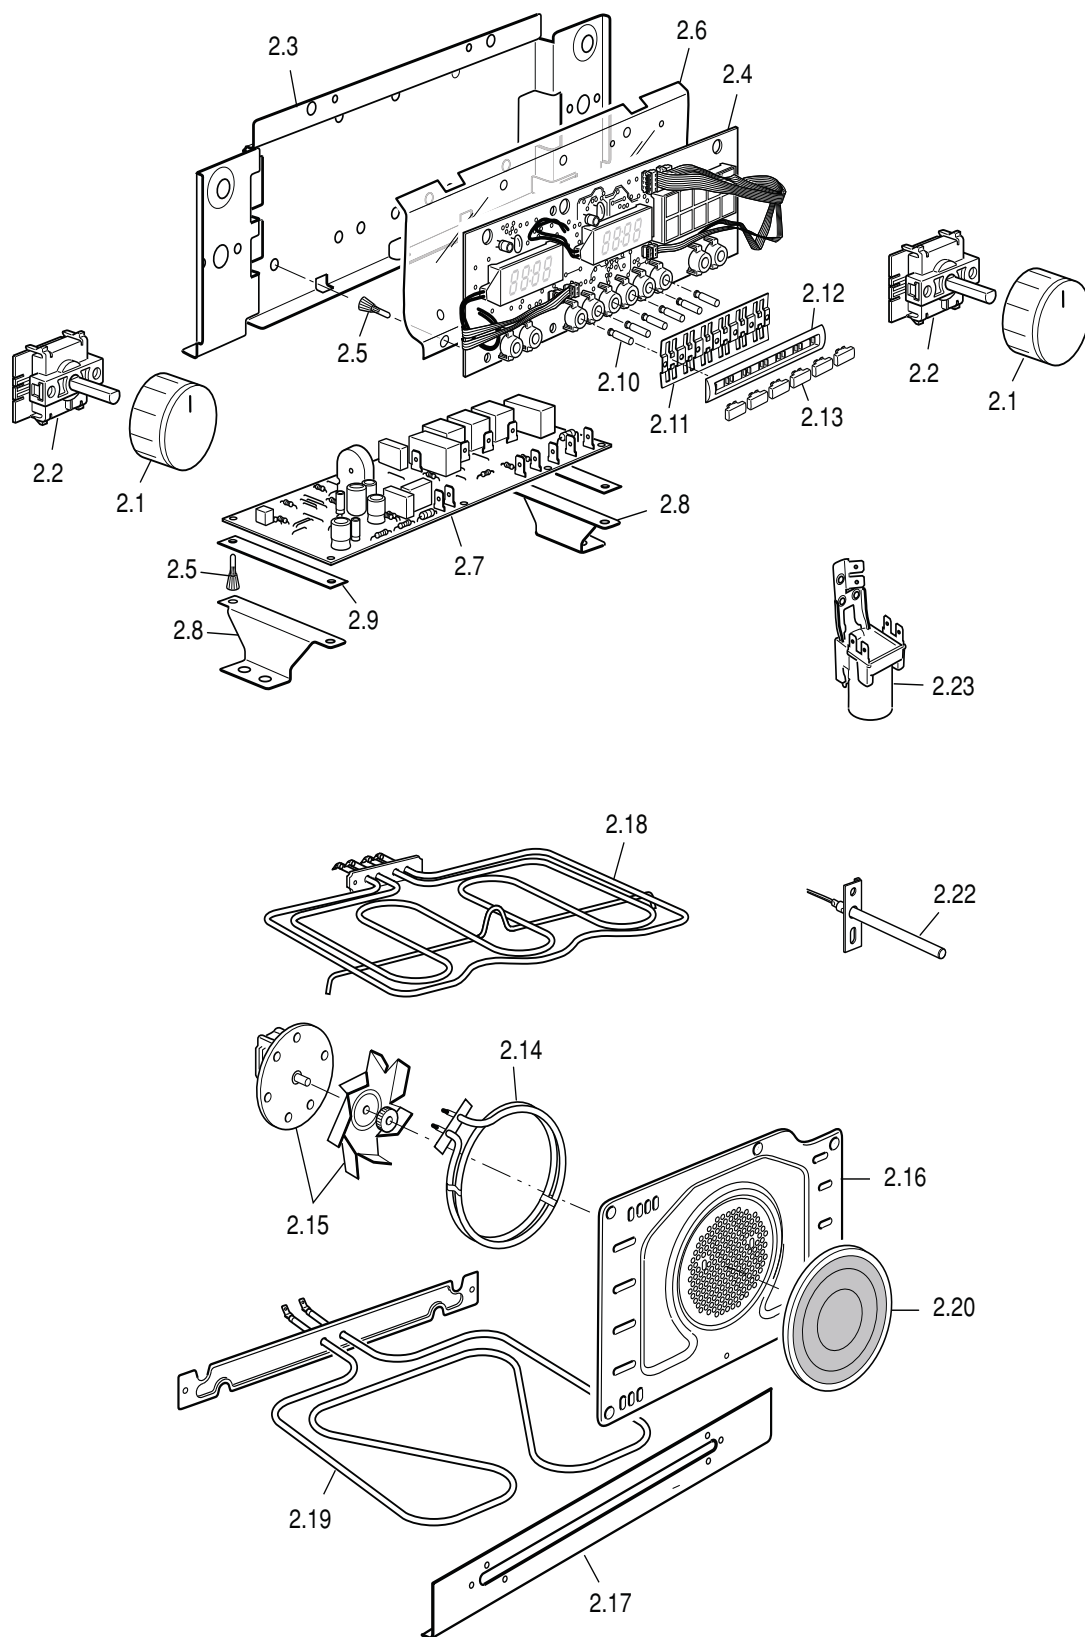

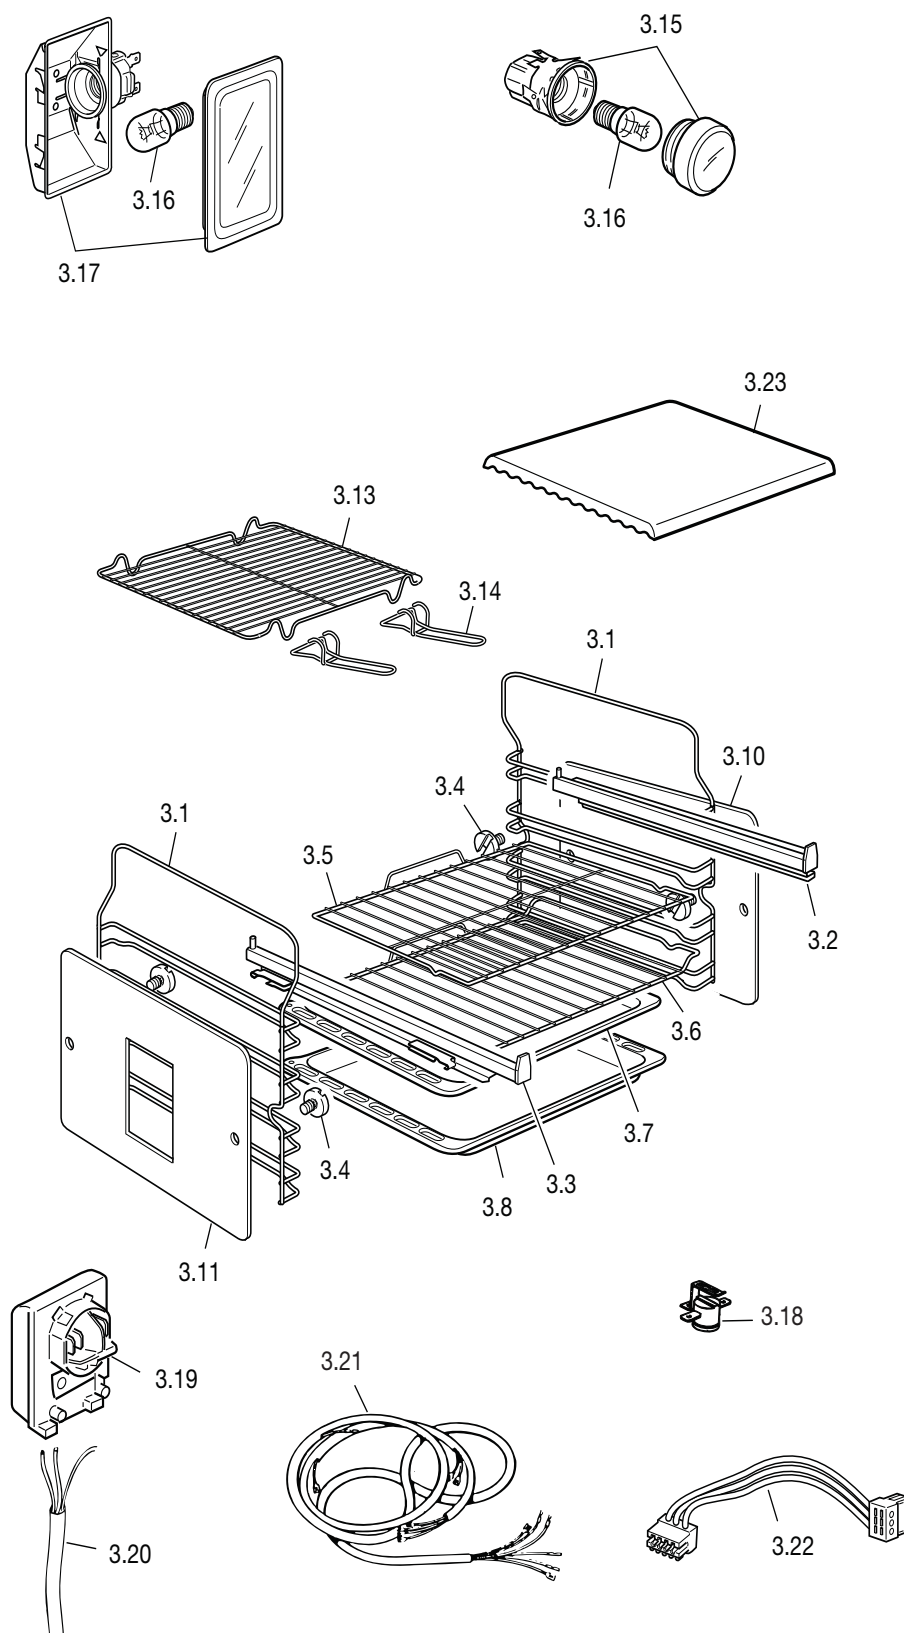

Position	Code	description
0= 00	630F612	Oven condensation kit
2= 1.2	032F2716DA	DOOR GLASS
3= 1.3	0313242TH	Inner glass
4= 1.4	063120	Hinge (male)
5= 1.5	51AF621SA	Left door trim
6= 1.6	51AF621DA	Right door trim
7= 1.7	037241062	Door handle
8= 1.8	053125	SEAL
9= 1.9	040051	Rubber
10= 1.10	51BF623A	Handle bar
11= 1.12	001265	Door handle screw
12= 1.13	51BF601DH	Right front trim
13= 1.14	51BF601SH	Left front trim
14= 1.15	411F6D1Z	Right side panel
15= 1.16	411F6S1Z	Left side panel
16= 1.17	411F602.1	Bottom panel
17= 1.18	08328400A	Lower trim
18= 1.19	094390	Door hinge (female)
19= 1.20	030188	Oven insulation
20= 1.21	030189	Rear insulation
21= 1.22	030190.1	Side lamp insulation
22= 1.23	411F607	Lower air conveyor
23= 1.24	421F602Z	Conveyor support
24= 1.25	411F605	Air conveyor
25= 1.26	079017	Tangential fan
26= 1.27	040056	Rubber
27= 1.28	450F61EM35	Oven cube
28= 1.30	411F603	REAR PANEL
29= 1.31	411F604	Upper shelter
30= 1.32	51BF614S.1	Deflector
31= 1.33	103672	WIRE CLAMP
32= 1.34	053074	Upper seal
33= 1.35	053087	SEAL
34= 1.36	0312570TH	Intermediate glass
35= 1.37	1031052	Top middle glass clamp
36= 1.38	1031053	Bottom middle glass clamp
37= 1.39	001270	SCREW

38= 2.1	218900A463	CONTROL KNOB
39= 2.2	050068	POTENTIOMETER
40= 2.3	094590	Programmer electronic card support
41= 2.4	074074B	Programmer electronic card
42= 2.5	071060	Programmer electronic peg
43= 2.6	039063	Programmer electronic card insulator
44= 2.7	074081	Power electronic card
45= 2.8	094592	Power electronic card support
46= 2.9	039064	Power electronic card insulator
47= 2.10	1031217	Pivot button (please order the control panel assembly)
48= 2.11	630F616	Button
51= 2.14	062097004	Fan element
52= 2.15	079047	Fan motor 220/240 V
53= 2.16	47AF6020	Fan diffuser
54= 2.17	51BF603	Bottom element support
55= 2.18	062098004	Top + grill element 230V
56= 2.19	062128004	Bottom element 230V
57= 2.20	103085	FILTER
58= 2.22	107063	PROBE
59= 2.23	103978	Antijamming filter
60= 3.1	217647	Shelf support
61= 3.2	1031037	Right telescopic runner
62= 3.3	1031038	Left telescopic runner
63= 3.4	001142	Shelf support screw
64= 3.5	217551.1	WIRE SHELF
65= 3.6	217558.2	WIRE SHELF
66= 3.7	48EF601	Pastry plate
67= 3.8	48BF601G	Oven tray
68= 3.10	473070	Lateral catalytic panel
69= 3.11	473100	Left lateral catalytic panel
70= 3.13	217546	Grill-pan grid
71= 3.14	037144	Grill pan grid handle
72= 3.15	072026	LAMP HOLDER
73= 3.16	073013001	LAMP
74= 3.17	072015	Side lamp holde
75= 3.18	066056	Cut-off thermostat 120 degree
76= 3.19	051079	Terminal Block
77= 3.20	054041	CORD

78= 3.21	1131662	WIRING
79= 3.22a	1131595	Electronic cards wiring (Side lamp)
80= 3.22b	1131578	Electronic cards wiring
81= 3.22c	1131579	Electronic cards wiring (display electronic card - potentiometer)
82= 3.23	103406	Kit pizza stone