



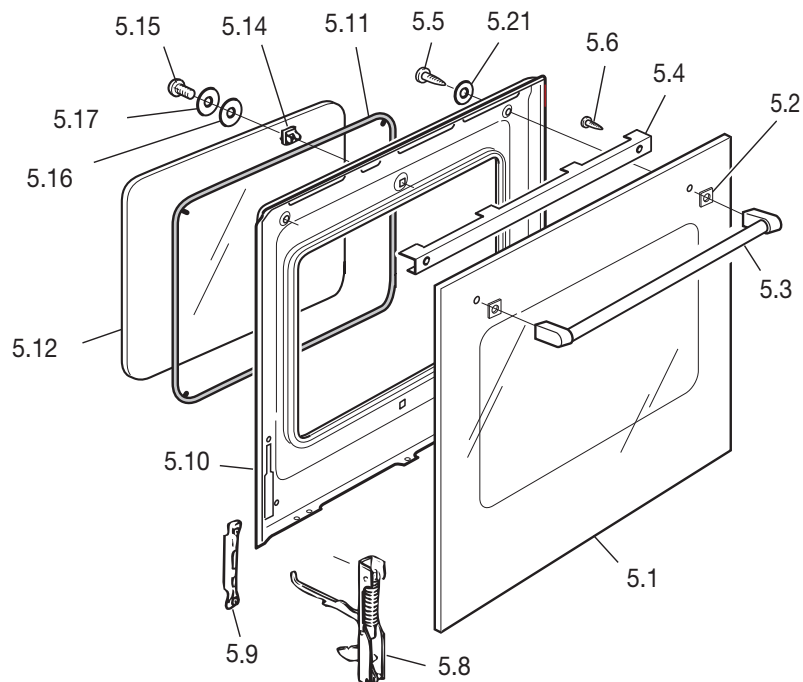
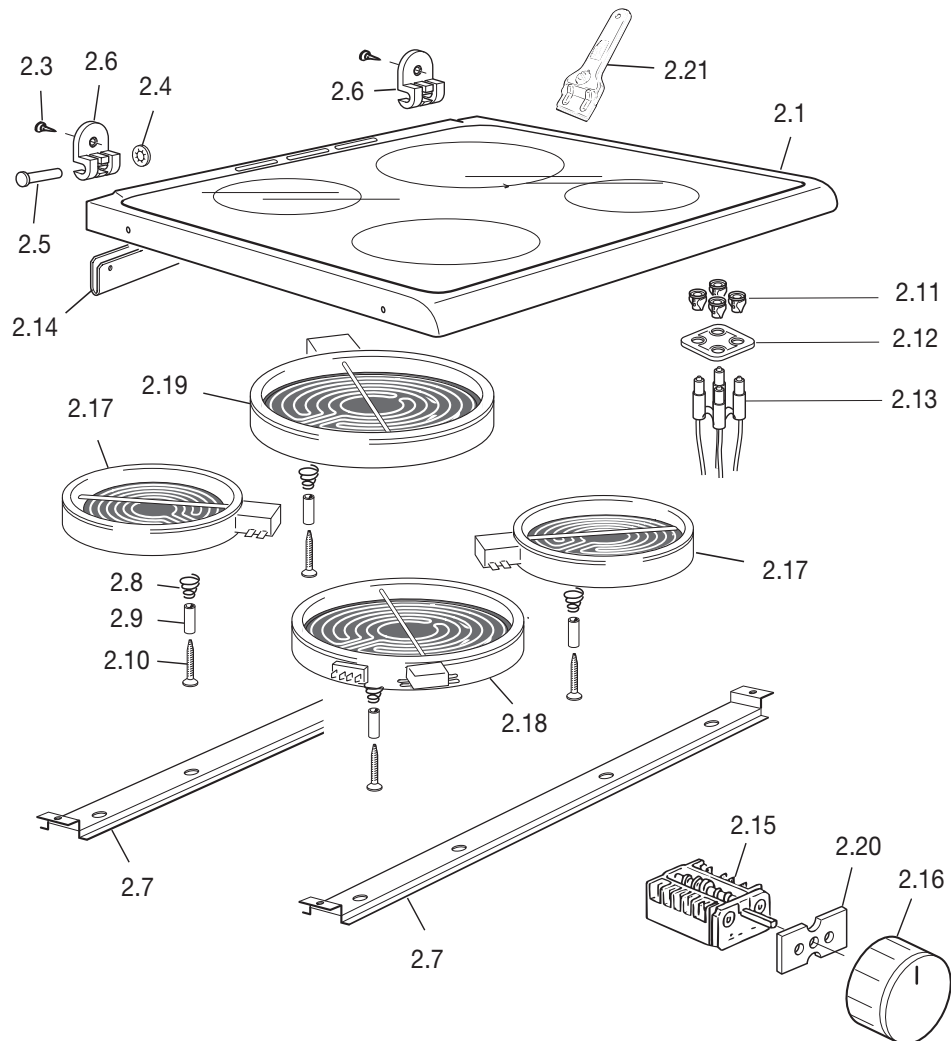


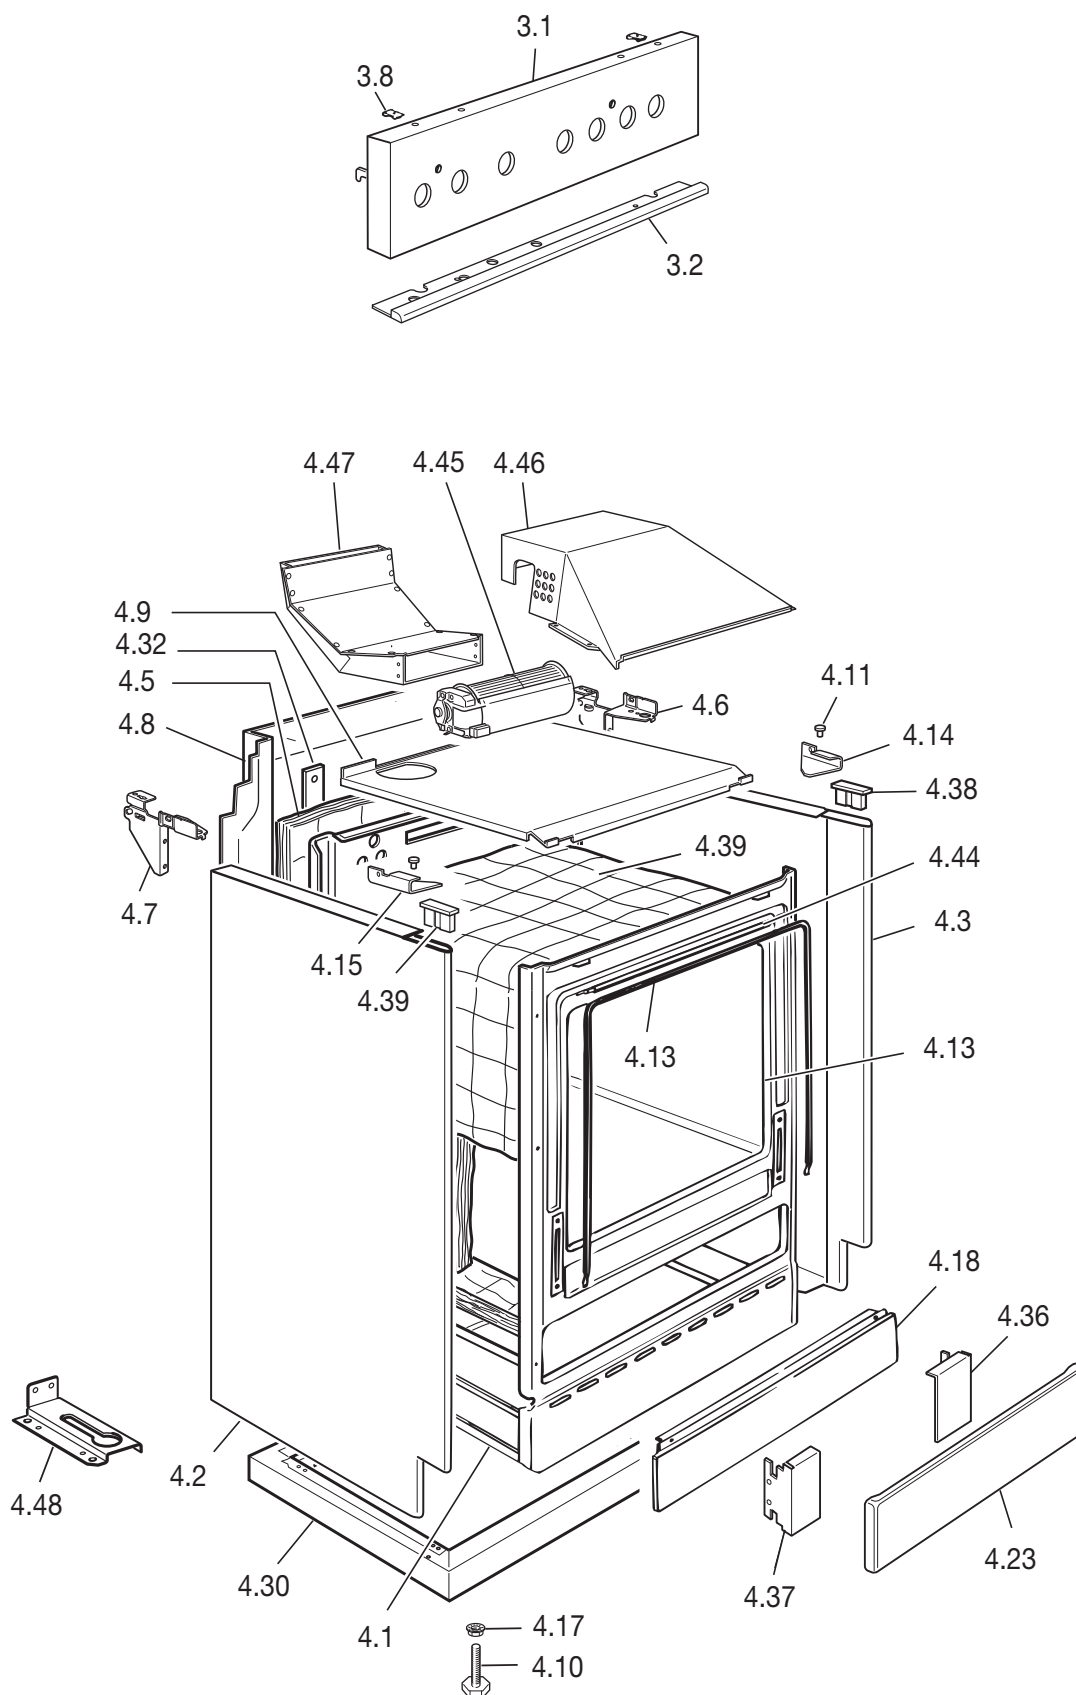

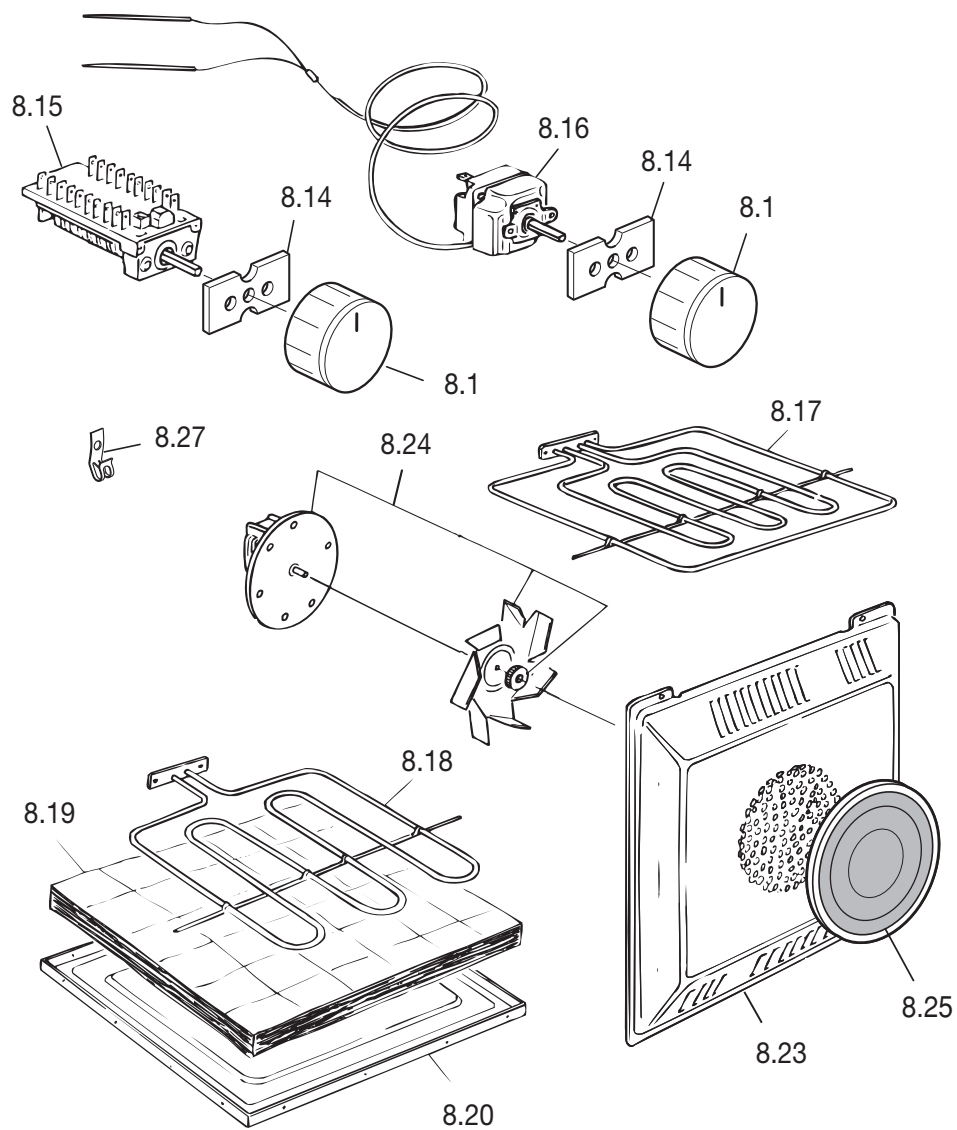

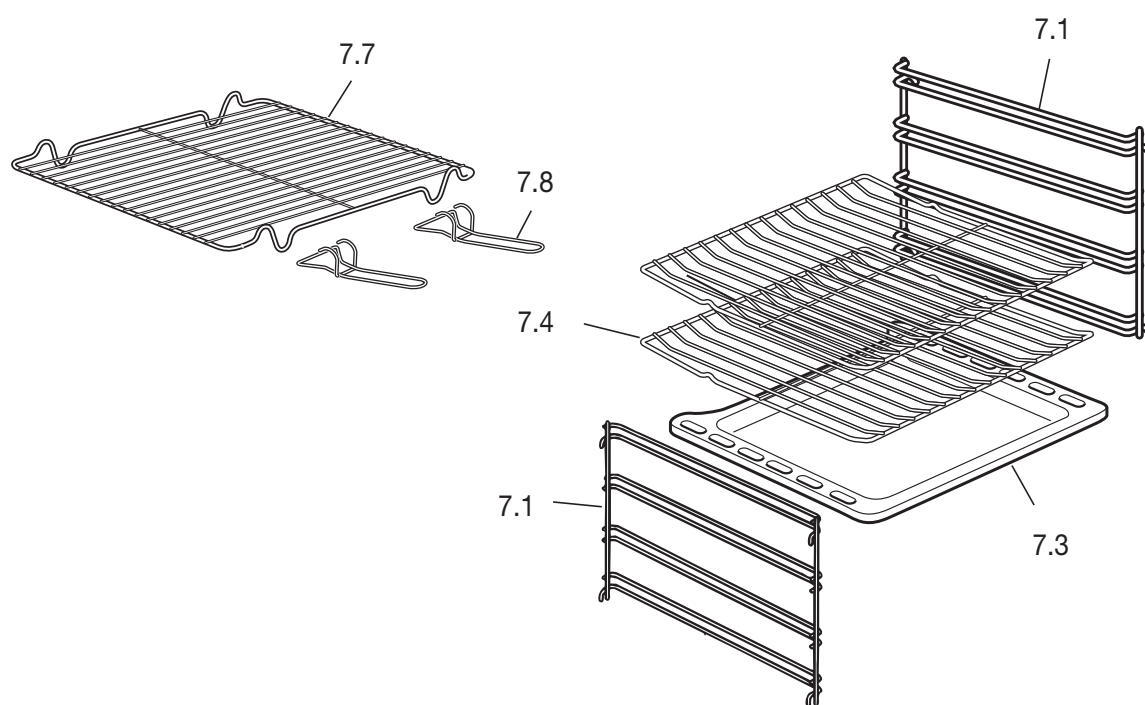

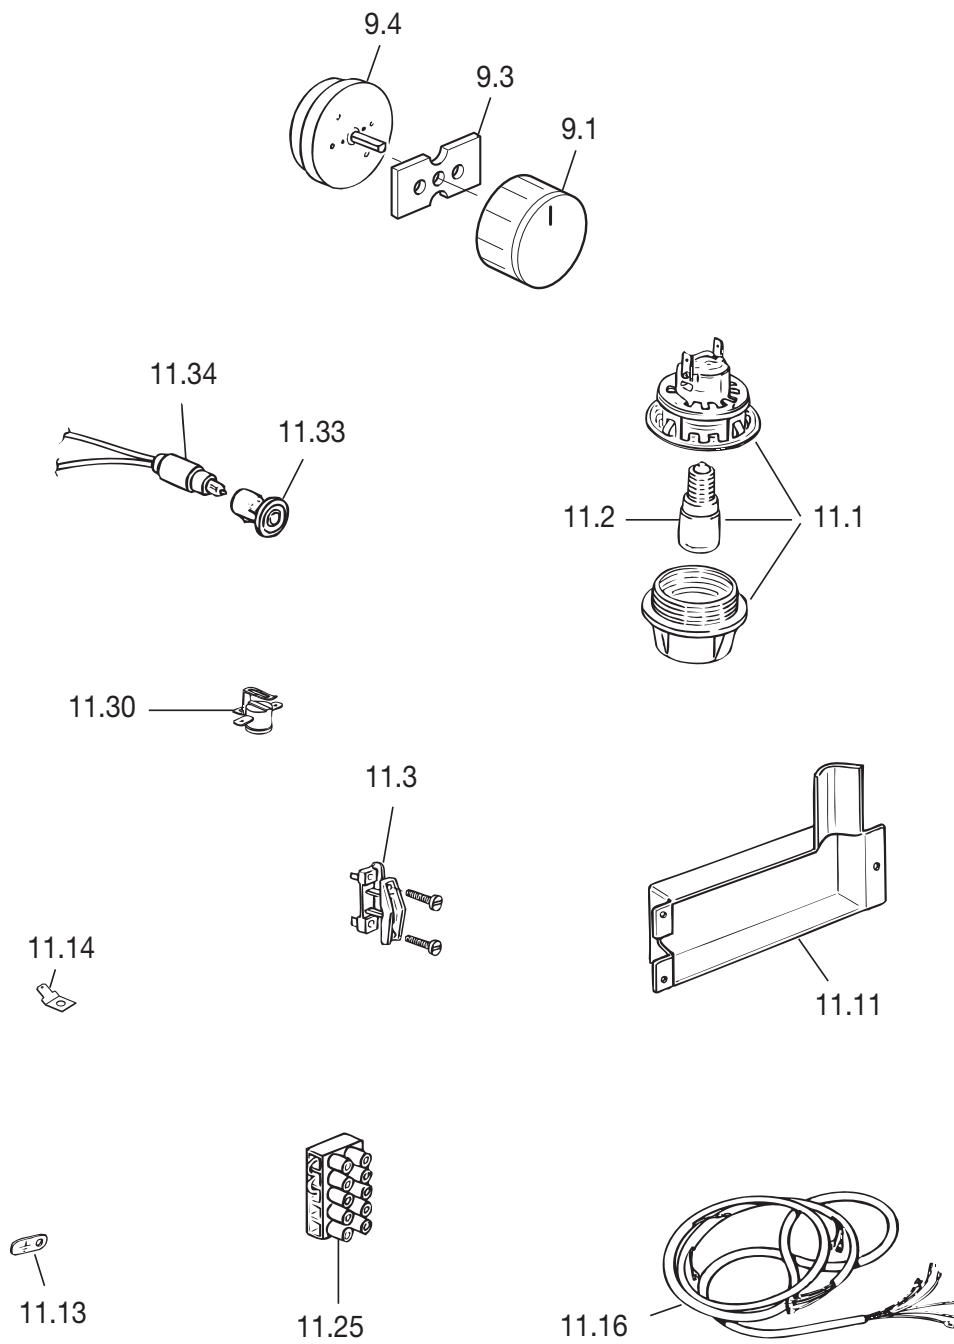

Position	Code	description
1= 2.1	355VC6127	Glass with frame
2= 2.3	001175	SCREW
3= 2.4	003060	Snap ring
4= 2.5	211022	Pivot
5= 2.6	103572	Rear spacing
6= 2.7	51B6113	Hotplates support
7= 2.8	035075	SPRING
8= 2.9	085043	Spacer hob for each hot plate (2 for each hotplate)
9= 2.10	001111	SCREW
10= 2.11	1031121	Control lamp bush
11= 2.12	1031120	SUPPORT
12= 2.13	073086.1	Control lamp
13= 2.14	103603	Rear trim
14= 2.15	050021/E	Hotplate switch
15= 2.16	2183009501	KNOB
16= 2.17	04714230	Radiant hotplate diam 145 - 1200W
17= 2.18	04716230	Radiant hotplate diam 180 - 1700W
18= 2.19	04731230	Radiant hotplate diam 210 - 2100W
19= 2.20	103948	Switch spacer
20= 2.21	103138	SCRAPER
21= 3.1	35N6P35LDA	CONTROL PANEL
22= 3.2	103761	Control panel trim
23= 3.8	213007	CLIP
24= 4.1	4506N1SV21	Oven frame
25= 4.2	36C6NS1S	Left side panel
26= 4.3	36C6ND1S	Right side panel
27= 4.4	030082.1	Oven insulation
28= 4.5	030098.1	Rear insulation
29= 4.6	094354DX	Rear right coupler
30= 4.7	094354SX	Left right coupler
31= 4.8	4116N08	REAR PANEL
32= 4.9	4216107Z	Upper shelter
33= 4.10	103410080	SHIM
34= 4.11	040011	BUFFER
35= 4.13	053199	Bottom oven seal
36= 4.14	094333DX	Rear right coupler
37= 4.15	094333SX	Rear left coupler

38= 4.17	214056	Shim nut
39= 4.18	103160061	Base panel
40= 4.23	39E6603L	Drawer front panel
41= 4.30	68061010	Plinth
42= 4.32	4219604Z	Rear insulation support
43= 4.36	094098	Front panel right bracket
44= 4.37	094099	Front panel left bracket
45= 4.38	081083/NS	Right stopper
46= 4.39	081084/NS	Left stopper
47= 4.44	053074	Upper seal
48= 4.45	079017	Tangential fan
49= 4.46	46A6N03Z	Air conveyor
50= 4.47	46A6N02Z	FUNNEL
51= 4.48	094649	Anti-tilt bracket
52= 5.1	032613011A	DOOR GLASS
53= 5.2	103713	Door handle plaque
54= 5.3	037191062	HANDLE
55= 5.4	4116111	Fixing bar
56= 5.5	001056	SCREW
57= 5.6	001071	Door handle screw
58= 5.8	063053	Door hinge (male)
59= 5.9	063025	Top oven hinge (female) works with male hinge 063089
60= 5.10	373FF719G	Door panel
61= 5.11	053084	Bottom oven glass seal
62= 5.12	0311000.1	Inner glass
63= 5.14	214021	NUT
64= 5.15	001214	SCREW
65= 5.16	003035	WASHER
66= 5.17	103205.1	WASHER
67= 5.21	003030	WASHER
68= 7.1	217291	Shelf support
69= 7.3	48B6106G	Oven tray
70= 7.4	217439	OVEN SHELF
71= 7.7	217397	Grill-pan grid
72= 7.8	037144	Grill pan grid handle
75= 8.15	050030	Oven switch
76= 8.16	066072	Oven thermostat

77= 8.17	062158004	Top + grill element 230V
78= 8.18	062066004	Bottom element 230V
79= 8.19	030083.1	Bottom element insulation
80= 8.20	4216102Z	Bottom element support
81= 8.23	47AN601G	Fan diffuser
82= 8.24	079008001F	Fan motor - 230 V
83= 8.25	103085	FILTER
84= 8.27	213025	CLIP
85= 9.1	2183009501	KNOB
87= 9.4	074009	60 min alarm
88= 11.1	072023	Lamp holder assembly
89= 11.2	073013001	LAMP
90= 11.3	052008	Cable clamp - rear cooker
91= 11.11	103230.1A	Terminal block protection
92= 11.13	041210	Earth plate
93= 11.14	094221	Earth plate
94= 11.16a	1132158	WIRING LOOM
95= 11.16b	1131821	Wires for hotplates
96= 11.25	051025	Terminal block
97= 11.30	066057	Cut-off thermostat
98= 11.33	073090	Control lamp cover (Blue)
99= 11.34	073091	Control lamp L = 230