 
 
 
 
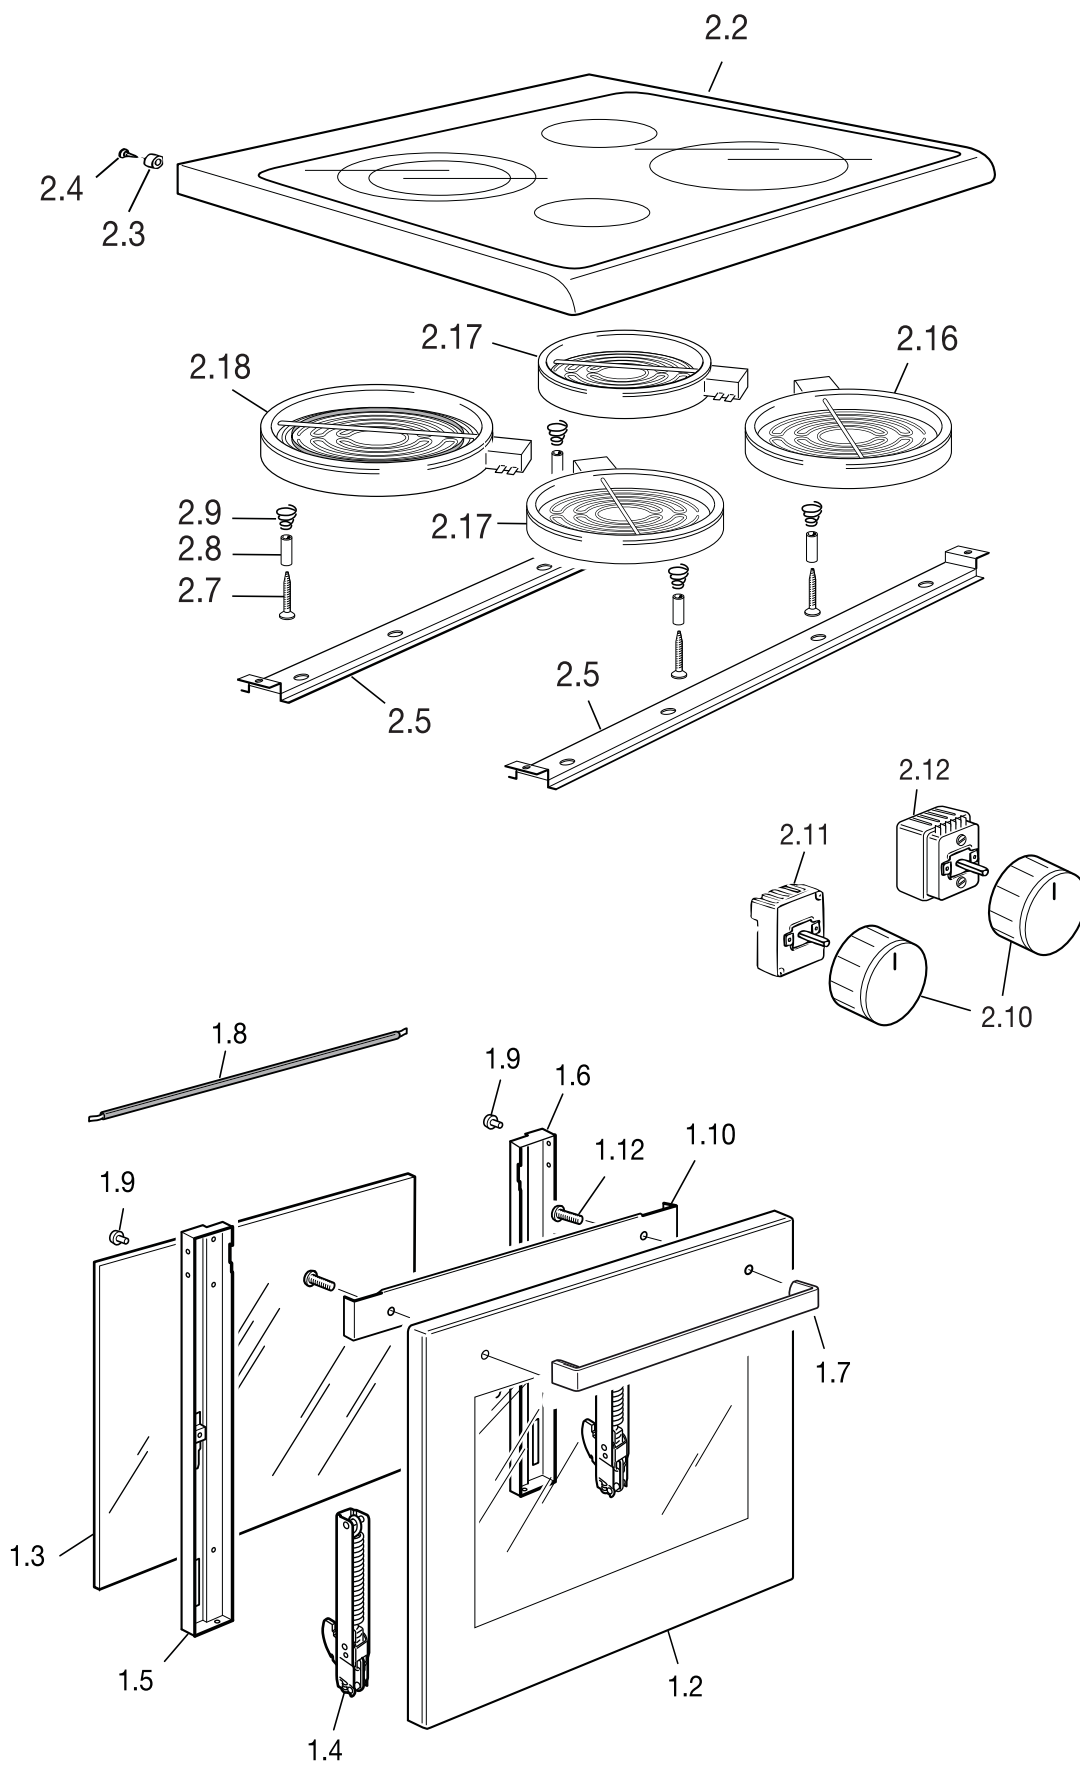 
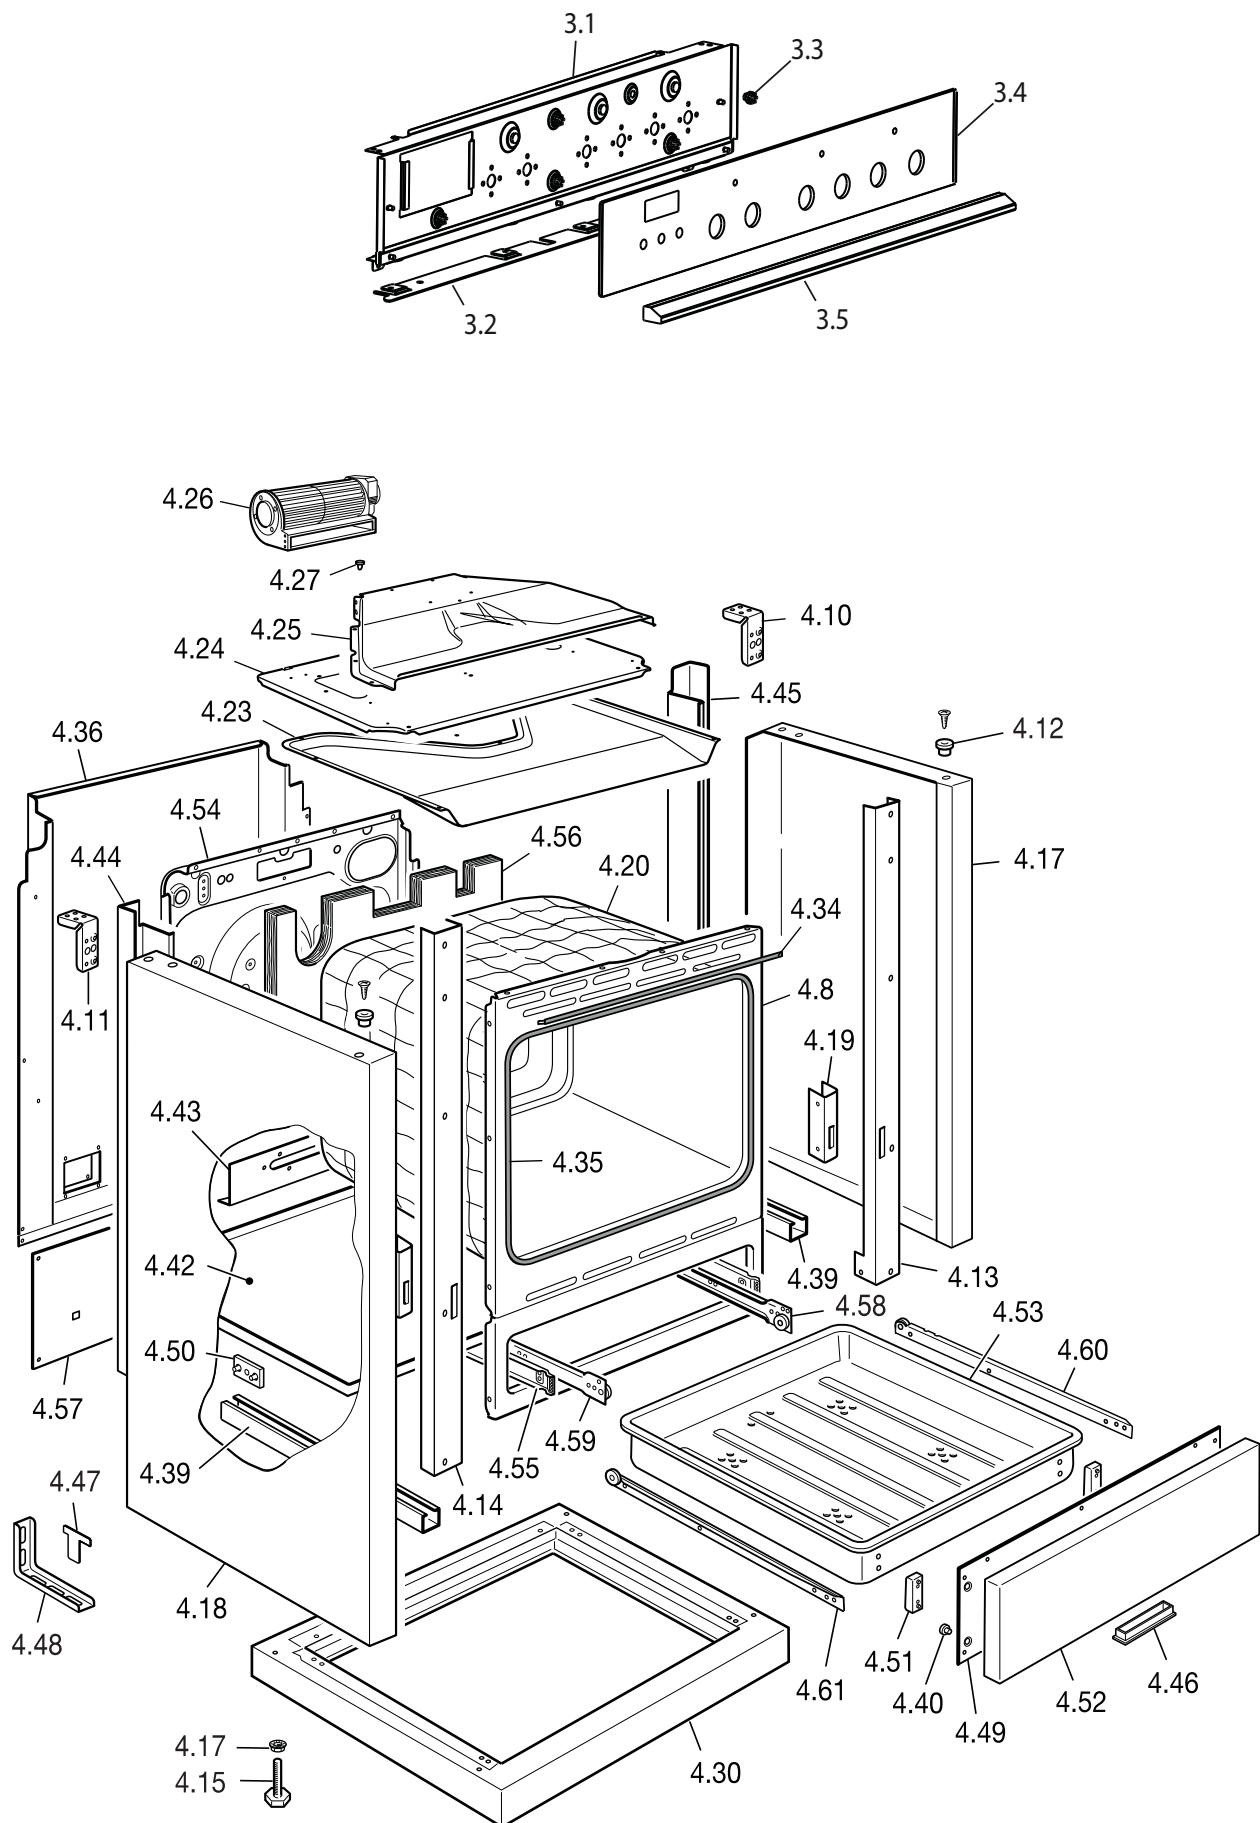 
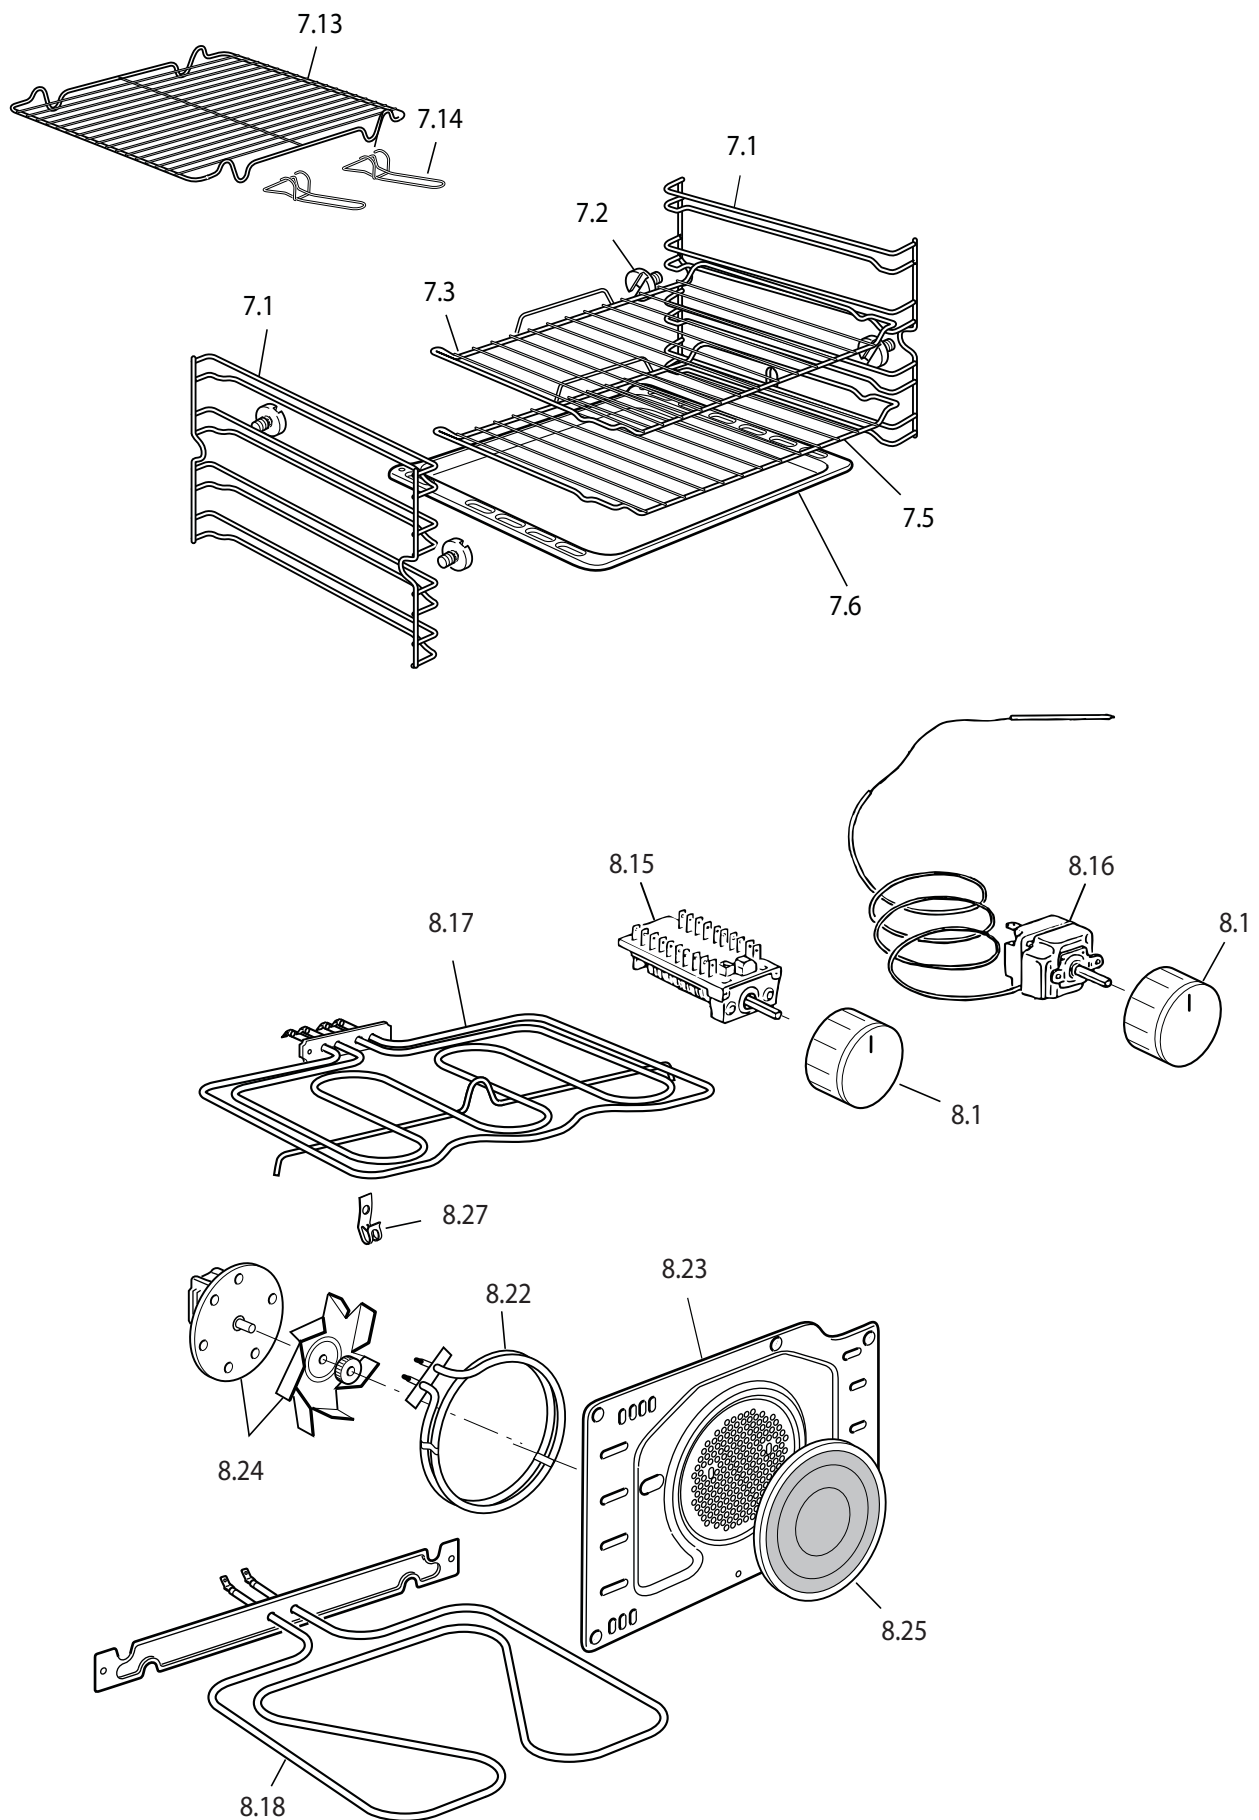 
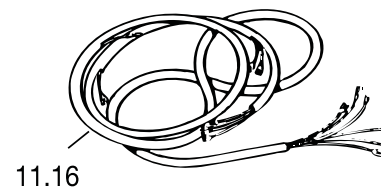 
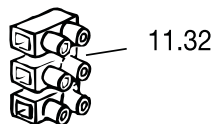 
 
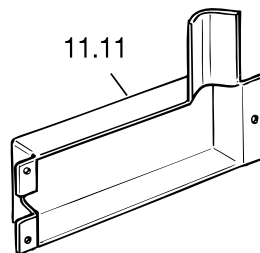 
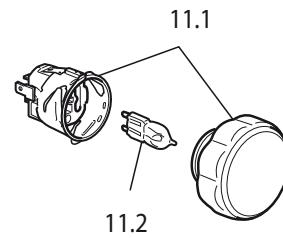 




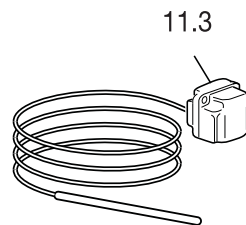

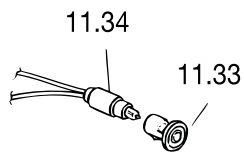

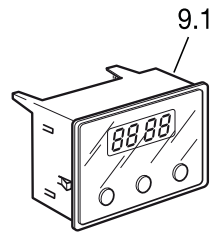

Position	Code	description
0= 00	630F612	Oven condensation kit
1= 1.2	032F2904D2	DOOR GLASS
2= 1.3	0313242TH	Inner glass
3= 1.4	063107	Hinge (male)
4= 1.5	51AF621SA	Left door trim
5= 1.6	51AF621DA	Right door trim
6= 1.7	037280061	Door handle
7= 1.8	053125	SEAL
8= 1.9	040056	Rubber
9= 1.10	51BF623A	Handle bar
10= 2.2	355VC6S04	Glass with frame
11= 2.3	040041001	PLUG
12= 2.4	001057	Stainless steel screw
13= 2.5	51B6S01	Hotplates support
14= 2.7	001111	SCREW
15= 2.8	085043	Spacer hob for each hot plate (2 for each hotplate)
16= 2.9	035075	SPRING
18= 2.11	050110230	Energy regulator
19= 2.12	050052230	Energy regulator
20= 2.16	04751230	1 circuit hotplate diameter 180 - 1800W
21= 2.17	04796230	Hi-light cooking zone - diam 140 mm 1200 W
22= 2.18	04799230	Double hi-light cooking zonediam 210/120 mm 2200/750 W
23= 3.1	35M6E004A	CONTROL PANEL
24= 3.2	51BF614S.1	Deflector
25= 3.3	040063	BUFFER
26= 3.4	0326E006	CONTROL PANEL GLASS
27= 3.5	1031579	Frontal trim
28= 4.8	450F61EM46	Oven cube
29= 4.10	094417DX	Rear hob support right
30= 4.11	094417SX	Rear hob support left
31= 4.12	085044	SLEEVE
32= 4.13	51B6E02H	Right front trim
33= 4.14	51B6E03H	Left front trim
34= 4.15	103410080	SHIM
35= 4.16	214056	Shim nut
36= 4.17	36C6ED1S	Side panel right

37= 4.18	36C6ES1S	Side panel left
38= 4.19	094390	Door hinge (female)
39= 4.20	030191	Oven insulation
40= 4.23	411F607	Lower air conveyor
41= 4.24	421F602Z	Conveyor support
42= 4.25	411F605	Air conveyor
43= 4.26	079017	Tangential fan
44= 4.27	040056	Rubber
45= 4.30	68061008	Plinth
46= 4.34	053074	Upper seal
47= 4.35	053087	SEAL
48= 4.36	4116E02Z	REAR PANEL
49= 4.39	51B6E04Z	Lateral cross -piece support
51= 4.42	4216602Z	Bottom panel
52= 4.43	51BF603	Bottom element support
53= 4.44	51B6E06Z	Left rear trim
54= 4.45	51B6E05Z	Right rear trim
55= 4.46	037279080	Drawer handle front panel
56= 4.47	1031207	Lock pin
57= 4.48	094153	Anti tilt bracket
58= 4.49	4216E02Z	Drawer rear panel
59= 4.50	1031159	Drawer rail spacer
60= 4.51	1031160	Drawer spacer
61= 4.52	39E6E01L	Drawer front panel
62= 4.53	39K6E01Y	DRAWER
63= 4.54	421F603Z	REAR PANEL
64= 4.55	51B6107	Rail support
65= 4.56	030189	Rear insulation
66= 4.57	4216E01Z	Bottom rear panel
67= 4.58	103338DX/E	Right rail
68= 4.59	103338SX/E	Left rail
69= 4.60	103338DX/I	Right drawer rail
70= 4.61	103338SX/I	Right drawer rail
71= 7.1	217646	Shelf support
72= 7.2	1142	SCREW
73= 7.3	217558.2	WIRE SHELF
74= 7.5	217551.1	WIRE SHELF
75= 7.6	48BF602G	Oven tray

AU, NZ DEF608E

76= 7.13	217546	Grill-pan grid
77= 7.14	037144	Grill pan grid handle
78= 8.1	2183009482	Oven knob
79= 8.15	050028.1	Oven switch
80= 8.16	066141	THERMOSTAT
81= 8.17	062089004	Top + grill element - 230 V
82= 8.18	062090004	Bottom element - 230 V
83= 8.22	062097004	Fan element
84= 8.23	47AF6020	Fan diffuser
85= 8.24	079008001F	Fan motor - 230 V
86= 8.25	103085	FILTER
87= 8.27	213025	CLIP
88= 9.1	074105	Electronic timer
89= 11.1	072026	LAMP HOLDER
90= 11.2	073103	LAMP
91= 11.3	066219	oven safety temperature thermostat
92= 11.11	103230.1A	Terminal block protection
93= 11.13	041210	Earth plate
94= 11.14	052008	Cable clamp - rear cooker
95= 11.16a	1132167	WIRING
96= 11.16b	1131802	Wires for hotplates
97= 11.22	094221	Earth plate
98= 11.30	066080	Cut-off thermostat 55 degree
99= 11.32	051025	Terminal block
100= 11.33	073092	Control lamp cover
101= 11.34	073091	Control lamp L = 230