




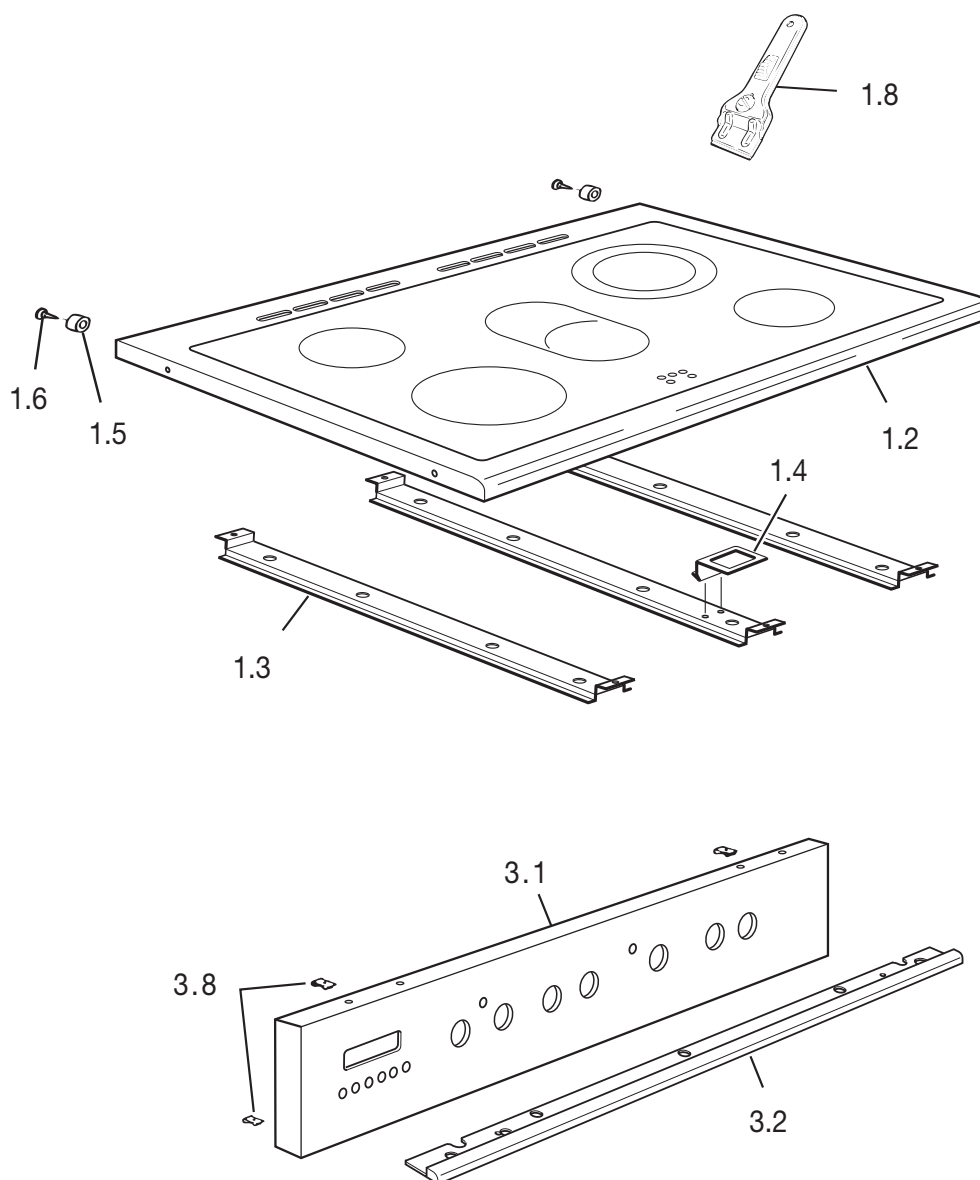
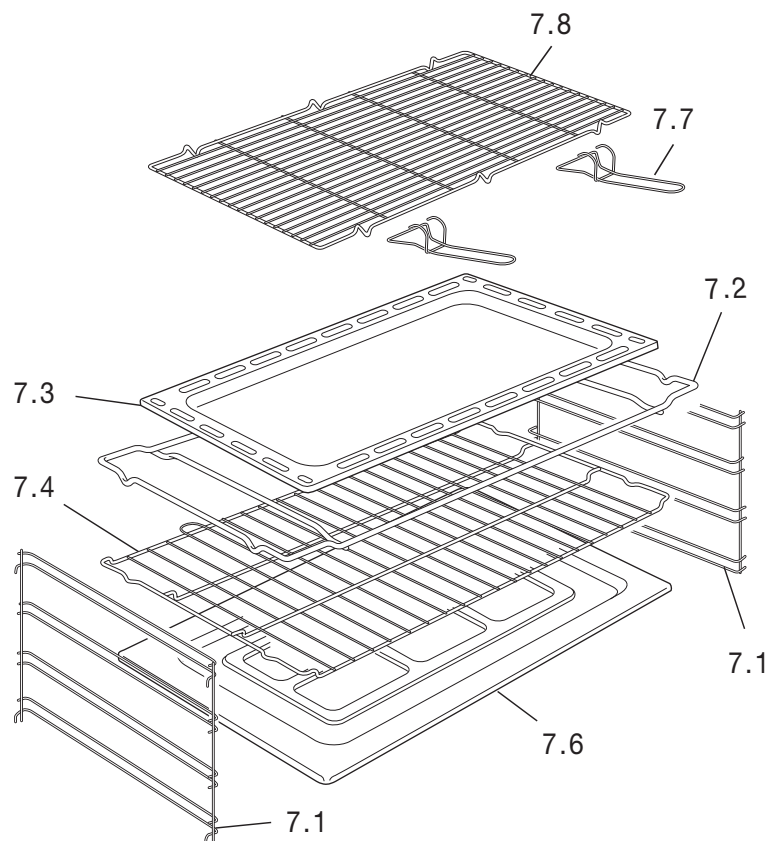


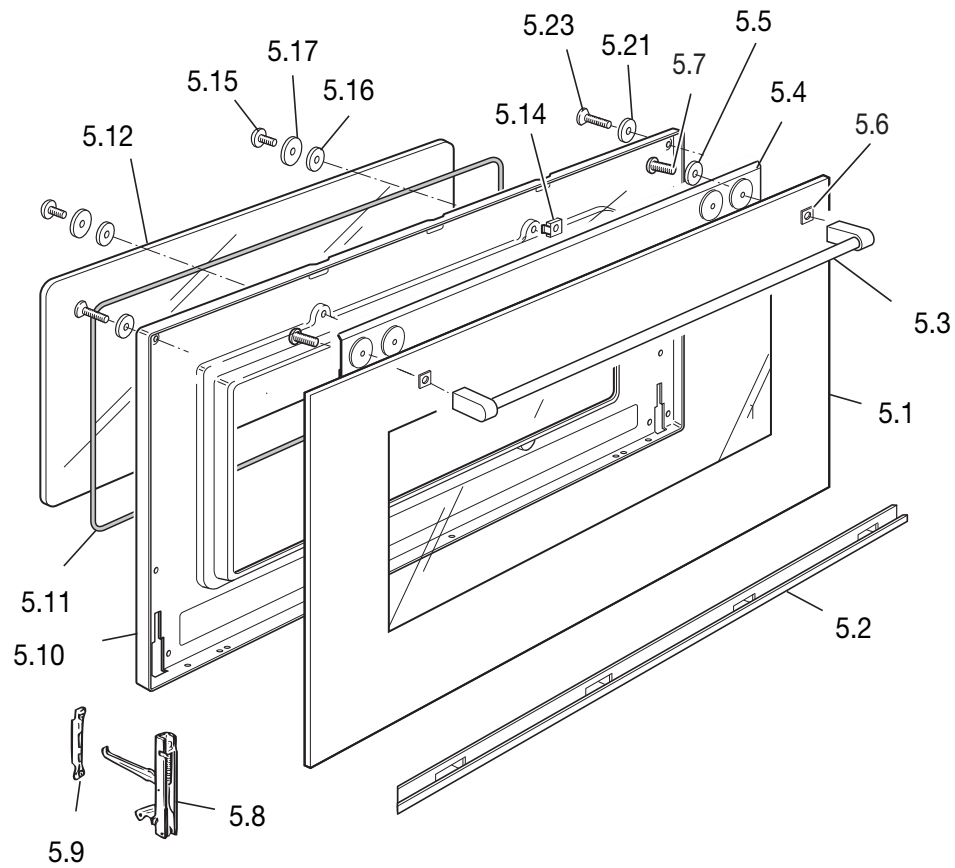

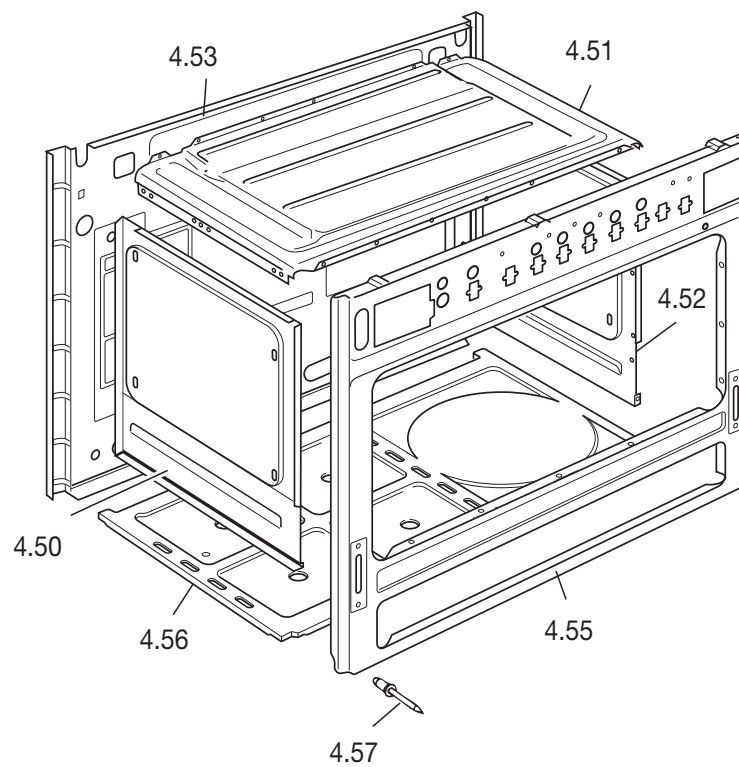

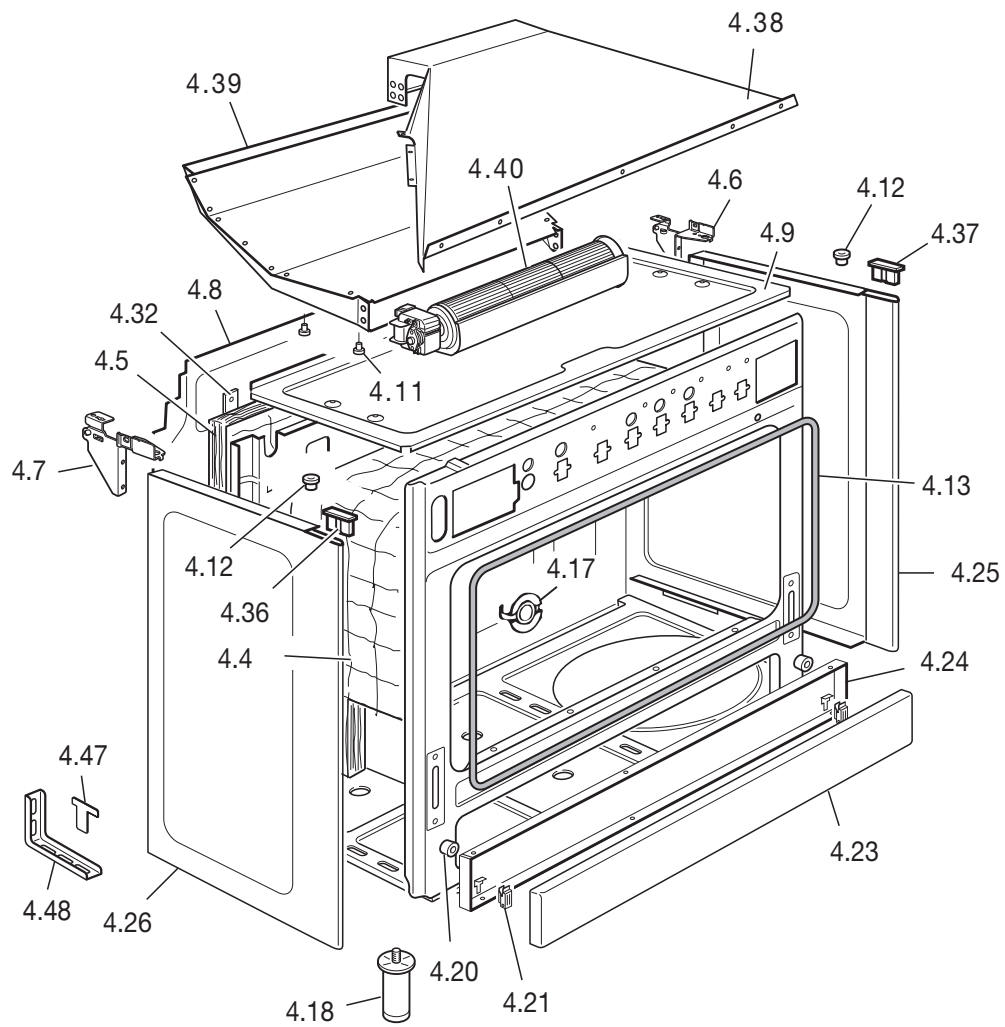

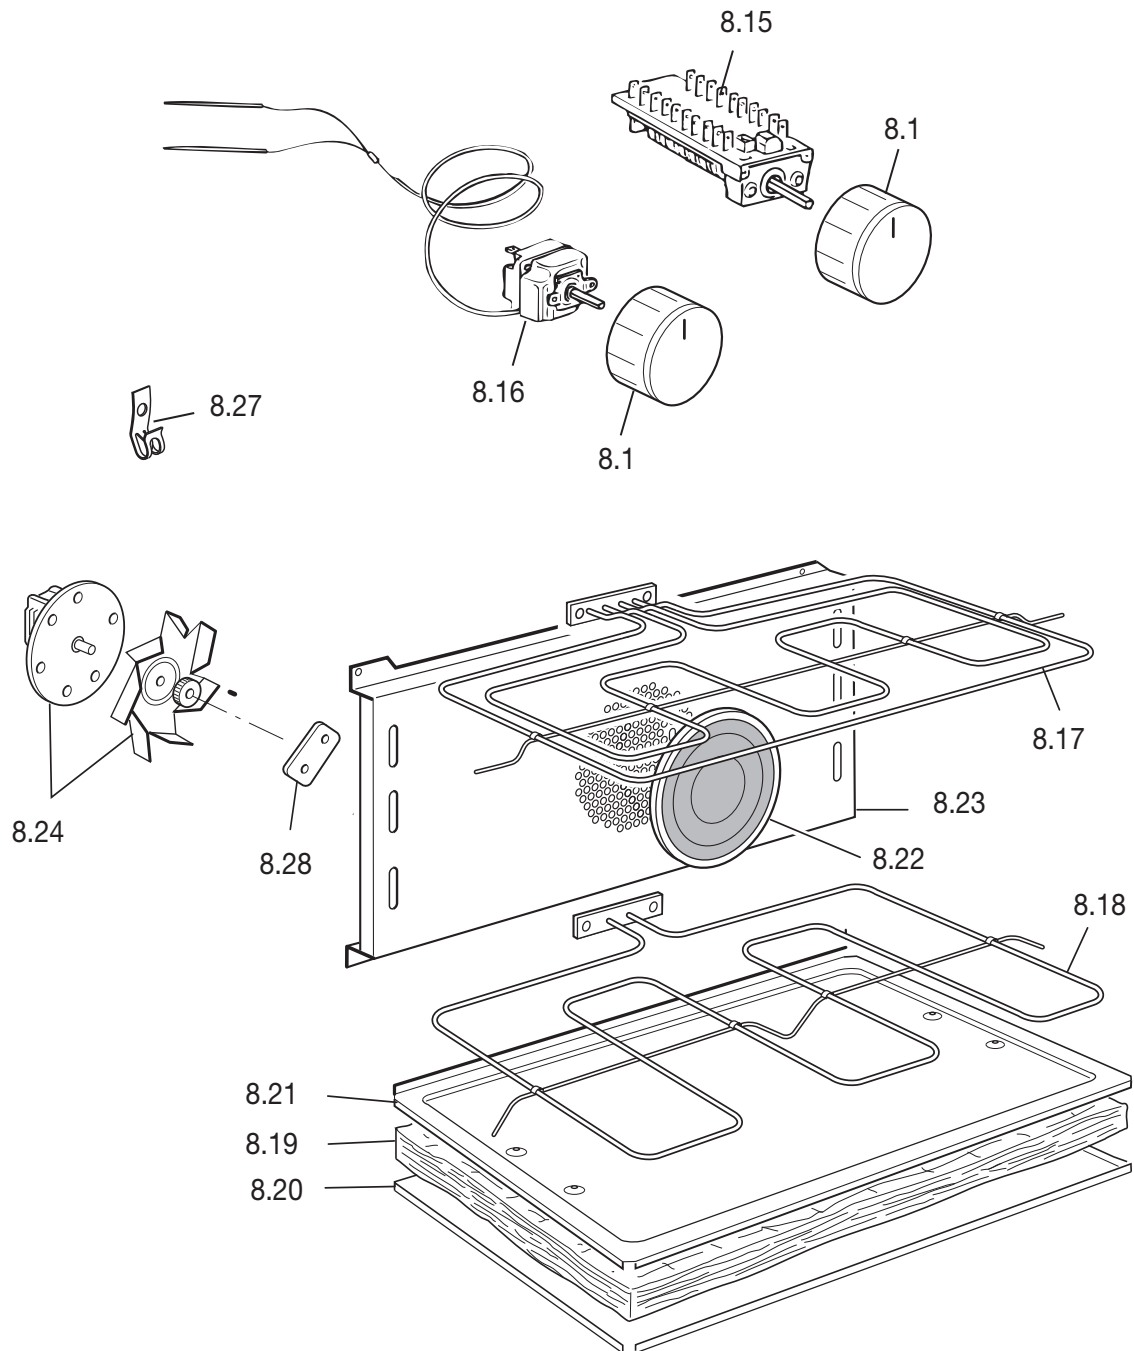

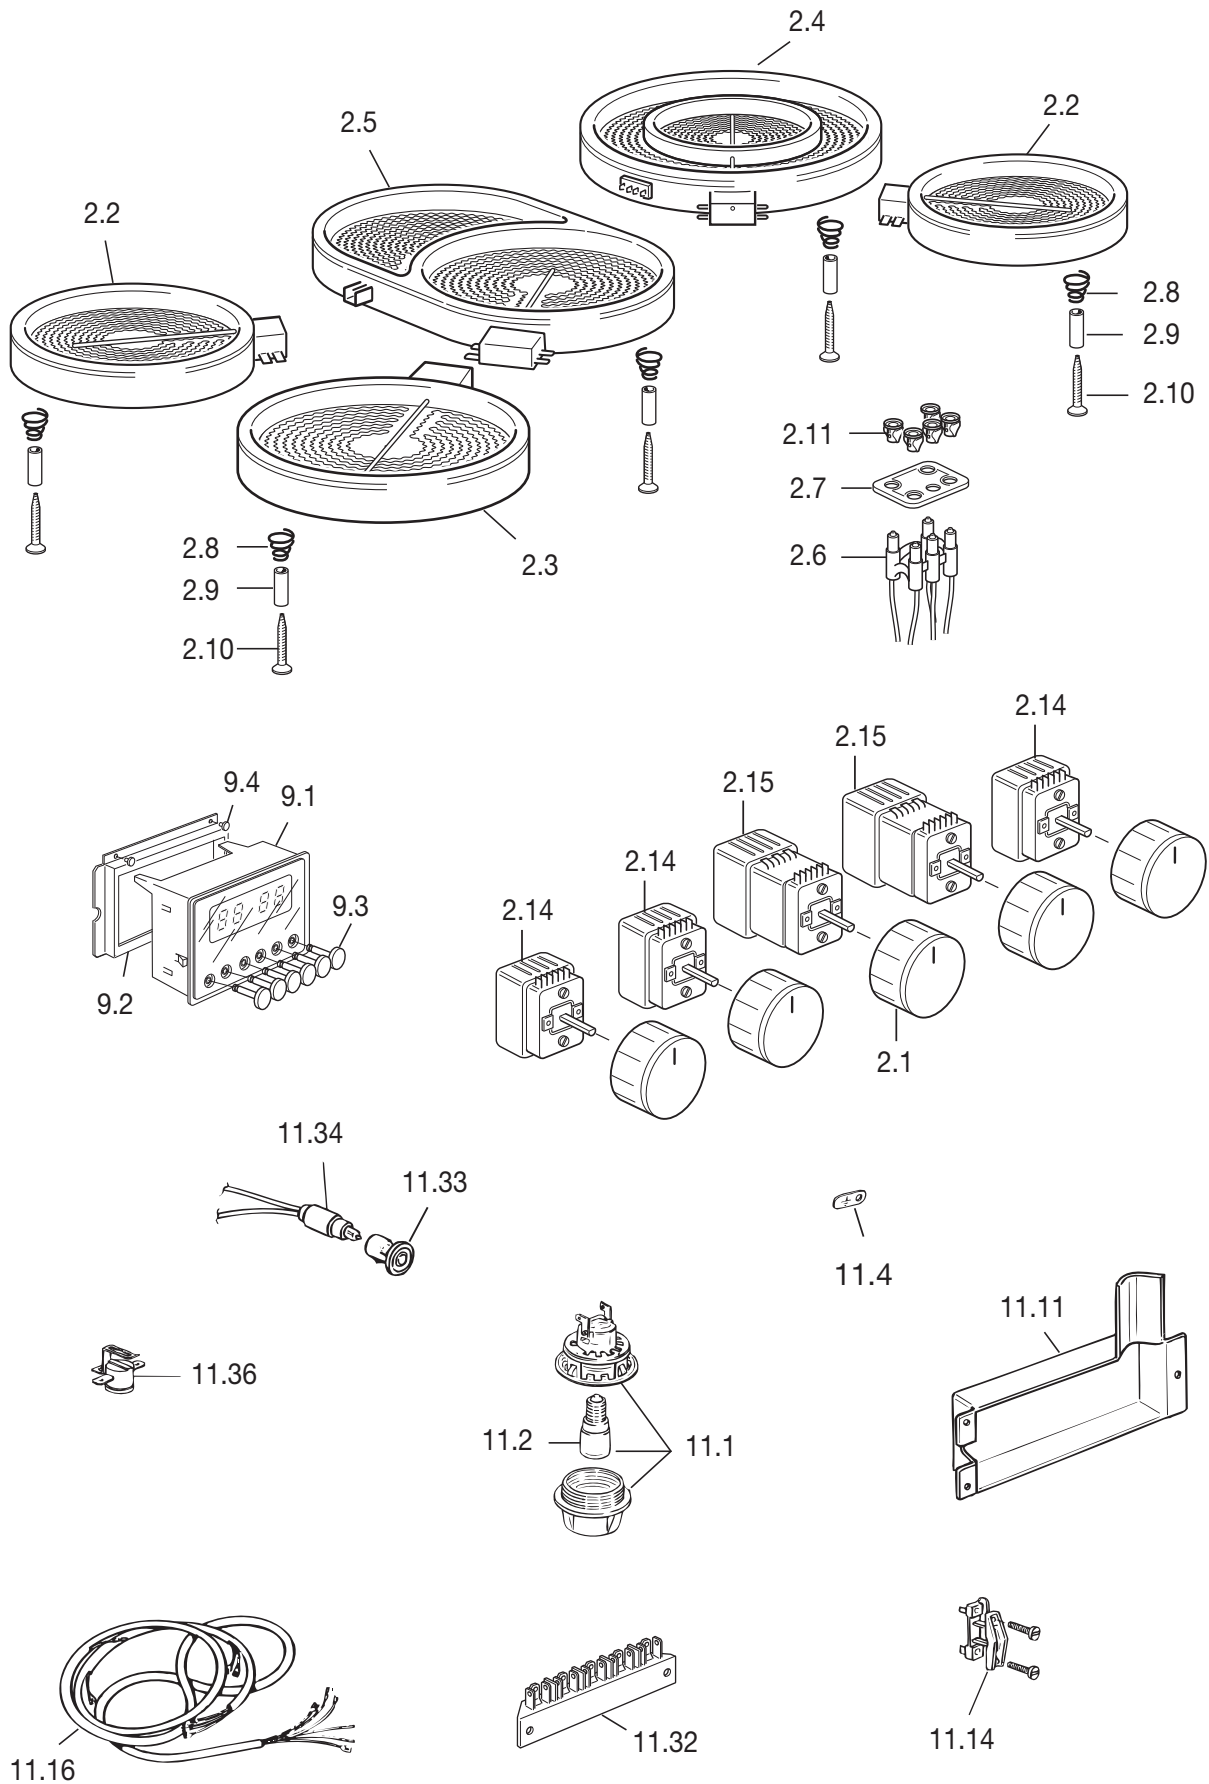

Position	Code	description
0= 00a	1031019	Silicon sleeve
0= 00b	6300021	Fan resistor kit
0= 00c	103630063	Rear trim
1= 1.2	355VC9S03	Glass with frame
2= 1.3	51B9S02	Hotplate support
3= 1.4	094408	Front control lamp support
4= 1.5	040041001	PLUG
5= 1.6	001057	Stainless steel screw
6= 1.8	103138	SCRAPER
7= 2.1	2183009461	Knob hi-light cooking zone
8= 2.2	04796230	Hi-light cooking zone - diam 140 mm 1200 W
9= 2.3	04797230	Hi-light cooking zone - diam 180 mm 1800 W
10= 2.4	04799230	Double hi-light cooking zonediam 210/120 mm 2200/750 W
11= 2.5	04769230	Oval hi-light cooking zone - centre diam 140x250 - 1800/1000W
12= 2.6	073087	Hob hot assembly front centre
13= 2.7	1031134	Control lamp plate
14= 2.8	035075	SPRING
15= 2.9	085043	Spacer hob for each hot plate (2 for each hotplate)
16= 2.10	001111	SCREW
17= 2.11	1031121	Control lamp bush
18= 2.14	050110230	Energy regulator
19= 2.15	050052230	Energy regulator
20= 3.1	35N9199LD1	CONTROL PANEL
21= 3.2	103760	Control panel trim
22= 3.8	213007	CLIP
23= 4.4	030074.1	Oven insulation
24= 4.5	030106.1	Rear insulation
25= 4.6	094502DX	Rear right hinge bracket
26= 4.7	094502SX	Rear left hinge bracket
27= 4.8	4119602	REAR PANEL
28= 4.9	4219S01Z	Upper shelter
29= 4.11	040056	Rubber
30= 4.12	085044	SLEEVE
31= 4.13	053101	SEAL
32= 4.17	035097	Rotisserie hole plug

33= 4.18	1031295	SHIM
34= 4.20	040061	BUFFER
35= 4.21	063075	HINGE
36= 4.23	371V9601L	FRONT PANEL
37= 4.24	373V9601Y	Inside panel
38= 4.25	36C96D1H	Side panel right
39= 4.26	36C96S1H	Side panel left
40= 4.32	4219604Z	Rear insulation support
41= 4.36	081084080	Left stopper
42= 4.37	081083080	Right stopper
43= 4.38	46A9S02Z	Air conveyor
44= 4.39	46A9S01Z	FUNNEL
45= 4.40	079025	Tangential fan
46= 4.47	1031207	Lock pin
47= 4.48	094153	Anti tilt bracket
48= 4.50	45EN6106G	Oven side panel (Left)
49= 4.51	45E96001G	Top oven panel
50= 4.52	45EN6107G	Oven side panel (Right)
51= 4.53	45H96005G	BODY REAR PANEL
52= 4.55	45B96003G	Body front panel
53= 4.56	45K96004Z	Lower element cover
54= 4.57	211012	RIVET
55= 5.1	0312662	DOOR GLASS
56= 5.2	083240061	Lower door trim
57= 5.3	037195062	Door handle
58= 5.4	51B9605	Handle trim
59= 5.5	003057	WASHER
60= 5.6	103713	Door handle plaque
61= 5.7	001030	SCREW
62= 5.8	063073	Door hinge (male)
63= 5.9	063066	Top oven hinge (female) works with male hinge 063096
64= 5.10	373F9605G	Door panel
65= 5.11	053058	GASKET
66= 5.12	0311292/TH	Inner glass
67= 5.14	214021	NUT
68= 5.15	001143	SCREW
68= 5.16	003035	WASHER

NZ, AU DEF905E

70= 5.17	103205.1	WASHER
71= 5.21	003030	WASHER
72= 5.23	001056	SCREW
73= 7.1	217291	Shelf support
74= 7.2	217497	Oven tray support
75= 7.3	48B8501G	Oven tray
76= 7.4	217626	OVEN SHELF
77= 7.6	47E9604G	Oven floor
78= 7.7	037208	Grill-pan grid handle
79= 7.8	217523	Grill-pan grid
80= 8.1	2183009461	Knob hi-light cooking zone
81= 8.15	050030	Oven switch
82= 8.16	066072	Oven thermostat
83= 8.17	062075004	Top element 230V
84= 8.18	062073004	Bottom element 230V
85= 8.19	030076.1	Bottom element insulation
86= 8.20	4219602Z	Bottom insulation support
87= 8.21	4219605Z	Bottom element support
88= 8.22	103085	FILTER
89= 8.23	47A9601G.2	Fan shroud
90= 8.24	079008001F	Fan motor - 230 V
91= 8.27	213025	CLIP
92= 8.28	094660	Plaque
93= 9.1	074069	Electronic programmer
94= 9.2	094363	Electronic timer seal
95= 9.3	1031057007	Button
96= 9.4	040056	Rubber
97= 11.1	072025	Lamp holder assembly
98= 11.2	073013001	LAMP
99= 11.4	041210	Earth plate
100= 11.11	103638A	Terminal block cover - rear cooker
101= 11.14	052008	Cable clamp - rear cooker
102= 11.16	1132177	WIRING LOOM
103= 11.16	1131775	Wires for hotplates
104= 11.32	051037	Terminal block - rear cooker 40A- 6P
105= 11.33	073090	Control lamp cover (Blue)
106= 11.34	073091	Control lamp L = 230
107= 11.36	066123	Cut-out thermostat 160 degree C