


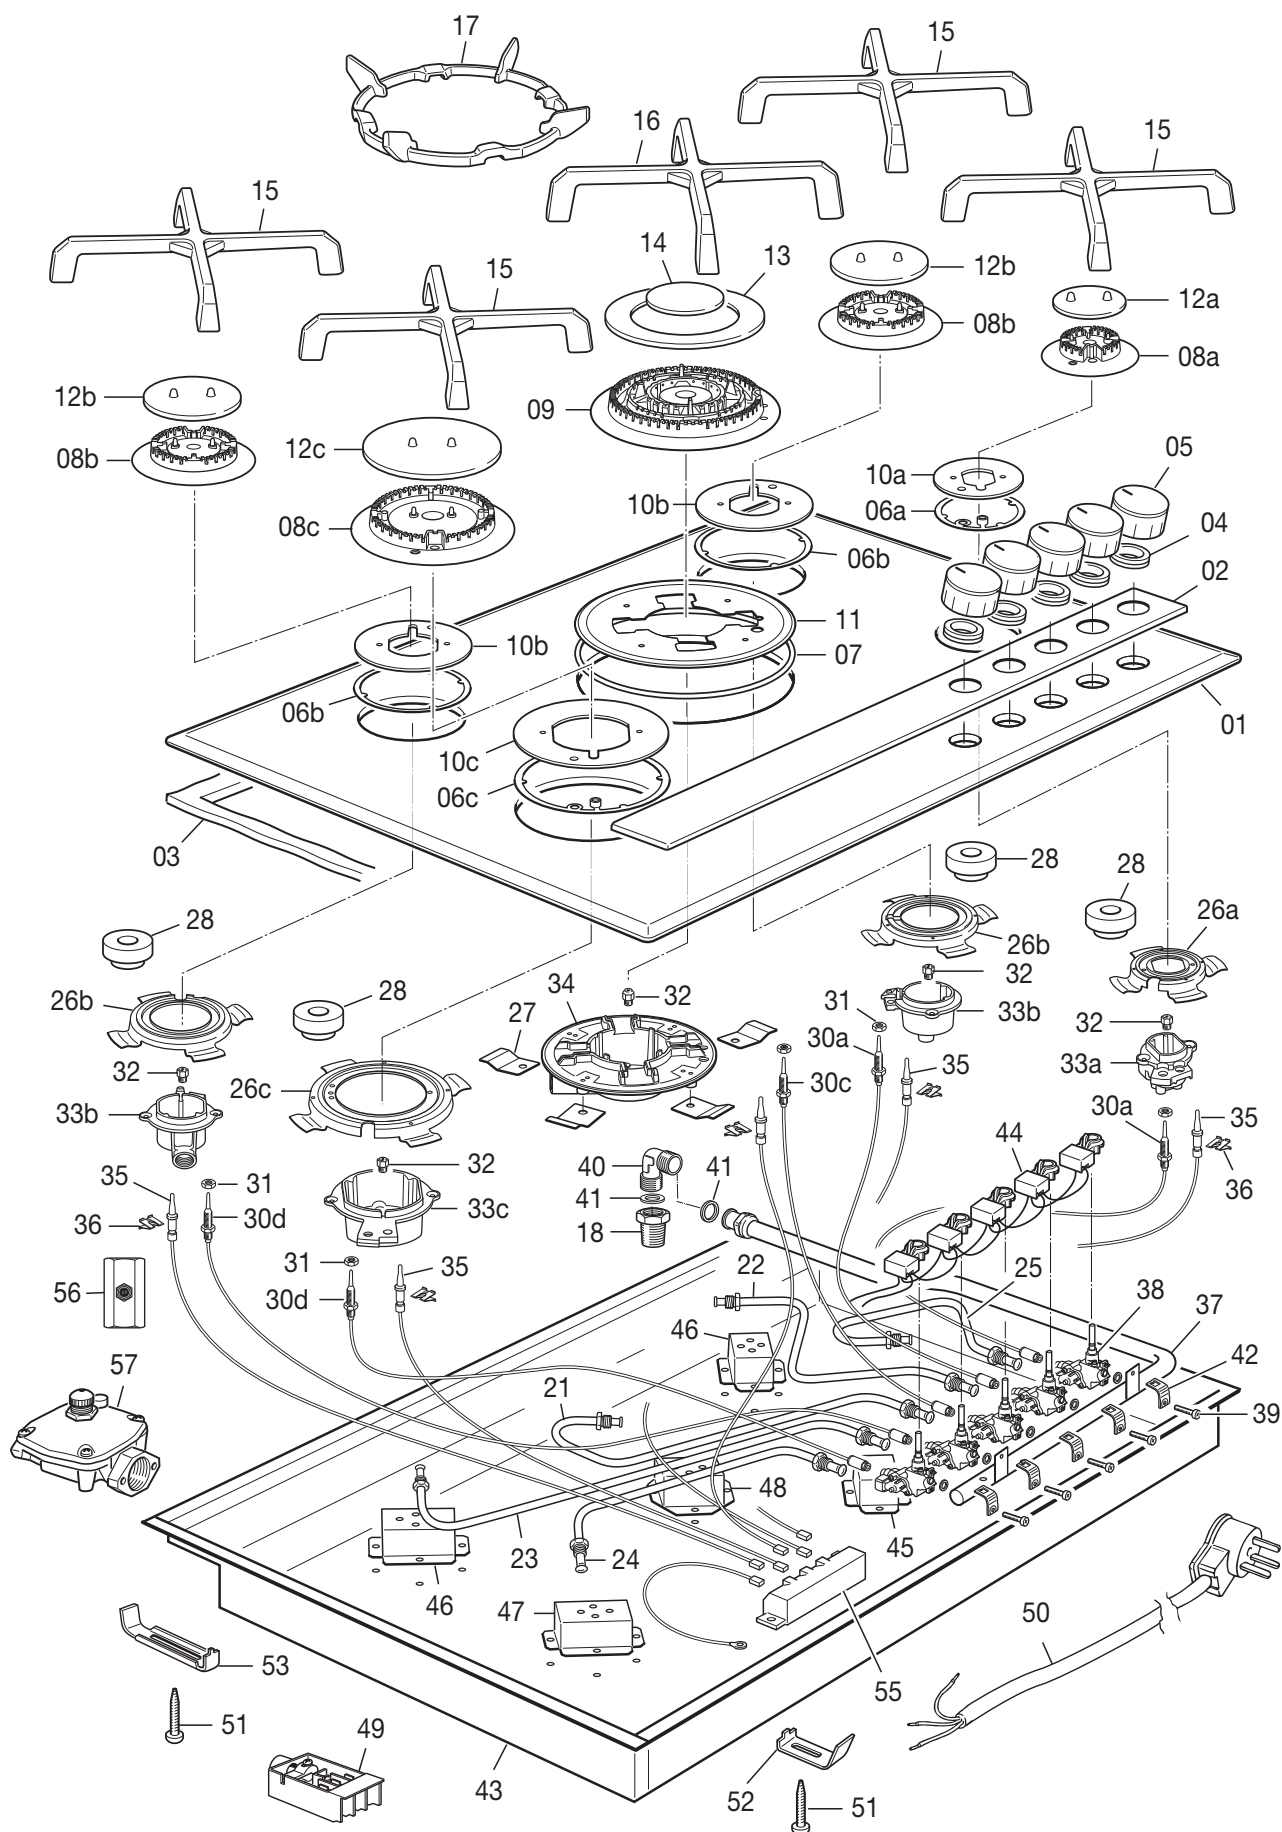



Position	Code	description
01	032G7017	Hob top
02	10315241CD	CONTROL PANEL
03	053076	SEAL
04	040087	Rubber joint
05	218900A463	CONTROL KNOB
06a	053136	Burner gasket A
06b	053137	Burner gasket SR
06c	053138	Burner gasket R
07	053107	Burner gasket
08a	068121035A	Burner-head A
08b	068122035A	Burner-head SR
08c	068123035A	Burner-head R
09	068138035A	Burner-head
10a	51BPG01A	Burner flange A
10b	51BPG02A	Burner flange
10c	51BPG03A	Burner flange R
11	51BPG07A	Burner flange
12a	216140005A	Burner-cap A
12b	216141005A	Burner-cap SR
12c	216142005A	Burner-cap R
13	216160005A	Burner-cap outside
14	216161005A	Burner-cap inside
15	217642	Top grate
16	217643	Top grate
17	217498	Grid for woks
18	067026	Conical adaptor
21	0291051	Inlet pipe - central TR
22	0291050	Inlet pipe - rear right SR
23	0291052	Inlet pipe - rear left SR
24	0291053	Inlet pipe R
25	0291049	Inlet pipe A
26a	035129	Burner spring A
26b	035120	Burner spring SR
26c	035121	Burner spring R
27	035122	Burner spring
28	085102	Burner bush
30a	107064	Burner thermocouple L = 250

30c	107057	Burner thermocouple L = 450
30d	107067	Burner thermocouple L = 500 mm
31	214057	NUT
32a	101262	Injector ULPG Ø 0.53 - A
32b	101263	Injector ULPG Ø 0.70 - SR
32c	101244	Injector Rapid diam 0.91 - LPG
32d	101233	Injector ULPG Ø 0.95 - TR
32e	101182	Injector NATURAL GAS Ø 0.85 - A
32f	101260	Injector NATURAL GAS Ø 1.12 - SR
32g	101273	Injector Rapid diam 1.45 - NG
32h	101335	Injector NATURAL GAS Ø 1.60 - TR
33a	215486	Burner-cup A
33b	215487	Burner-cup SR
33c	215488	Burner-cup R
34	215489	Burner cup
35a	084028	Spark plug L=250mm (auxiliary burner)
35b	084029	Spark plug L=630mm (semirapid &
35c	084046	Spark plug L = 400
36	035094	Igniter spring
37	342G750003	5 gas inlet pipe
38a	106249	Tap Auxiliary diam 0.27
38b	106252	Tap Semi-rapid diam 0.34
38c	106253	Tap Rapid diam 0.44
38d	106254	Tap Triple-ring diam 0.65
39	001202	SCREW
40	067008	Elbow
41	053024.1	Sealing washer
42	094616	Tap bracket
43	411G702	Burner casing
44	1031126	Ignition switches
45	094794	Burner bracket A
46	094716	Burner bracket SR
47	094717	Burner bracket R
48	094718	Burner bracket
49	051079	Terminal Block
50	054131	Cord 3x0.75
51	001217	SCREW
52	094335	Fixing bracket

53	094389	BRACKET
55	6300088	KIT IGNITION COIL
56	103468	Test point adaptor
57	103347	Gas pressure regulator 1/2