 
 


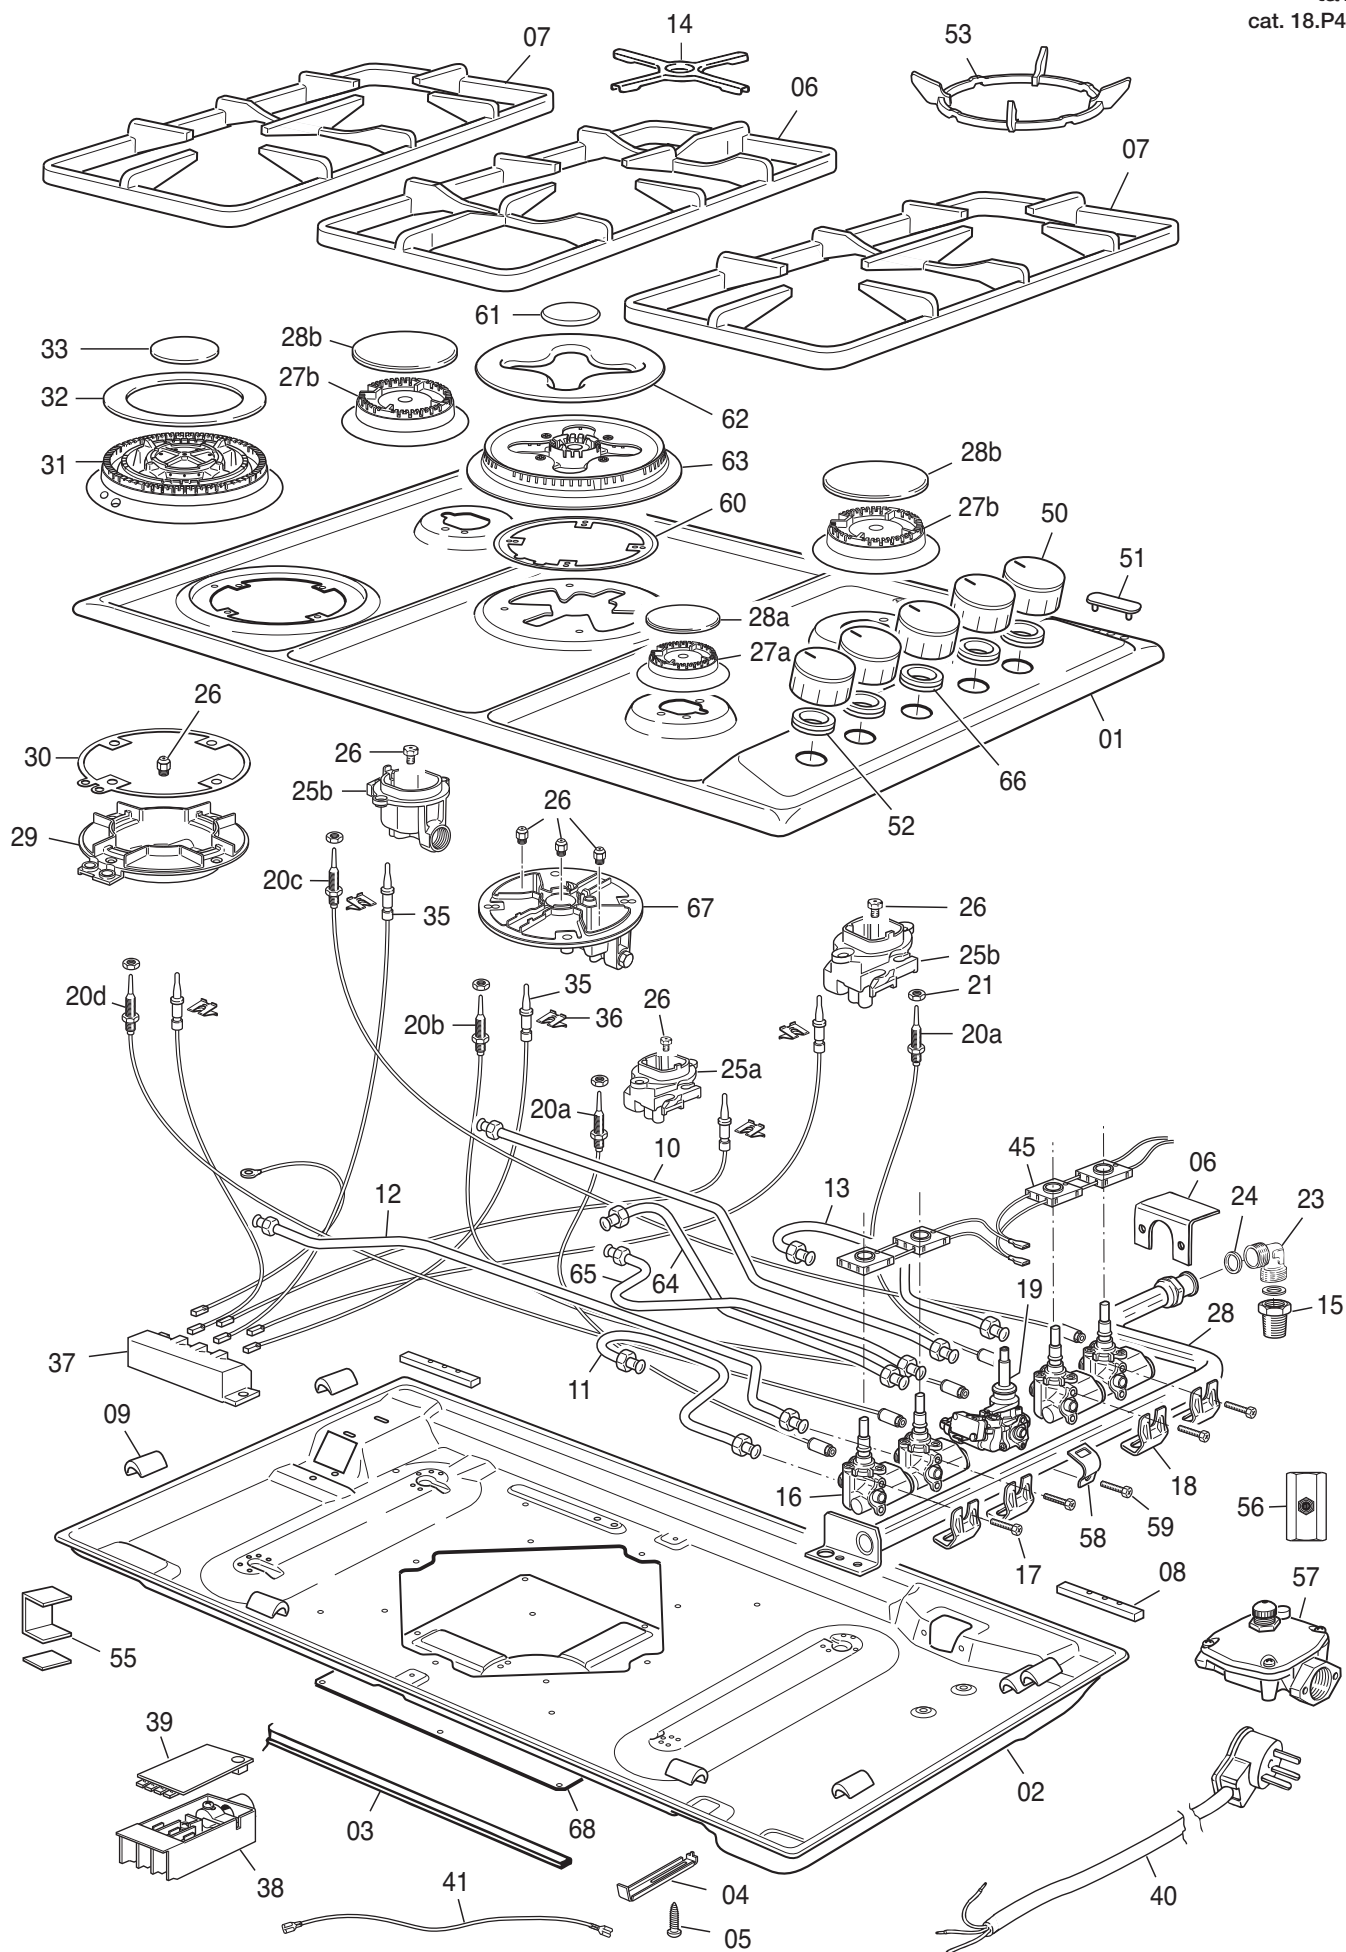

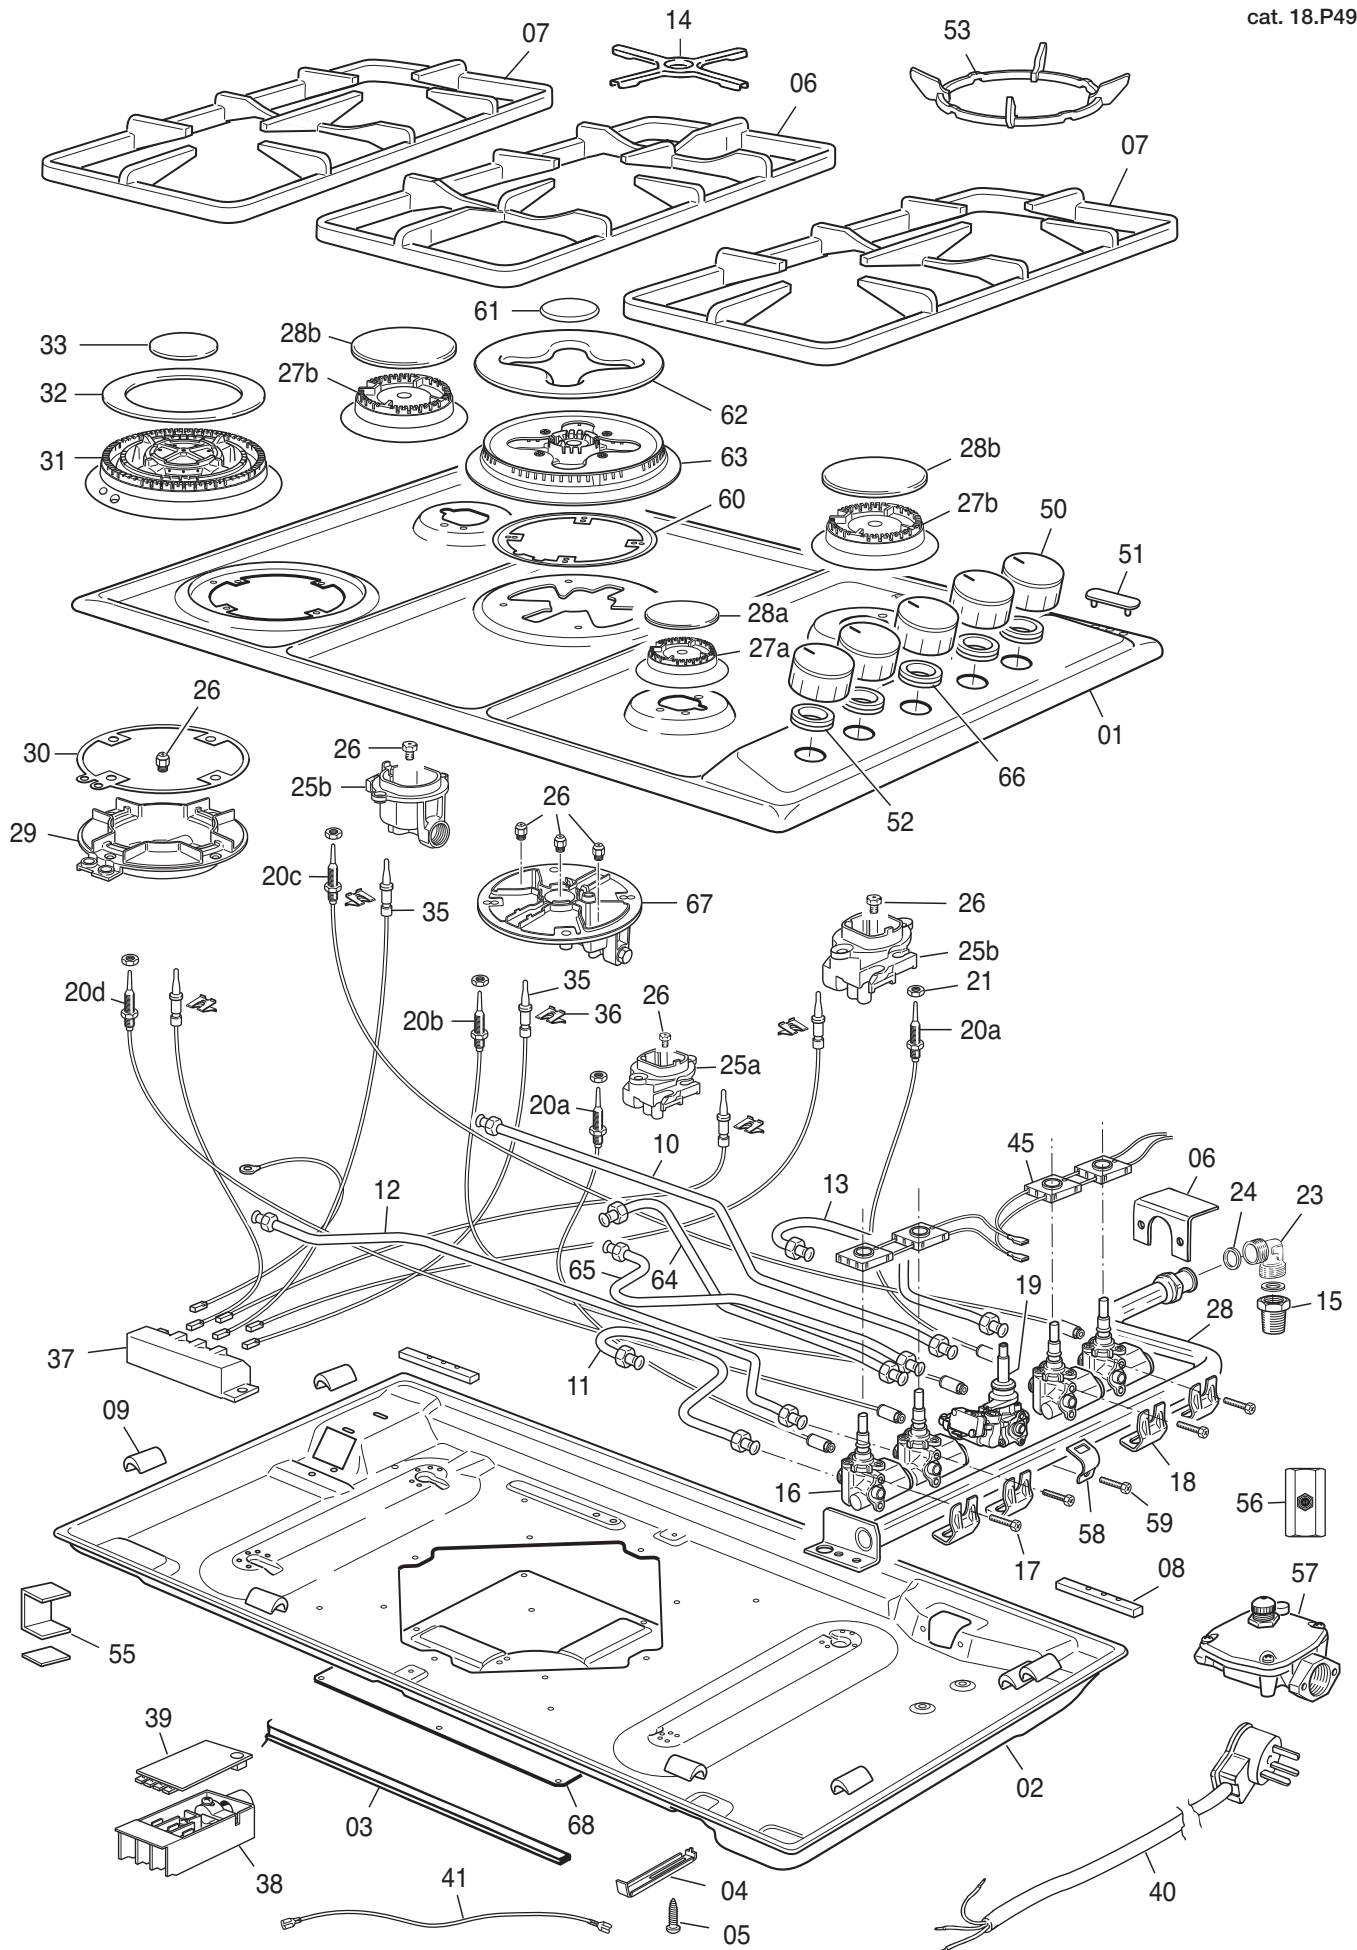

Position	Code	description
0a	040060	Rubber plug for trivets
1	3390504SDA	Hob top
2	4119003	Burner casing
3	53038	SEAL
4	94154	Fixing bracket
5	1130	SCREW
6	217505	Central grate
7	217501	Top grate
8	40068	Rear fixing bar
9	40049	SPACER
10	29944	Left burner pipe SR
11	29858	A - burner pipe
12	29945	Burner pipe TR
13	29877	Right burner pipe SR
14	217303	Grate for small pans
15	67026	CONNECTION
16a	106249	Tap Auxiliary diam 0.27
16b	106252	Tap Semi-rapid diam 0.34
16c	106254	Tap Triple-ring diam 0.65
17	1202	SCREW
18	94616	Tap bracket
19	106284	Tap DUAL 27/60
20a	107039	Burner thermocouple L=500 mm
20b	107057	Burner thermocouple L = 450
20c	107052	Burner thermocouple L=850mm (left burners)
20d	107053/C	TR Burner thermocouple - 850 mm
21	214057	NUT
22	3429050G01	5 gas inlet pipe
23	67008	Elbow
25a	215465	Burner-cupA
25b	215466	Burner-cupSR
26a	101182	Injector NATURAL GAS Ø 0.85 - A
26b	101260	Injector NATURAL GAS Ø 1.12 - SR
26c	101336	Injector diameter 1.20
26d	101335	Injector NATURAL GAS Ø 1.60 - TR
26e	101262	Injector ULPG Ø 0.53 - A
26f	101180	Injector (ulpg) diam 0.50 - DU CENTR

26g	101263	Injector ULPG Ø 0.70 - SR
26h	101321	Injector diameter 0.66
26i	101290	Injector diameter 0.90
26j	101233	Injector ULPG Ø 0.95 - TR
27a	68109003	Burner headA
27b	68110003	Burner headSR
28a	216129005A	Burner-capA
28b	216130005A	Burner-capSR
29	215469	Burner-cup Triple-ring
30	53078	Burner-cup gasketTR
31	68115003	Burner-head TR
32	216133005A	Burner-cap outside TR
33	216132005A	Burner-cap inside TR
34	94085	Inlet pipe fixing bracket
35a	84028	Spark plug - 250 mm
35b	84029	IgniterL=630 mm
35c	84033	IgniterL=500 mm - TR
35d	84042	Spark plug DUAL - L = 450 mm
36	35094	Igniter spring
37	82075	Electronic ignition
38	51054	Terminal block
39	103451	Terminal block cover
40	54090	Cord - 3x0.75
41	103741	Red cable L=950mm
45	1031261	Ignition switches
50	2183009463	KNOB
51	10348100X	PLUG
52	40057	Rubber joint
53	217498	Grid for woks
55	94295	Spacing
56	103468	Test point adaptor
57	103347	Gas pressure regulator 1/2
58	94563	DUAL tap bracket
59	1252	SCREW
60	53107	DUAL burner-cup gasket
61	216136005A	Burner-cap inside DUAL
62	216135005A	Burner-cap outside DUAL
63	68118003	DUAL burner head

64	29947	Inlet pipe - inside left central DUAL
65	29946	Inlet pipe - outside left central DUAL
66	40079	DUAL - rubber joint
67	215476	Burner-cup DUAL
68	51B9001	DUAL burner support