


DEWC30S

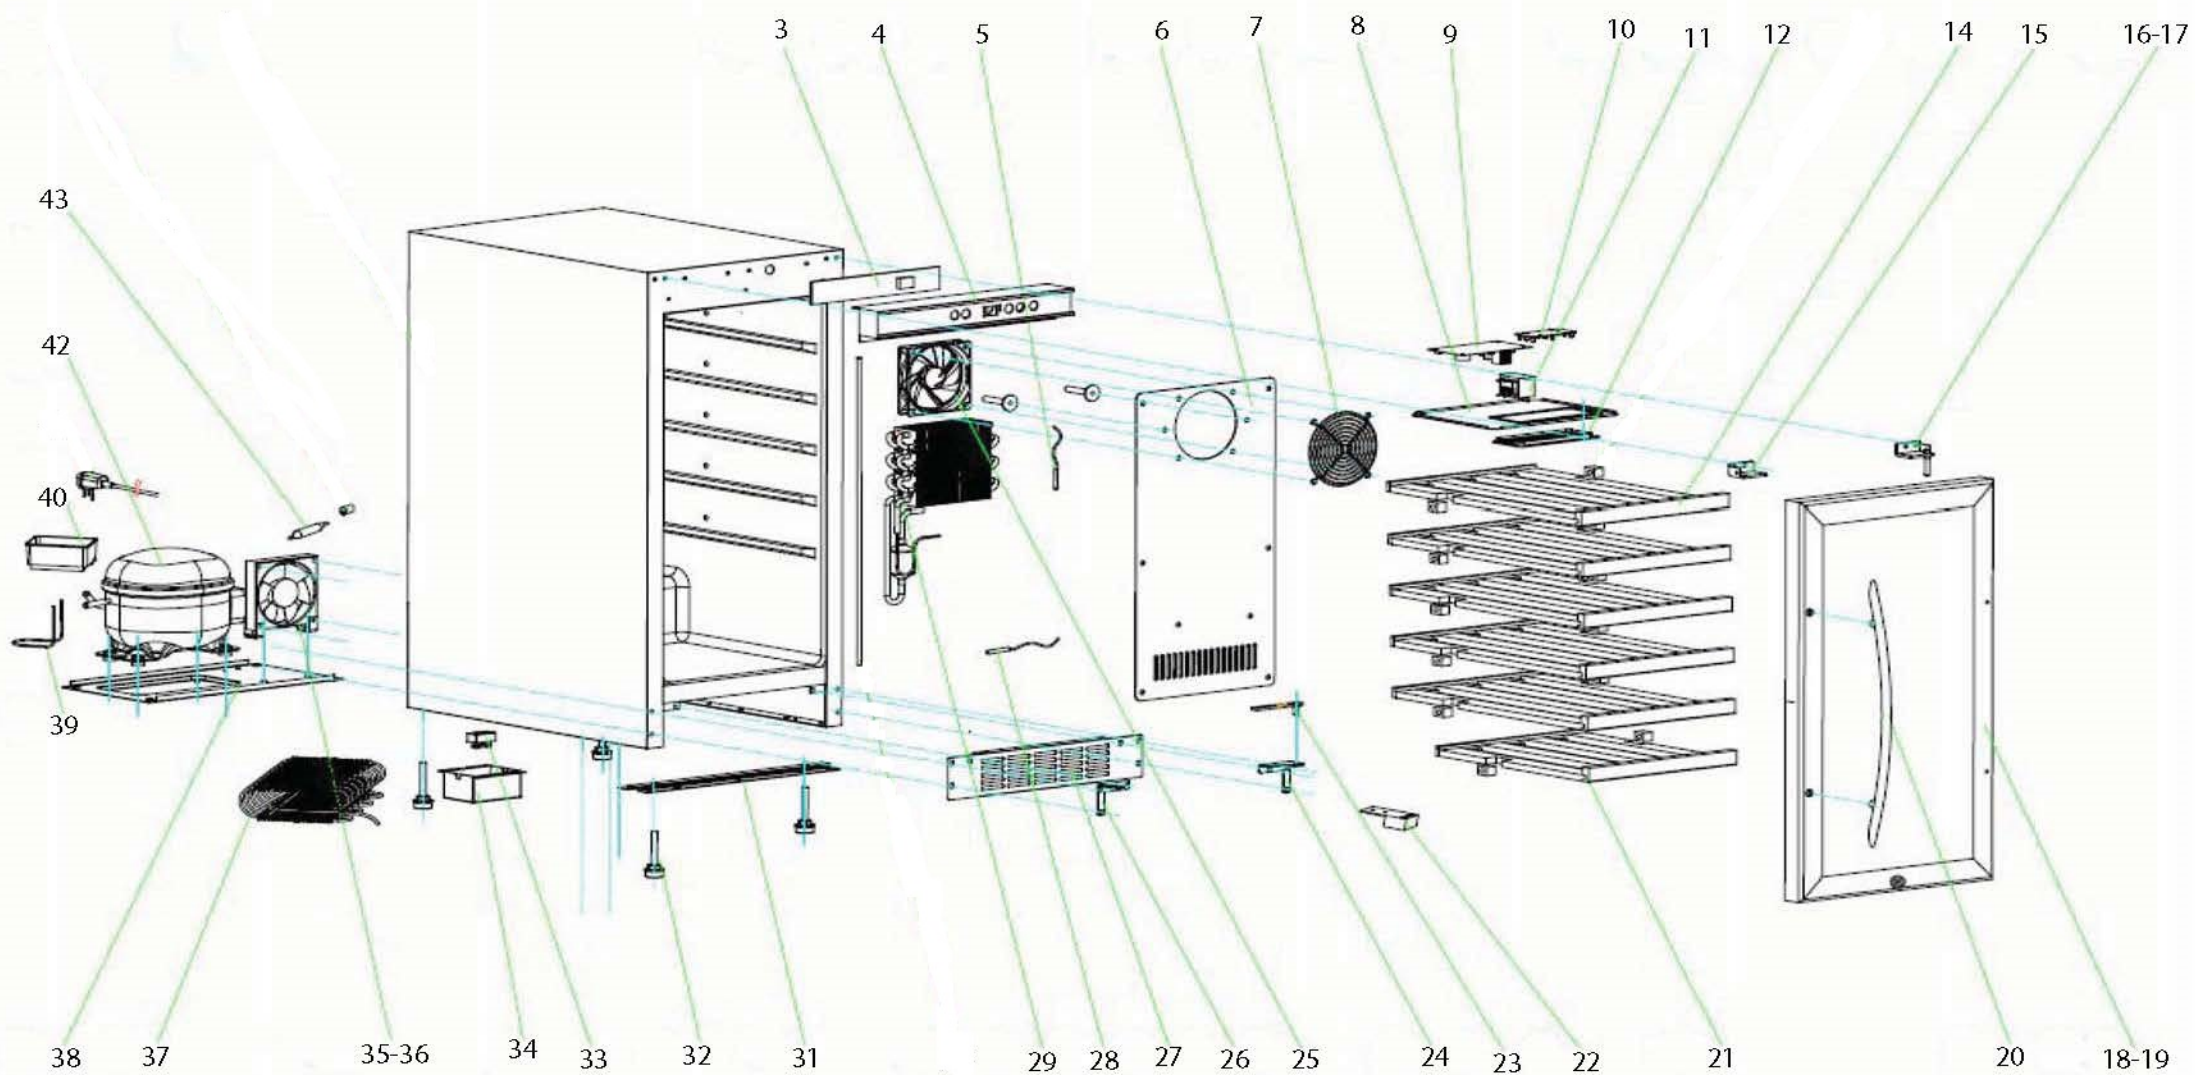

Position	Code	description
0	EI1277	FIVE SIDED KEYS
3	EI1142	Control kit: pcb board plus Display DG3-1040.3
4	EI1046	Top cover part
5	EI1047	Thermistor (defrost sensor)
6	EI1048	Right lower hinge
7	EI1015	Fan net
8	EI1049	Electrical box cover
10	EI1050	LED light
11	EI1051	Transformer
12	EI1052	LAMP COVER
14	EI1053	W1 support
15	EI1001	Left door upper hinge
16	EI1003	Right door upper hinge
17	EI1004	Door hinge centre
18	EI1054	DOOR
19	EI1055	GASKET
20	EI1056	HANDLE
21	EI1057	Shelf
22	EI1043	Keylock
23	EI1042	Door hinge centre
24	EI1268	Right lower door hinge (NEW)
25	EI1014	Fan for evaporator
26	EI1059	Lower left door hinge
27	EI1274	New bottom grill
28	EI1036	Thermistor (air sensor)
29	EI1265	EVAPORATOR
31	EI1273	SUPPORT
32	EI1064	Feet
33	EI1026	Terminal Plate
34	EI1024	JUNCTION BOX
35a	EI1065	Fan (see technical info.)
35b	EI1028	Fan motor 12V (new version)
36	EI1029	Fan Bracket Outside
37	EI1022	Condenser
38	EI1066	Compressor support plate
39	EI1030	Compressor connecting pipe
40	EI1031	Water drip tray

42	EI1067	COMPRESSOR
----	--------	------------