


DEWC46D

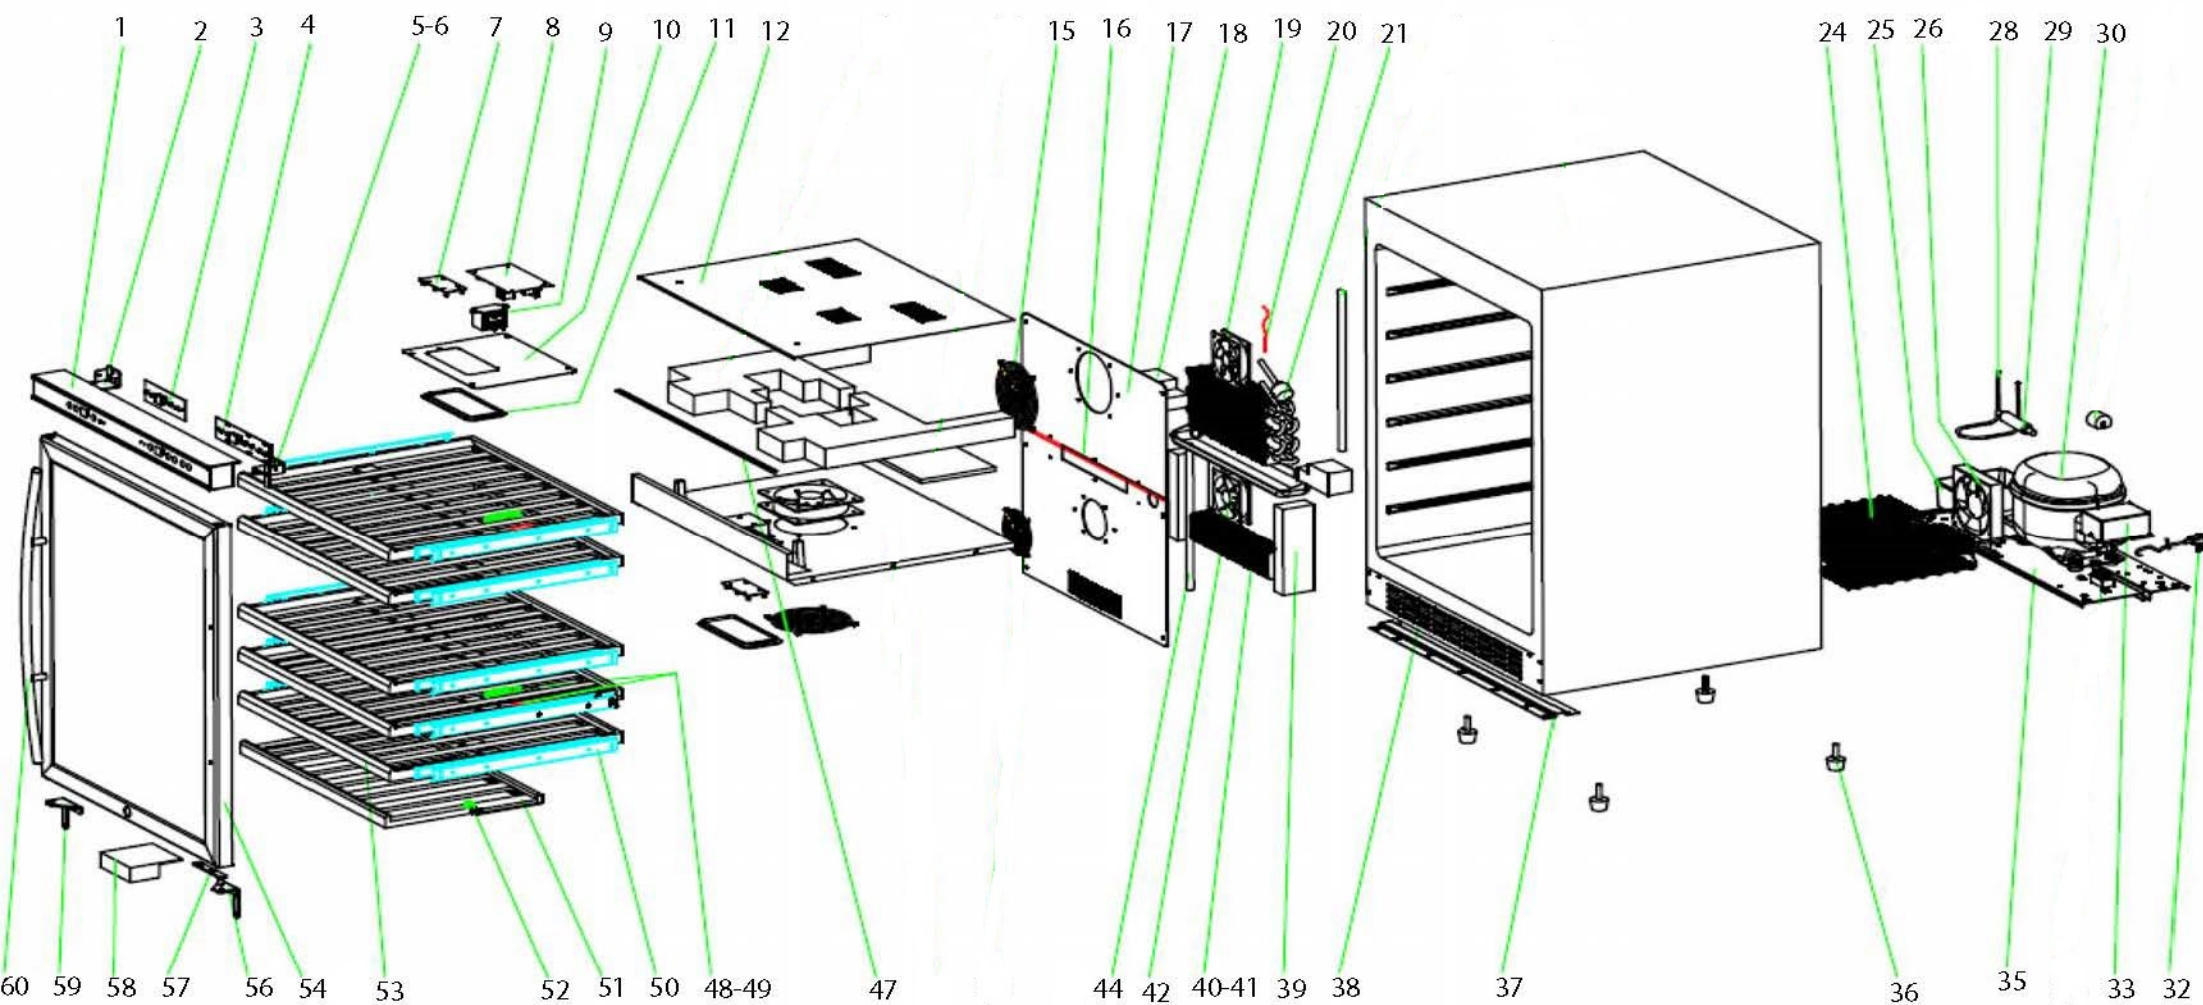

Position	Code	description
0	EI1277	FIVE SIDED KEYS
0a	EI1271	Box for power board assembly (box only without pcb)
1	EI1082	Top cover part
2	EI1001	Left door upper hinge
3	EI1083	Left display PCB model DG3-1043.2
4	EI1084	Display Board(Right) model DG3-1033 (50EB-1.4.1)
5	EI1003	Right door upper hinge
6	EI1004	Door hinge centre
7	EI1050	LED light
8	EI1144	Control kit: pcb board plus Display DG3-1043.2
9	EI1012	TRANSFORMER
10	EI1049	Electrical box cover
11	EI1052	LAMP COVER
12	EI1086	Upper wind way part
15	EI1015	Fan net
16	EI1087	Mid wind way support
17	EI1088	Wind way part
18	EI1071	Condenser foaming
19	EI1014	Fan for evaporator
20	EI1047	Thermistor 1
21	EI1266	EVAPORATOR
24	EI1073	Condenser
25	EI1031	Water drip tray
28	EI1030	Compressor connecting pipe
29	EI1021	Drier
30	EI1074	COMPRESSOR
32	EI1025	Power line
33	EI1024	JUNCTION BOX
35	EI1272	COMPRESSOR
36	EI1064	Feet
37	EI1269	Front cabinet support plate
38	EI1077	Bottom Air vent
39	EI1089	Heater Foam
40	EI1091	Heater Insulation Board
41	EI1092	Heater Fan
42	EI1094	Heater Fan Mesh
44	EI1093	Water tray

47	EI1095	Mid wind way part
48	EI1096	Thermistor cover
49	EI1036	Thermistor (air sensor)
50	EI1078	ROLLER
51	EI1079	WP support
52	EI1097	Shelves fixed parts
53	EI1080	WO support
54	EI1123	DOOR
56	EI1267	Right lower hinge
57	EI1042	Door hinge centre
58	EI1043	Keylock
59	EI1059	Lower left door hinge
60	EI1056	HANDLE