


DEWC54S

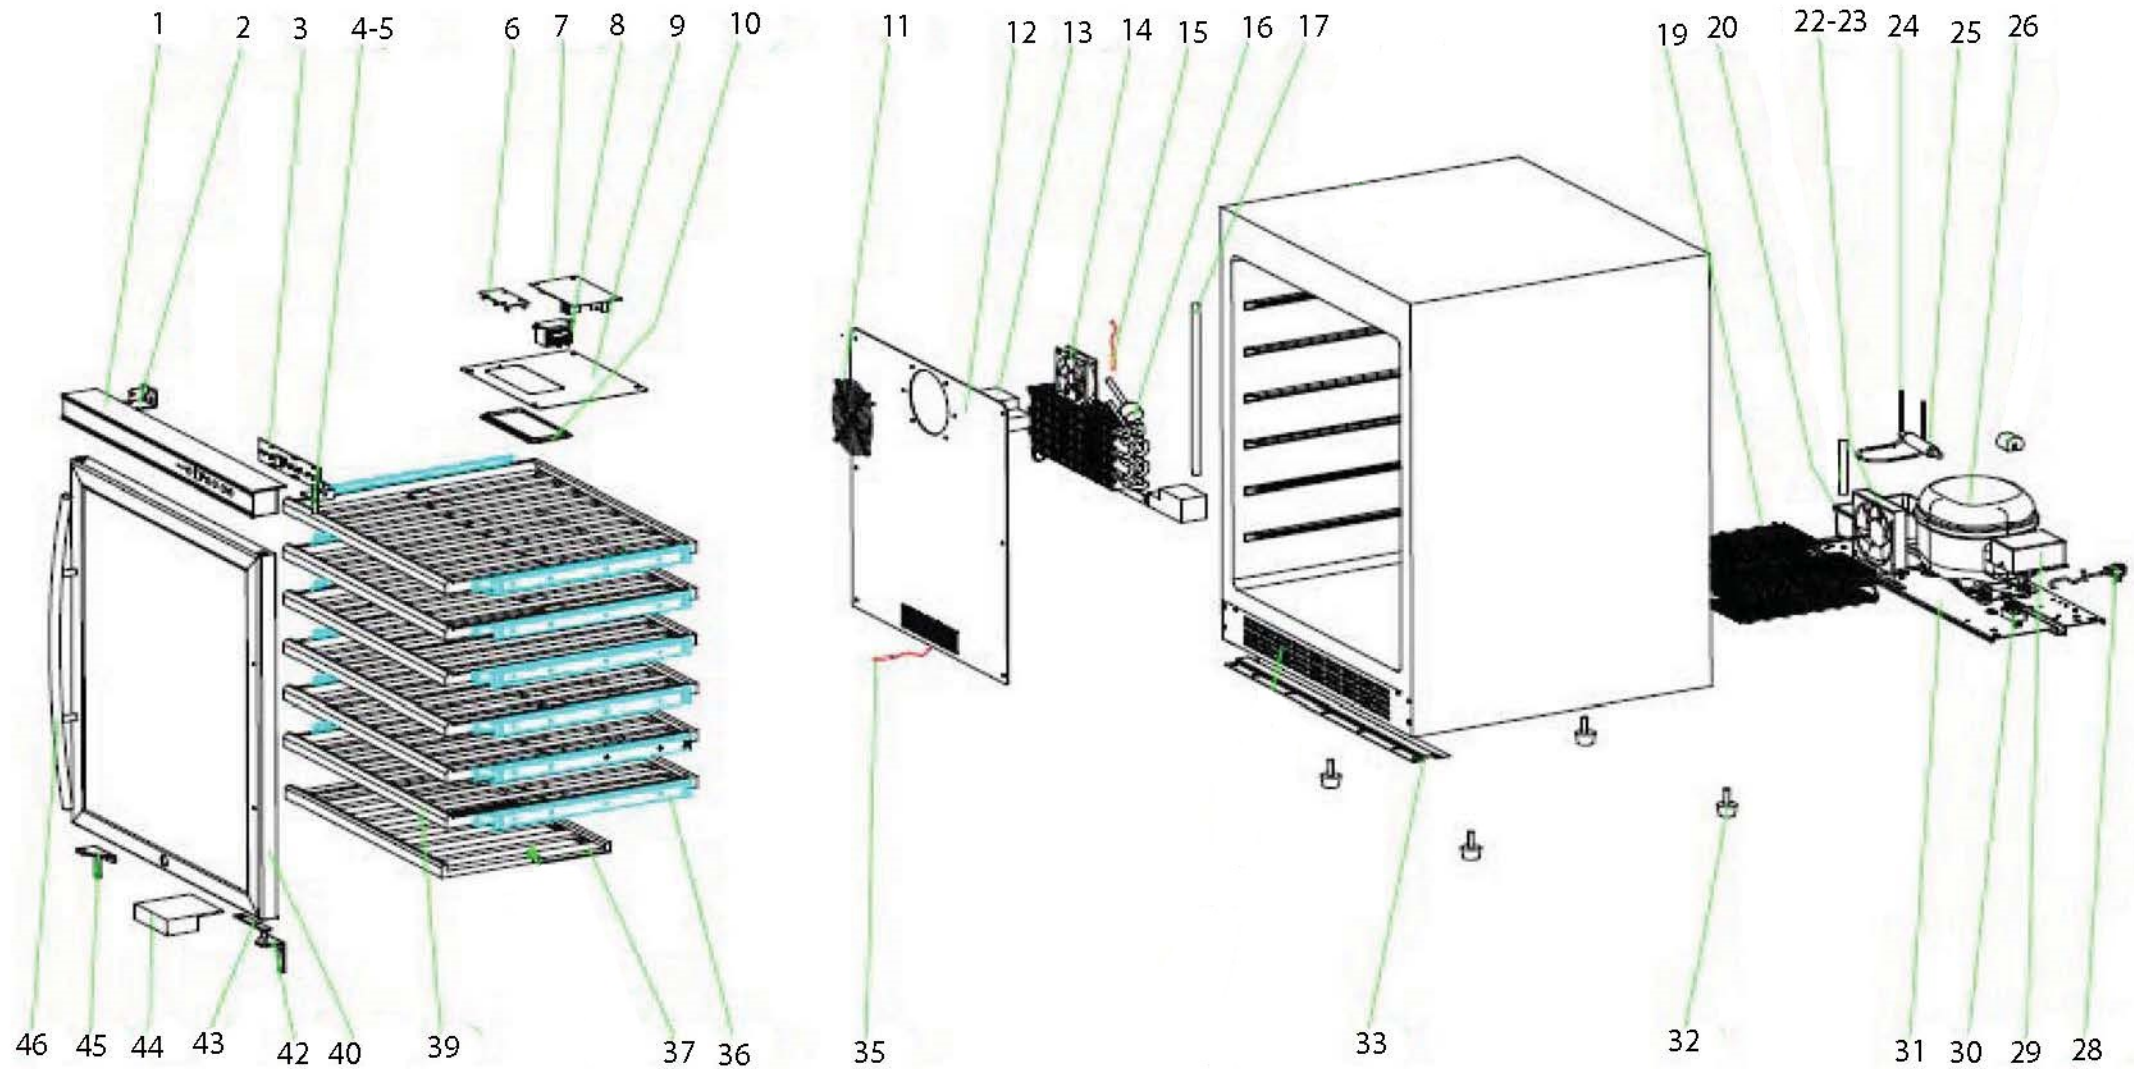

Position	Code	description
000A	EI1271	Box for power board assembly (box only without pcb)
000B	EI1277	FIVE SIDED KEYS
1	EI1000	Front Insert
2	EI1001	Left door upper hinge
3	EI1002	DISPLAY PCB
4	EI1003	Right door upper hinge
5	EI1004	Door hinge centre
6a	EI1138	PCB & display assembly (DG3-1007.3 version)
6b	EI1135	PCB & display assembly (DG3-1029.2.1 version)
8	EI1069	TRANSFORMER
9	EI1049	Electrical box cover
10	EI1052	LAMP COVER
11	EI1015	Fan net
12	EI1070	Windway plate
13	EI1071	Condenser foaming
14	EI1014	Fan for evaporator
15	EI1047	Thermistor (defrost sensor)
16	EI1266	EVAPORATOR
17	EI1062	Air-Circulating Pipe
19	EI1263	Condenser
20	EI1031	Water drip tray
22a	EI1065	Fan (see technical info.)
22b	EI1028	Fan motor 12V (new version)
23	EI1029	Fan Bracket Outside
24	EI1030	Compressor connecting pipe
25	EI1021	Drier
26	EI1074	COMPRESSOR
28	EI1025	Power line
29	EI1024	JUNCTION BOX
30	EI1026	Terminal Plate
31	EI1075	Compressor support plate
32	EI1064	Feet
33	EI1269	Front cabinet support plate
34	EI1270	Bottom grill
35	EI1036	Thermistor (air sensor)
36	EI1078	ROLLER
37	EI1079	WP support

39	EI1080	WO support
40	EI1123	DOOR
42	EI1267	Right lower hinge
43	EI1042	Door hinge centre
44	EI1043	Keylock
45	EI1059	Lower left door hinge
46	EI1056	HANDLE