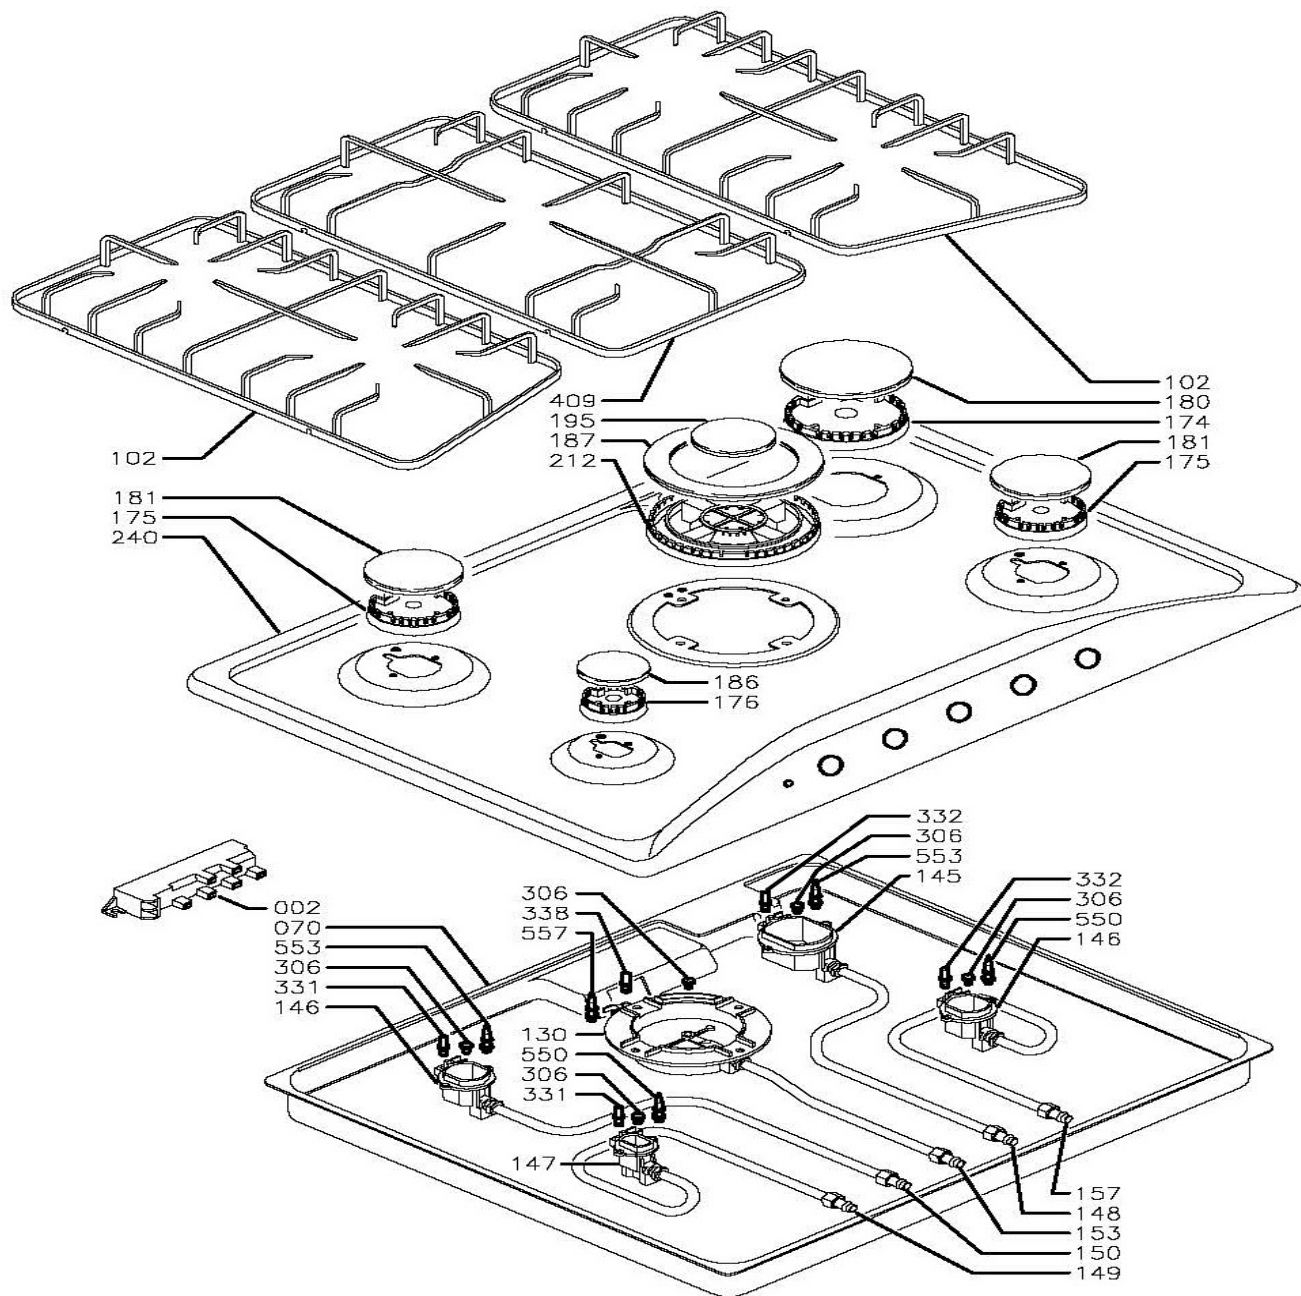


Position	Code	description
002	ZP0010016	LIGHTER
079	218338X339	KNOB
102A	ZP0160064T	GRID LEFT
102B	ZP0160066T	GRID RIGHT
130	ZP0070038	BURNER CUP
145	ZP0070037	BURNER CUP R
146	ZP0070036	BURNER CUP SR
147	ZP0070035	BURNER CUP A
148	ZP0300054	TUBE R
149	ZP0300051	TUBE A
150	ZP0300052	TUBE SR
153	ZP0300053	TUBE
157	ZP0300055	TUBE SR
161	ZP0240032	FEED ASSY
162B	ZP0250023M	TAP
162M	ZP0250027	TAP
162R	ZP0250024M	TAP
162S	ZP0250025M	TAP
174	ZP0270006	FLAME BAFFLE
175	ZP0270007	FLAME BAFFLE SR
176	ZP0270008	FLAME BAFFLE A
178	ZP309079	HOSE COUPLING
180	ZP0060011	COVER R
181	ZP0060012	COVER SR
185	ZP309063	HOSE COUPLING
186	ZP0060013	COVER A
187	ZP0060010	COVER
190	ZP310236	GASKET
191	ZP309095	HOSE COUPLING
195	ZP0060009	COVER
211	ZP0560060	CONNECTOR
212	068115003	Burner-head Triple-ring
240	ZP0620615	WORK TOP
306A	ZP0040044	INJECTOR
306B	ZP0040051	INJECTOR d. 0.53
306C	ZP0040052	INJECTOR
306D	ZP203837	INJECTOR d. 0.94

331	ZP006428	SPARK PLUG
332	ZP006429	SPARK PLUG
338	ZP0050006	SPARK PLUG
409	ZP0160065T	CENTRAL GRID
500	ZP0050014	MICROSWITCH
550	ZP0290004	THERMOCOUPLE
553	ZP0290005	THERMOCOUPLE
557	ZP0290003	THERMOCOUPLE