


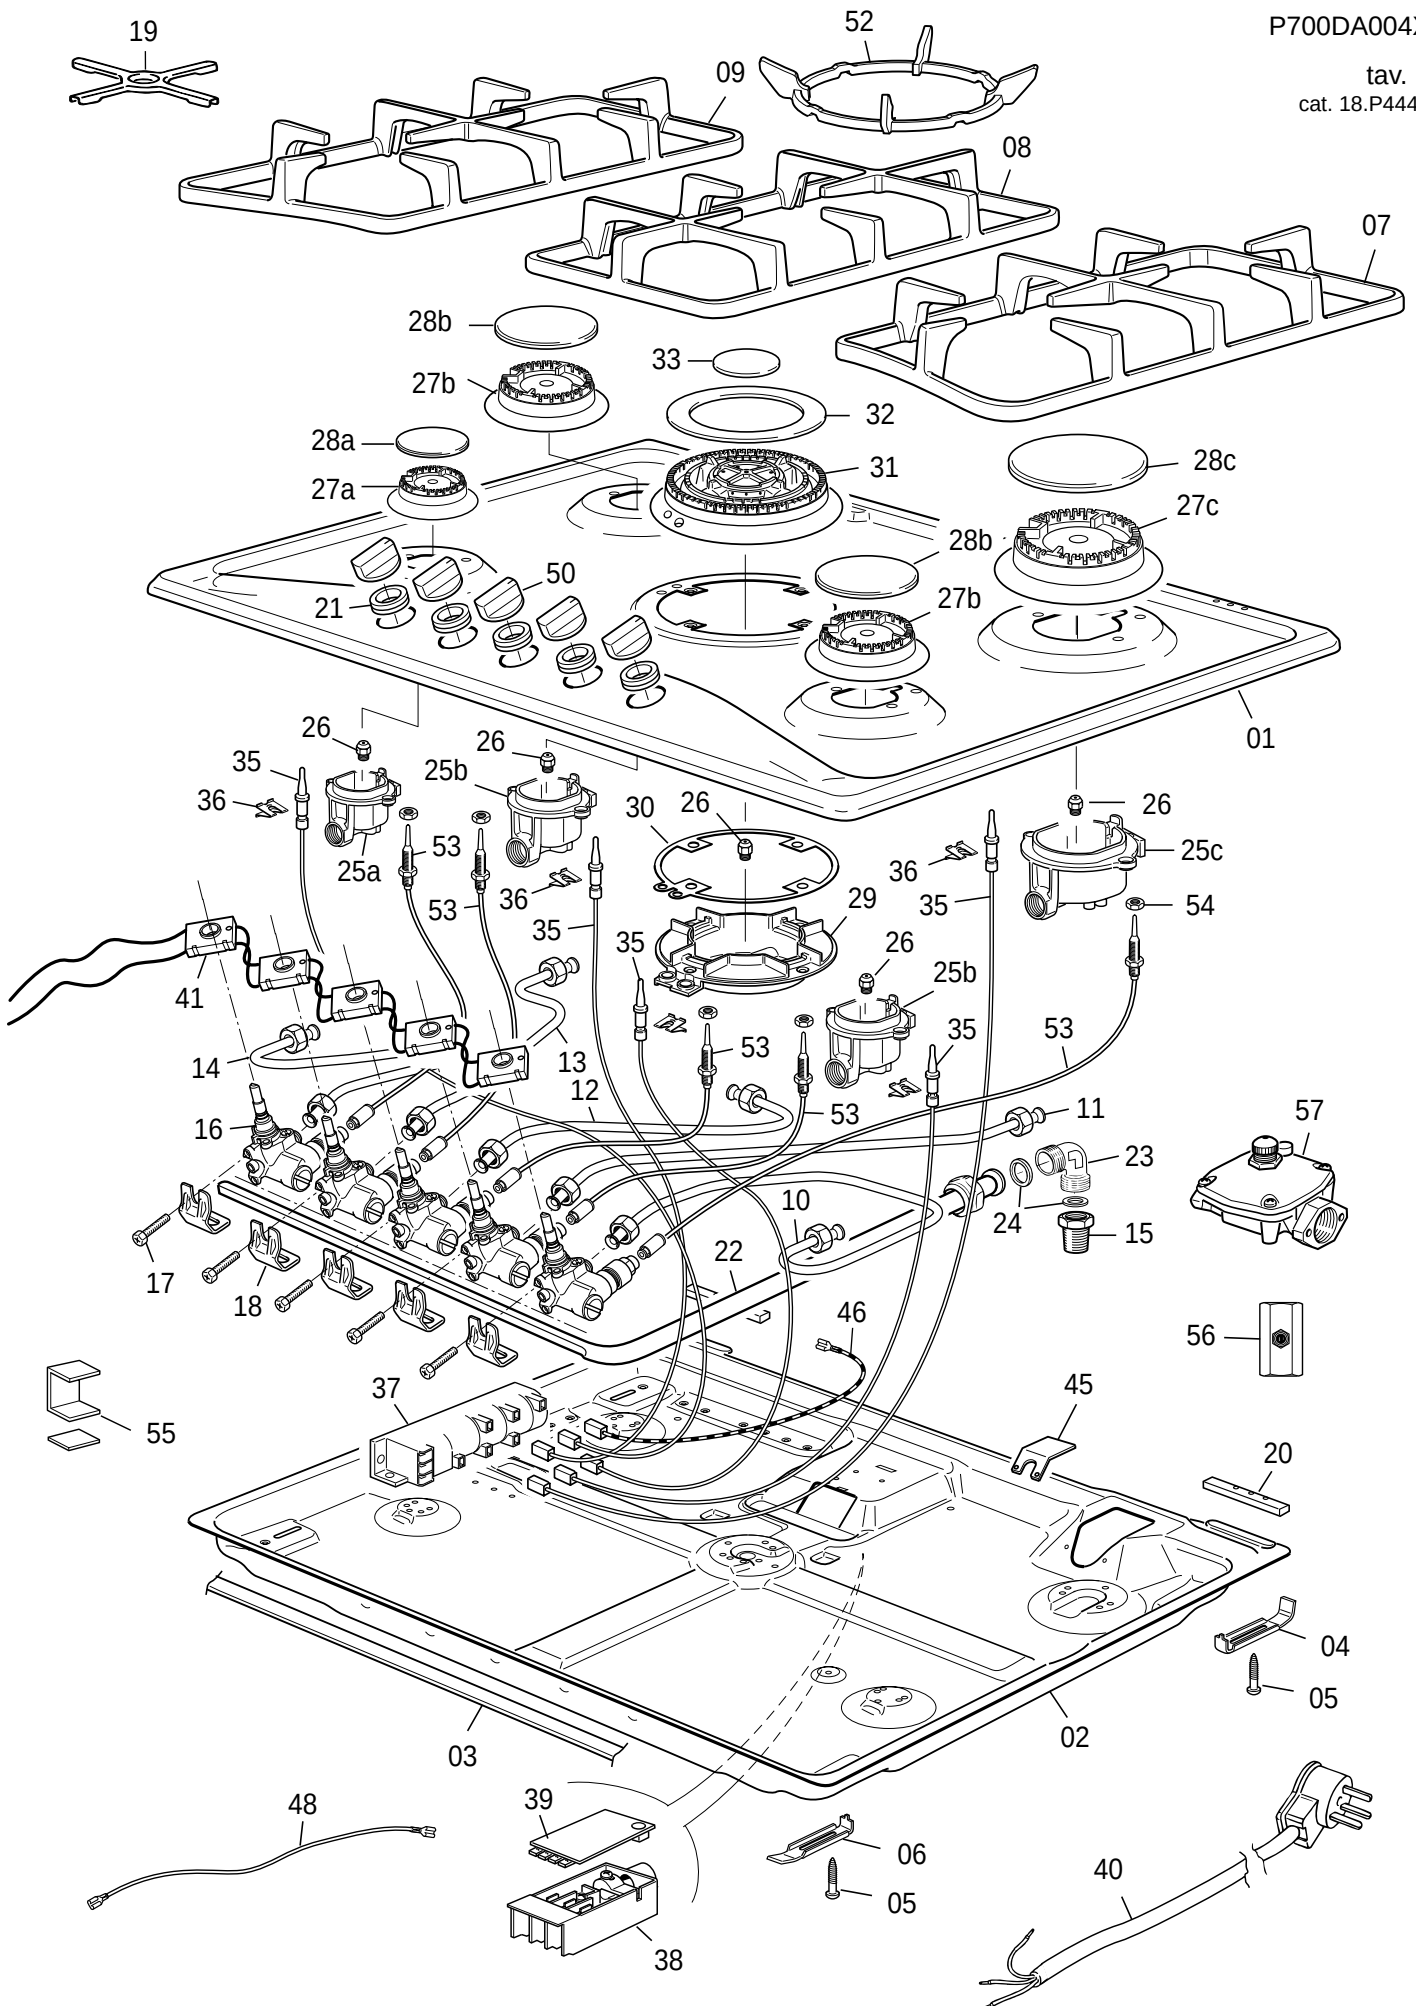

Position	Code	description
1	3370504SD1	Hob top
2	4117001	Burner casing
3	53065	SEAL
4	94335	Rear fixing bracket
5	1221	SCREW
6	94338	Front fixing bracket
7	217561	Right top grate
8	217563	Central top grate
9	217562	Left top grate
10	29849	SR - Front right burner pipe
11	29850	R - burner pipe
12	29855	TR - burner pipe
13	29854	SR - Rear left burner pipe
14	29853	A - burner pipe
15	67026	CONNECTION
16a	106249	Tap Auxiliary diam 0.27
16b	106252	Tap Semi-rapid diam 0.34
16c	106253	Tap Rapid diam 0.44
16d	106254	Tap Triple-ring diam 0.65
17	1202	SCREW
18	94616	Tap bracket
19	217303	Grate for small pans
20	40070	Rear fixing bar
21	40057	Rubber joint
22	3427050G01	5 gas inlet pipe
23	67008	Elbow
25a	215465	Burner-cupA
25b	215466	Burner-cupSR
25c	215467	Burner-cupTR
26a	101182	Injector NATURAL GAS Ø 0.85 - A
26b	101260	Injector NATURAL GAS Ø 1.12 - SR
26c	101273	Injector Rapid diam 1.45 - NG
26d	101261	Injector - diameter 1.65 TR - Natural gas
26e	101262	Injector ULPG Ø 0.53 - A
26f	101263	Injector ULPG Ø 0.70 - SR
26g	101244	Injector Rapid diam 0.91 - LPG
26h	101233	Injector ULPG Ø 0.95 - TR

27a	68109003	Burner headA
27b	68110003	Burner headSR
27c	68111003	Burner-head R
28a	216129005A	Burner-capA
28b	216130005A	Burner-capSR
28c	216131005A	Burner-cap R
29	215469	Burner-cup Triple-ring
30	53078	Burner-cup gasketTR
31	68115003	Burner-head TR
32	216133005A	Burner-cap outside TR
33	216132005A	Burner-cap inside TR
35a	84028	Spark plug - 250 mm
35b	84029	IgniterL=630 mm
35c	84032	Spark plug 250 mm
36	35094	Igniter spring
37	82048.1	Electronic ignition
38	51054	Terminal block
39	103451	Terminal block cover
40	54090	Cord - 3x0.75
41	1031126	Ignition switches
45	94337	Fixing plate
46	103360	Ignition earth cable - L150
48	103389	Cable L = 400
50	2183007363	KNOB
52	217498	Grid for woks
53a	107039	Burner thermocouple L=500 mm
53b	107039	Burner thermocouple L=500 mm
53c	107042	Burner thermocouple TR L=350 mm
54	214057	NUT
55	94295	Spacing
56	103468	Test point adaptor
57	103347	Gas pressure regulator 1/2