 
 
 
 
 
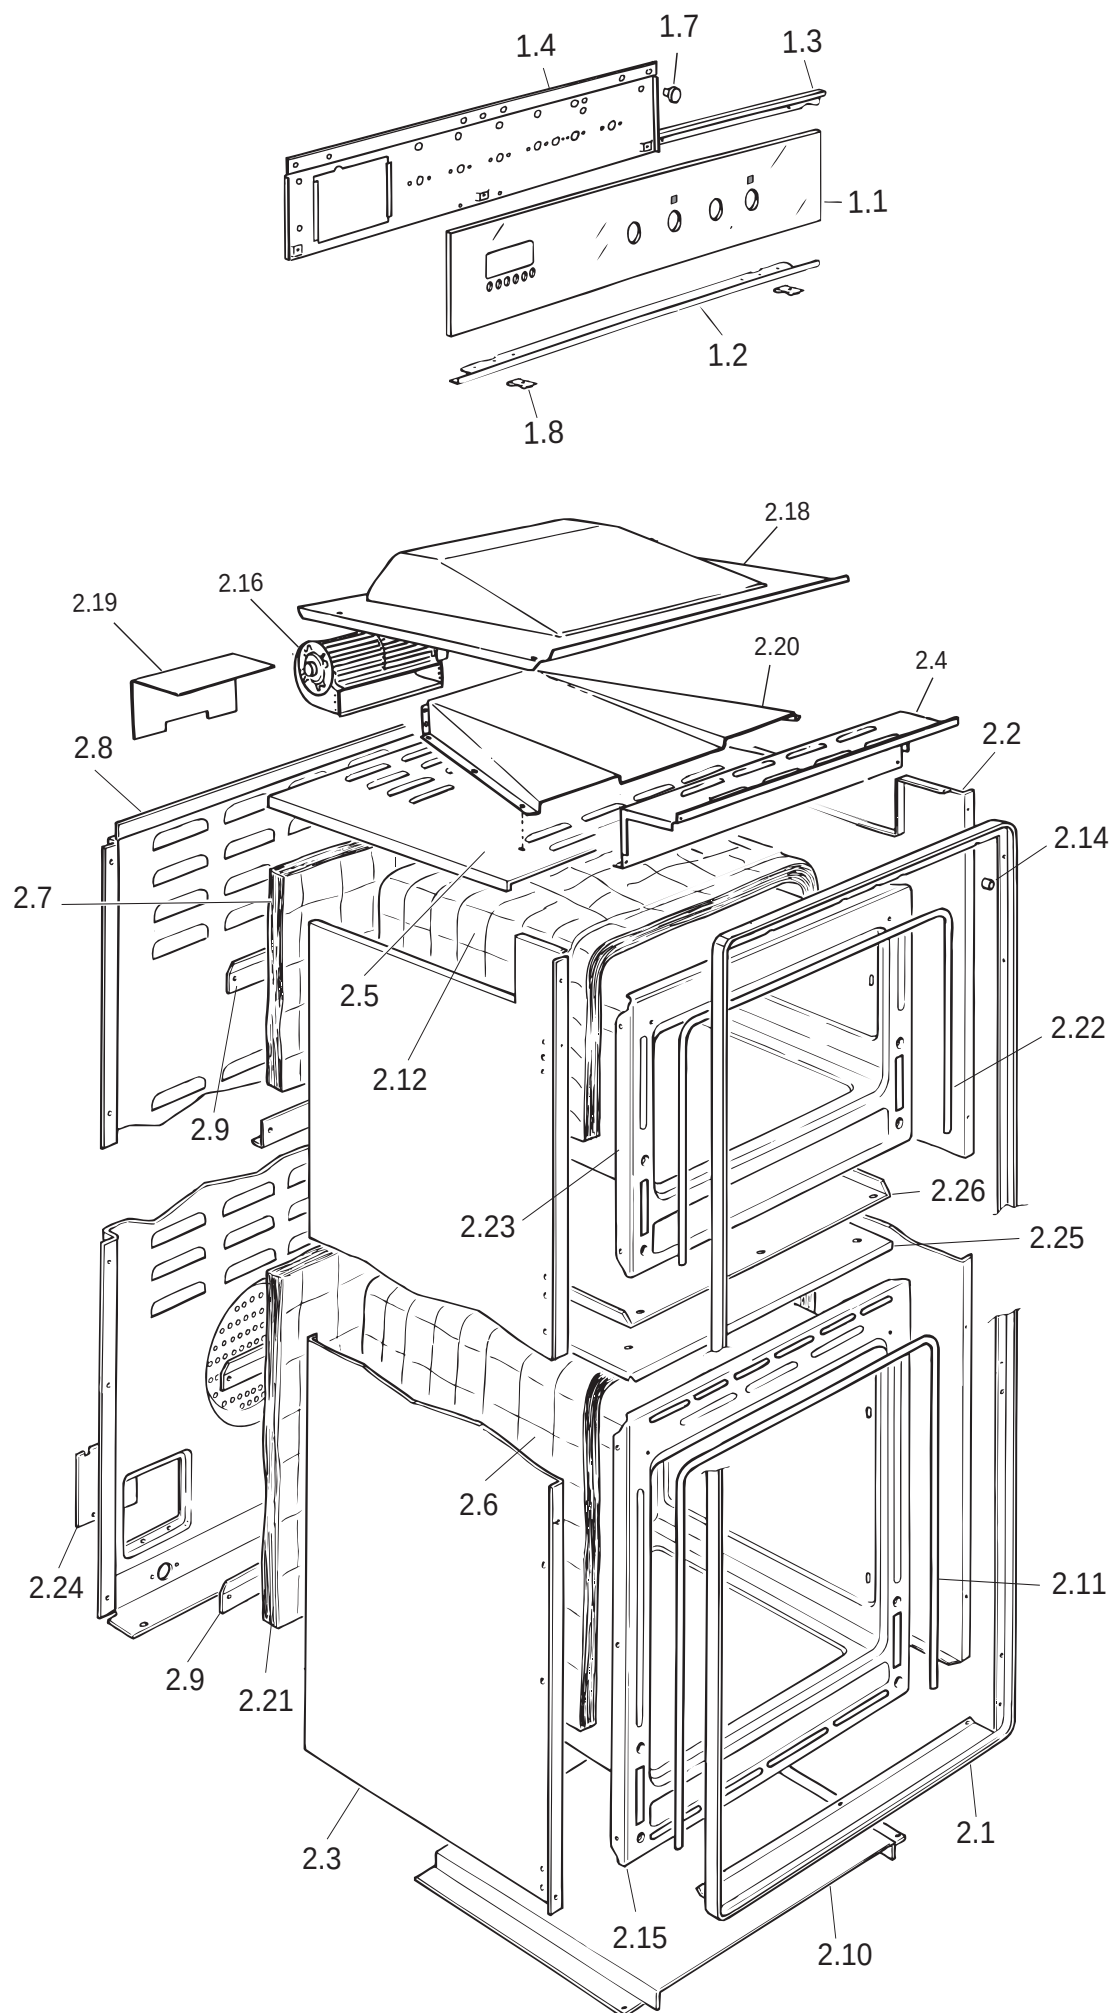 
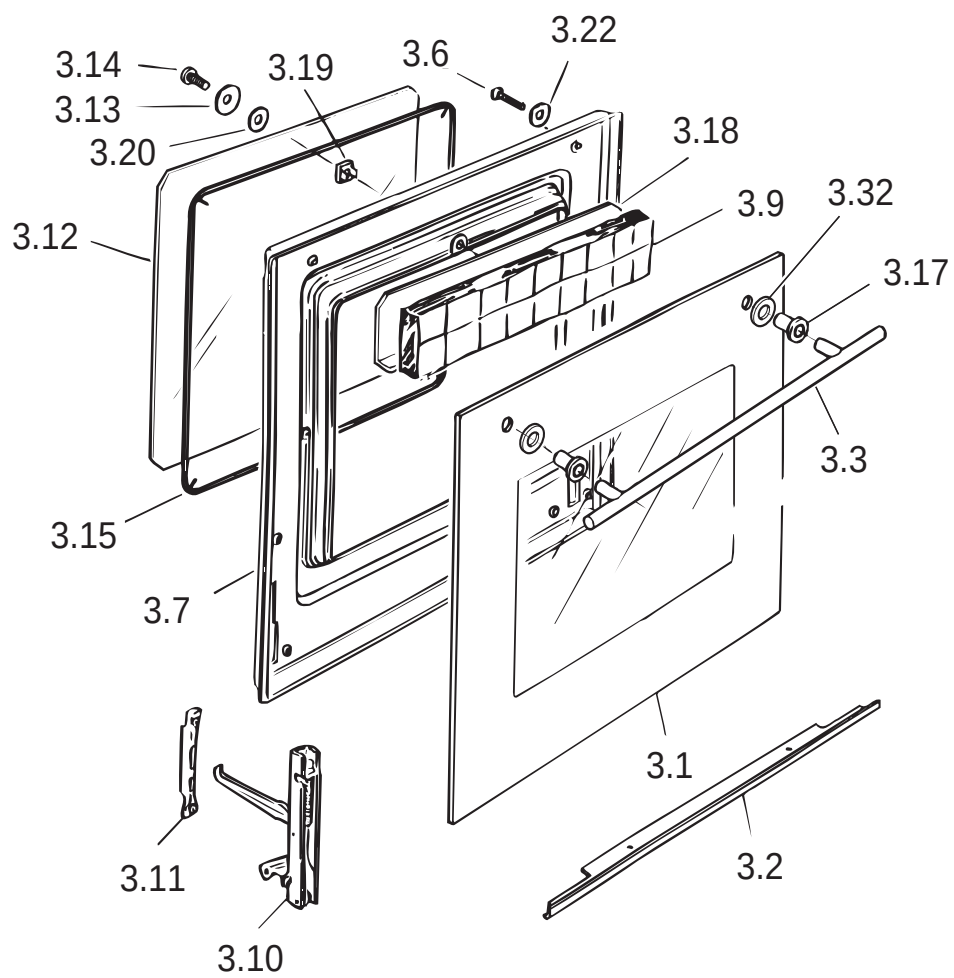 
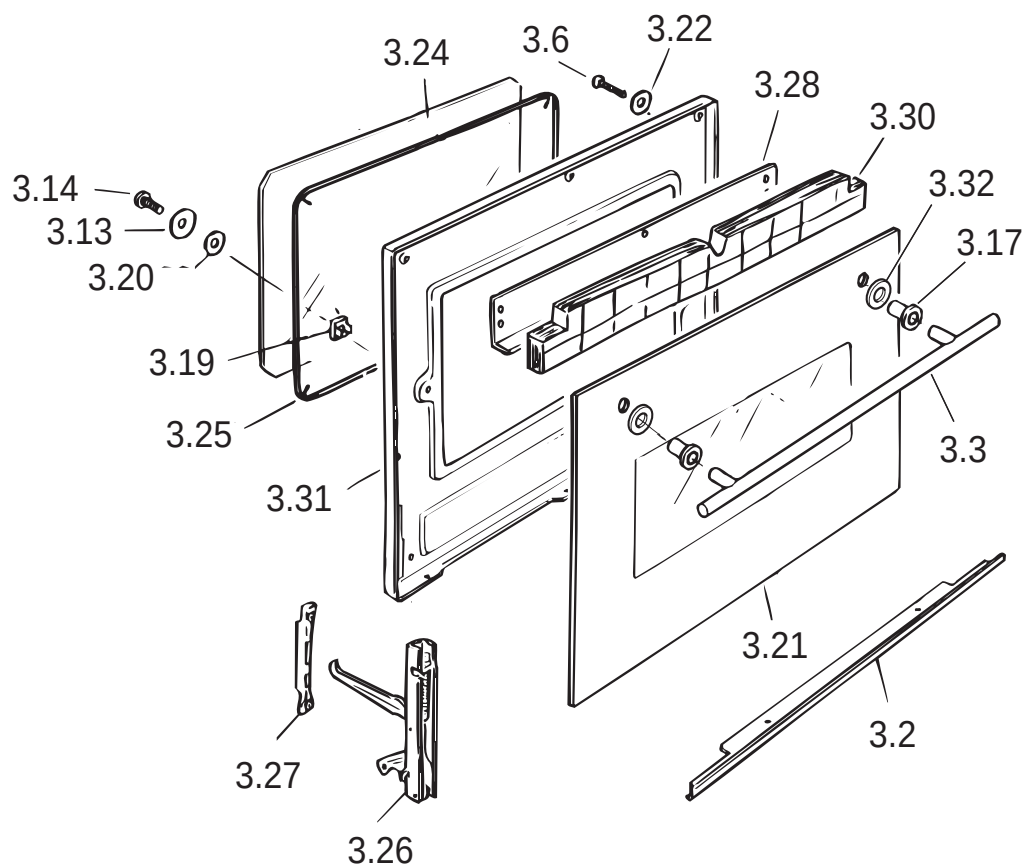 
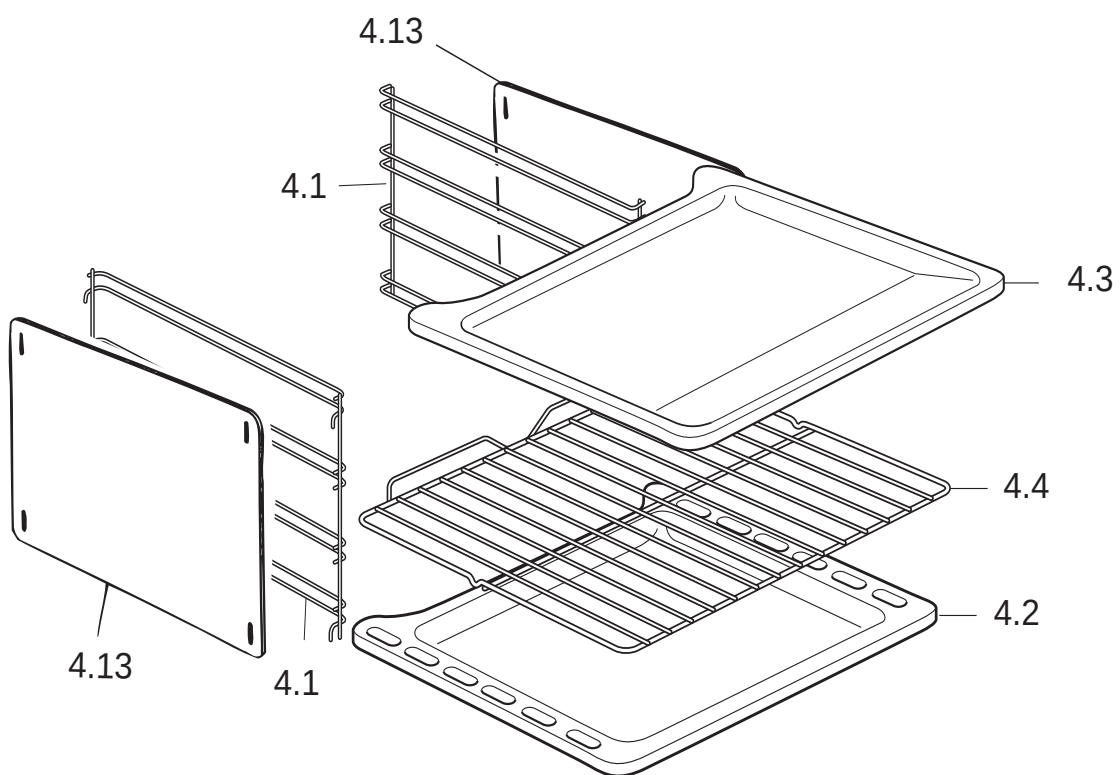 
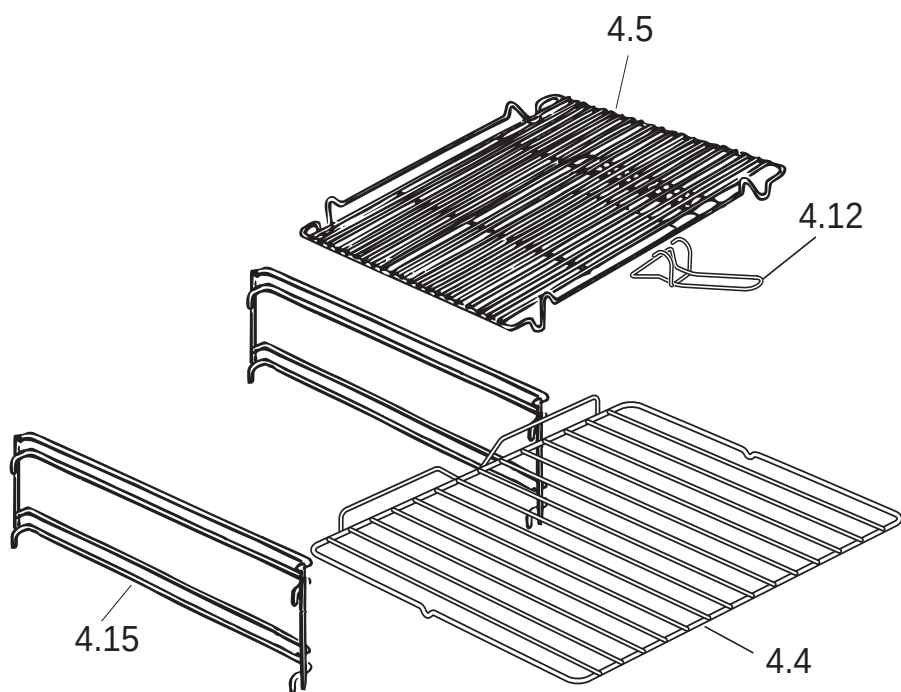 
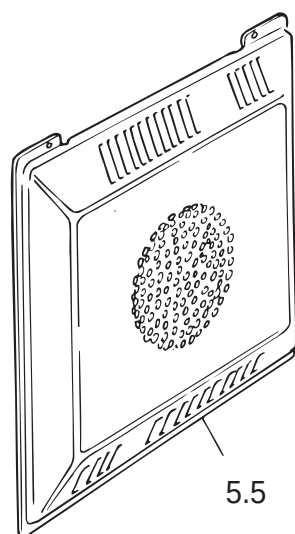 
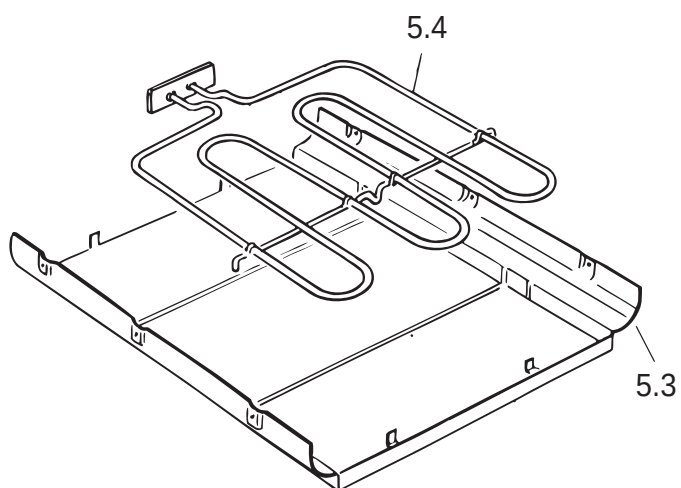 
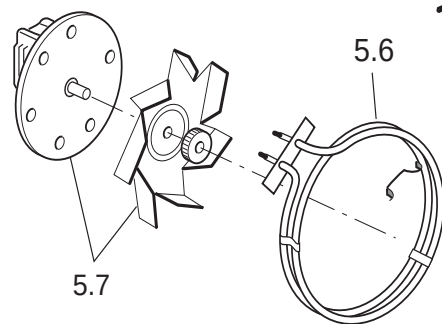 


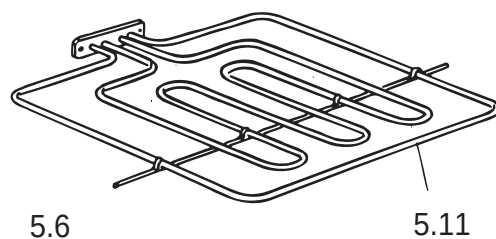 


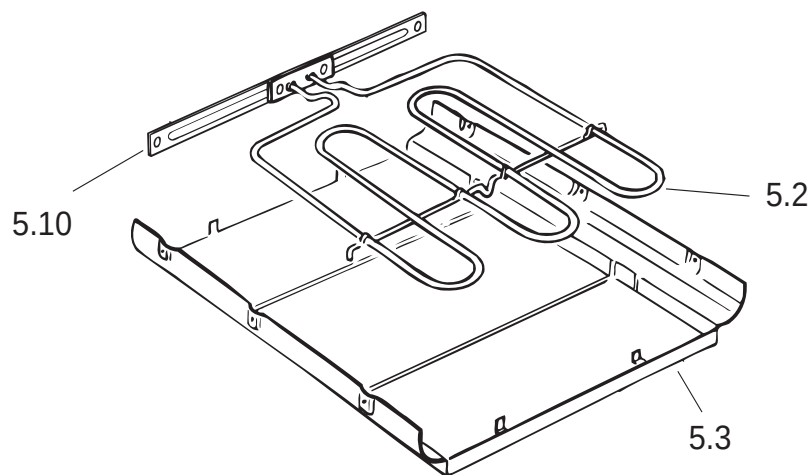

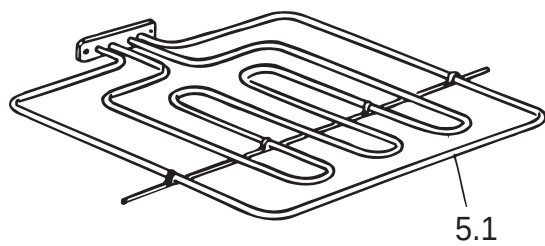

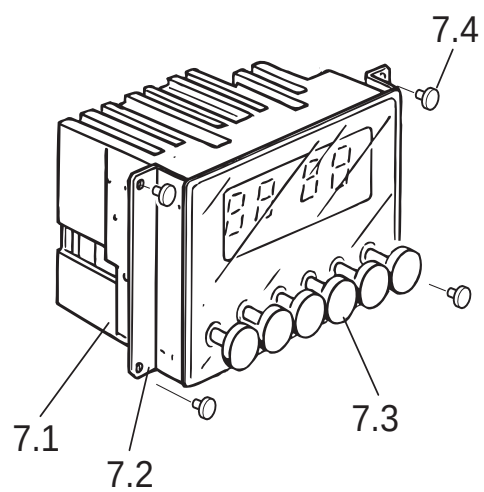

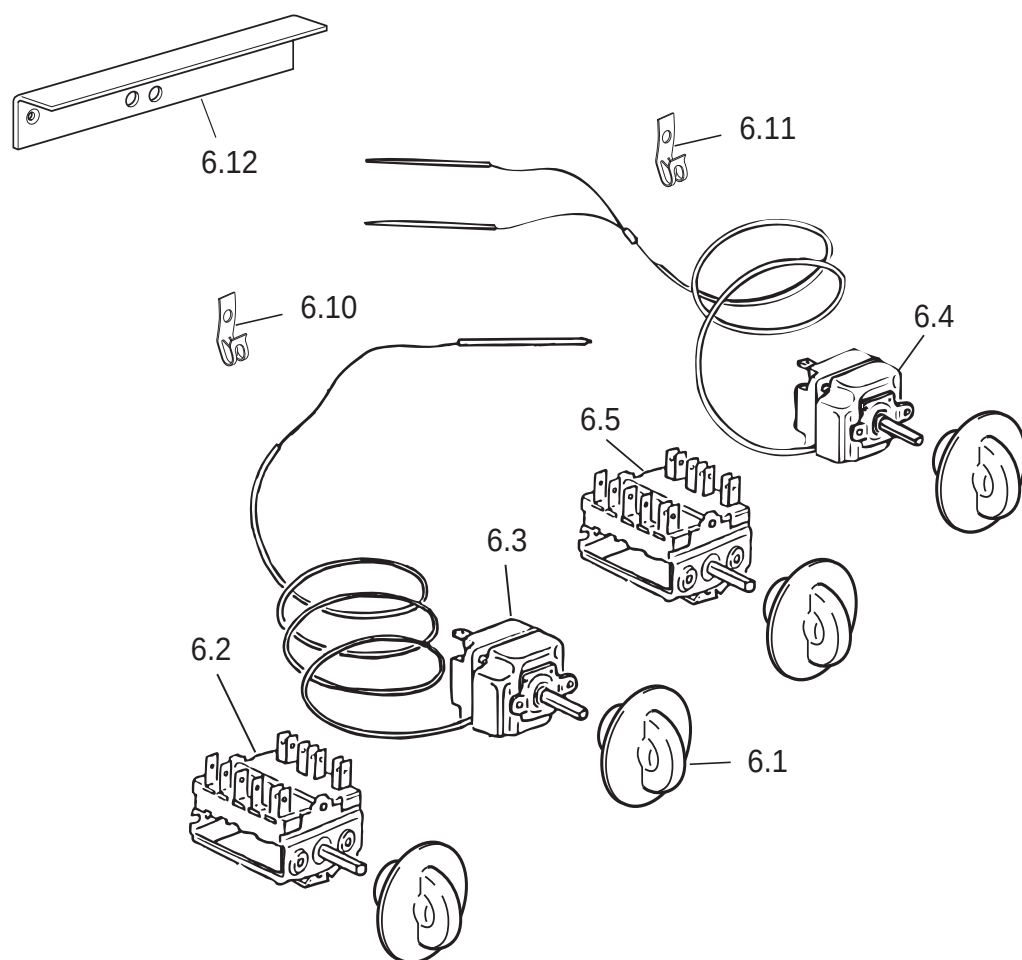

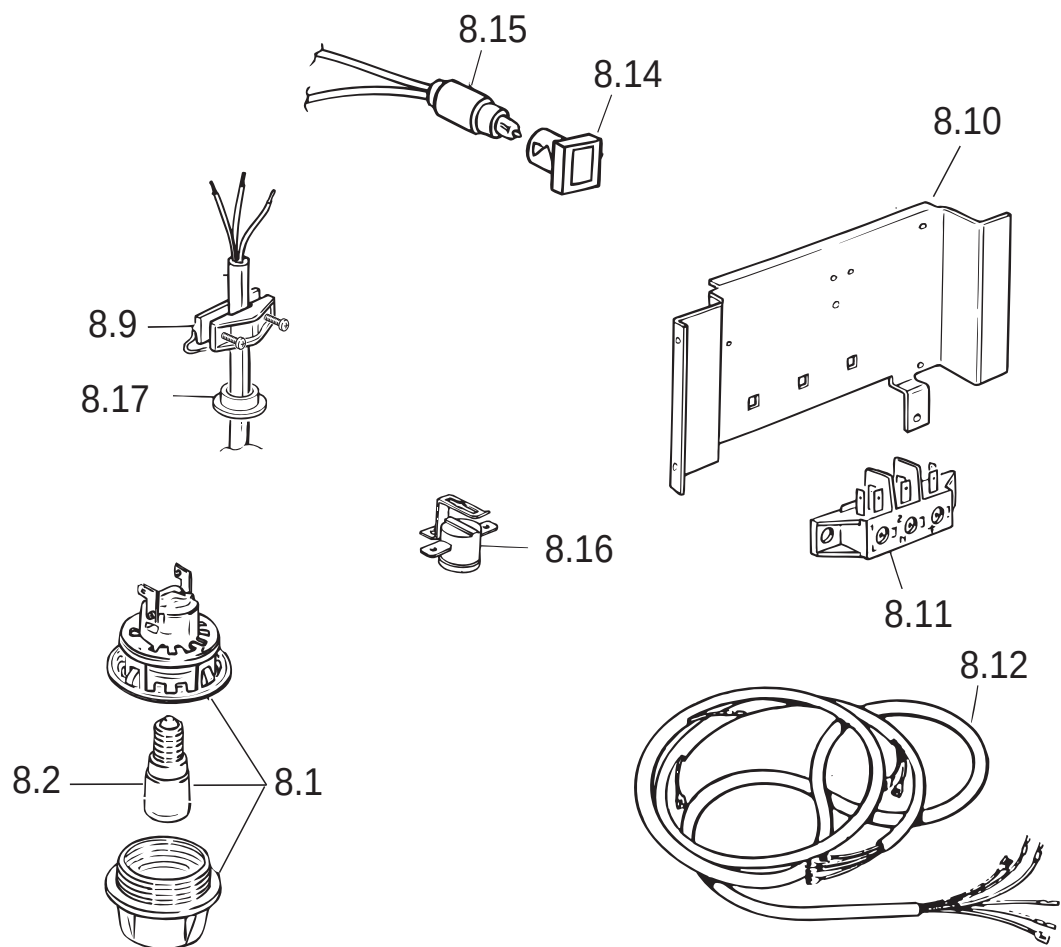

Position	Code	description
1= 1.1	0311964	Glass fascia panel
2= 1.2	083093035	Lower retainer trim
3= 1.3	083188035	Upper retainer trim
4= 1.4	35MF70204	Interior control panel
5= 1.7	040011	BUFFER
6= 1.8	213007	CLIP
7= 2.1	083225035	Trim surround
8= 2.2	411UM02	Right side panel
9= 2.3	411UM03	Left side panel
10= 2.4	411FG03	Control panel shelter
11= 2.5	421FG01Z	Upper shelter
12= 2.6	030092.1	Bottom oven insulation
13= 2.7	030065.1	Bottom oven rear insulation
14= 2.8	411UM01	REAR PANEL
15= 2.9	4216003Z	Insulation cross-piece
16= 2.10	411F706	Bottom panel
17= 2.11	053199	Bottom oven seal
18= 2.12	030066.1	Top oven insulation
19= 2.14	085019	SPACER
20= 2.15	450UM1EM21	Top Oven Cube
21= 2.16	079017	Tangential fan
22= 2.18	411FG07	Upper shelter
23= 2.19	411F715	Upper air conveyor
24= 2.20	411F716	Air conveyor
25= 2.21	030091.1	Top oven rear insulation
26= 2.22	053052	Top oven seal
27= 2.23	450UM1ES14	Top oven cube
28= 2.24	51BUM01	Terminal block protection
30= 2.26	411UM04	Shelter
31= 3.1	0311597	Outer glass
32= 3.2	083186035	Lower retainer trim (White)
33= 3.3	037174035	HANDLE
34= 3.6	001184	SCREW
35= 3.7	373FF704G	INNER DOOR
36= 3.9	030057	Door insulation
37= 3.10	063103	Hinge (male)
38= 3.11	063025	Top oven hinge (female) works with male hinge

063089

39= 3.12	0311000.1T	Inner glass
40= 3.13	103205.1	WASHER
41= 3.14	001024	SCREW
42= 3.15	053084	Bottom oven glass seal
43= 3.17	085042035	Oven sleeve
44= 3.18	411F729	Insulation support
45= 3.19	214021	NUT
46= 3.20	003035	WASHER
47= 3.21	0311965	Top oven outer glass
48= 3.22	003041	WASHER
49= 3.24	0311086.1T	Top oven inner glass
50= 3.25	053086	Top oven glass seal
51= 3.26	063065	Top oven hinge (male)
52= 3.27	063066	Top oven hinge (female) works with male hinge 063096
53= 3.28	411UM05	Top oven insulation support
54= 3.30	030064.1	Top oven door insulation
55= 3.31	373FUM02K	Top oven door skin
56= 3.32	003051	Silicone washer diameter 19
57= 4.1	217291	Shelf support
58= 4.2	48B6101G	DRIP PAN
59= 4.3	48EF700	Pastry plate
60= 4.4	217439	OVEN SHELF
61= 4.5	217397	Grill-pan grid
62= 4.12	037144	Grill pan grid handle
63= 4.13	473000	Catalytic panels
64= 4.15	217503	Shelf support
65= 5.1	062072004	Top grill element - 230 V
66= 5.2	062058004A	Top oven bottom element - 230 V
67= 5.3	421F701Z	Element shelter
68= 5.4	062058004	Bottom element - 230 V
69= 5.5	47AN6010	Fan diffuser
70= 5.6	062057004	Fan element - 230 V
71= 5.7	079008001F	Fan motor - 230 V
72= 5.10	094207	Bottom element fixing bar
73= 5.11	062079004	Grill element - 230 V
74= 6.1	218A00355M	Knob (White)

75= 6.2	050040.1	Oven switch
76= 6.3	066072	Oven thermostat
77= 6.4	066078	THERMOSTAT
78= 6.5	050028.1	Oven switch
79= 6.10	213023	CLIP
80= 6.11	213025	CLIP
81= 6.12	094289	Bulb thermostat protection
82= 7.1	074041	Electronic timer
83= 7.2	094120	Electronic programmer chassis
84= 7.3	103271035	Button (White)
86= 8.1	072025	Lamp holder assembly
87= 8.2	073013001	LAMP
88= 8.9	052008	Cable clamp - rear cooker
89= 8.10	094162	Terminal bracket
90= 8.11	051062	Terminal block
91= 8.12	1131185	WIRING
92= 8.14	073030	Control lamp cover (Red)
93= 8.15	073046	WARNING LIGHT
94= 8.16a	066057	Cut-off thermostat
95= 8.16b	066073	Cut-off thermostat 150 degrees
96= 8.16c	066080	Cut-off thermostat 55 degree
97= 8.17	052007	Wire ring