


DS 30 BBQ

P3B0DA002X

tav. 1

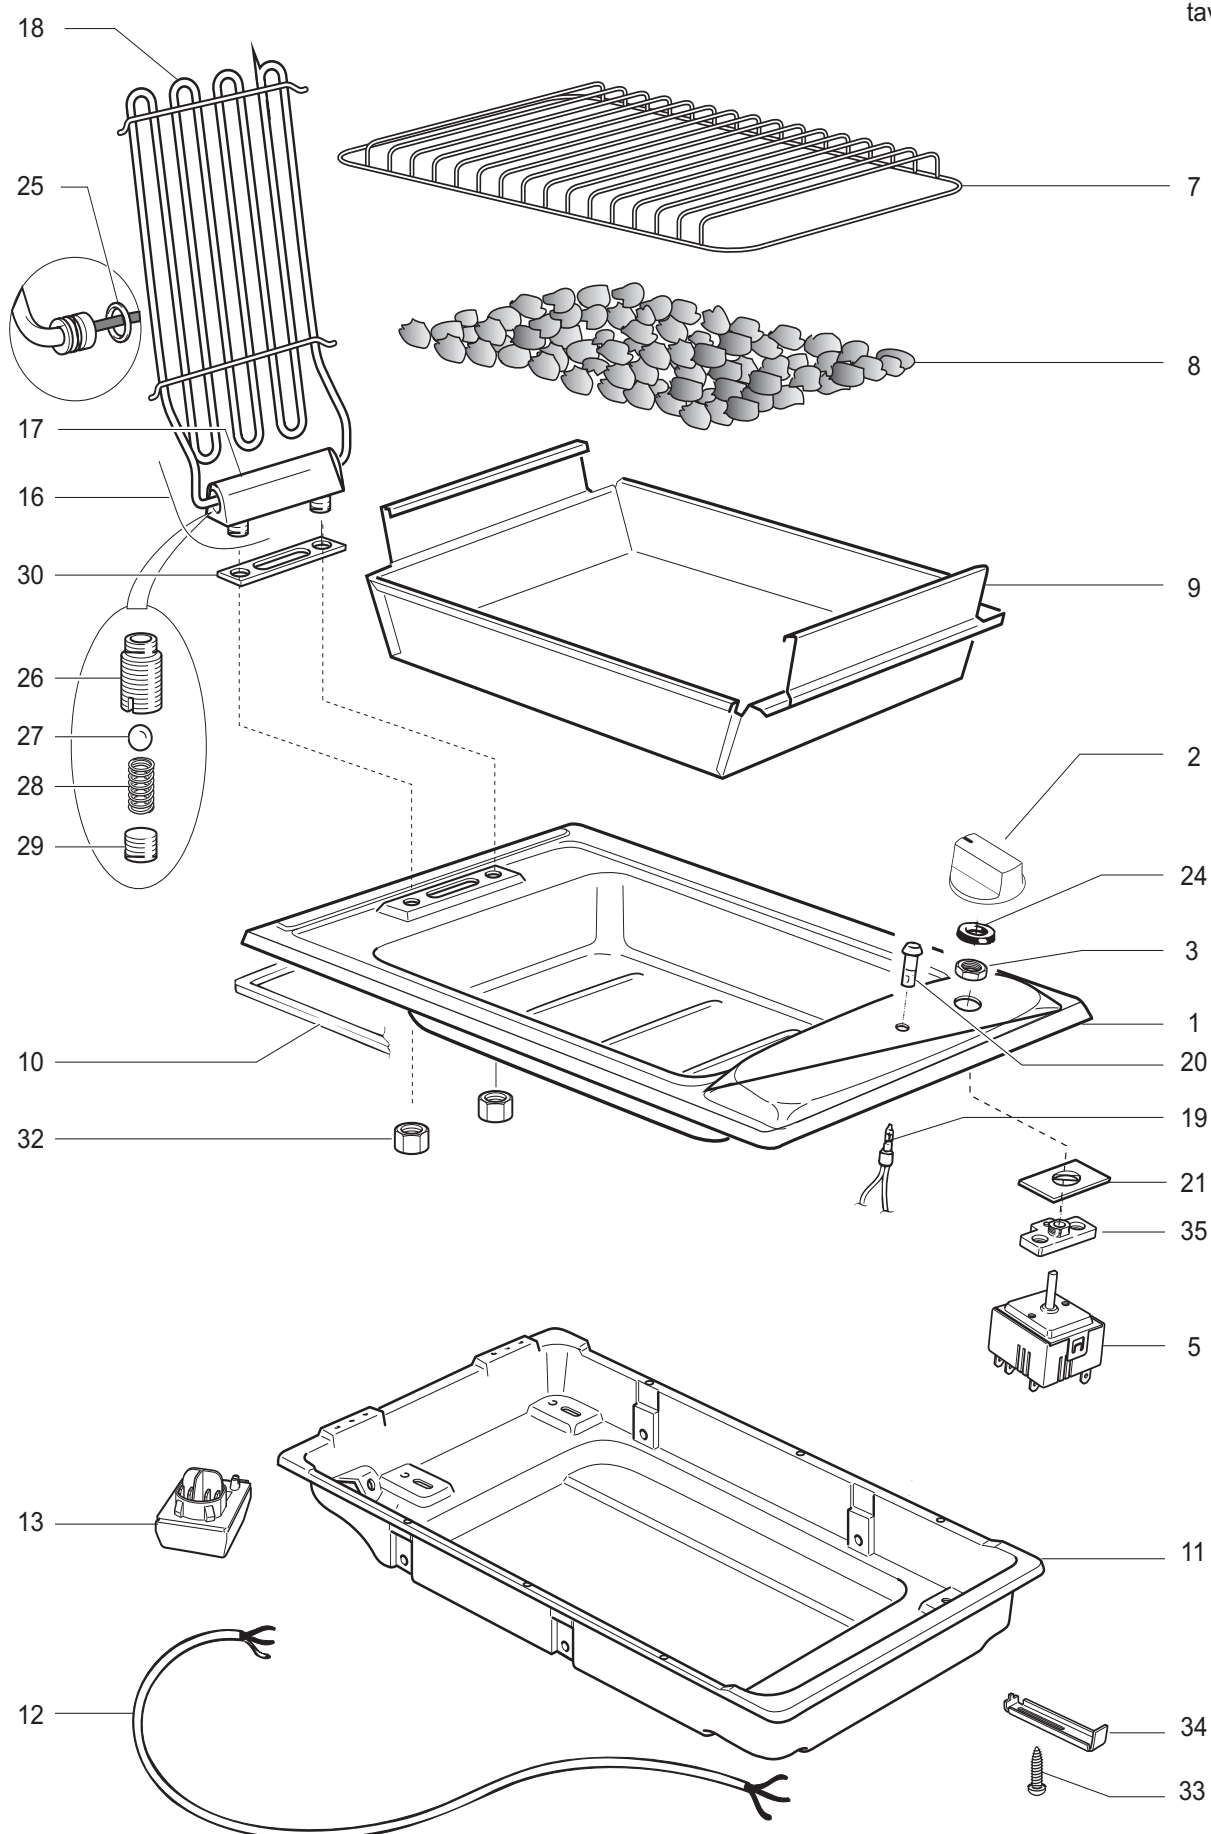

Position	Code	description
0	103515	Yellow-green cable L-260
1	334B014SDA	Domino cooktop
2	2183007363	KNOB
3	214063	NUT
5	050110230	Energy regulator
7	217495	Pan-support
8	103503	Pumice stone
9	4113B01	Pumice stone tray
10	053065	SEAL
11	4113B02	CASING
12	054065	Cord
13	051079	Terminal Block
16	4933B002	Tiltable electric element group
17	069079	Tiltable electric element support
18	062085001	Tiltable electric element
19	073043	Control lamp L 200
20	073060	Control lamp cover (Orange)
21	053055	Switch gasket
24	053079	Knob rubber
25	003056	O RING
26	071057	BOLT
27	103534	BALL
28	035096	SPRING
29	001133	Grub screw
30	053081	GASKET
32	214046	NUT
33	001069	SCREW
34	094347	Front fixing bracket (to fix the appliance to the cabinet)
35	103210.1	Oven switch support