


DS 30 C

P3C0DA004X

tav. 1

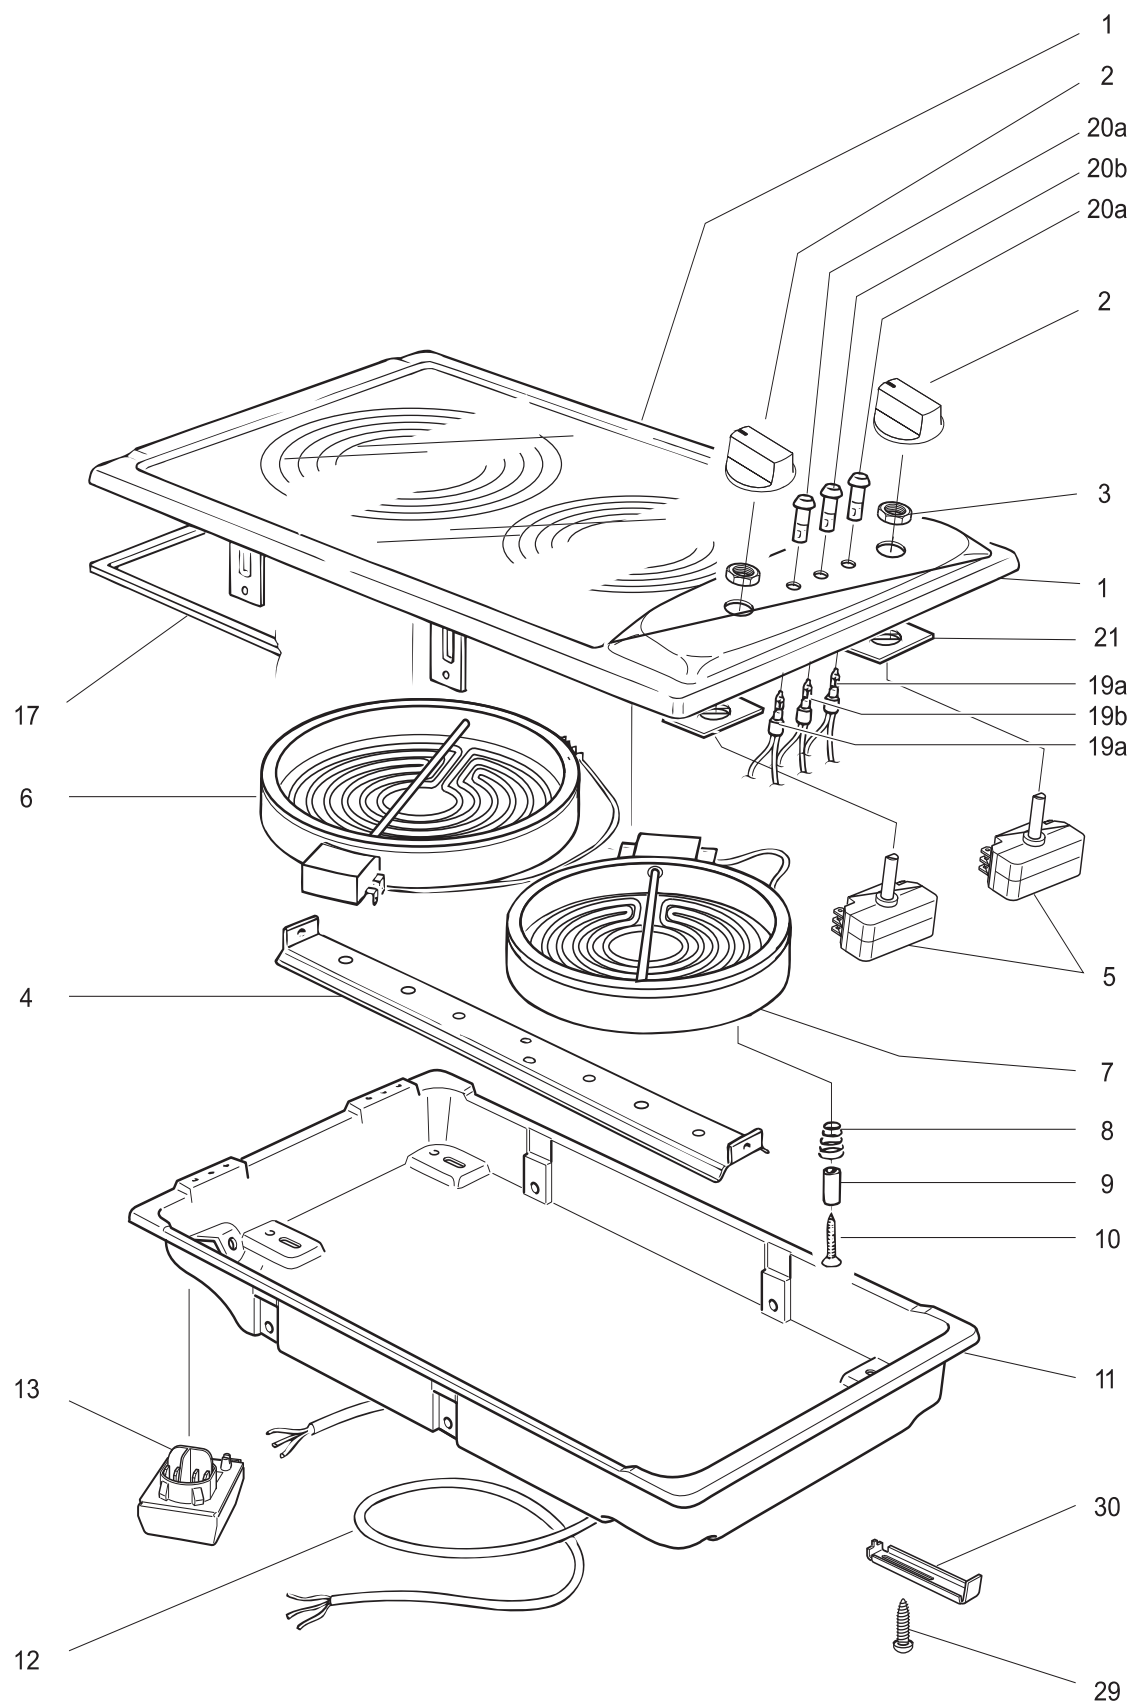

Position	Code	description
1	3553C80	Glass with frame
2	2183007363	KNOB
3	214063	NUT
4	51B3C01	Fixing plate
5	050033	Normal/rapid electric plate switch
6	04775230	3 circuit hotplate - diameter 180 - 1800W
7	04782230	COPP 3C D155 1200W 230V (EGONOMIC)
8	035075	SPRING
9	085043	Spacer hob for each hot plate (2 for each hotplate)
10	001111	SCREW
11	4113C05	CASING
12	054065	Cord
13	051079	Terminal Block
17	053065	SEAL
19a	073028	Control lamp L470
19b	073043	Control lamp L 200
20a	073059	Control lamp cover (Red)
20b	073060	Control lamp cover (Orange)
21	053055	Switch gasket
29	001069	SCREW
30	094347	Front fixing bracket (to fix the appliance to the cabinet)