


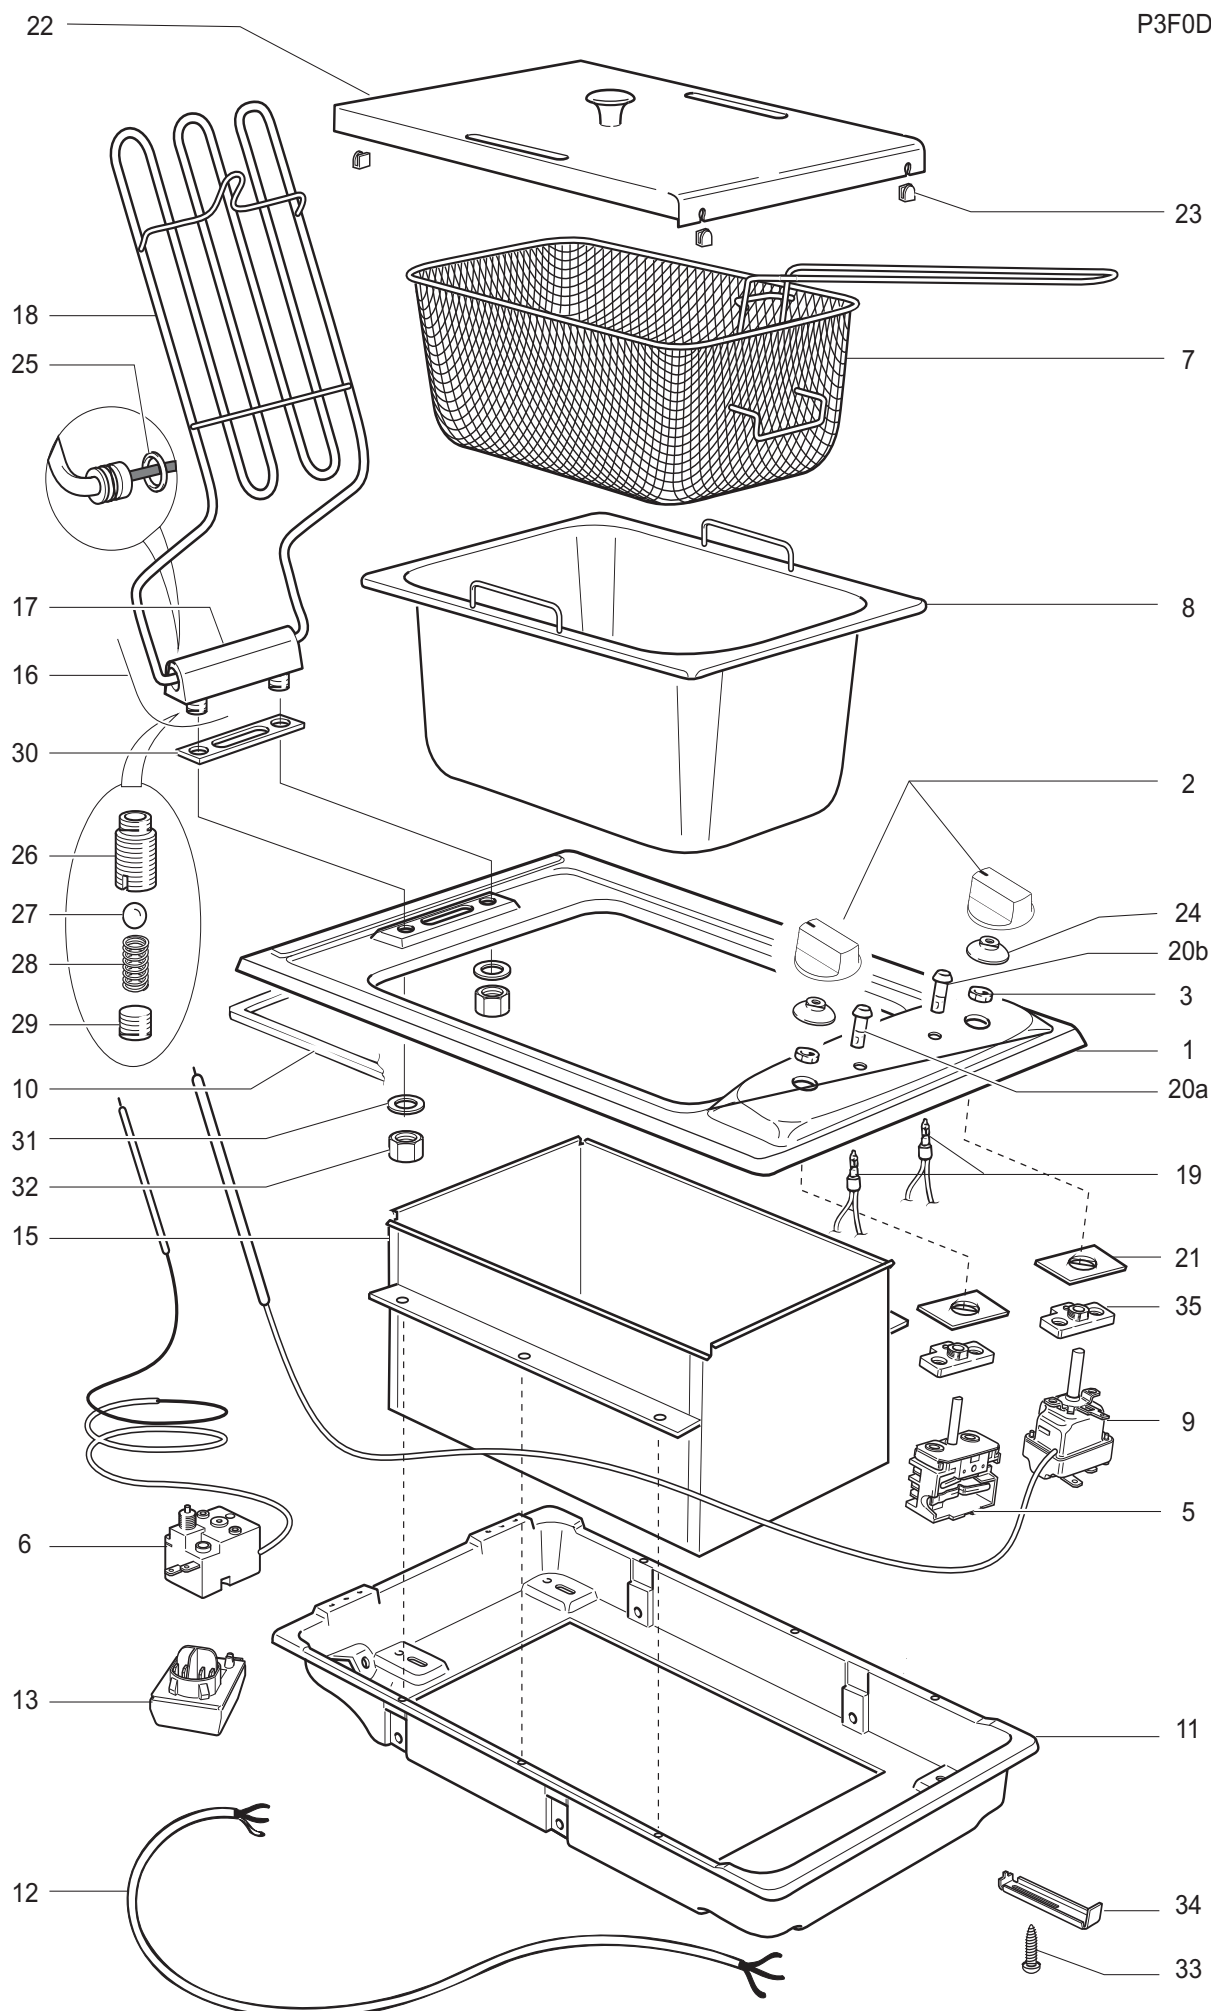

Position	Code	description
0	103488	CABLE
1	334F014SDA	Domino cooktop
2	2183007363	KNOB
3	214063	NUT
5	050058	Knob switch
6	066137	Safety thermostat
7	103491	BASKET
8	103492	Oil tray
9	066138	Electric element thermostat
10a	053065	SEAL
10b	053071	GASKET
11	4113F02S	CASING
12	054091	Cord 3x1.5 mm2
13	051079	Terminal Block
15	4113F01	TRAY
16	4933F002	Tiltable electric element group
17	069079	Tiltable electric element support
18	062084001	Tiltable electric element
19	073043	Control lamp L 200
20a	073059	Control lamp cover (Red)
20b	073060	Control lamp cover (Orange)
21	053055	Switch gasket
22	3213F1S	Lid
23	040051	Rubber
24	053079	Knob rubber
25	003056	O RING
26	071057	BOLT
27	103534	BALL
28	035096	SPRING
29	001133	Grub screw
30	053081	GASKET
31	053024.1	Sealing washer
32	214046	NUT
33	001069	SCREW
34	094347	Front fixing bracket (to fix the appliance to the cabinet)
35	103210.1	Oven switch support