



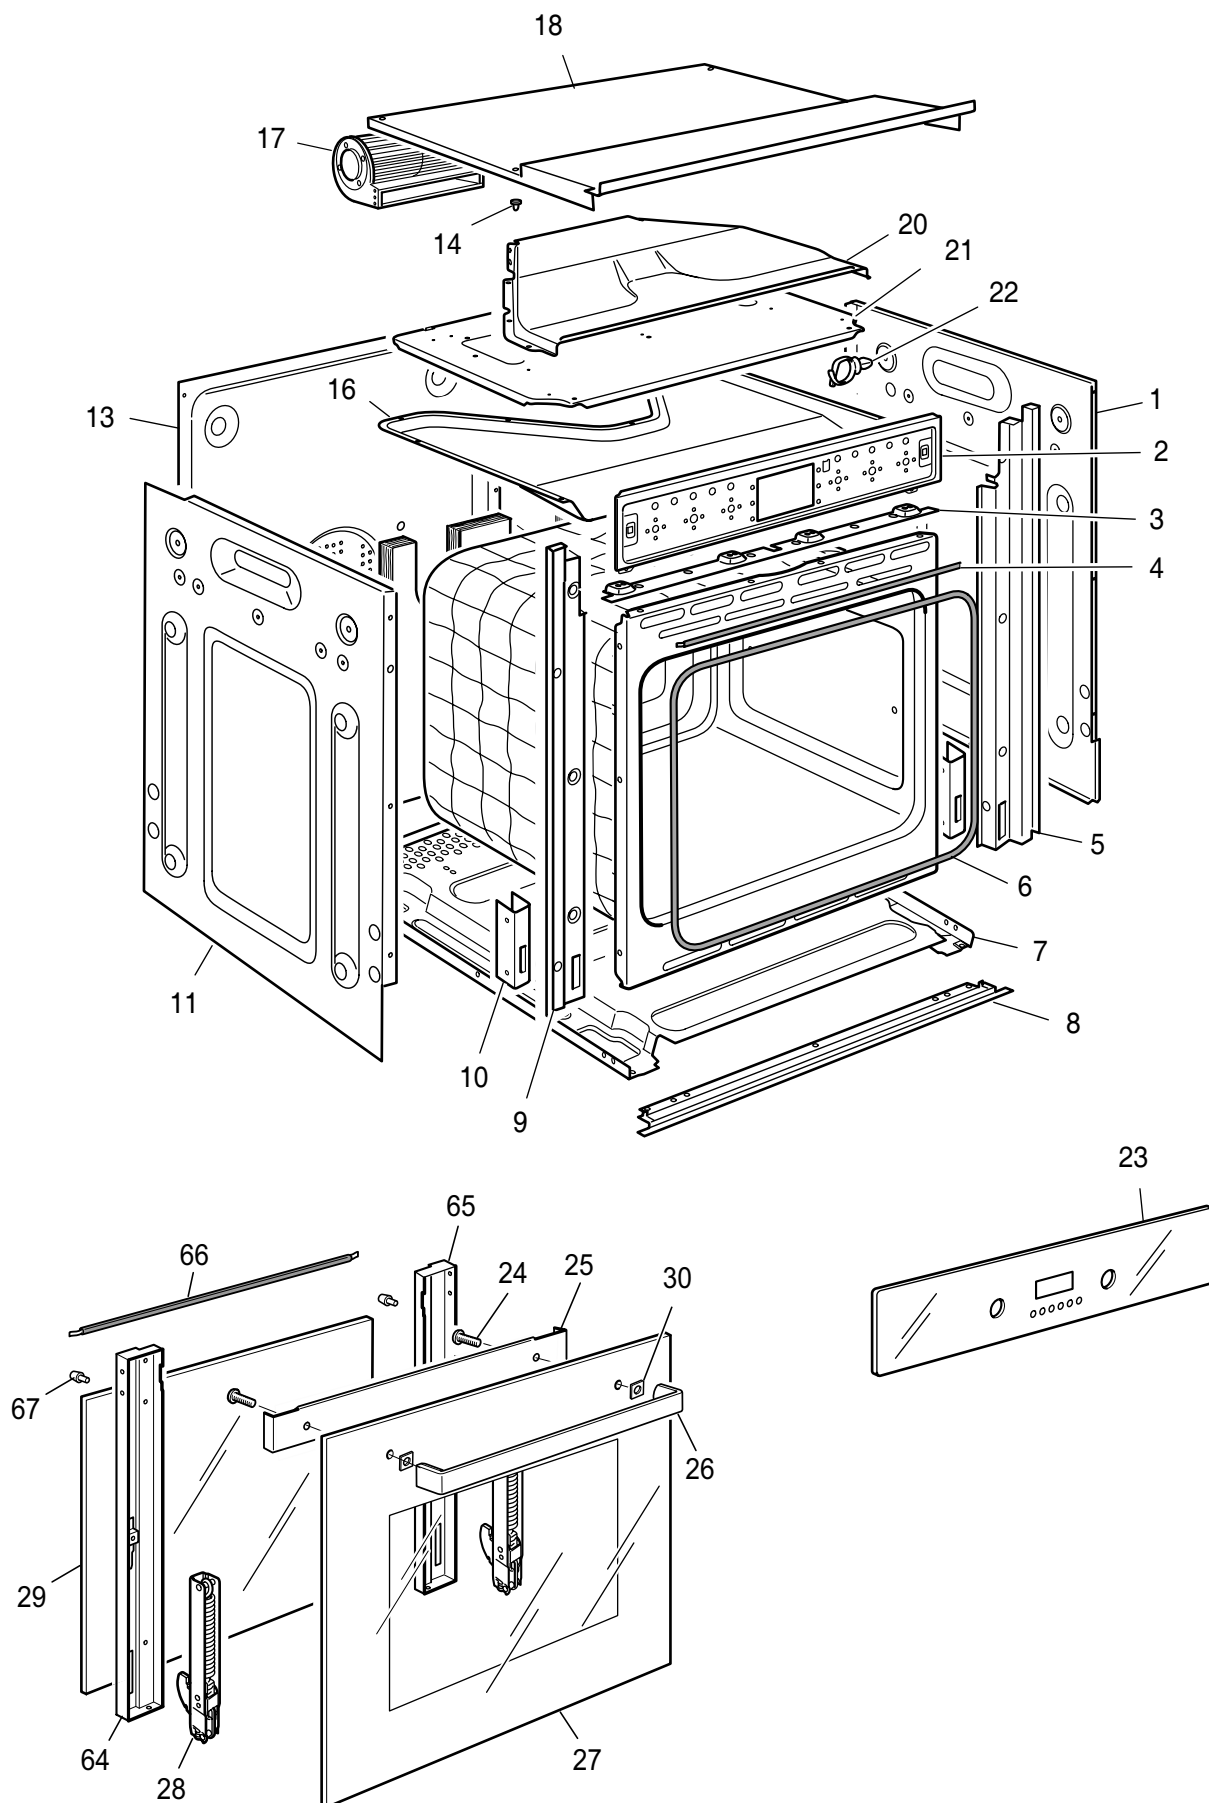

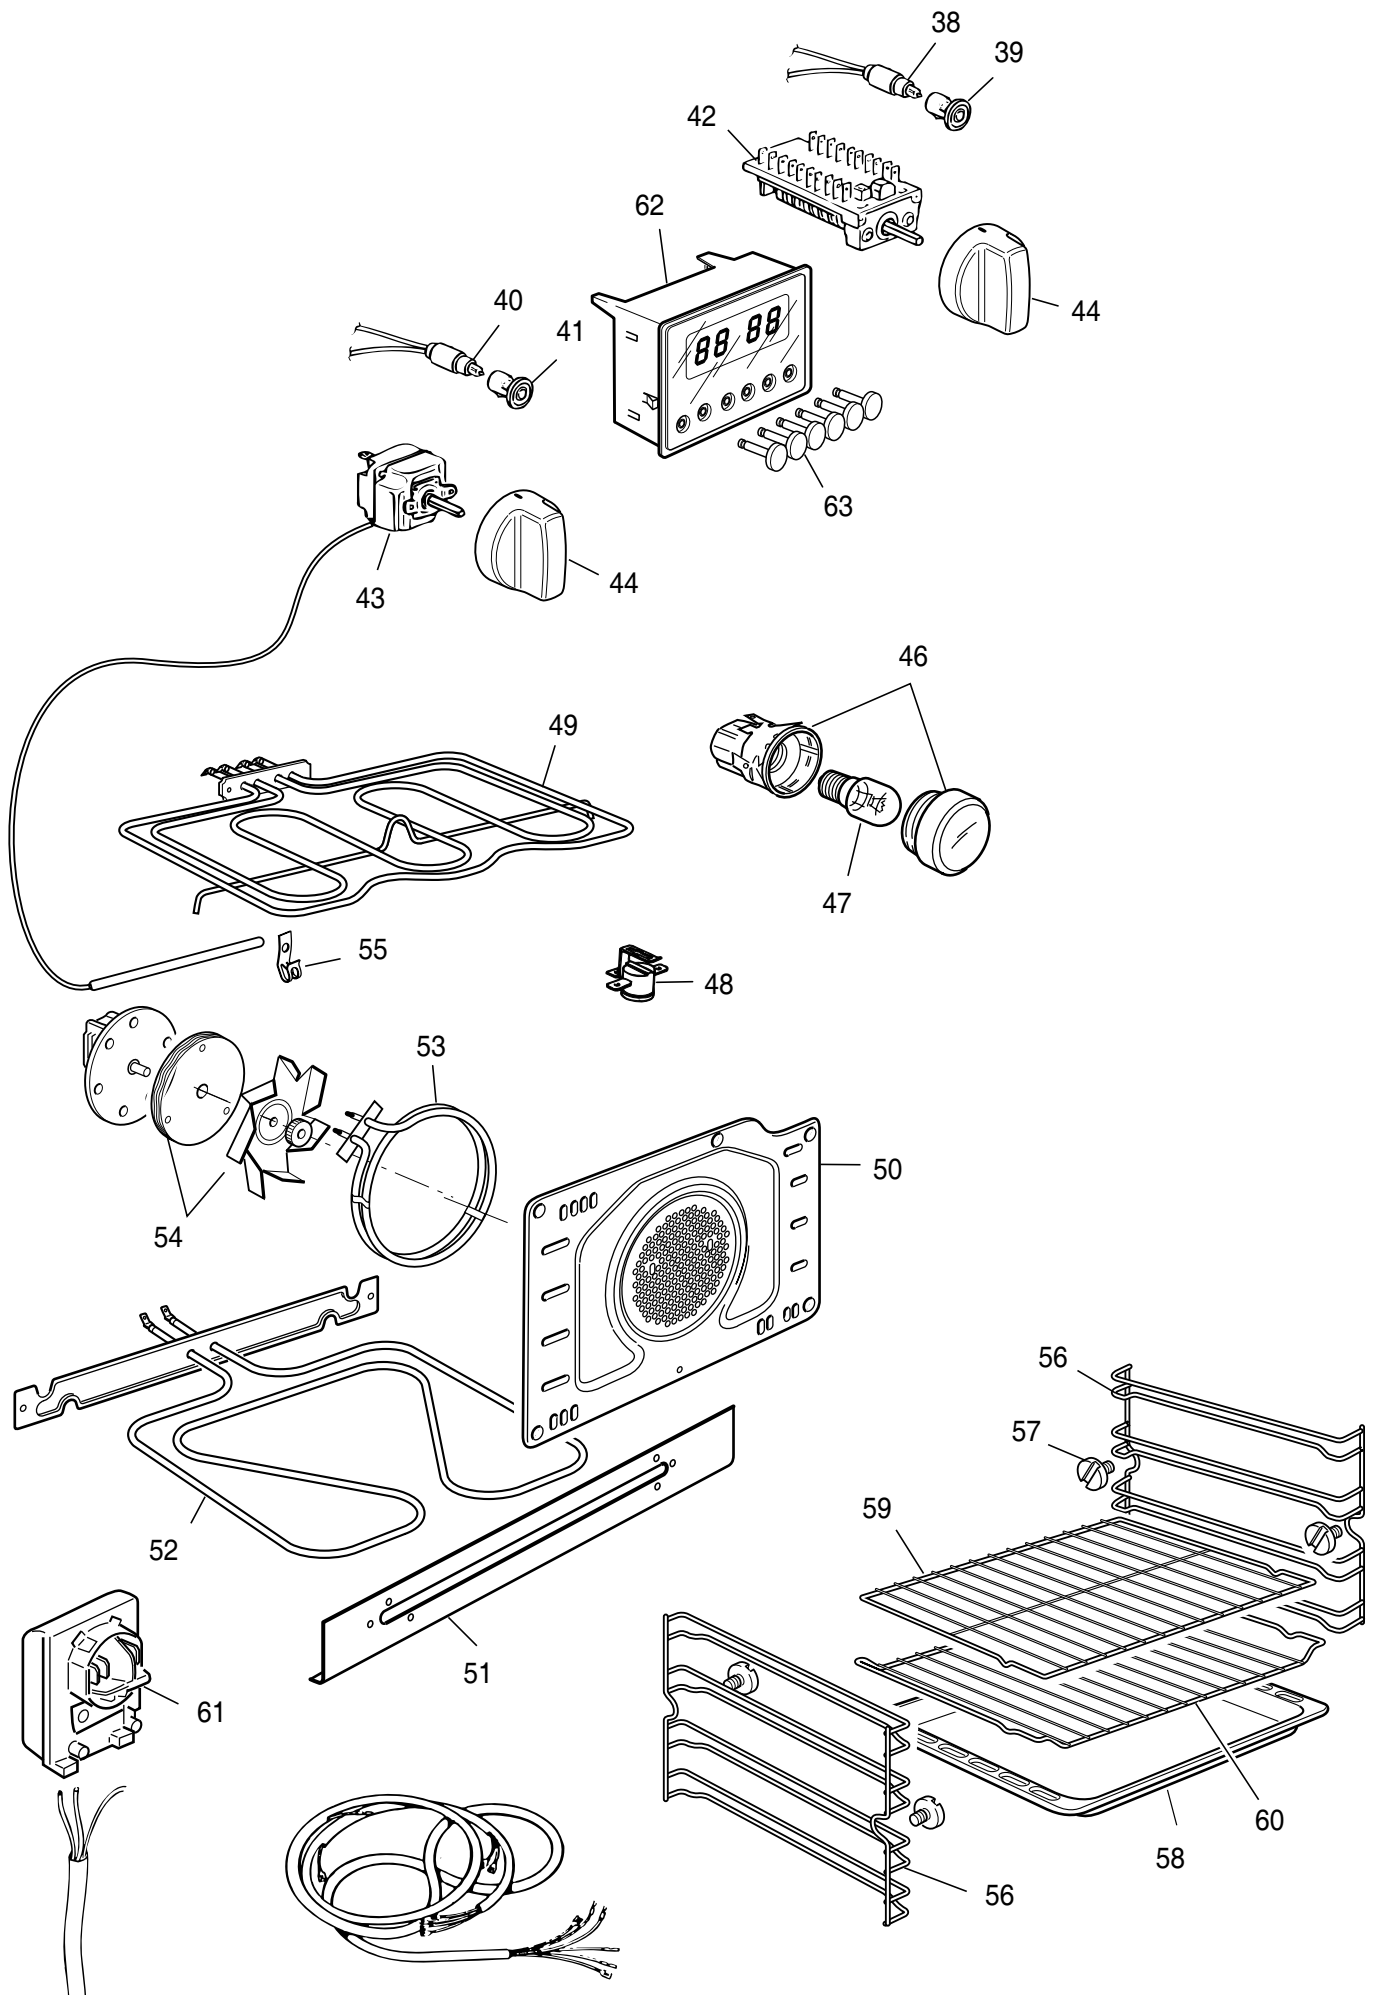

Position	Code	description
01	411F6D1Z	Right side panel
02	35MF60001H	Interior control panel
03	51BF601DH	Right front trim
04	053074	Upper seal
06	053087	SEAL
07	411F602.1	Bottom panel
08	08328400A	Lower trim
09	51BF601SH	Left front trim
10	094390	Door hinge (female)
11	411F6S1Z	Left side panel
13	411F603	REAR PANEL
14	040056	Rubber
16	411F607	Lower air conveyor
17	079017	Tangential fan
18	411F604	Upper shelter
20	411F605	Air conveyor
21	421F602Z	Conveyor support
23	032F2538D1	GLASS
24	001071	Door handle screw
25	51BF622H	SUPPORT
26	037265009	Door handle
27	032F2636DL	GLASS
28	063107	Hinge (male)
29	0313242TH	Inner glass
30	103734080	Handle plaque
38	073044.2	Control lamp L 600/240
39	07306201.2	Control lamp cover (Orange)
40	073039.2	Control lamp L 230
41	07306202.2	Control lamp cover (Red)
42	050028.1	Oven switch
43	066141	THERMOSTAT
44	2183009365	KNOB ELBA ST.STEEL
46	072006	LAMP HOLDER
47	073013001	LAMP
48	066056	Cut-off thermostat 120 degree
49	062089004	Top + grill element - 230 V
50	47AF602P	Fan diffuser

51	NOCODE01	NOT AVAILABLE
52	062090004	Bottom element - 230 V
53	062097004	Fan element
54	079008001F	Fan motor - 230 V
55	213025	CLIP
56	217646	Shelf support
57	001142	Shelf support screw
58	48BF601G	Oven tray
59	217527	GRID
60	217556	GRID
61	051079	Terminal Block
62	074041	Electronic timer
63	1031057009	PUSH BUTTON
64	51AF621SA	Left door trim
65	51AF621DA	Right door trim
66	053125	SEAL