



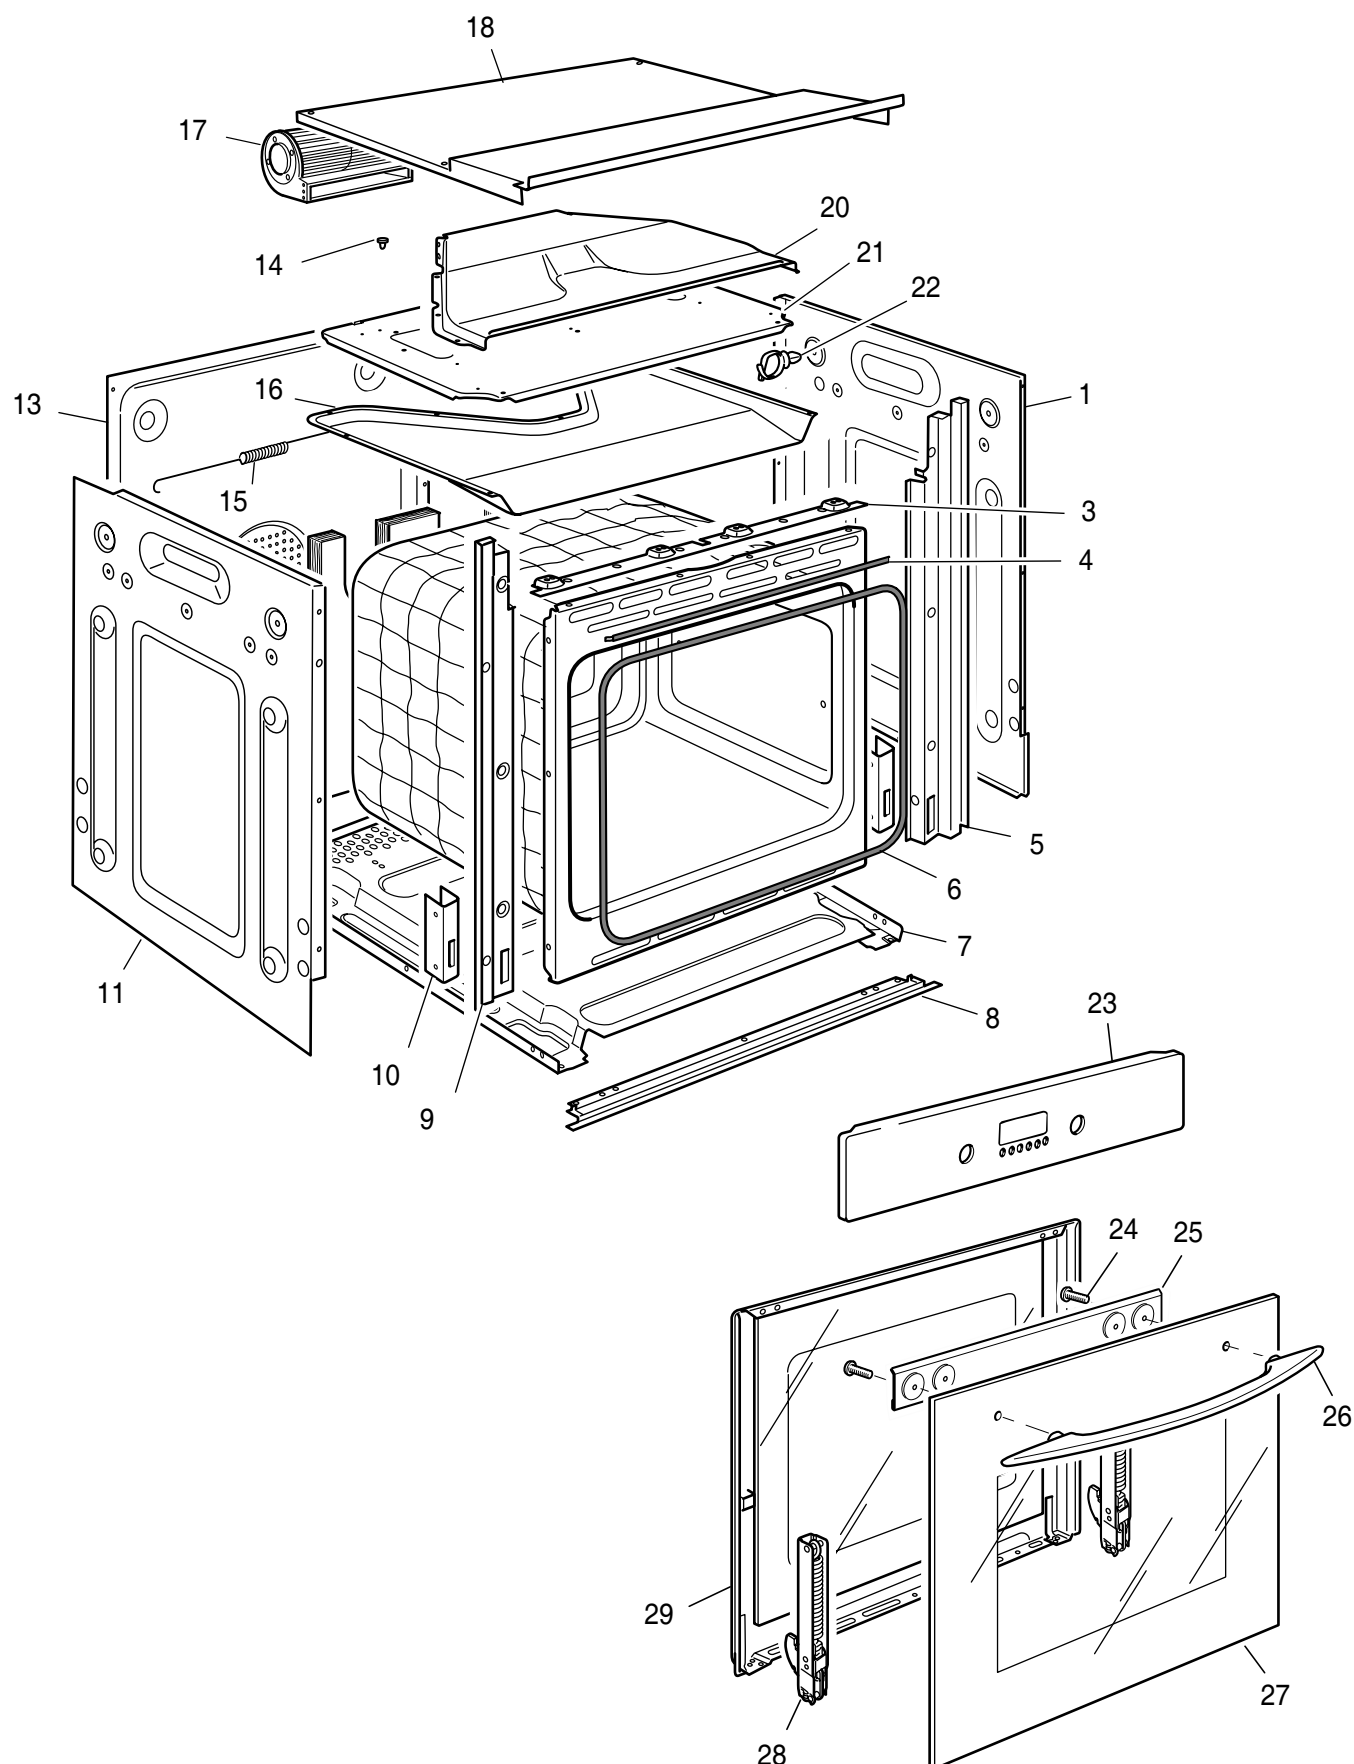

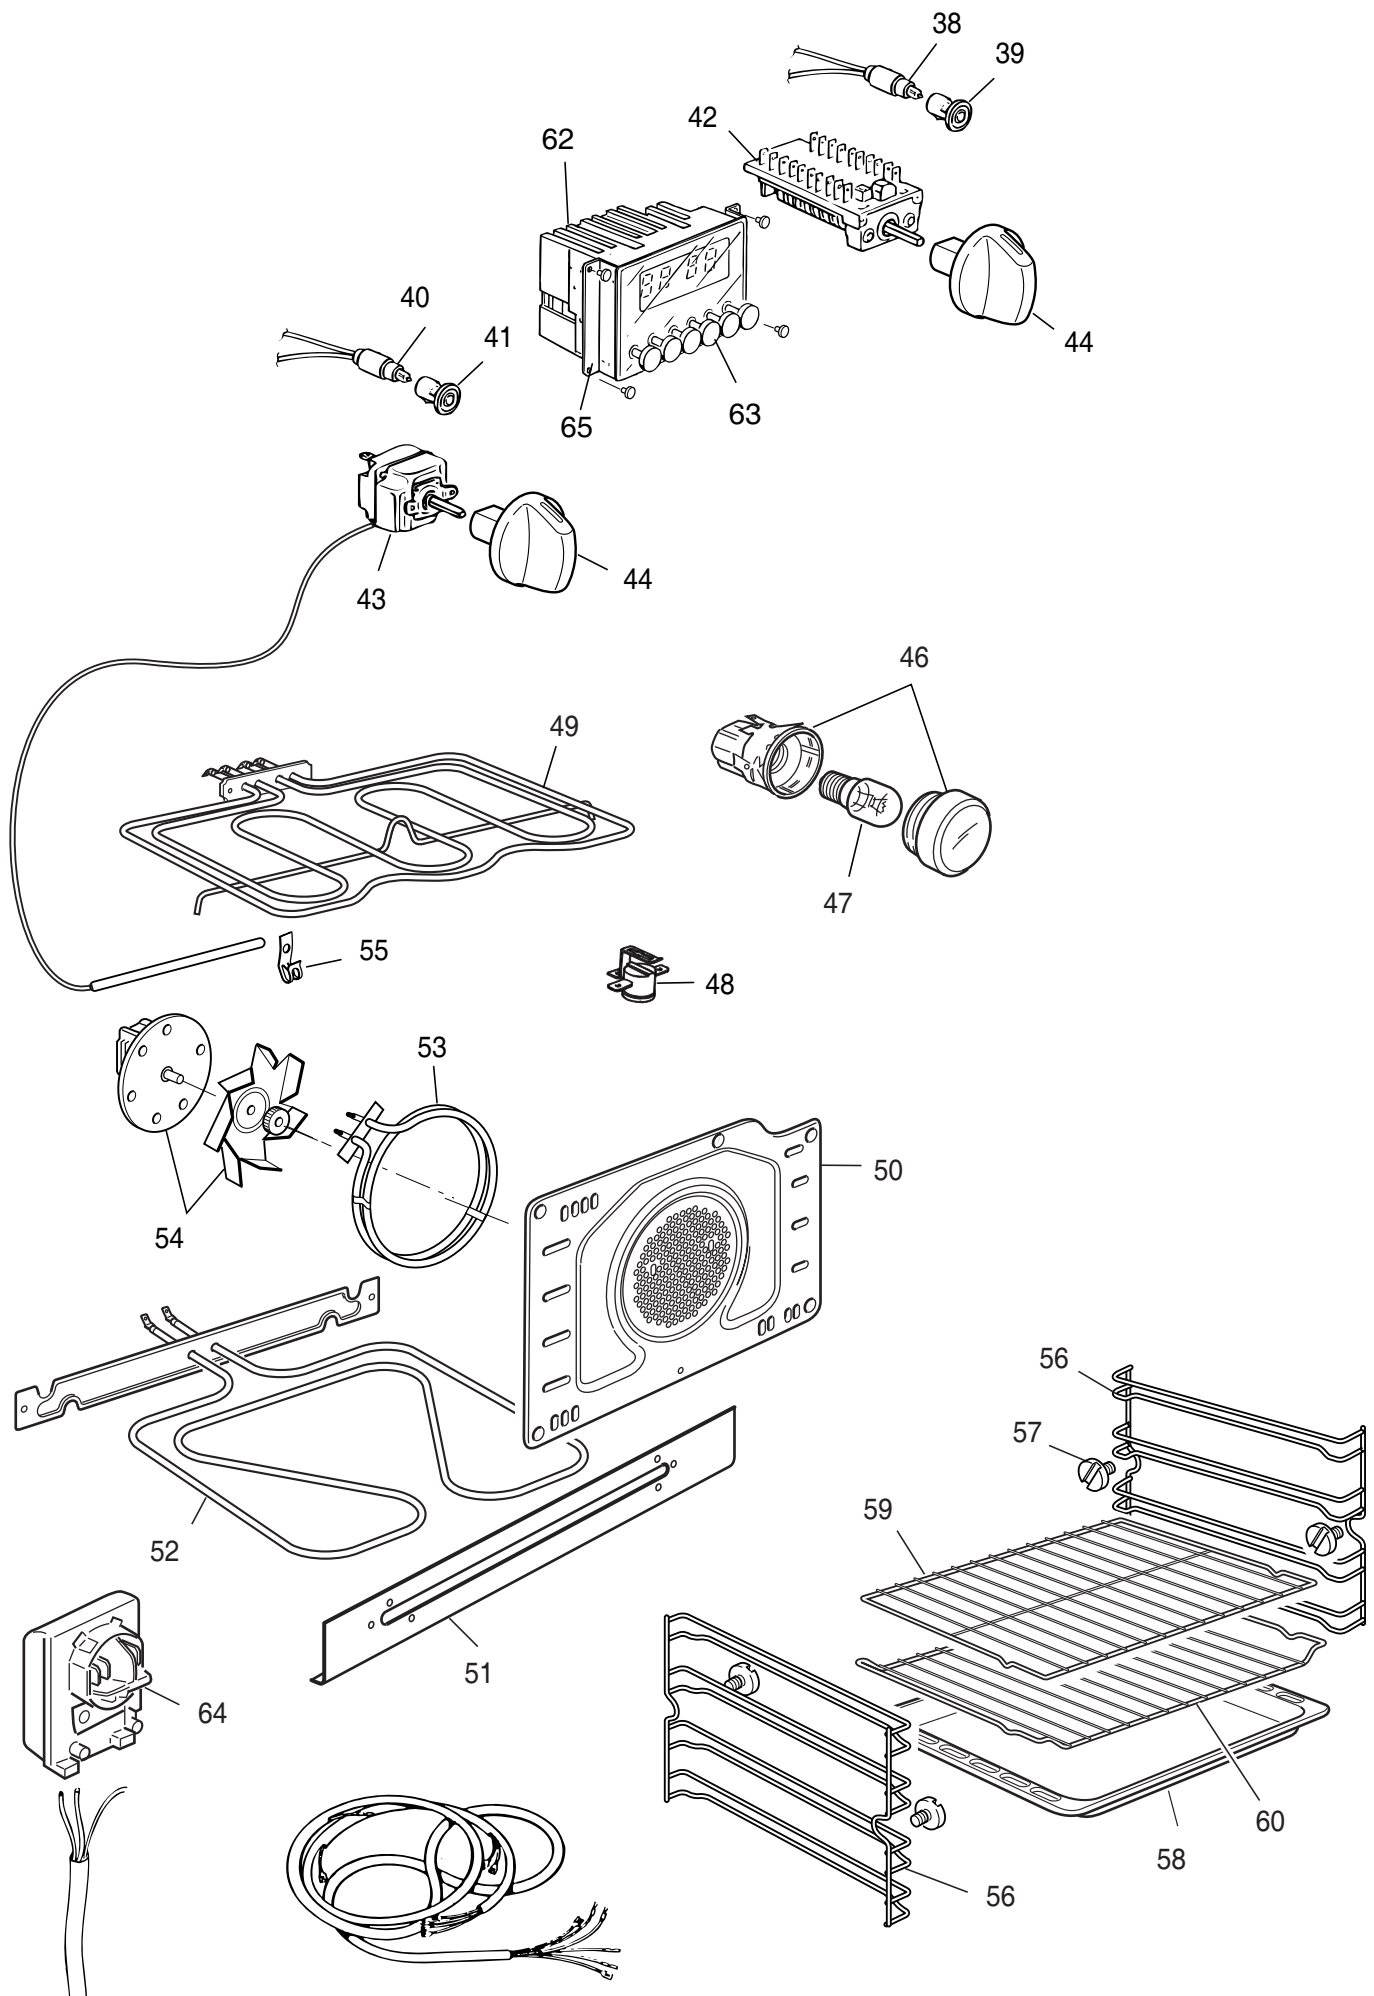

Position	Code	description
01	411F6D1Z	Right side panel
04	053074	Upper seal
05	51BF601DH	Right front trim
06	053087	SEAL
07	411F602.1	Bottom panel
08	08328400A	Lower trim
09	51BF601SH	Left front trim
10	094390	Door hinge (female)
11	411F6S1Z	Left side panel
13	411F603	REAR PANEL
14	040056	Rubber
15	NOCODE01	NOT AVAILABLE
16	411F607	Lower air conveyor
17	079017	Tangential fan
18	411F604	Upper shelter
20	411F605	Air conveyor
21	421F602Z	Conveyor support
23	35F6003SDL	GLASS
24	001183	Door handle screw
25	51BF604	Handle bar
26	0372030SG	HANDLE
27	032F2771D2	Oven Door Glass
28	063107	Hinge (male)
29	375FF6013	Door panel with inner glass
38	073066	LAMP
39	073060	Control lamp cover (Orange)
41	073059	Control lamp cover (Red)
42	050028.1	Oven switch
43	066141	THERMOSTAT
44	2183007363	KNOB
46	072006	LAMP HOLDER
47	073013001	LAMP
048A	066056	Cut-off thermostat 120 degree
048B	066080	Cut-off thermostat 55 degree
49	062089004	Top + grill element - 230 V
50	47AF602P	Fan diffuser
52	062090004	Bottom element - 230 V

53	062097004	Fan element
54	079008001F	Fan motor - 230 V
55	213025	CLIP
56	217646	Shelf support
57	001142	Shelf support screw
58	48BF601G	Oven tray
59	217527	GRID
60	217556	GRID
62	074041	Electronic timer
63	1031057009	PUSH BUTTON
64	051079	Terminal Block