



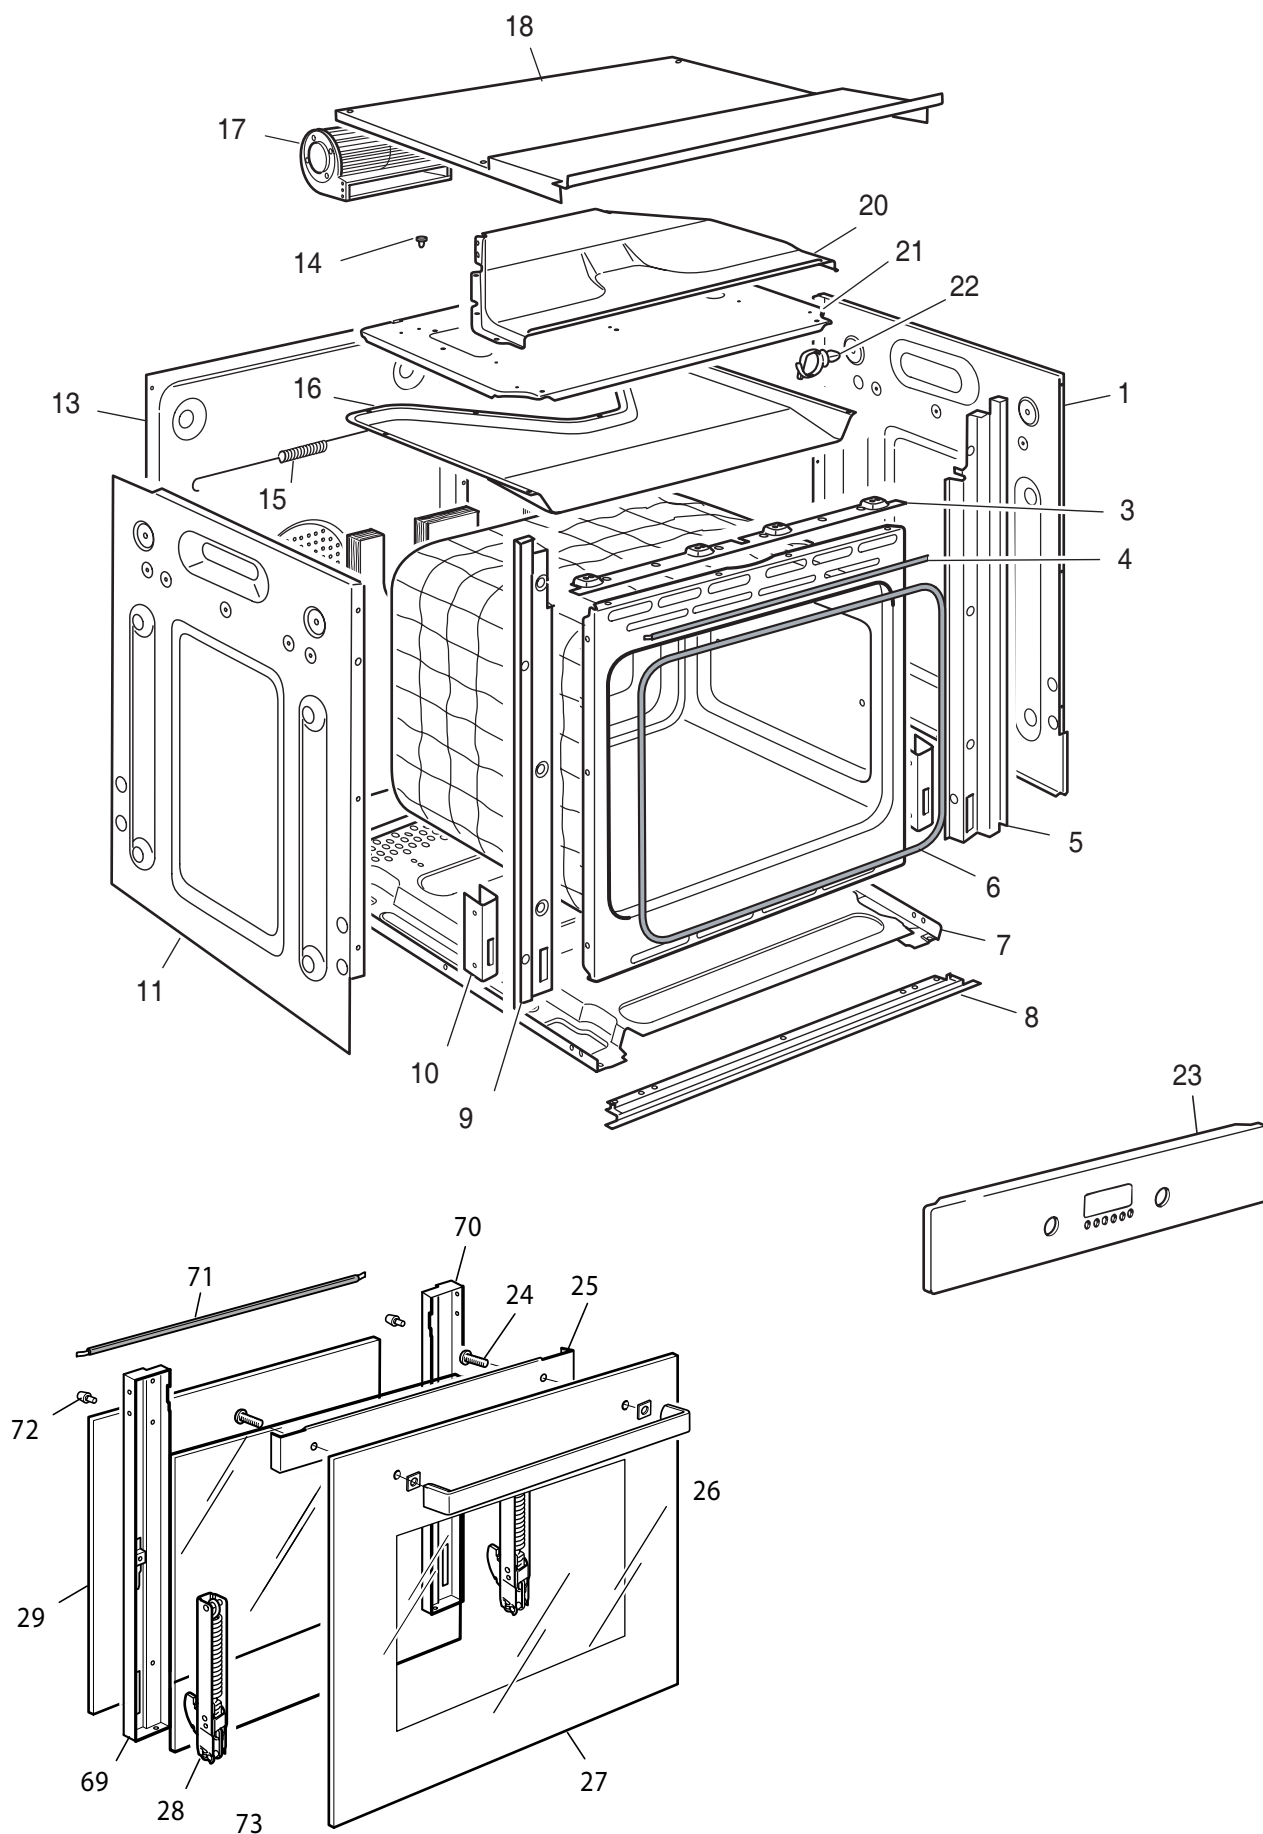

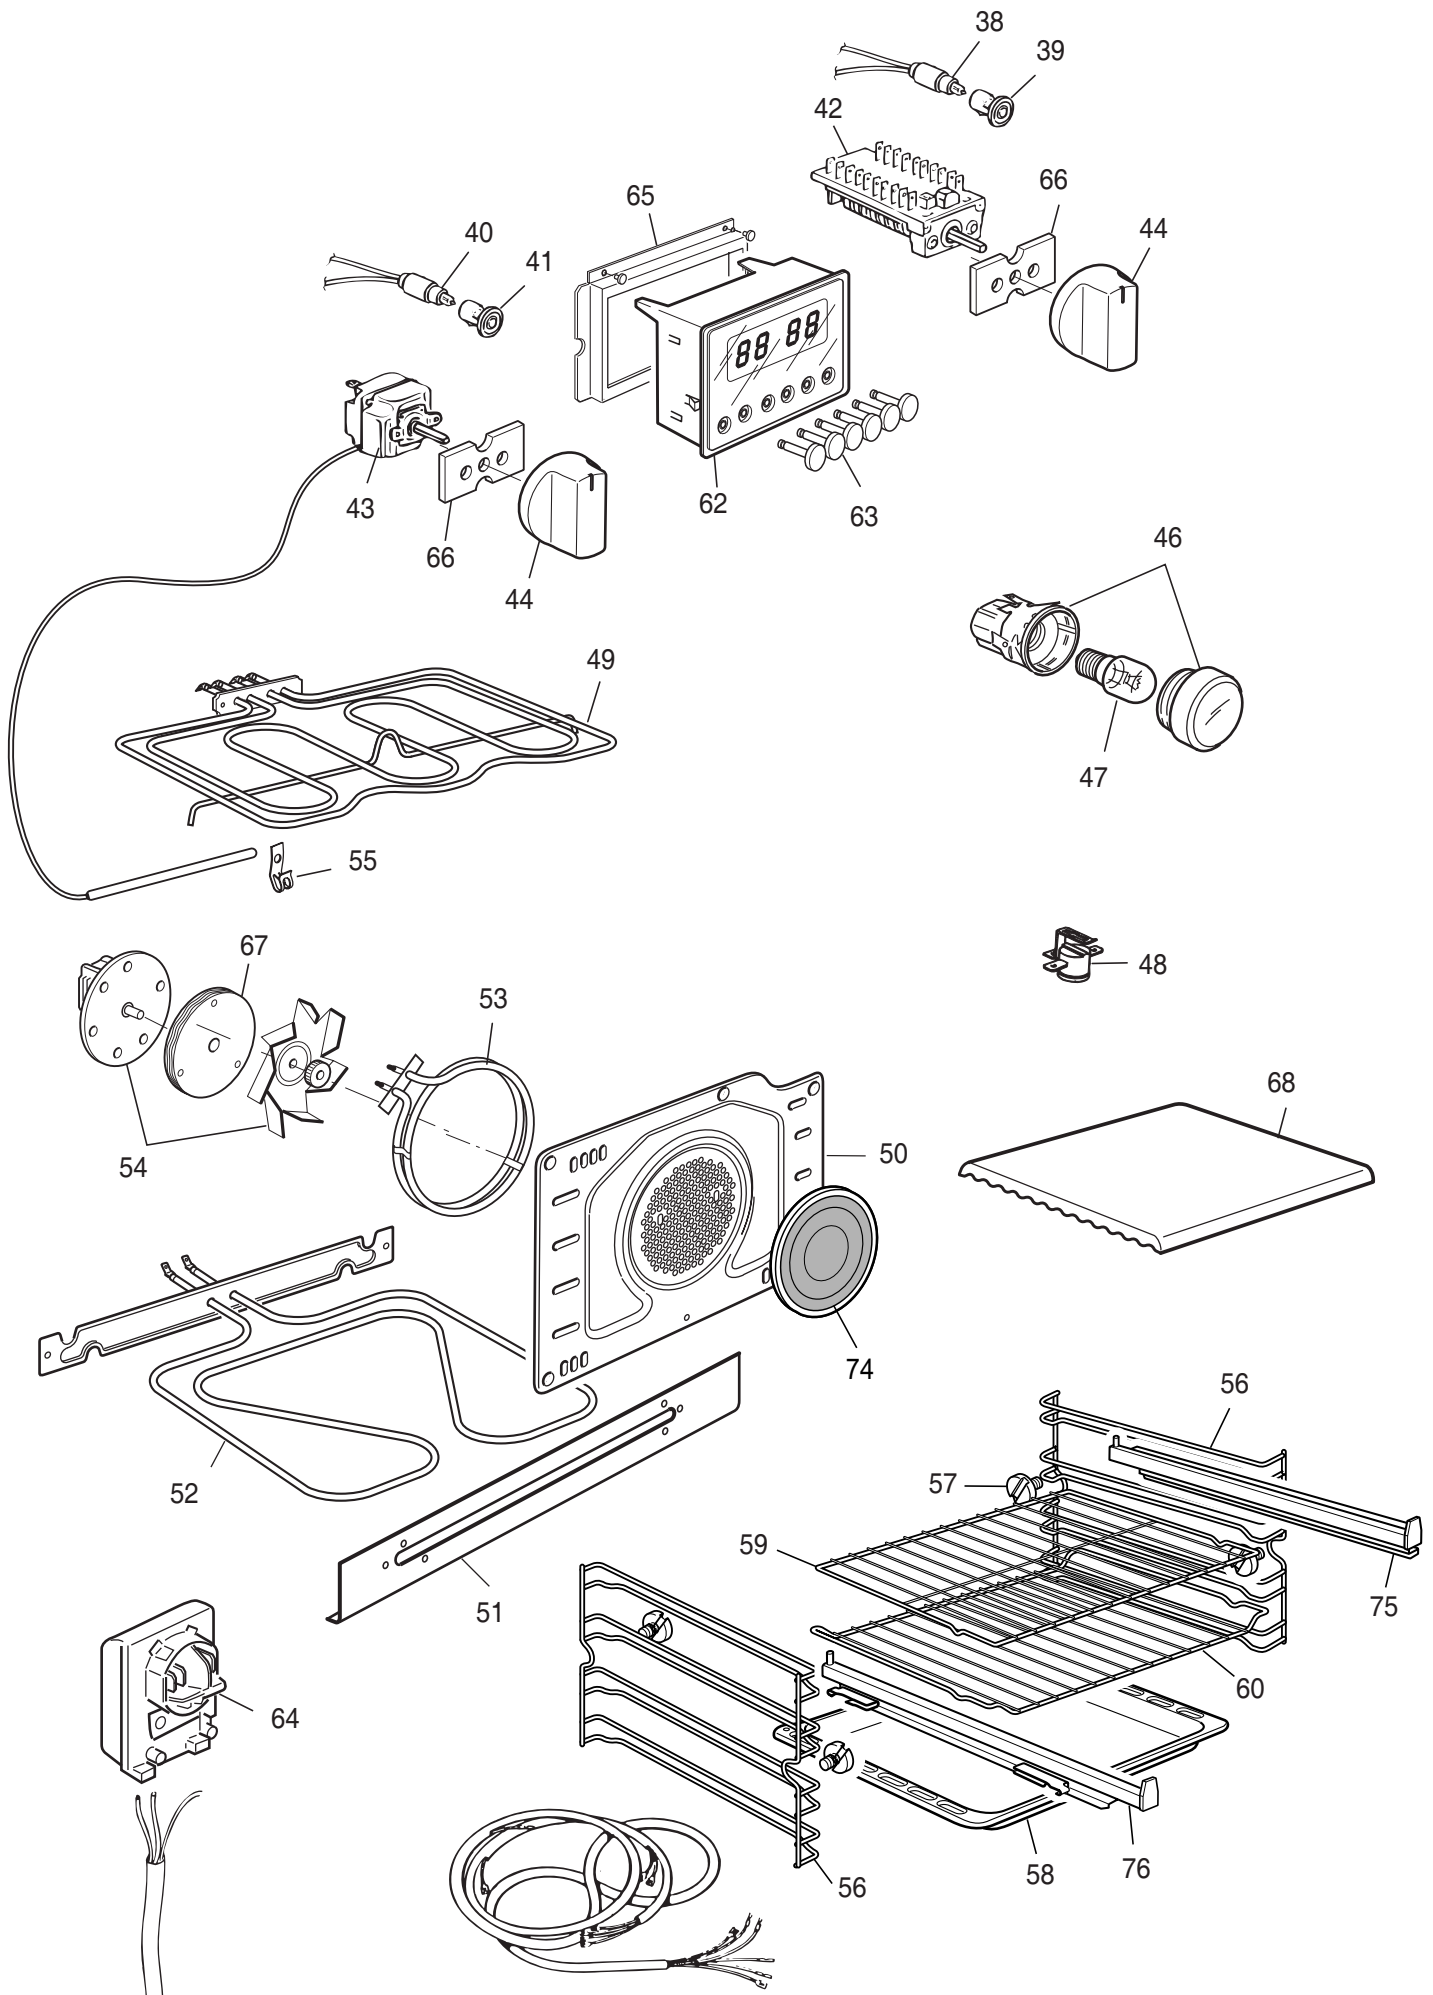

Position	Code	description
01	411F6D1Z	Right side panel
03	NOCODE01	NOT AVAILABLE
04	053074	Upper seal
05	51BF601DH	Right front trim
06	053087	SEAL
07	411F602.1	Bottom panel
08	08328400A	Lower trim
09	51BF601SH	Left front trim
10	094390	Door hinge (female)
11	411F6S1Z	Left side panel
13	411F603	REAR PANEL
14	040056	Rubber
16	411F607	Lower air conveyor
17	079017	Tangential fan
18	411F604	Upper shelter
20	411F605	Air conveyor
21	421F602Z	Conveyor support
23	35F6B07SPR	FRONT PIECE
24	001071	Door handle screw
25	51BF623A	Handle bar
26	037191062	HANDLE
27	032F2184D2	DOOR GLASS
28	063120	Hinge (male)
29	0313242TH	Inner glass
38	073044.2	Control lamp L 600/240
39	07306201.2	Control lamp cover (Orange)
40	073039.2	Control lamp L 230
41	07306202.2	Control lamp cover (Red)
42	050028.1	Oven switch
43	066141	THERMOSTAT
44	2183007363	KNOB
46	072006	LAMP HOLDER
47	073013001	LAMP
48	066056	Cut-off thermostat 120 degree
49	062089004	Top + grill element - 230 V
50	47AF602P	Fan diffuser
52	062090004	Bottom element - 230 V

53	062097004	Fan element
54	079008001F	Fan motor - 230 V
55	213025	CLIP
56	217646	Shelf support
57	001142	Shelf support screw
58	48BF601G	Oven tray
59	217551.1	WIRE SHELF
60	217558.2	WIRE SHELF
62	074041	Electronic timer
63	1031057009	PUSH BUTTON
64	051079	Terminal Block
65	094545	Electronic programmer housing
66	103948	Switch spacer
67	030136.1	Fan motor insulation
68	103406	Kit pizza stone
70	51AF621SA	Left door trim
71	053125	SEAL
72	040051	Rubber
73	0312570TH	Intermediate glass
74	103085	FILTER
75	1031037	Right telescopic runner
76	1031038	Left telescopic runner