



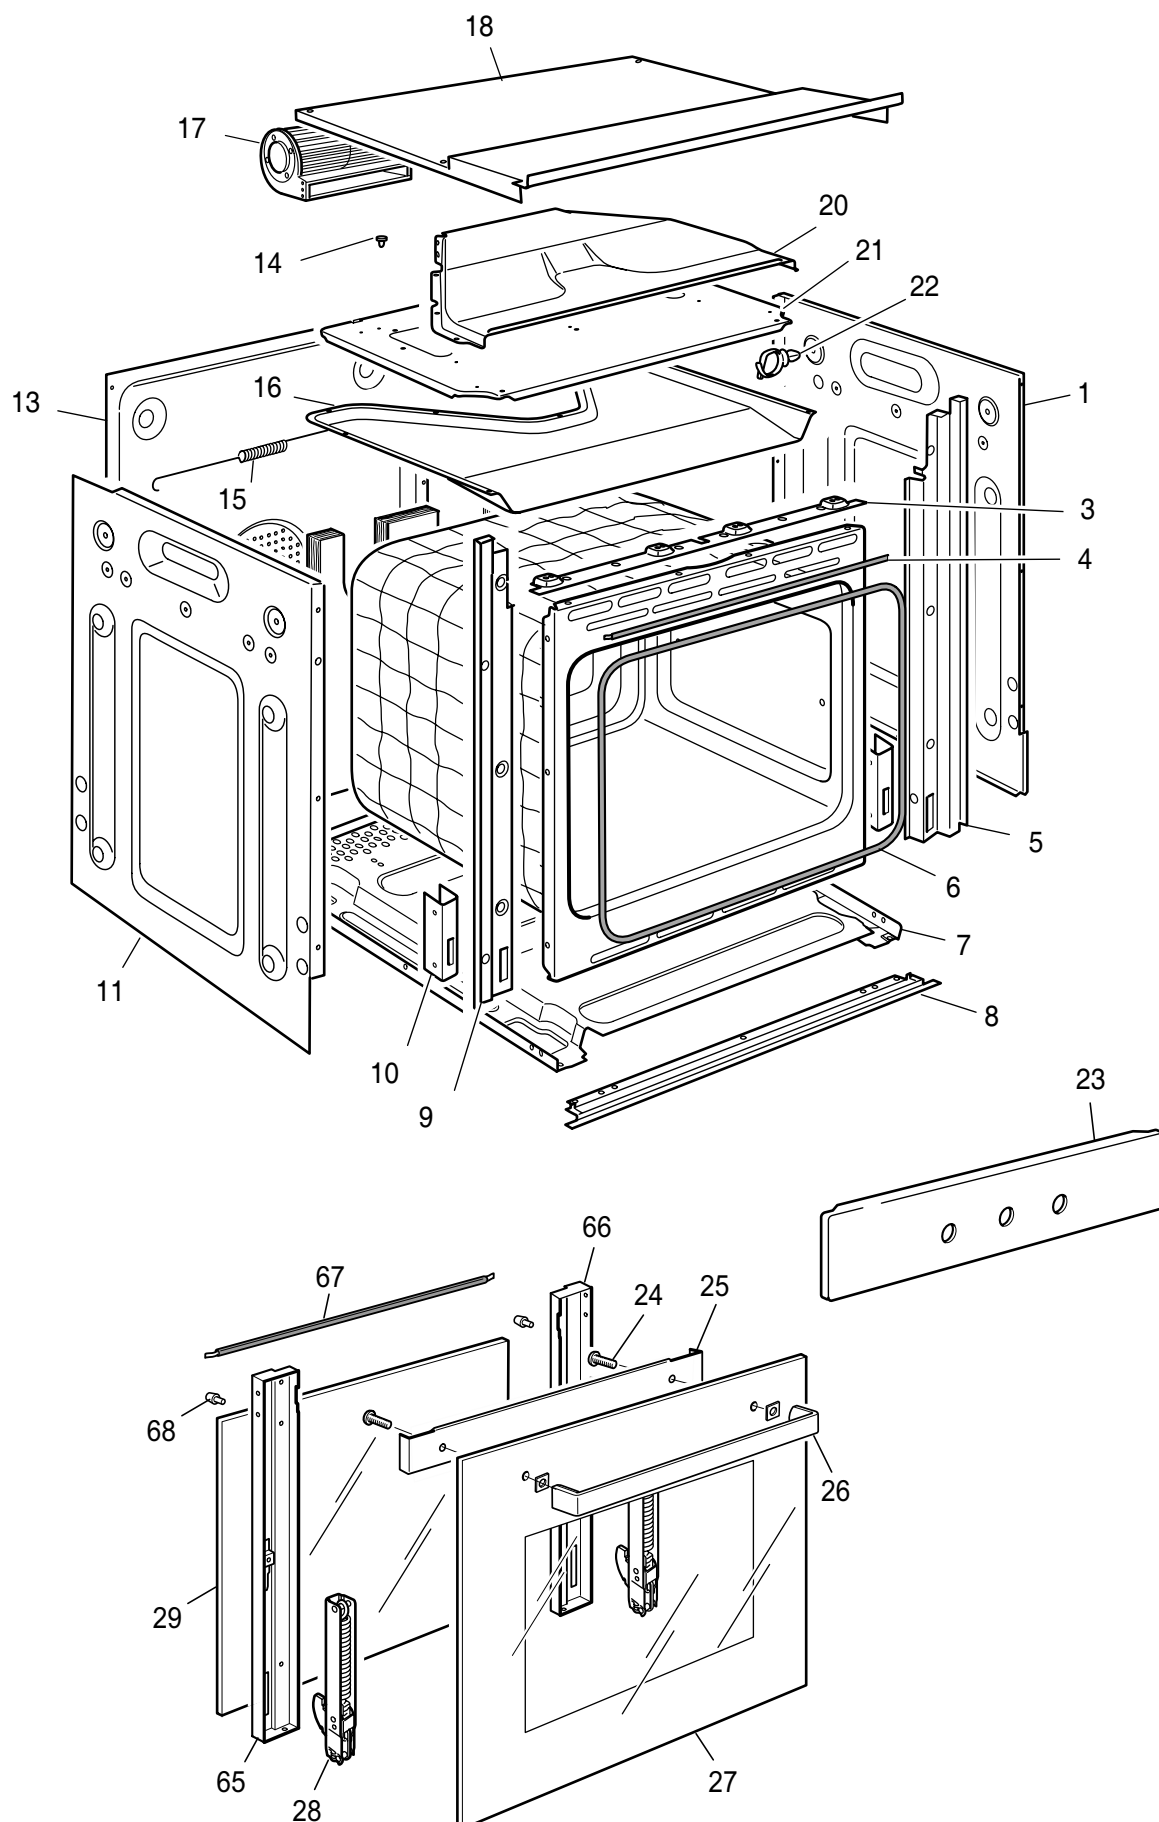

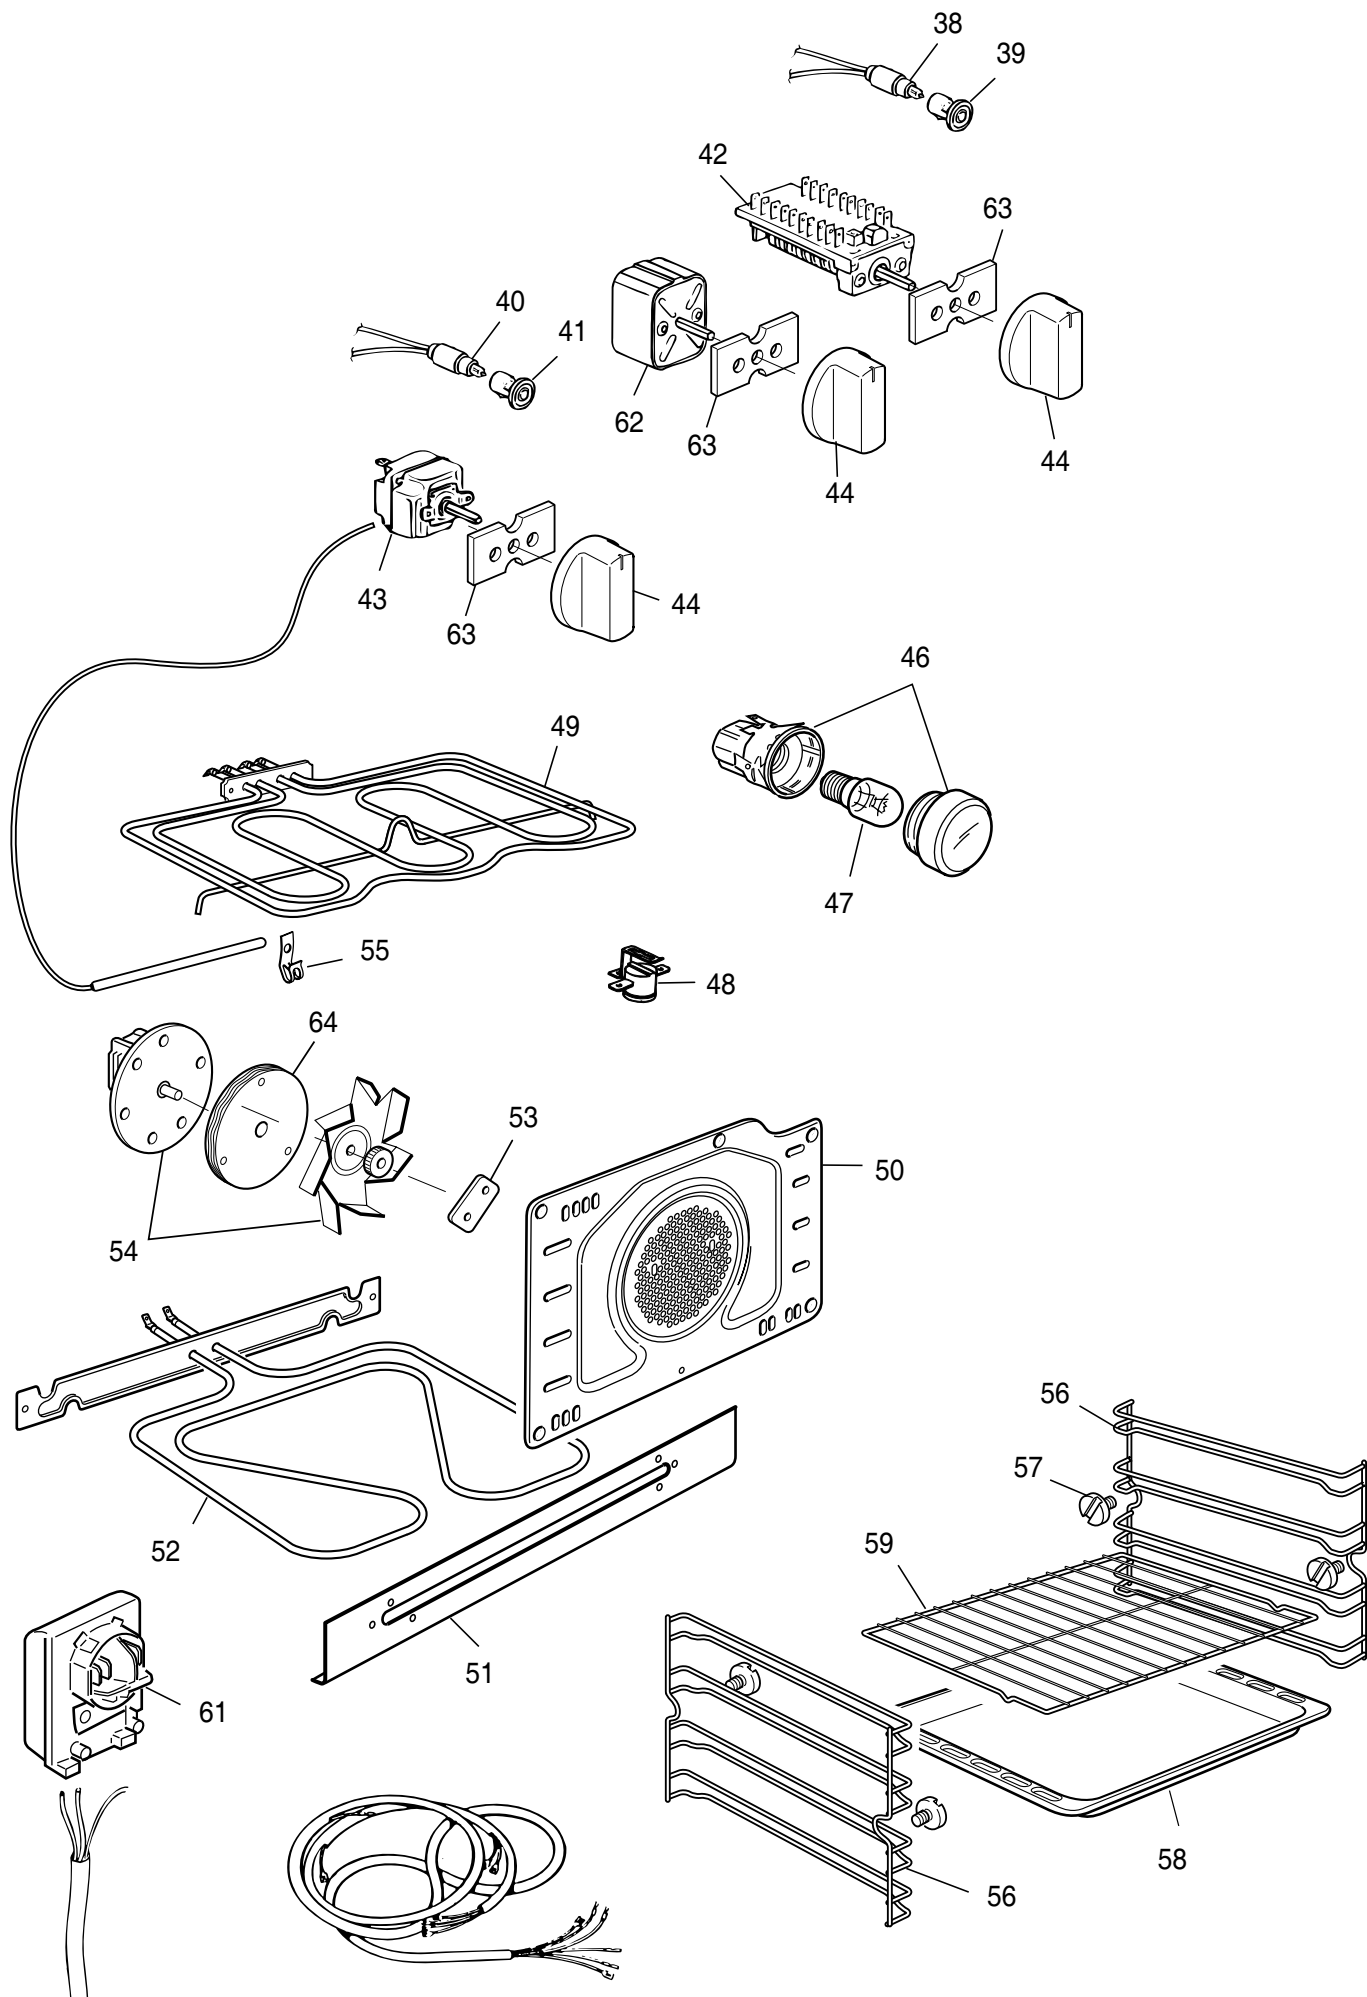

Position	Code	description
01	411F6D1Z	Right side panel
03	51BF614S.2	Control panel deflector
04	053074	Upper seal
06	053087	SEAL
07	411F602.1	Bottom panel
08	08328400A	Lower trim
09	51BF601DH	Right front trim
10	094390	Door hinge (female)
11	411F6S1Z	Left side panel
13	411F603	REAR PANEL
14	040056	Rubber
16	411F607	Lower air conveyor
17	079017	Tangential fan
18	411F604	Upper shelter
20	411F605	Air conveyor
21	421F602Z	Conveyor support
22	NOCODE01	NOT AVAILABLE
23	35F6B08SDL	FRONT PIECE
24	001071	Door handle screw
25	51BF62H	SUPPORT
26	037191062	HANDLE
27	032F2184D2	DOOR GLASS
28	063107	Hinge (male)
29	0313242TH	Inner glass
38	073048.2	Control lamp L 600/230-240
39	07306201.2	Control lamp cover (Orange)
40	073039.2	Control lamp L 230
41	07306202.2	Control lamp cover (Red)
42	050030	Oven switch
43	066141	THERMOSTAT
44	2183007363	KNOB
46	072006	LAMP HOLDER
47	073013001	LAMP
048A	066056	Cut-off thermostat 120 degree
048B	066145	Cut-off thermostat 80 degrees
49	062089004	Top + grill element - 230 V
50	47AF602P	Fan diffuser

52	062090004	Bottom element - 230 V
53	094395	Plaque
54	079008001F	Fan motor - 230 V
55	213025	CLIP
56	217646	Shelf support
57	001142	Shelf support screw
58	48BF601G	Oven tray
59	217527	GRID
61	051079	Terminal Block
62	074012	Timer 120 min
63	103948	Switch spacer
64	030136.1	Fan motor insulation
65	51AF621SA	Left door trim
66	51AF621DA	Right door trim
67	053125	SEAL
68	040051	Rubber