



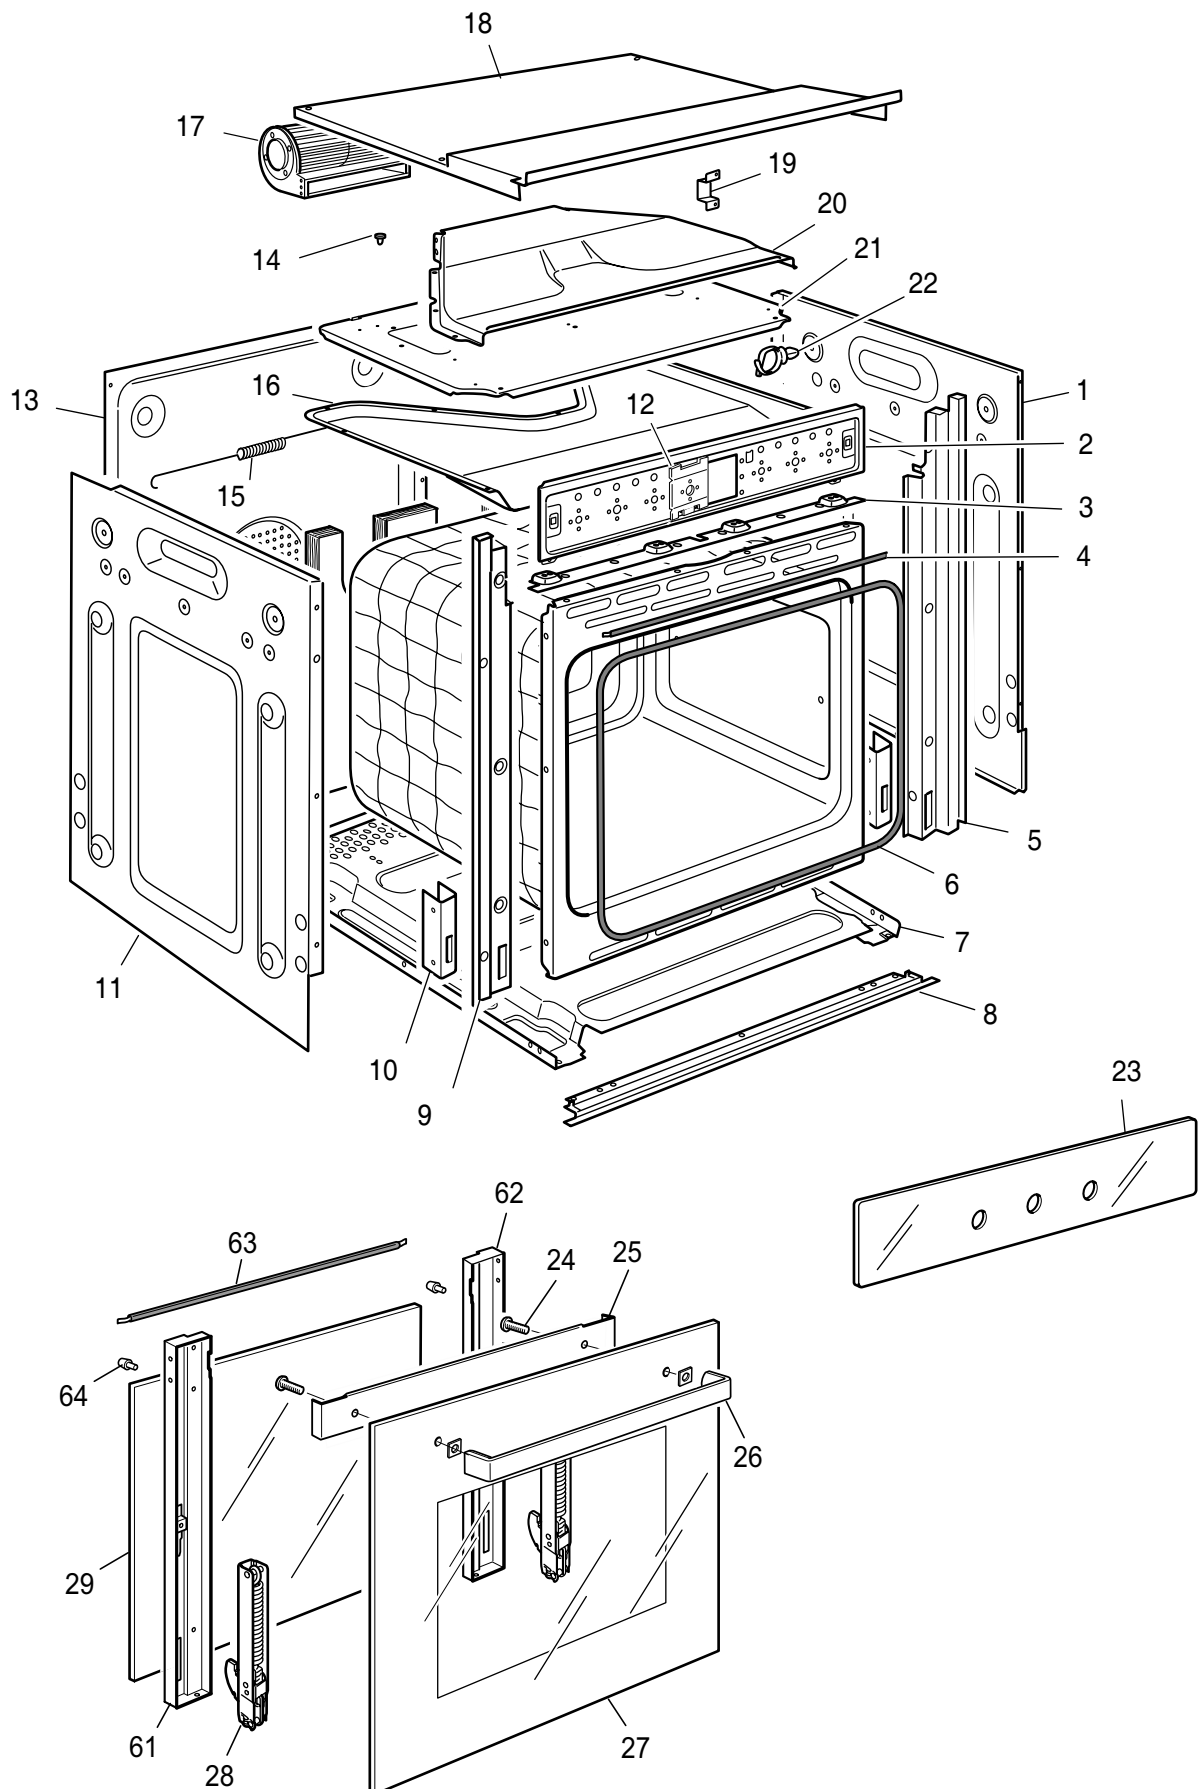

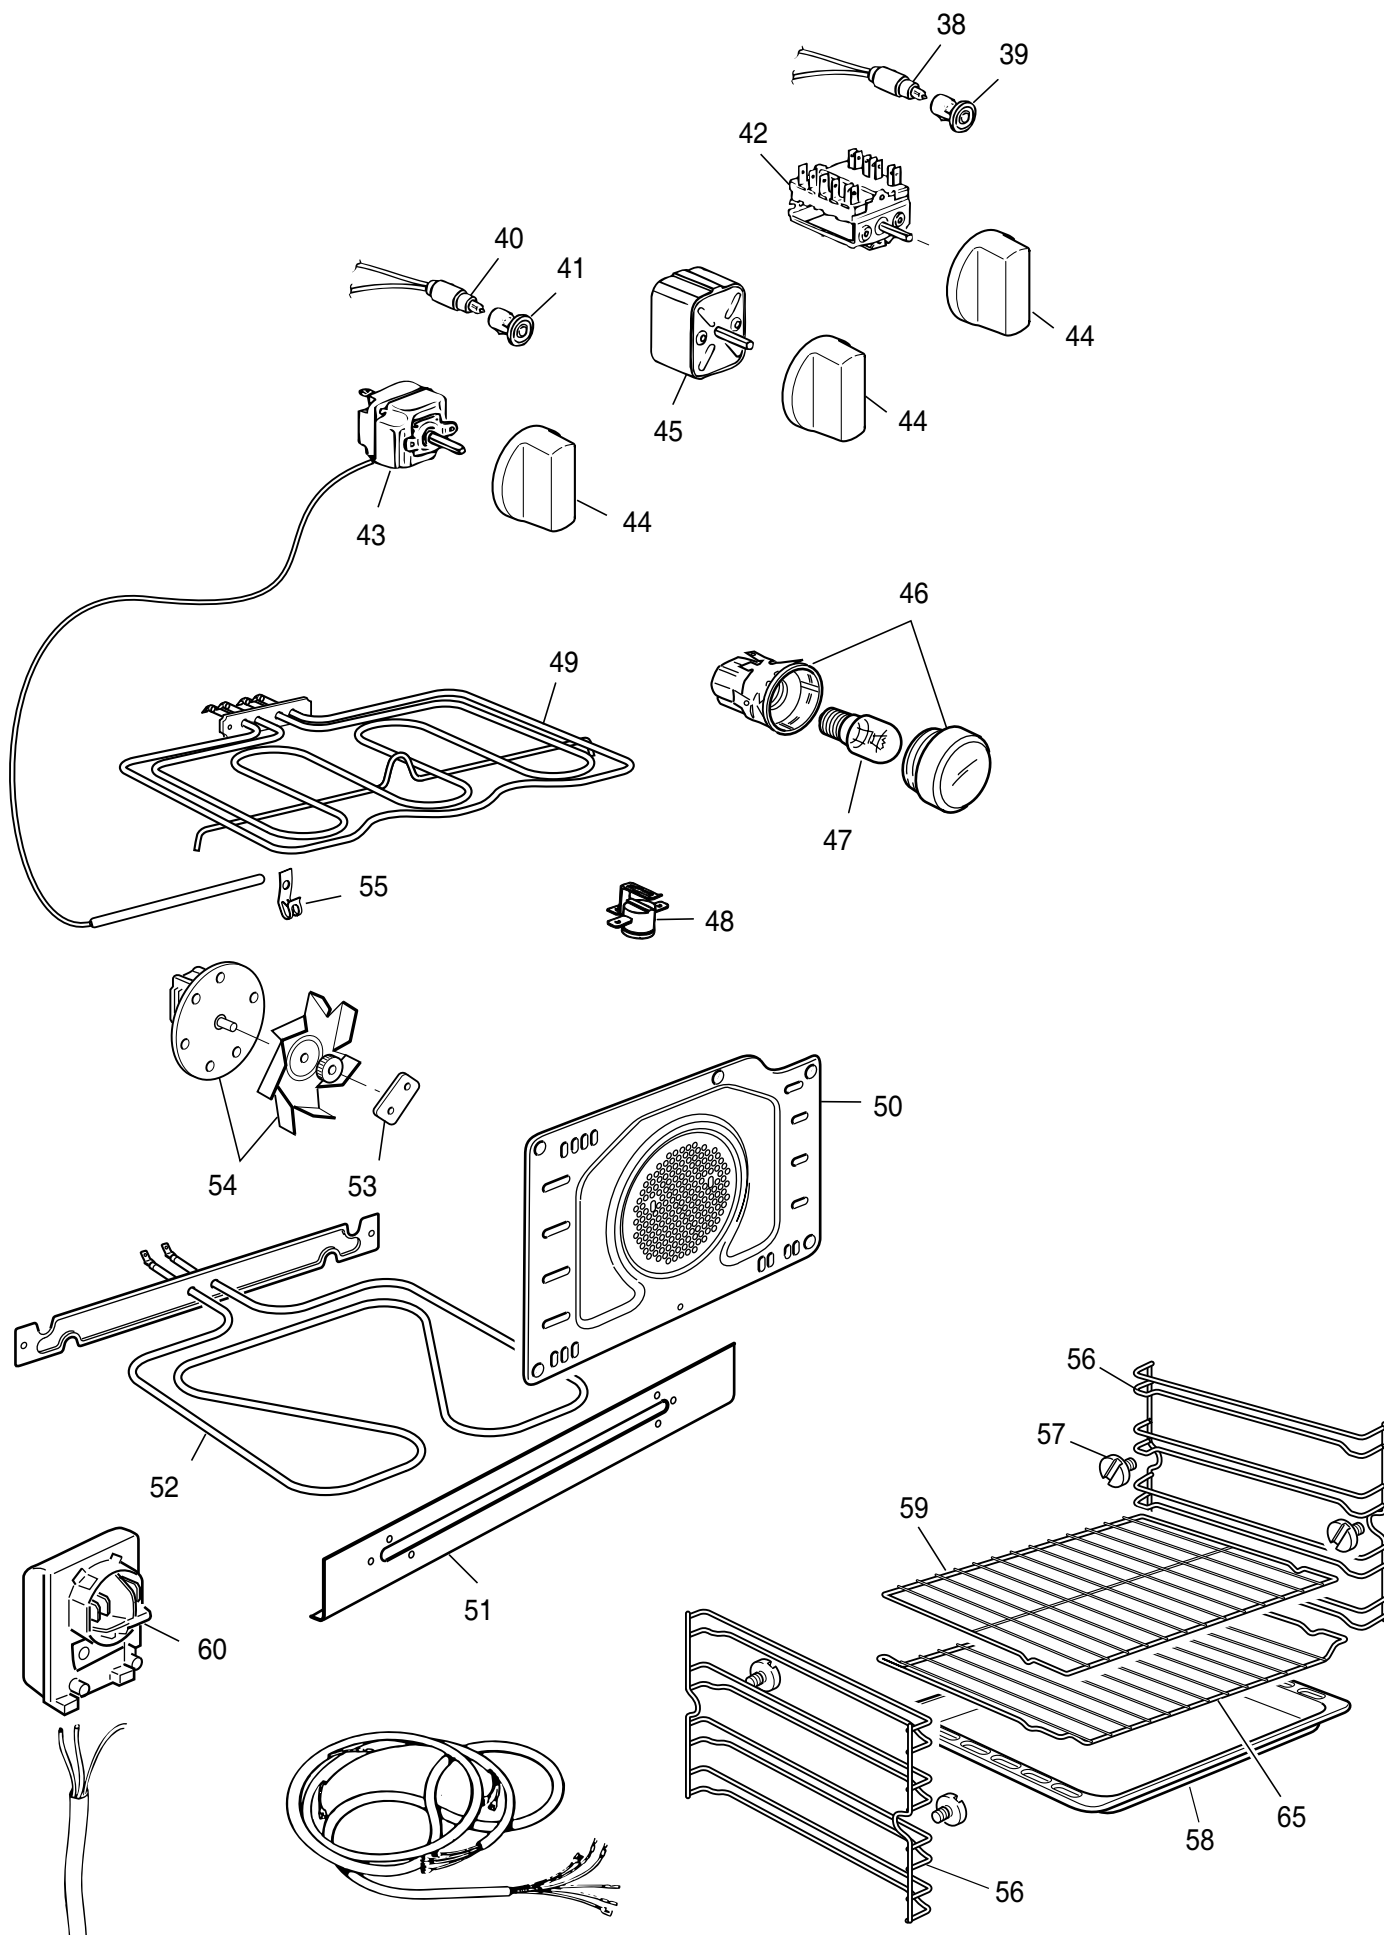

Position	Code	description
01	411F6D1Z	Right side panel
02	35MF60001H	Interior control panel
03	NOCODE01	NOT AVAILABLE
04	053074	Upper seal
05	51BF601DH	Right front trim
06	053087	SEAL
07	411F602.1	Bottom panel
08	08328400A	Lower trim
09	51BF601SH	Left front trim
10	094390	Door hinge (female)
11	411F6S1Z	Left side panel
13	411F603	REAR PANEL
16	411F607	Lower air conveyor
17	079017	Tangential fan
18	411F604	Upper shelter
20	411F605	Air conveyor
21	421F602Z	Conveyor support
23	032F62638	FRONT PIECE
25	51BF622	SUPPORT
26	037265009	Door handle
27	032F62639	GLASS
28	063107	Hinge (male)
29	0313242TH	Inner glass
38	073048.2	Control lamp L 600/230-240
39	07306201.2	Control lamp cover (Orange)
40	073039.2	Control lamp L 230
41	07306202.2	Control lamp cover (Red)
42	050030	Oven switch
43	066157	THERMOSTAT
44	2183009365	KNOB ELBA ST.STEEL
45	074012	Timer 120 min
46	072006	LAMP HOLDER
47	073013001	LAMP
048A	066056	Cut-off thermostat 120 degree
048B	066145	Cut-off thermostat 80 degrees
49	062089004	Top + grill element - 230 V
50	47AF602P	Fan diffuser

52	062090004	Bottom element - 230 V
53	094395	Plaque
54	079008001F	Fan motor - 230 V
55	213025	CLIP
56	217646	Shelf support
57	001142	Shelf support screw
58	48BF601G	Oven tray
59	217527	GRID
60	051079	Terminal Block
61	51AF621SA	Left door trim
62	51AF621DA	Right door trim
63	053125	SEAL
64	040056	Rubber
65	217556	GRID