




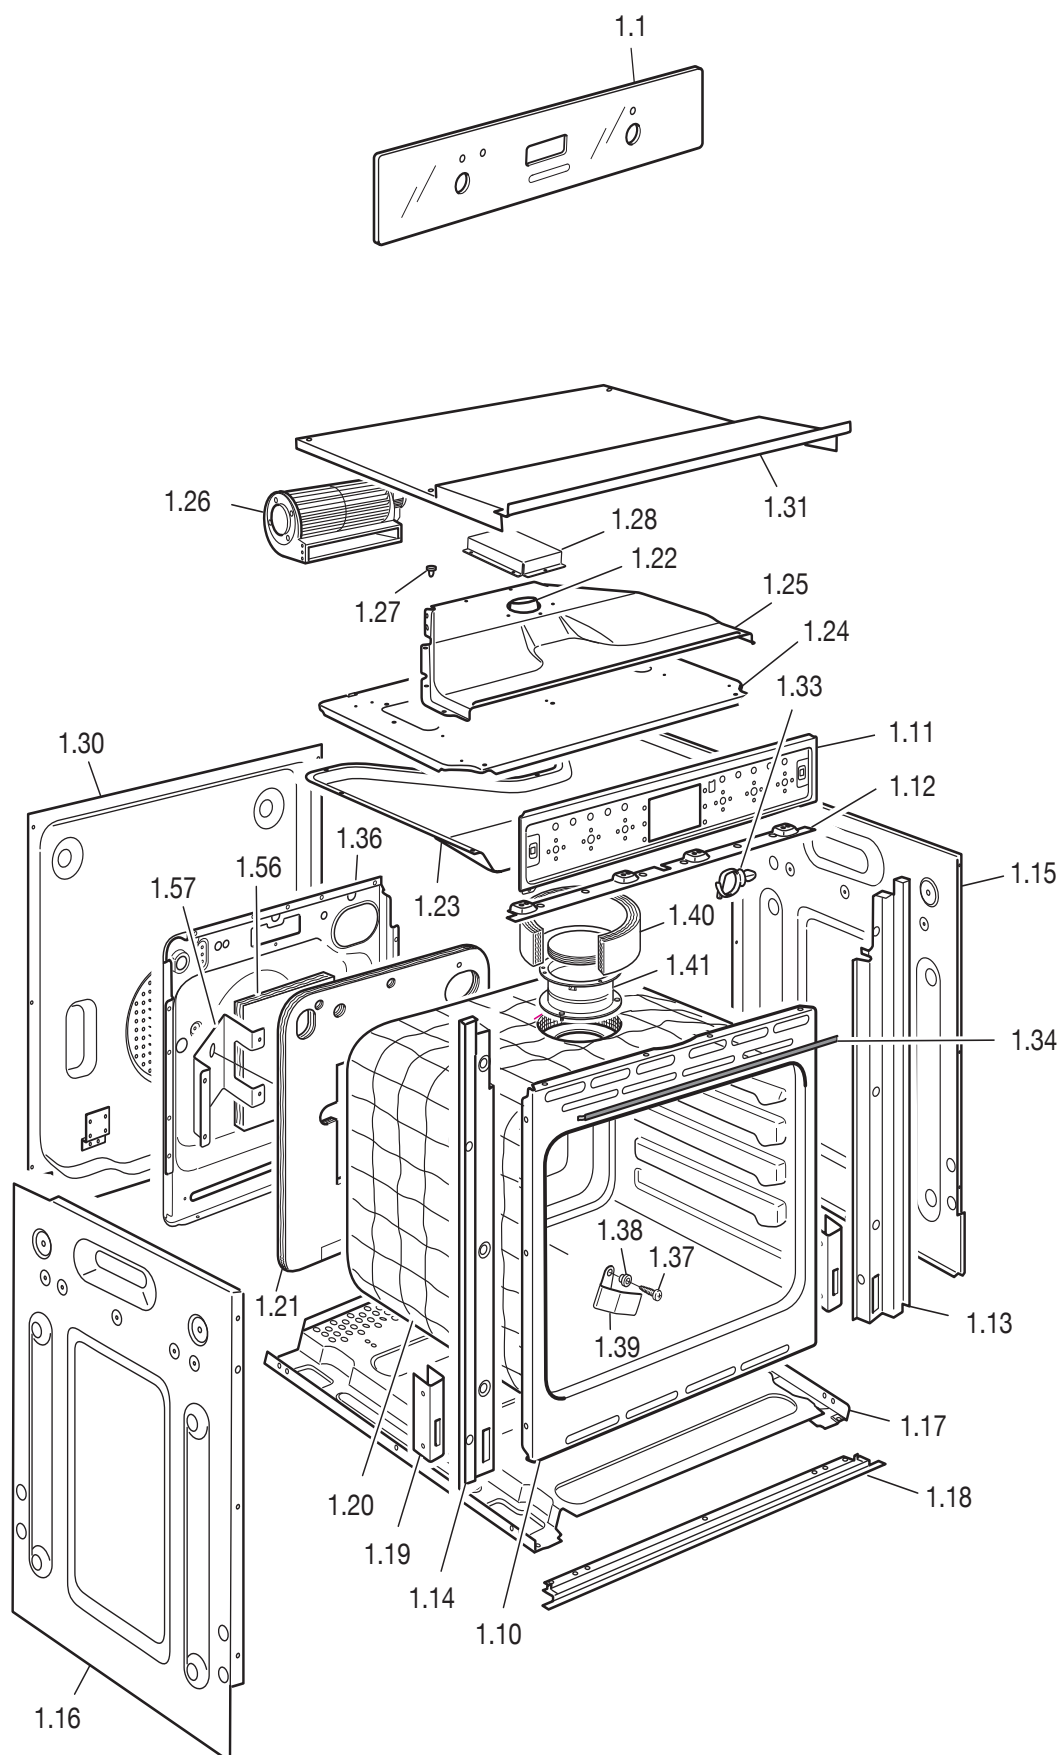

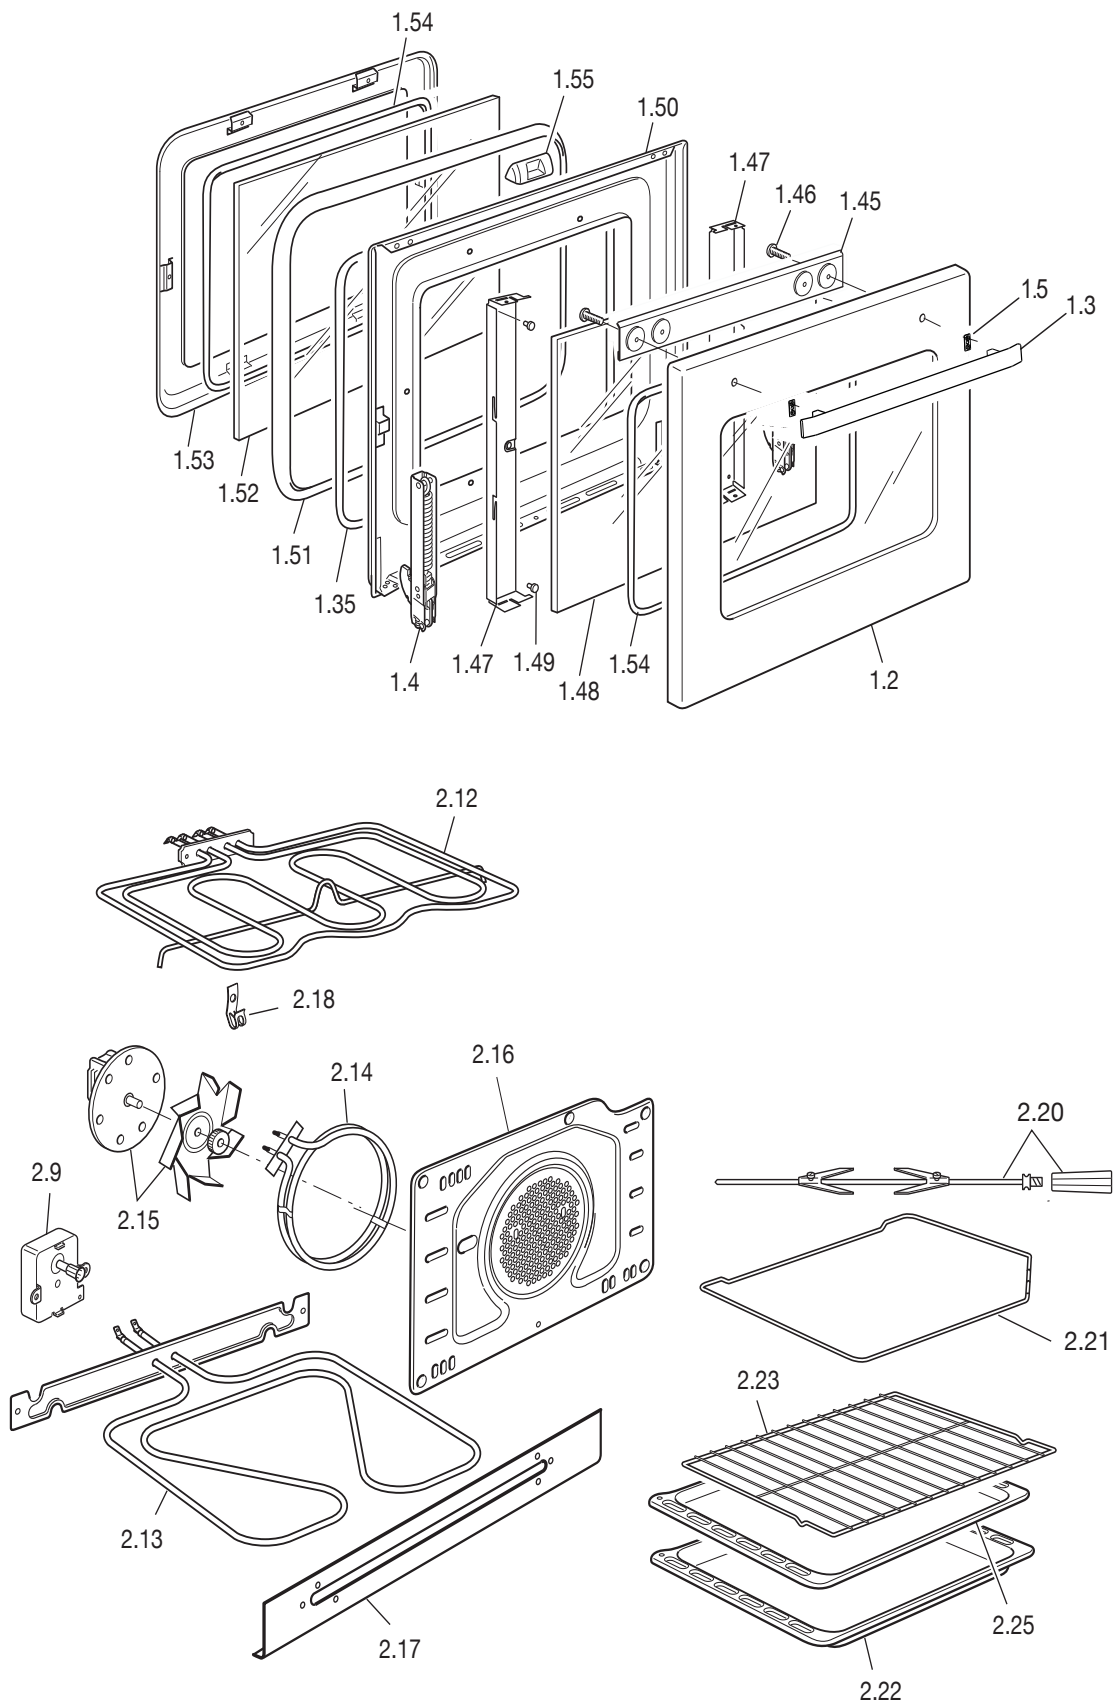

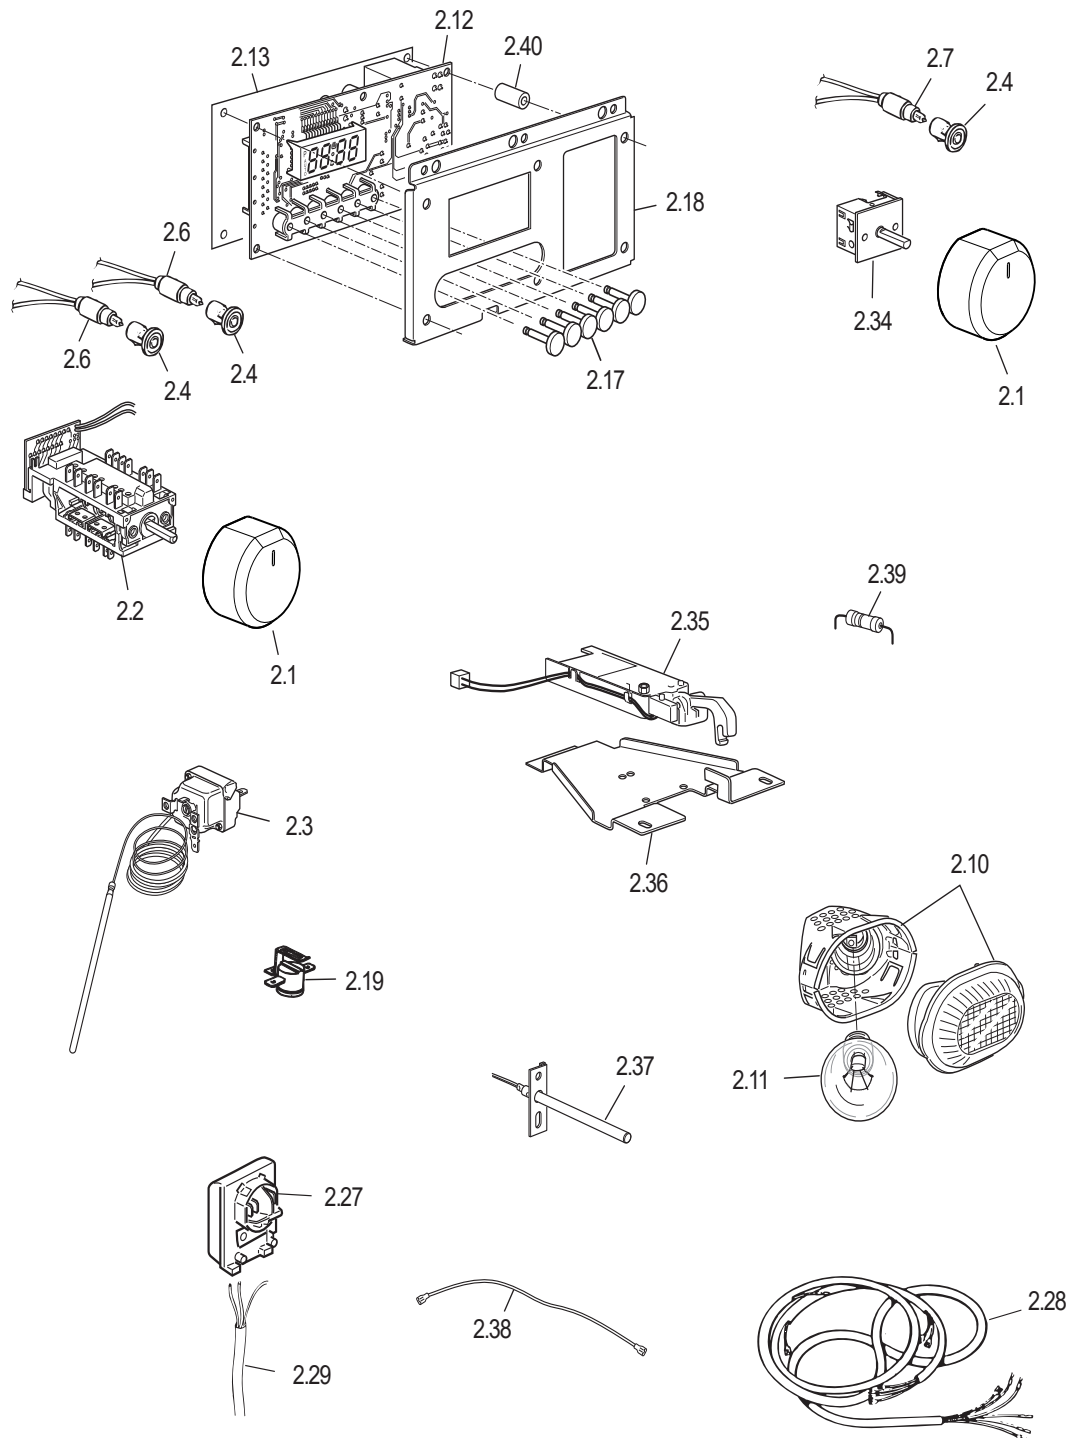

Position	Code	description
1=1.1	032F3287DA	Glass panel
2=1.10	450FP1EM41	Oven cube
3=1.11	35MF6016H	Interior control panel
4=1.12	51BF614S.1	Deflector
5=1.13	51BF601DH	Right front trim
6=1.14	51BF601SH	Left front trim
7=1.15	411F6D1Z	Right side panel
8=1.16	411F6S1Z	Left side panel
9=1.17	411F602.1	Bottom panel
10=1.18	08328400A	Lower trim
11=1.19	094779	Door hinge (female)
12=1.20	030123	Oven insulation
13=1.21	030137	Rear insulation
14=1.22	103617	Fumes filter
15=1.23	411F607	Lower air conveyor
16=1.24	421F604Z	Air conveyor support
17=1.25	411F606	Upper air conveyor
18=1.26	079024	Tangential fan
19=1.27	040056	Rubber
20=1.28	094435	Fumes conveyor
21=1.30	411F603	REAR PANEL
22=1.31	411F604	Upper shelter
23=1.33	103672	WIRE CLAMP
24=1.34	053074	Upper seal
25=1.36	421F603Z	REAR PANEL
26=1.37	001135	SCREW
27=1.38	085060	SLEEVE
28=1.39	51BF607	Rotisserie door
29=1.40	030132	Fumes catalyst insulation
30=1.41	103723	Fumes catalyst
31=1.56	030131	Rear central insulation
32=1.57	094434	Rotisserie motor support
33=1.2	032F3118D1	DOOR GLASS
34=1.3	037351061	Door handle
35=1.4	063139	Hinge (male)
36=1.5	1031697080	Handle spacer
37=1.35	053099	SEAL

38=1.45	51BF604	Handle bar
39=1.46	001071	Door handle screw
40=1.47	51BF606	Middle inner glass support
41=1.48	0312117	Middle inner glass
42=1.49	040056	Rubber
43=1.50	372FF609GG	Door panel
44=1.51	053089	Door panel gasket
45=1.52	0312116	Inner glass
46=1.53	372FF603GG	Door panel frame
47=1.54	053090	Inner glass gasket
48=1.55	103620	Door lock block
49=2.9	079014	Rotisserie motor
50=2.12	062155004	Top + grill element
51=2.13	062093004	Bottom element
52=2.14	062097004	Fan element
53=2.15	079023	FAN MOTOR
54=2.16	47AF602G	Fan diffuser
55=2.17	51BF603.1	Bottom element support
56=2.18	213031	CLIP
57=2.20	080033	Rotisserie spear
58=2.21	217532	Rotisserie support
59=2.22	48B6201G	Oven tray
60=2.23	217603	WIRE SHELF
61=2.25	48E6202G	Grill flat
62=2.1	218E00H561	CONTROL KNOB
63=2.2	050061.1	SWITCH
64=2.3	066143	THERMOSTAT
65=2.4	073092	Control lamp cover
66=2.6	073091	Control lamp L = 230
67=2.7	073093	Control lamp L = 600
68=2.10	072007	LAMP HOLDER
69=2.11	073013001	LAMP
70=2.12	074091	Display electronic card
71=2.13	039068	Programmer electronic card insulator
72=2.17	1031589	Button
73=2.18	094866	Electronic programmer bracket
74=2.19	066068	Cut-off thermostat 130 degree
75=2.19	066080	Cut-off thermostat 55 degree

76=2.27	051079	Terminal Block
77=2.28	1132165	WIRING
78=2.29	054120	Cord 3x1.5
79=2.34	050063	POTENTIOMETER
80=2.35	103619	Door lock
81=2.36	094398	Door lock support
82=2.37	107054	PROBE
83=2.38	103829	CABLE
84=2.39	1031009	HEATING ELEMENT
85=2.40	071060	Programmer electronic peg