


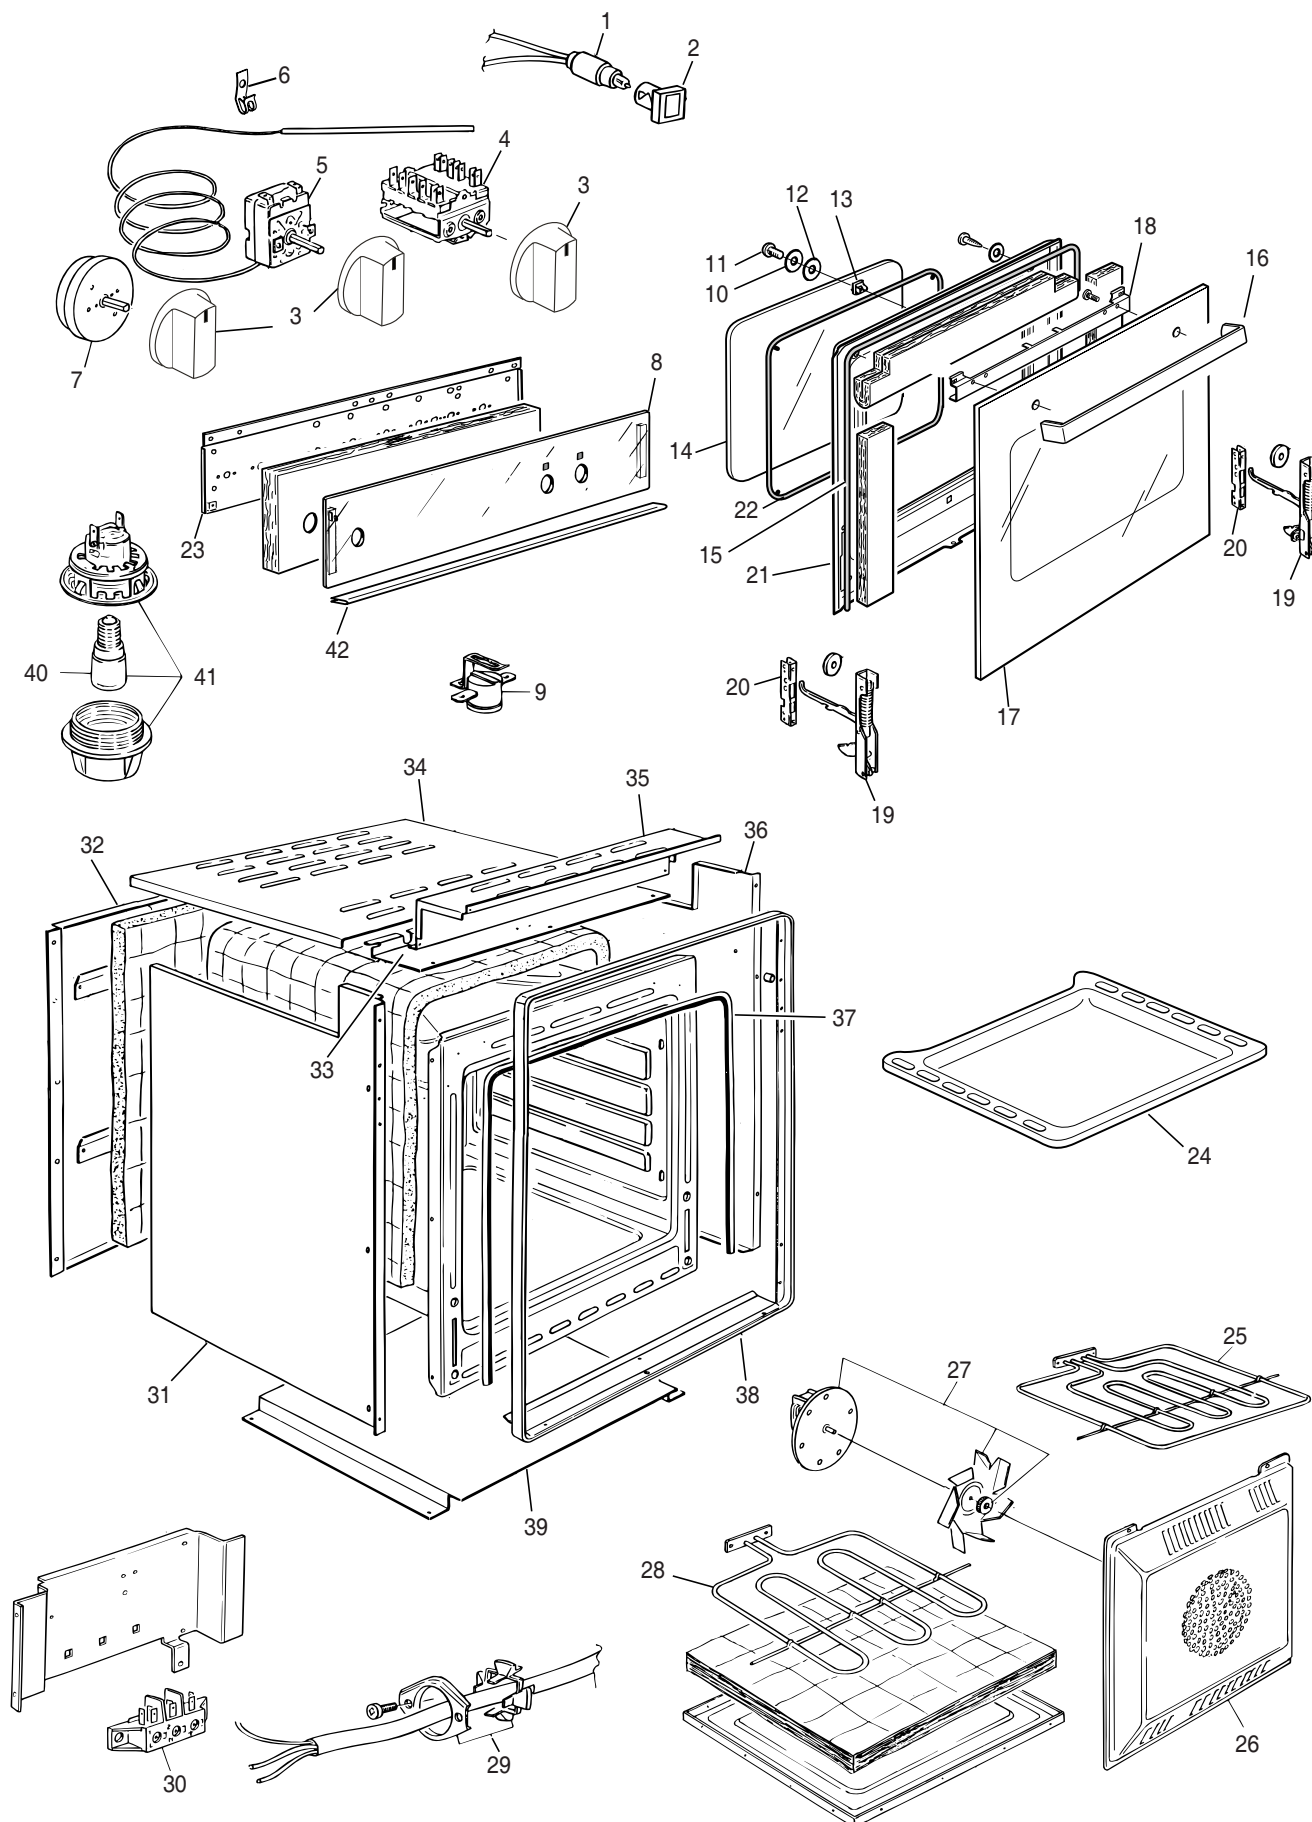

Position	Code	description
01	073036	LAMP
02	073035	Control lamp cover - red
03	2183009400	KNOB
04	050030	Oven switch
05	066072	Oven thermostat
06	213025	CLIP
07	074009	60 min alarm
08	35F7040LDL	FRONT PIECE
09	066073	Cut-off thermostat 150 degrees
10	103205.1	WASHER
11	001214	SCREW
12	003035	WASHER
13	214021	NUT
14	0311000.1T	Inner glass
15	053125	SEAL
16	037265009	Door handle
17	032F72641	GLASS
18	4116111	Fixing bar
19	063103	Hinge (male)
20	063025	Top oven hinge (female) works with male hinge 063089
21	373FF707K	INNER DOOR
22	053084	Bottom oven glass seal
23	35MF70228	PANEL
24	48B6101G	DRIP PAN
25	062103004	HEATING ELEMENT
26	47AN601G	Fan diffuser
27	079008001F	Fan motor - 230 V
28	062058004	Bottom element - 230 V
29	NOCODE01	NOT AVAILABLE
30	051062	Terminal block
31	411F721	Left side panel
32	411F718	REAR PANEL
33	4216002Z	SPACER
34	411F723	CLOSURE
35	411F711	Control panel shelter
36	411F719	Right side panel

37	053199	Bottom oven seal
38	083184066	FRAME
39	411F706	Bottom panel
40	073013001	LAMP
41	072023	Lamp holder assembly